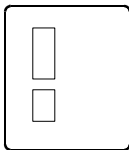
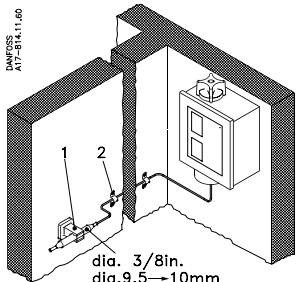
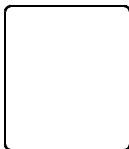




 


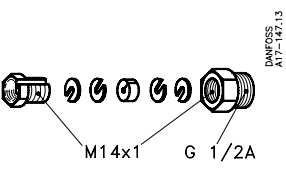


Spare parts and accessories

Thermostats, type RT

| Description   | Qty              | Code no.          | Description   | Qty                   | Code no.          |
|---|------------------|-------------------|---|-----------------------|-------------------|
|  <p><b>Cover with pane</b><br/>Cover<br/>Screws</p>  | 1<br>4           | <b>017-436166</b> |  <p><b>Sensor holder kit</b><br/>Pos. 1 Sensor holder<br/>2 Clamp</p>   | 1<br>4                | <b>017-420166</b> |
|  <p><b>Cover without pane</b><br/>Cover<br/>Screw</p>  | 1<br>4           | <b>017-436266</b> |  <p><b>Sensor clamp, fig. 1</b><br/>Clamp<br/>Screw<br/>Nut 1</p> <p><b>Clamping band, fig. 2</b><br/>Band<br/>Screw<br/>Nut</p>  | 1<br>1<br>1           | <b>017-420366</b> |
|  <p>DIN 404<br/><b>Seal screw for cover</b></p>  | 1                | <b>017425166</b>  |  <p><b>Sensor pocket, brass</b><br/>G 1/2 A (ISO 228/1)<br/>Screw-in depth: 112 mm<br/>Pos. 1 Sensor pocket<br/>2 Union<br/>3 Washer<br/>4 Rubber plug<br/>5 Washer</p>               | 1<br>1<br>1<br>1<br>2 | <b>017-420466</b> |
|  <p><b>Protective cap</b></p>  | 1                | <b>017-436066</b> |  <p><b>Sensor pocket, stainless steel 18/8</b><br/>G 1/2 A (ISO 228/1)<br/>Screw-in depth: 112 mm<br/>Pos.1 Sensor pocket<br/>2 Union<br/>3 Washer<br/>4 Rubber plug<br/>5 Washer</p> | 1<br>1<br>1<br>1<br>2 | <b>017-437066</b> |
|  <p><b>Seal screw for cap</b></p>  | 1                | <b>017-425166</b> |   |                       |                   |
|  <p><b>Setting knob</b></p>  | 1                | <b>017-436366</b> |   |                       |                   |
|  <p><b>Capillary tube gland</b><br/>Pos.1 Rubber gasket<br/>2 Union<br/>3 Gland<br/>4 Washer</p> | 1<br>1<br>1<br>4 | <b>017-422066</b> |   |                       |                   |