


Data sheet – Spare parts and accessories

# Change-over valve Type DSV 2

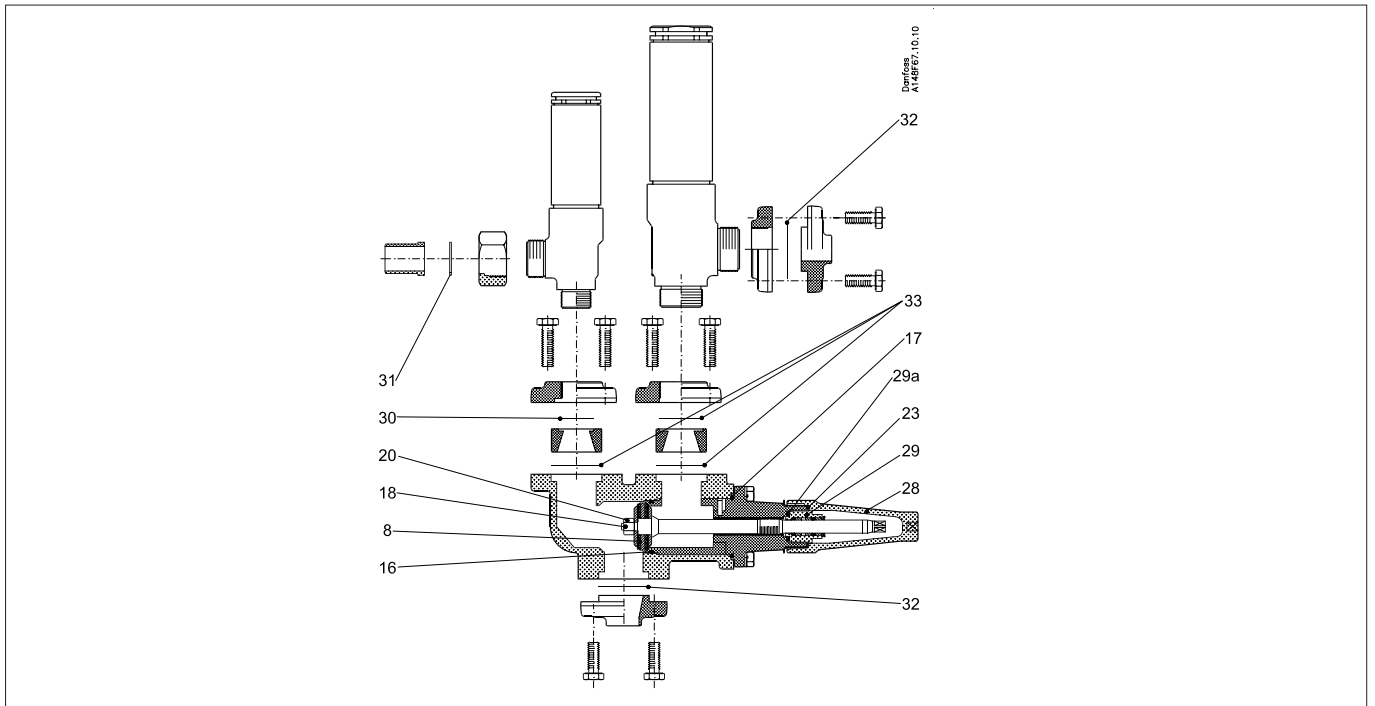

Description	Pos. #	Qty.	Code no.
<b>Spare part kit, for bonnet and cap (installation kit)</b>			
O-ring for seat	16	1	148F3023
O-ring for housing/bonnet	17	1	
Gasket for cap	23	1	
<b>Dismounting kit</b>			
Gasket for flange SFV 15/DSV 2	30	1	148F3030
Gasket for nipple SFV 15	31	1	
Gasket for flange SFV 15-20-25/DSV 2	32	1	
Gasket for flange SFV 20-25/DSV 2	33	1	
<b>Repair kit, complete set of gaskets</b>			
Gasket for cone	8	1	148F3025
O-ring for seat	16	1	
O-ring for housing/bonnet	17	1	
Lock pin	18	1	
Slotted nut	20	1	
Gasket for cap	23	1	
Gaskets complete for packing gland	29a	1	
Gasket for flange SFV 15/DSV 2	30	1	
Gasket for nipple SFV 15	31	1	
Gasket for flange SFV 15-20-25/DSV 2	32	1	
Gasket for flange SFV 20-25/DSV 2	33	1	

Description	Pos. #	Qty.	Code no.
<b>Packing gland incl. gaskets (with O-rings)</b>			
Packing gland incl. gaskets	29	1	148B4032
<b>Cap incl. gasket</b>			
Cap incl. gasket	28	1	148B4076
<b>Grease for packing gland (tube)</b>			
Grease for packing gland (tube)		1	148H3445