



Refrigeration Controls

Instructions

Spare parts for AKV 15 and AKVA 15



068R9550



RI1PP553

Danfoss
A68F503.10

DANFOSS
A68F462.12

DANFOSS
A68F472.10

 




AKVA 15 only

AKVA 15 only

AKVA 15 only

Code no.	068F-0540	068F-0548	068F-0549	068F-5045	068F-5261	068F-5263	068F-5264	068F-5265	068F-5266	068F-5267	068F-5268
Type	AKV AKVA	AKVA	AKV	AKV AKVA	AKVA	AKV	AKVA	AKV AKVA	AKV AKVA	AKV AKVA	AKV AKVA
						10	10				
						10	10				
				1							
	10 Al	25 Al	25 Cu	1 Al	1 Al	10 Cu	10 Al				
	10										
					1						
	1							1			
	2								1		
	3									1	
	4										1
					1	10	10	1	1	1	1
					1	10	10	1	1	1	1
					1						
					1 Al		10 Al				
							20				

Pakningen skal skiftes, hvis ventilen adskilles.
 The gasket must be exchanged, if the valve is dismantled.
 Bei Zerlegung des Ventils muß die Dichtung ausgewechselt werden.
 Changer le joint chaque fois que la vanne est démontée.
 Es preciso cambiar la junta si se desmonta la válvula.

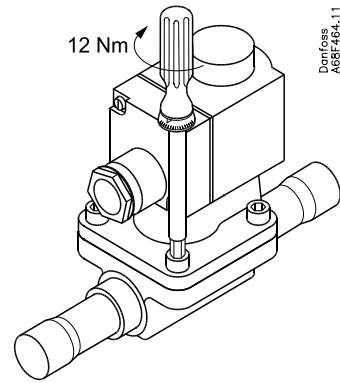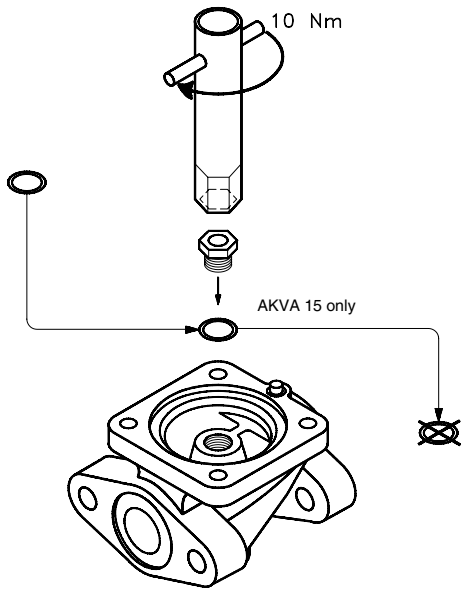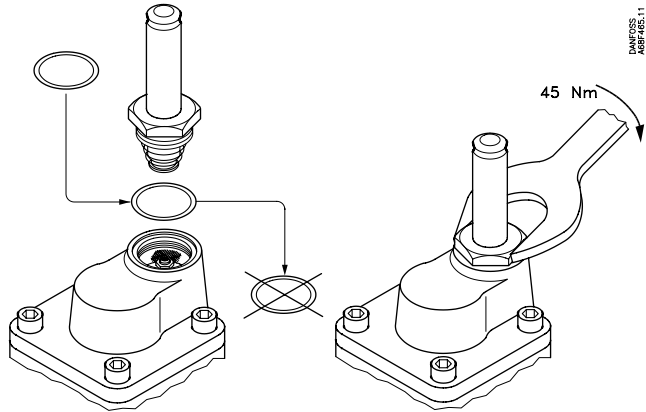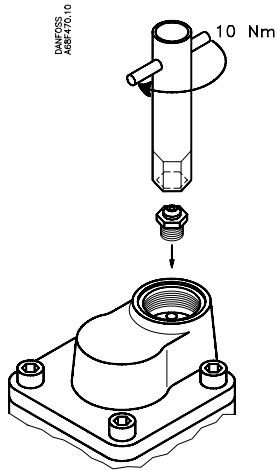

Click-on coil

