


Installation guide

Solenoid valve


Type EV245B

032R9282


032R9282

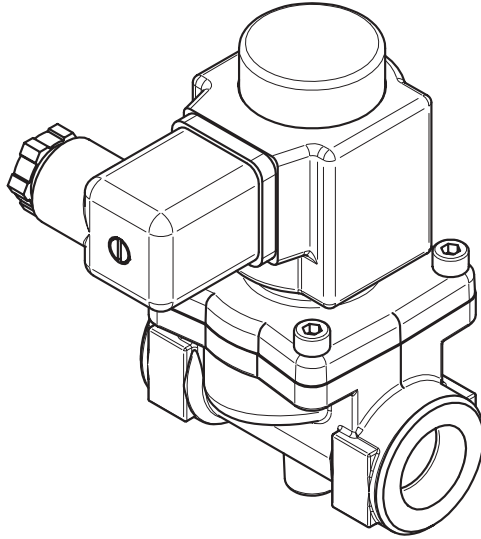


1

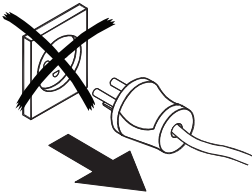


2

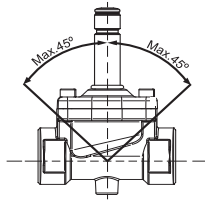


3

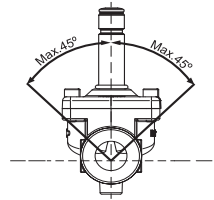

4

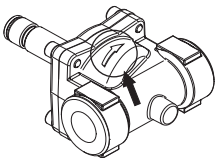

5

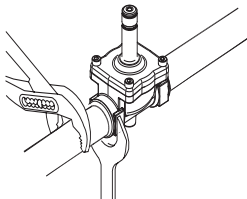

6

