



Danfoss INSTRUCTION
CI 6-50

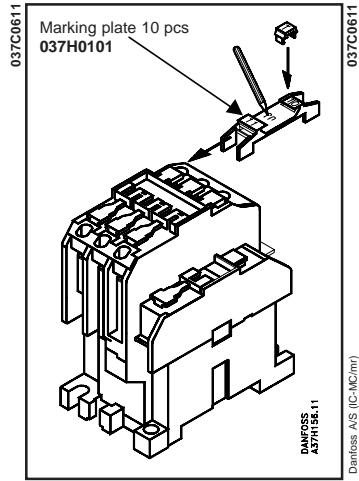


DKACT.PI.C00.E1.00 / 520B0945 11-2002

Danfoss INSTRUCTION
CI 6-50

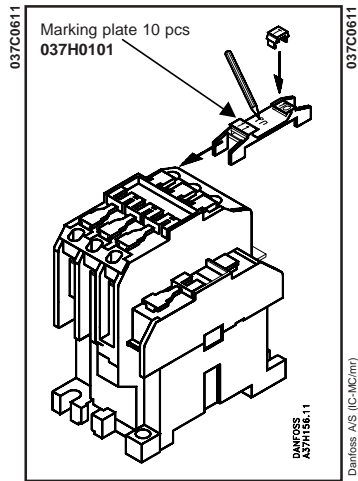


DKACT.PI.C00.E1.00 / 520B0945 11-2002

Danfoss INSTRUCTION
CI 6-50

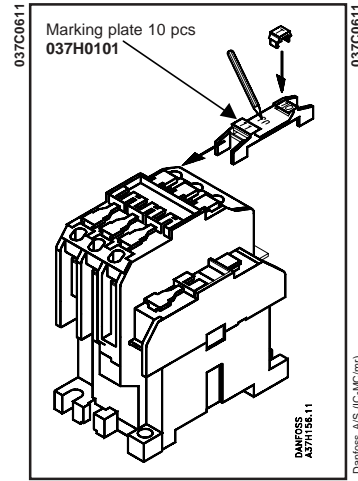


DKACT.PI.C00.E1.00 / 520B0945 11-2002

Danfoss INSTRUCTION
CI 6-50

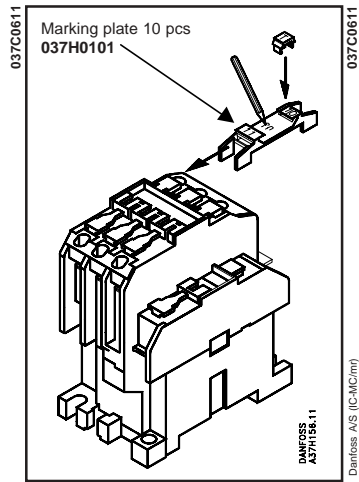


DKACT.PI.C00.E1.00 / 520B0945 11-2002

Danfoss INSTRUCTION
CI 6-50

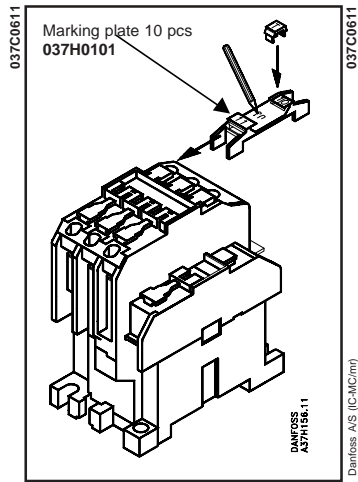


DKACT.PI.C00.E1.00 / 520B0945 11-2002

Danfoss INSTRUCTION
CI 6-50

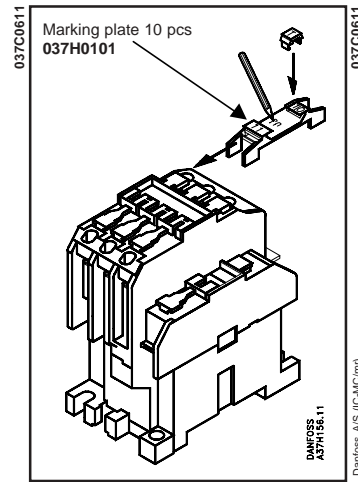


DKACT.PI.C00.E1.00 / 520B0945 11-2002

Danfoss INSTRUCTION
CI 6-50

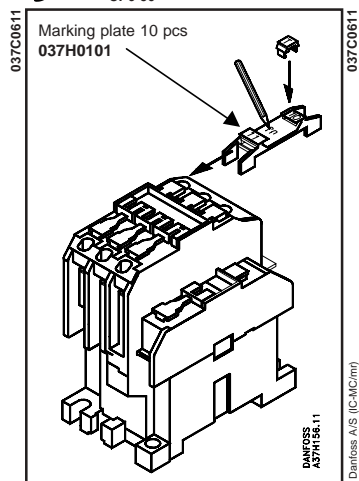


DKACT.PI.C00.E1.00 / 520B0945 11-2002

Danfoss INSTRUCTION
CI 6-50

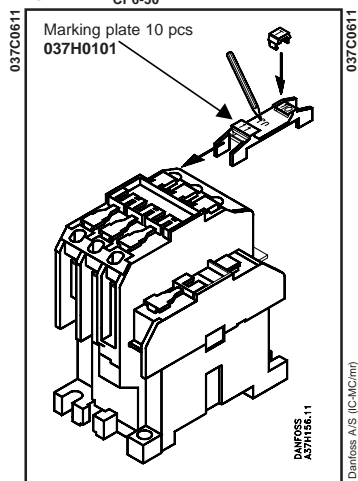

DKACT.PI.C00.E1.00 / 520B0945 11-2002

Danfoss INSTRUCTION
CI 6-50

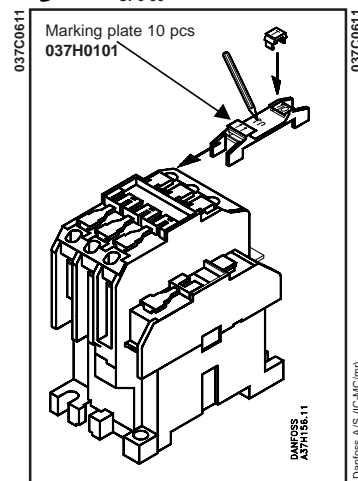

DKACT.PI.C00.E1.00 / 520B0945 11-2002