

Installation guide

Thermostat

RT 14E, RT 101E, RT 107E, RT 123E

017R9518

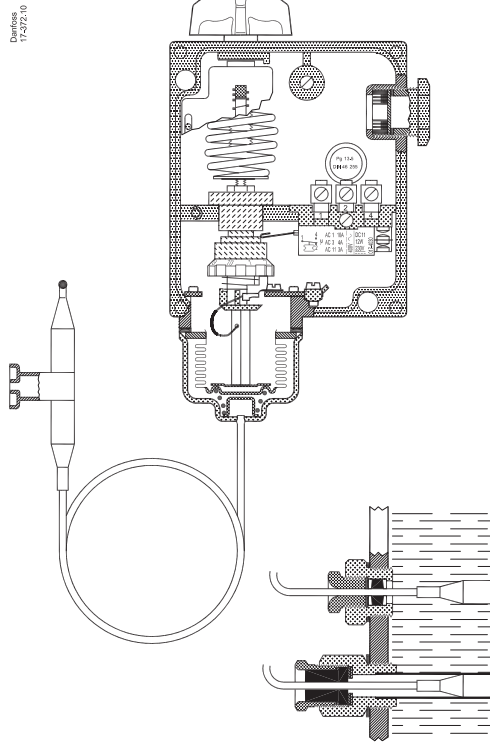


Fig. 1

List of applicable standards:

for ATEX: EN 60079-0:2012+A11:2013; EN 60079-11:2012
for IECEx: IEC 60079-0:2011; IEC 60070-11:2011

Specific conditions of use:

The enclosure fascia has been coated with a layer of stainless steel to prevent the accumulation of electrostatic charge. In order to ensure that there is no accumulation of electrostatic charge on the enclosure, the end user shall ensure that the external metal work of the enclosure is locally bonded to earth. Information on the durability of the coating with regards to use of the equipment is contained within the instruction manual.


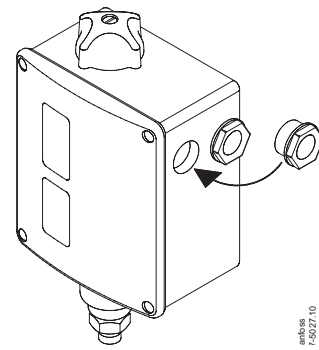



Fig. 2

017R9518


RT 14E

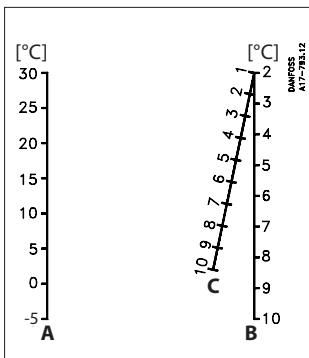


RT 101E

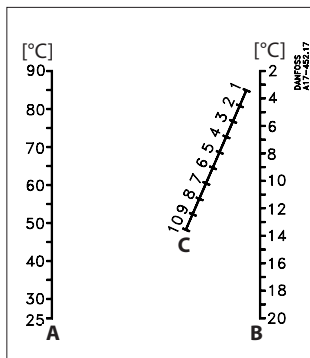

RT 107E

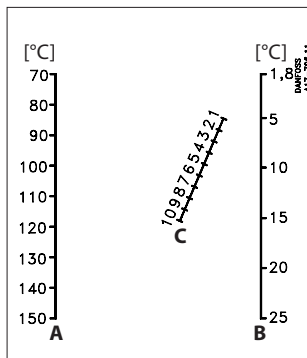

RT 123E

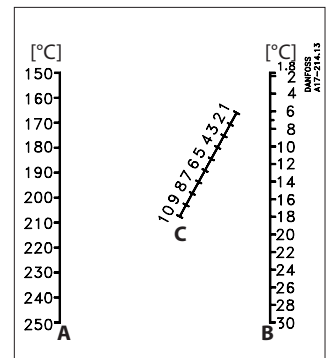

A: Range setting
B: Differential obtained
C: Differential setting

Fig. 3

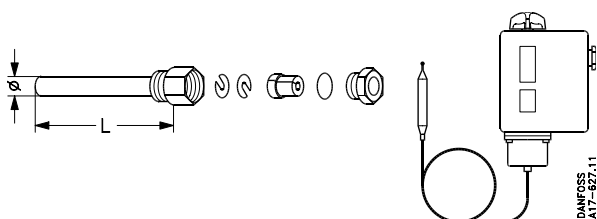


Fig. 4

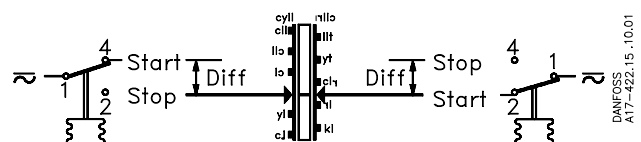


Fig. 5

