





VLT COOLING: THE VLT FREQUENCY CONVERTER MUST BE INSTALLED VIEW - B WIEW - B B CEN		
VLT COOLING: THE VLT FREQUENCY CONVERTER MUST BE INSTALLED VERTICALLY WITH THE MINIMUM FREE SPACE SHOWN IN VIEW - B. ALL IPOO/CHASSIS UNITS MAY BE MOUNTED SIDE BY SIDE, WITH NO MINIMUM CLEARANCE. VLT FREQUENCY CONVERTER HAS NO REQUIREMENTS FOR REAR OPENINGS TO BE COVERED DURING NORMAL OPERATION. B CENTER OF GRAVITY: REFERENCE ONLY, CONFIGURATION MAY SHIFT CG IN ALL THREE AXISES. 9 NONE 175L0264 2 3 175R5955 B	E	З
	VLT COOLING: THE VLT FREQUENCY CONVERTER MUST BE INSTALLED VERTICALLY WITH THE MINIMUM FREE SPACE SHOWN IN VIEW - B. ALL IPOO/CHASSIS UNITS MAY BE MOUNTED SIDE BY SIDE, WITH NO MINIMUM CLEARANCE. VLT FREQUENCY CONVERTER HAS NO REQUIREMENTS FOR REAR OPENINGS TO BE COVERED DURING NORMAL OPERATION. B CENTER OF GRAVITY: REFERENCE ONLY, CONFIGURATION MAY SHIFT CG IN ALL THREE AXISES. PLOT SCALE: PLOT SCALE: PLO	Д

Γ





	LATEST E.C.N. NO.: HP09117	E.C.N. PRO-E ENTRY BY/DATE: ML 08/12/09
3	2	