

Connections overview

Connections overview for connection of DRe-shaft distribution unit to Comfort A VVXc unit, - standard and mirrored versions

