



KIT CAPACITOR COVER ASSEMBLY

100053- 3, 4, 6.



Installation and servicing of Danfoss Turbocor® compressors by qualified and product trained personnel only. Follow these instructions and sound refrigeration/electrical/servicing practices relating to installation, commissioning, maintenance and service.

<p>Consult the appropriate Danfoss Turbocor Compressors Inc. (DTC) Service Manual on turbocor.danfoss.com for detailed service instructions.</p>	<p>Never power compressor without covers in place and secured.</p> <p>Removing the mains input cover will expose you to a voltage hazard of up to 575V. Ensure the mains input power is off and locked out before removing cover.</p> <p>Before removing top cover, wait at least 20 minutes after isolating AC power to allow the high voltage capacitors to discharge.</p>	<p>Always wear appropriately rated safety equipment when working around equipment and/or components energized with high voltage.</p> <p>This equipment contains hazardous voltages that can cause serious injury or death.</p>	<p>Recover all refrigerant from compressor in accordance with local codes and ensure pressure is fully vented before the removal of refrigerant containing components.</p>
--	---	---	---

1 - Introduction:

CAPACITOR COVER ASSEMBLY replacement.

This kit contains the Capacitor Cover and fasteners. Please refer to our Service Manual for details regarding the replacement of the cover.

We have made the **TTS/TGS/TTH/TGH Service Manual** available to anyone. To access the manual, you may scan the applicable QR code below or you may go to our DTC website at www.turbocoroem.com. At the top of the page there is a pull-down menu called "Quick Links." Click this menu and select the appropriate service manual.

Refer to the applicable QR code below to download the TTS/TGS/TTH/TGH Service Manual.

English



Chinese








2 - CAPACITOR COVER ASSEMBLY Removal Instructions:

1. Isolate compressor power as described in Section "Electrical Isolation of the Compressor" of the Service Manual (M-SV-001).
2. Remove the top covers.
3. Remove the Capacitor Cover.
4. Remove the nylon nuts from the base of the DC Capacitor Assembly.
5. Remove the capacitor relief membrane.

3 - CAPACITOR COVER ASSEMBLY Installation Instruction:

1. Install the new capacitor relief membrane with the foam side up.
2. Install the nylon nuts to the base of the DC capacitor assembly.
3. Install the Capacitor Cover.
4. Install the top covers.
5. Return the compressor to normal operation.

4 - Kit Contents:

QTY	Part(s) Description	Picture(s)
1	COVER - CAPACITOR ASSEMBLY, BLUE/BLACK/GREEN	
1	MEMBRANE - CAPACITOR RELIEF	
1	SCREW M5X20 TORX PAN HD	
1	WASHER M5 FLAT	
5	SCREW DOUBLE SEMS M5X15 TORX PAN HEAD	

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.