

Installation Instructions

VLT[®] AutomationDrive FC 360 Control Cassette

Items Supplied

- Standard FC 360 Control Cassette (132B0255)
- Screws


Safety Instructions

Voltage [V]	Power Range [kW]	Min. waiting time [min.]
380-480	0.37-7.5	4
380-480	11-75	15

Table 1.1 Waiting Time after Mains Disconnect


Mounting

1. Connect the control card and the frequency converter bending the cable

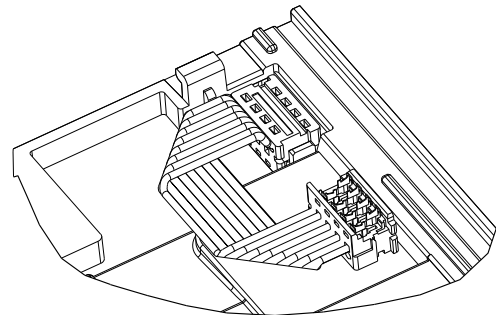

1308D358.10

Illustration 1.1

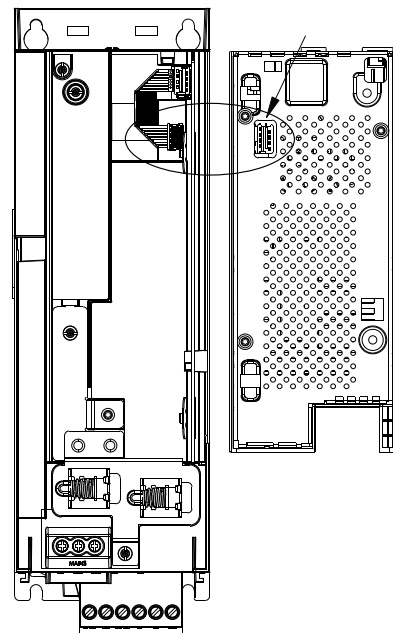

1308D359.10

Illustration 1.2

2. Place the control cassette on the frequency converter and slide it into place.

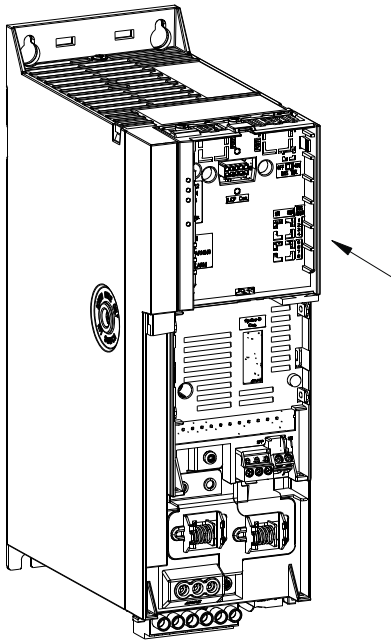


Illustration 1.3

3. Fasten the control cassette on the frequency converter using two screws (supplied). Tightening torque 0.7 ~ 1.0 Nm

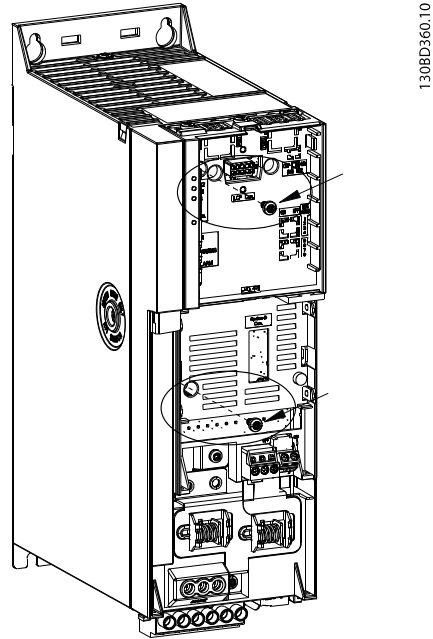


Illustration 1.4

