Danfoss

Installation Instructions Profibus Decoupling Kit VLT[®] AutomationDrive FC 360

Profibus decoupling kit for mounting the control cassette with Profibus. Mount the control cassette on the frequency converter before mounting the Profibus decoupling kit.

Items Supplied

For each control cassette with Profibus, 2 Profibus decoupling kits are supplied in the package. Install the correct kit based on the enclosure type of the frequency converter.

Code Number	Items Supplied	
132B0274	Profibus decoupling kit for enclosure types J1 - J5,	
	containing the following items:	
	Profibus decoupling plate	
	• Screws M3x6	
	• 5-pin connector for Profibus	
132B0286 Profibus decoupling kit for enclosure types Je		
	containing the following items:	
	Profibus decoupling plate	
	• Screws M3x6	
	• 5-pin connector for Profibus	

Table 1.1

Safety Instructions

DISCHARGE TIME

The frequency converter contains DC-link capacitors, which can remain charged even when the frequency converter is not powered. Failure to wait the specified time after power has been removed before performing service or repair work, could result in death or serious injury.

- Disconnect AC mains, permanent magnet type motors, and remote DC-link power supplies, including battery back-ups, UPS, and DC-link connections to other frequency converters.
- Wait for the capacitors to discharge fully, before performing any service or repair work. The duration of waiting time is specified in *Table 1.2*.

Voltage [V]	Minimum waiting time [minutes]		
	4	15	
380-480	0.37-7.5 kW	11-75 kW	
High voltage may be present even when the warning LEDs are off!			

Table 1.2 Discharge Time

Refer to *VLT[®]* AutomationDrive FC 360 Quick Guide for detailed information about safe installation of the frequency converter.

Mounting

 Place the Profibus decoupling plate on the control cassette that is mounted on the frequency converter, and fasten the plate using two screws (supplied). Tightening torque 0.7 - 1.0 Nm.

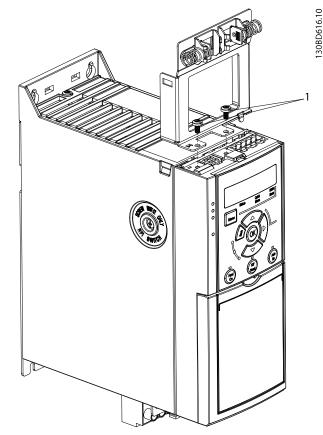


Illustration 1.1 Fasten the Pelate with Screws

Screws

Table 1.3 Legend for Illustration 1.1

Danfoss

2. Push the 5-pin connector for Profibus into place.

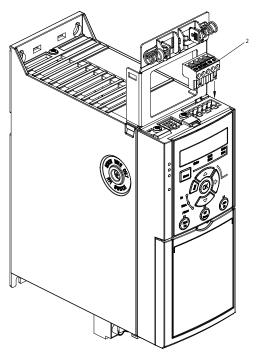


Illustration 1.2 Push the Connector into Place

1 5-pin connector for Profibus

Table 1.4 Legend for Illustration 1.2

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

