


VLT® HVAC Basic Drive IP21/Type1 Kit Mounting Instruction for H9 and H10

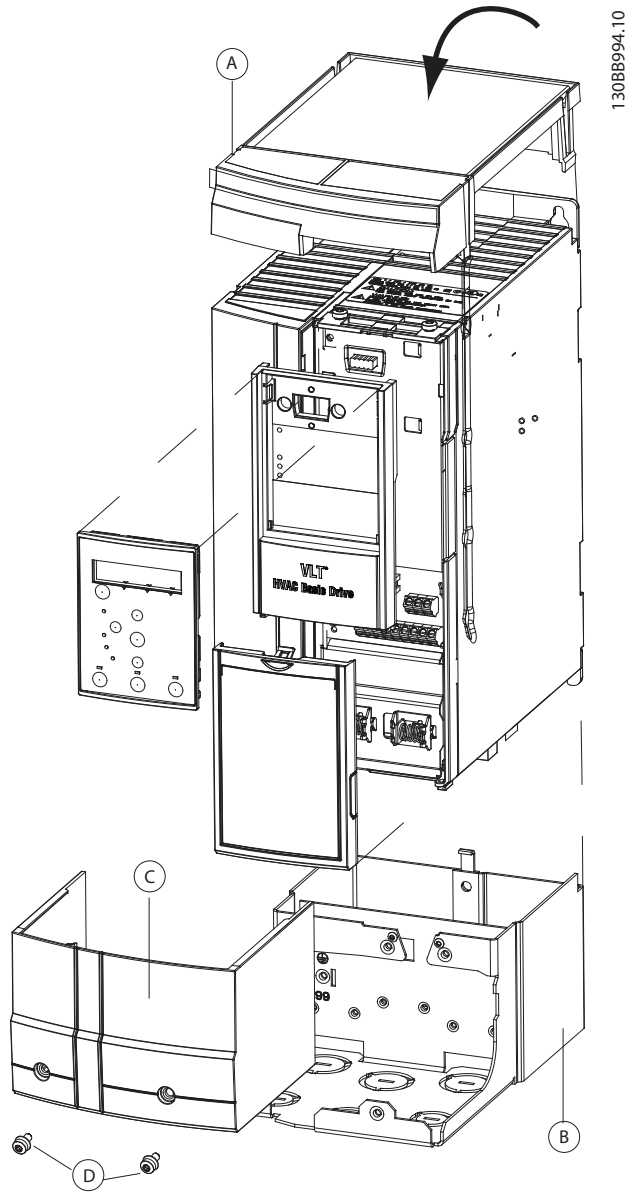

- A - Top cover
- B - Base part
- C - Base cover
- D - Screw(s)

---

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

---

