

Installation Instructions

Alphanumeric LCP

VLT[®] Compressor Drive CDS 803

Item Supplied

- Local control panel (LCP)

Installation

For important information about safety precautions for installation, refer to *VLT[®] Compressor Drive CDS 803 Quick Guide*.

⚠ WARNING

DISCHARGE TIME

The frequency converter contains DC-link capacitors, which can remain charged even when the frequency converter is not powered. Failure to wait the specified time after power has been removed before performing service or repair work could result in death or serious injury.

1. Stop compressor.
2. Disconnect AC mains, permanent magnet type motors, and remote DC-link power supplies, including battery back-ups, UPS, and DC-link connections to other frequency converters.
3. Wait for the capacitors to discharge fully, before performing any service or repair work. The waiting time is specified in *Table 1.1*.

Voltage [V]	Cooling capacity [TR]	Minimum waiting time (min)
3x200	4-6.5	15
3x400	4-5	4
3x400	6.5	15

Table 1.1 Discharge Time

1. Position the bottom of the LCP in the frequency converter, as shown in *Illustration 1.1*.
2. Push the top of the LCP into place as shown in *Illustration 1.2*.

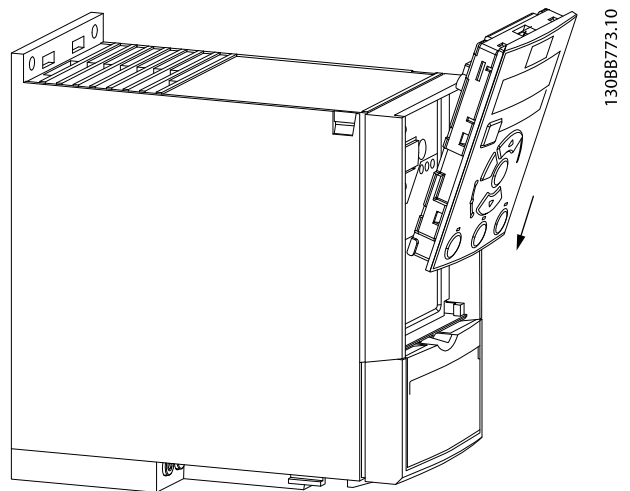


Illustration 1.1 Position the LCP in the Frequency Converter

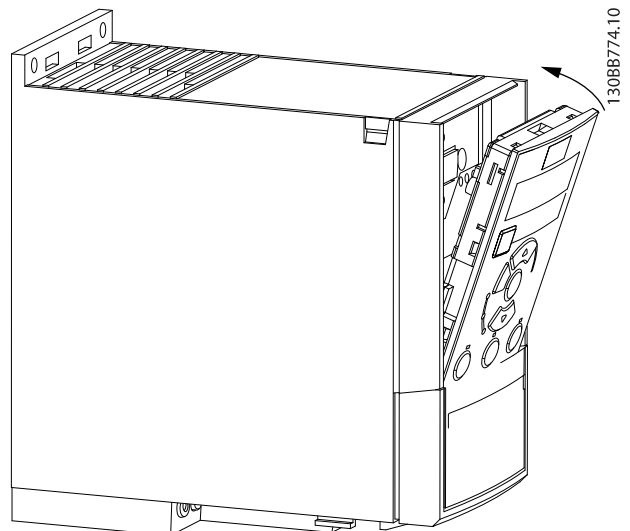


Illustration 1.2 Push the Top of the LCP Into Place

.....
Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.
.....

Danfoss A/S
Ulsnaes 1
DK-6300 Graasten
www.danfoss.com/drives

130R0593

MI18S102



* M I 1 8 S 1 0 2 *

Rev. 09/2014