



-K2 /5.7:E
Static Start/stop command
Statisch Start/Stoppbefehl

* Set point
Sollwert

Drive signal start active
FU Signal Start aktiv

Parameter list

Parameter	Description Beschreibung	Value Wert
5-40	Ready	2
5-12	Without function	0

* Current input, 0-20mA and 4-20mA
Stromeingang, 0-20 mA und 4-20 mA
Voltage input, -10 - +10 V DC
Spannungseingang -10 - +10 V DC

Modification	Date	Name	Contr.

Commission	9/30/2013	355KW VFD Panel
Project description		
Contactor		
Schütz		

Danfoss GmbH
VLT Drives EMA, Carl-Legien Strasse 8
63073 Offenbach, Germany



FILE-NAME:
LOG08300.jpg
Size 300px x 116px

Page description
Frequency converter
Frequenzumrichter

Project Number	----
SAP NO	

= FC302
+ P355KW 230V
Manufacturer no