



PLUNGER ASSY, SOLENOID

100280.



Installation and servicing of Danfoss Turbocor® compressors by qualified and product trained personnel only. Follow these instructions and sound refrigeration/electrical/servicing practices relating to installation, commissioning, maintenance, and service.

<p>Consult the appropriate Danfoss Turbocor Compressors Inc. (DTC) Service Manual on turbocor.danfoss.com for detailed service instructions.</p>	<p>Never power compressor without covers in place and secured.</p> <p>Removing the mains input cover will expose you to a voltage hazard of up to 575V. Ensure the mains input power is off and locked out before removing cover.</p> <p>Before removing top cover, wait at least 20 minutes after isolating AC power to allow the high voltage capacitors to discharge.</p>	<p>Always wear appropriately rated safety equipment when working around equipment and/or components energized with high voltage.</p> <p>This equipment contains hazardous voltages that can cause serious injury or death.</p>	<p>Recover all refrigerant from compressor in accordance with local codes and ensure pressure is fully vented before the removal of refrigerant containing components.</p>
--	---	---	---

1 - Introduction:

PLUNGER ASSY, SOLENOID Removal and Installation Instructions.

This kit contains the Plunger Assembly and O-ring. Please refer to our Service Manual for further details regarding the replacement of the Plunger Assembly.

We have made the **TT Series Service Manual** available to anyone. To access the manual, you may scan the applicable QR code below or you may go to our DTC website at www.turbocoroem.com. At the bottom of the page there is a Section named "Categories" that includes various menus including one for Manuals.

Refer to the applicable QR code below to download the TT Series Service Manual.

English



Chinese





2 - PLUNGER ASSY, SOLENOID Removal Instructions:

1. Isolate compressor power.
2. Isolate the compressor from the refrigerant circuit and recover the refrigerant according to industry standards.
3. Remove the Service Side Cover.
4. Remove the Solenoid Coils.
5. Remove the plunger assembly from the orifice body.

3 - PLUNGER ASSY, SOLENOID Installation Instructions:

1. Install the Plunger assemblies.
2. Leak test and evacuate compressor in accordance with standard industry practices.
3. Install the solenoid coils onto the plunger assemblies in the correct orientation.
4. Install the Service Side Cover.
5. Return the compressor to normal operation.

4 - Kit Contents:

QTY	Part(s) Description	Picture(s)
1	Plunger Assy: Solenoid (Including O-ring)	
1	LUBRICATION-SUPER-O-LUBE-2G	

5 - List of Changes

Revision	Date	Description of Change
M	1/19/2022	Kit numbers were updated. The kit old kit numbers were removed from the top of this instruction and the new ones were added. 100233 – No longer used 100235 – Replaced by 100280
N	6/12/2023	Added O-lube to kit contents

Danfoss LLC can accept no responsibility for possible errors in catalogues, brochures, and other printed material. Danfoss LLC reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.