

ENGINEERING
TOMORROW



Operating Guide

Safe Torque Off

VLT® Frequency Converters



Contents

1	Introduction	5
1.1	Purpose of this Operating Guide	5
1.2	Additional Resources	5
1.3	Functional Overview	5
1.3.1	Introduction	5
1.3.2	Products Covered and Identification	5
1.4	Applied Standards and Compliance	6
2	Safety	7
2.1	Safety Symbols	7
2.2	Qualified Personnel	7
2.3	Responsibilities of Users of Safety-related Power Drive Systems PDS(SR)	7
2.4	Protective Measures	7
2.5	Safety Precautions	7
3	Installation	10
3.1	Safety Instructions	10
3.2	Installing STO	10
3.3	Installation in Combination with VLT® PTC Thermistor Card MCB 112	11
4	Commissioning	13
4.1	Safety Instructions	10
4.2	Activating STO	13
4.3	Parameter Settings for STO Used With VLT® PTC Thermistor Card MCB 112	13
4.4	Automatic/Manual Restart Behavior	13
4.5	STO Commissioning Test	14
4.5.1	Restart Prevention for STO Application	14
4.5.2	Automatic Restart of STO Application	14
4.6	System Configuration Security	14
4.7	Service and Maintenance	15
4.7.1	Performing Functional Tests	15
5	Application Examples	16
5.1	SISTEMA Data	16
5.2	Emergency Stop of Drive with STO - Category 1, PL c, SIL1	16
5.3	Emergency Stop of Drive with STO Using Safety Relay - Category 3, PL d, SIL2	17
5.4	Emergency Stop of Drive with STO, Safety Relay, and Output Contactor - Category 4, PL e, SIL3	18
5.5	Emergency Stop of Multiple Drives - Category 3, PL d, SIL2	19

6	STO Technical Data	21
6.1	Notices Regarding Technical Data	21
6.2	European Directives	21
6.3	Safety Standards	21
6.4	Safety Function	21
6.5	Safety Performance	21
7	Appendix	22
7.1	Abbreviations	22
7.2	Conventions	22

1 Introduction

1.1 Purpose of this Operating Guide

This Operating Guide provides information for use of Danfoss VLT® FC Series drives in functional safety applications. The manual includes information about functional safety standards, Danfoss VLT® FC Series Safe Torque Off (STO) function, the related installation and commissioning, and service and maintenance for STO.

VLT® is a registered trademark for Danfoss A/S.

1.2 Additional Resources

This manual is targeted at users already familiar with the VLT® drives. It is intended as a supplement to the manuals and instructions available for download at www.danfoss.com. Read the instructions shipped with the drive and/or drive option before installing the unit, and observe the instructions for safe installation.

1.3 Functional Overview

1.3.1 Introduction

The Safe Torque Off (STO) function is a component in a safety control system. STO prevents the unit from generating the power required to rotate the motor.

NOTICE

Select and apply the components in the safety control system appropriately to achieve the required level of operational safety. Before integrating and using STO in an installation, carry out a thorough risk analysis on the installation to determine whether the STO functionality and safety levels are appropriate and sufficient.

The VLT® drive is available with:

- Safe Torque Off (STO), as defined by EN IEC 61800-5-2.
- Stop category 0, as defined in EN 60204-1.

The drive integrates the STO functionality via control terminal 37.

The VLT® drive with STO functionality is designed and approved suitable for the requirements of:

- Category 3 in EN ISO 13849-1.
- Performance Level "d" in EN ISO 13849-1.
- SIL 2 in IEC 61508 and EN 61800-5-2.
- The product can be used in the application area of EN IEC 62061.

1.3.2 Products Covered and Identification

The STO function is available for the following drive types:

- VLT® HVAC Drive FC 102.
- VLT® Refrigeration Drive FC 103.
- VLT® AQUA Drive FC 202.
- VLT® AutomationDrive FC 301, enclosure size A1.
- VLT® AutomationDrive FC 302.
- VLT® Decentral Drive FCD 302.
- VLT® Parallel Drive Modules.

Identification

- Confirm that the drive is configured with the STO function by checking the unit type code on the nameplate.

Table 1: Type Code Identification

Product	Type code
VLT® HVAC Drive FC 102	T or U at digit 18 of the type code.
VLT® Refrigeration Drive FC 103	T at digit 18 of the type code.
VLT® AQUA Drive FC 202	T or U at digit 18 of the type code.
VLT® AutomationDrive FC 301, enclosure size A1	T at digit 18 of the type code.
VLT® AutomationDrive FC 302	X, B, or R at digit 18 of the type code.
VLT® Decentral Drive FCD 302	X, B, or R at digit 18 of the type code.
VLT® Parallel Drive Modules	T or U at digit 18 of the type code.

1.4 Applied Standards and Compliance

Using the STO on terminal 37 requires that the user fulfills all provisions for safety, including relevant laws, regulations, and guidelines.

The integrated STO function complies with the following standards:

- IEC/EN 60204-1: 2016 Stop category 0 - uncontrolled stop.
- IEC/EN 61508: 2010 SIL2.
- IEC/EN 61800-5-2: 2016.
- EN ISO 13849-1: 2015 Category 3 PL d.

2 Safety

2.1 Safety Symbols

The following symbols are used in this manual:

⚠ D A N G E R ⚠

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

⚠ W A R N I N G ⚠

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

⚠ C A U T I O N ⚠

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

N O T I C E

Indicates information considered important, but not hazard-related (for example, messages relating to property damage).

2.2 Qualified Personnel

The products must only be assembled, installed, programmed, commissioned, maintained, and decommissioned by persons with proven skills. Persons with proven skills:

- Are qualified electrical engineers, or persons who have received training from qualified electrical engineers and are suitably experienced to operate devices, systems, plant, and machinery in accordance with the general standards and guidelines for safety technology.
- Are familiar with the basic regulations concerning health and safety/accident prevention.
- Have read and understood the safety guidelines given in this manual and also the instructions given in the operating guide of the drive.
- Have good knowledge of the generic and specialist standards applicable to the specific application.

2.3 Responsibilities of Users of Safety-related Power Drive Systems PDS(SR)

Users of safety-related Power Drive Systems (PDS(SR)) are responsible for:

- Hazard and risk analysis of the application.
- Identifying safety functions required and allocating SIL or PLr to each of the functions.
- Other subsystems and the validity of signals and commands from these subsystems.
- Designing appropriate safety-related control systems (hardware, software, parameterization, and so on).

2.4 Protective Measures

Qualified and skilled personnel must be available for installing and commissioning the safety engineering systems.

Procedure

1. Install the drive in an IP54 cabinet as per IEC 60529, or in an equivalent environment. In special applications, a higher IP rating may be necessary.
2. Ensure short-circuit protection of the cable between terminal 37 and the external safety device according to ISO 13849-2 table D.4.
3. Install additional measures (for example, a safety holding brake) if external forces influence the motor axis (for example suspended loads).

2.5 Safety Precautions

See the *Safety* chapter in the relevant operating guides for general safety precautions.

⚠ W A R N I N G ⚠**FALL PROTECTION REQUIRED**

External forces acting on the motor, for example suspended loads, and unintended movements, for example caused by gravity, can cause hazards. Not taking any measures to protect against falling loads can lead to death or serious injury.

- Equip the motor with extra measures for fall protection, for example, install extra mechanical brakes.

⚠ W A R N I N G ⚠**NO ELECTRICAL SAFETY**

STO (that is, removal of 24 V DC voltage supply to terminal 37) does not provide electrical safety. The STO function itself is not sufficient to implement the Emergency-Off function as defined by EN 60204-1. Using the STO function to implement Emergency-Off may lead to personal injury.

- Emergency-Off requires measures of electrical isolation, for example, by switching off mains via an extra contactor.

⚠ W A R N I N G ⚠**RISK OF ELECTRICAL SHOCK**

The STO function does NOT isolate mains voltage to the drive or auxiliary circuits. Only perform work on electrical parts of the drive or the motor after isolating the mains voltage supply and waiting for the discharge time to elapse, as specified in the *Safety* chapter in the Operating Guide of the relevant drive. Failure to isolate the mains voltage supply from the unit and waiting the time specified could result in death or serious injury.

- Do not stop the drive by using the STO function. If a running drive is stopped by using the function, the unit trips and stops by coasting. If this limitation is not acceptable, for example because it causes danger, use the appropriate stopping mode to stop the drive and machinery before using the STO function. Depending on the application, a mechanical brake may be required.
- STO is suitable for performing mechanical work on the drive system or affected area of a machine only. It does not provide electrical safety. STO must not be used as a control for starting and/or stopping the drive.

⚠ W A R N I N G ⚠**RESIDUAL ROTATION**

The STO function can be used for asynchronous, synchronous, and permanent magnet motors. Two faults can occur in the power semiconductor of the drive. When using synchronous or permanent magnet motors, a residual rotation can result from the faults. The rotation can be calculated to angle = $360 / (\text{number of poles})$. The application using synchronous or permanent magnet motors must consider this residual rotation and ensure that it does not pose a safety risk. The situation is not relevant for asynchronous motors.

⚠ C A U T I O N ⚠

After installing STO, perform a commissioning test. A passed commissioning test is mandatory after the 1st installation and after each change to the safety installation.

⚠ C A U T I O N ⚠**AUTOMATIC RESTART**

Automatic restart behavior is only allowed in 1 of the 2 situations:

- The unintended restart prevention is implemented by other parts of the STO installation.
- A presence in the dangerous zone can be physically excluded when STO is not activated. In particular, observe paragraph 6.3.3.2.5 of ISO 12100:2010.

N O T I C E

Perform a risk assessment for each stop function to determine the selection of a stop category in accordance with EN 60204-1:

- Stop Category 0 is achieved with immediate removal of power to the actuator, resulting in an uncontrolled coast to stop. STO according to EN 61800-5-2 accomplished a Stop Category 0 stop.
- Stop Category 1 is achieved with power available to the machine actuators to achieve the stop. Power is removed from the actuators when the stop is achieved according to EN 61800-5-2 Safe Stop 1 (SS1).
- Stop Category 2 is a controlled stop with power available to the machine actuators. A holding position under power follows the stop.

N O T I C E

When designing the machine application, timing and distance must be considered for a coast to stop (Stop Category 0 or STO).

For more information regarding stop categories, refer to EN 60204-1.

3 Installation

3.1 Safety Instructions

⚠ CAUTION ⚠

ELECTRICAL HAZARD

The operator or electrical installer is responsible for proper grounding and compliance with all applicable national and local safety regulations.

See [2.5 Safety Precautions](#) and the Operating Guide of the relevant drive. Also, always observe the instructions provided by the motor manufacturer.

3.2 Installing STO

For motor connection, AC mains connection, and control wiring, follow the instructions for safe installation in the Operating Guide of the drive. See [2.5 Safety Precautions](#) and the relevant drive. For installation with the Ex-certified VLT® PTC Thermistor Card MCB 112, see [3.3 Installation in Combination with VLT® PTC Thermistor Card MCB 112](#).

Procedure

1. Remove the yellow jumper wire between control terminals 37 and 12 or 13.

Cutting or breaking the yellow jumper is not sufficient to avoid short-circuiting, see jumper in [Illustration 1](#).


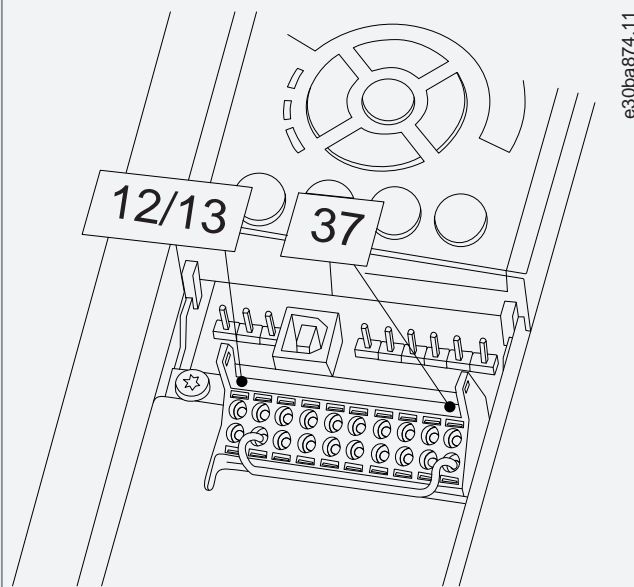


Illustration 1: Jumper between Terminals 12/13 (24 V) and 37 (all Drives Except FCD 302)

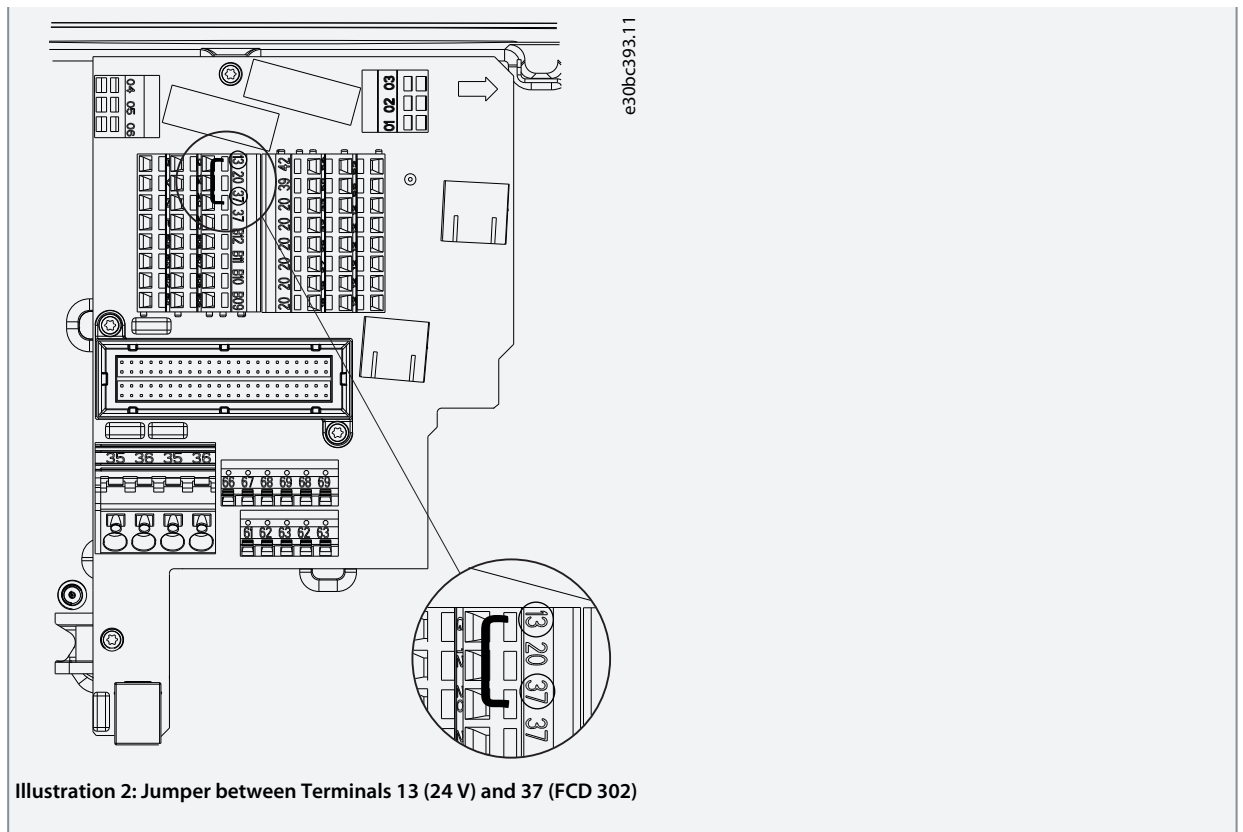

- For example, connect an external safety monitoring relay via an NO safety function to terminal 37 (STO) and either terminal 12 or 13 (24 V DC).

Connection and application examples are found in the chapter *Application Examples*.

- Complete wiring according to the instructions given in the Operating Guide of the drive.

3.3 Installation in Combination with VLT® PTC Thermistor Card MCB 112

NOTICE

The combination of VLT® PTC Thermistor Card MCB 112 and STO function is only available for VLT® HVAC Drive FC 102, VLT® Refrigeration Drive FC 103, VLT® AQUA Drive FC 202, VLT® AutomationDrive FC 302, and VLT® AutomationDrive FC 301 enclosure size A1.

VLT® PTC Thermistor Card MCB 112 uses terminal 37 as its safety-related switch-off channel.

- Ensure that the output X44/12 of MCB 112 is AND-ed with the safety-related sensor (for example, emergency stop button and safeguard switch) that activates STO. This means that the output to STO terminal 37 is high (24 V) only if both the signal from MCB 112 output X44/12 and the signal from the safety-related sensor are high. If at least 1 of the 2 signals is low, the output to terminal 37 must be low too.
- Ensure that the safety device with AND-logic complies with the needed safety level.
- Short-circuit protect the connection from the output of the safety device with safe AND-logic to the STO terminal 37.

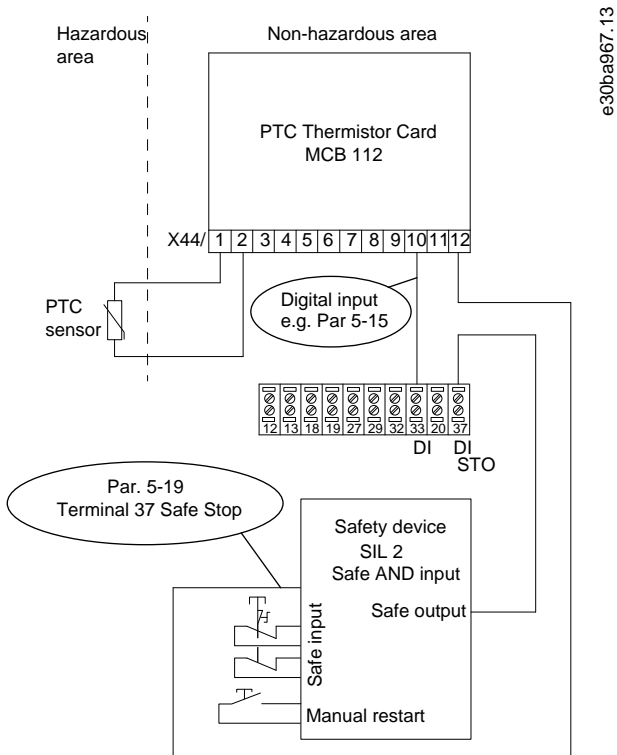


Illustration 3: Combination of an STO Application and an MCB 112 Application

The illustration shows a restart input for the external safety device. This means that in this installation, *parameter 5-19 Terminal 37 Safe Stop* can be set to value [7] PTC 1 & Relay W or [8] PTC 1 & Relay A/W. Refer to VLT® PTC Thermistor Card MCB 112 Operating Guide for further details.

4 Commissioning

4.1 Safety Instructions

! CAUTION !

ELECTRICAL HAZARD

The operator or electrical installer is responsible for proper grounding and compliance with all applicable national and local safety regulations.

See [2.5 Safety Precautions](#) and the Operating Guide of the relevant drive. Also, always observe the instructions provided by the motor manufacturer.

4.2 Activating STO

The STO function is activated by removing the voltage at terminal 37 of the drive. By connecting the drive to external safety devices providing a safe delay, an installation for a Safe Stop 1 can be obtained. External safety devices must fulfill Cat./PL or SIL when connected to terminal 37. The STO function can be used for asynchronous, synchronous, and permanent magnet motors.

When the STO function (terminal 37) is activated, the drive issues an alarm, trips the unit, and coasts the motor to a stop. Manual restart is required. Use the STO function to stop the drive in emergency stop situations. In normal operating mode when STO is not required, use the standard stop function instead. Ensure that requirements according to ISO 12100 paragraph 6.3.3.2.5 are fulfilled before using the automatic restart function.

4.3 Parameter Settings for STO Used With VLT® PTC Thermistor Card MCB 112

When MCB 112 is connected, more selections are available for *parameter 5-19 Terminal Safe Stop* (options [4] PTC 1 Alarm to [9] PTC 1 & Relay W/A).

- Selections [1] Safe Stop Alarm and [3] Safe Stop Warning are still available, but for installations without MCB 112 or any external safety devices. If [1] Safe Stop Alarm or [3] Safe Stop Warning are selected and MCB 112 is triggered, the drive issues *alarm 72, Dangerous Failure* and coasts the motor safely without automatic restart.
- Do not select [4] PTC 1 Alarm and [5] PTC 1 Warning when an external safety device is used. Only use those selections when only MCB 112 uses the STO. If selection [4] PTC 1 Alarm or [5] PTC 1 Warning is selected and the external safety devices triggers STO, the drive issues *alarm 72, Dangerous Failure* and coasts the motor safely without automatic restart.
- Select [6] PTC 1 & Relay A to [9] PTC 1 & Relay W/A for combining external safety devices and MCB 112.

! CAUTION !

AUTOMATIC RESTART

Selections allow automatic restart when the external safety device is deactivated. Before selecting [7] PTC 1 & Relay W or [8] PTC 1 & Relay A/W, ensure that:

- The unintended restart prevention is implemented by other parts of the STO installation, or
- A presence in the dangerous zone can be physically excluded when STO is not activated. In particular, paragraph 6.3.3.2.5 of ISO 12100:2010 must be observed.

See VLT® PTC Thermistor Card MCB 112 Operating Guide for further information.

4.4 Automatic/Manual Restart Behavior

The STO default state prevents unintended restarts (restart prevention behavior). To terminate STO and resume normal operation, follow the procedure below.

Procedure

1. Reapply 24 V DC to terminal 37.
2. Give a reset signal via bus, digital I/O, or [Reset] key.

Set the STO function to automatic restart by setting the value of *parameter 5-19 Terminal 37 Safe Stop* from default value [1] Safe Stop Alarm to value [3] Safe Stop Warning.

Automatic restart means that STO is terminated and normal operation is resumed when the 24 V DC is applied to terminal 37. No reset signal is required.

4.5 STO Commissioning Test

After installation and before first operation, perform a commissioning test of the installation, using STO. Perform the test again after each modification of the installation or application involving the STO.

N O T I C E

A successful commissioning test of the STO function is required after the initial installation and after each subsequent change to the installation or application involving the STO.

- For applications without automatic restart after a safe stop, follow the instructions in [4.5.1 Restart Prevention for STO Application](#).
- For applications with automatic restart after a safe stop, follow the instructions in [4.5.2 Automatic Restart of STO Application](#).

4.5.1 Restart Prevention for STO Application

Applications where *parameter 5-19 Terminal 37 Safe Stop* is set to default value [1] *Safe Stop Alarm* or combined STO and VLT® PTC Thermistor Card MCB 112 where *parameter 5-19 Terminal 37 Safe Stop* is set to [6] *PTC 1 & Relay A* or [9] *PTC 1 & Relay W/A*.

Procedure

1. Remove the 24 V DC voltage supply to terminal 37 using the interrupt device while the drive runs the motor (that is, mains supply is not interrupted).
2. Check that:
 - a. The motor coasts.
 - b. The mechanical brake activates (if connected).
 - c. The LCP (if mounted) shows *Alarm 68, Safe Stop*.
3. Reapply 24 V DC to terminal 37.
4. Ensure that the motor remains in the coasted state, and that the mechanical brake (if connected) remains activated.
5. Send a reset signal via bus, digital I/O, or [Reset] key.
6. Ensure that the motor is operational again.

When all given steps are passed, the commissioning test is successfully completed.

4.5.2 Automatic Restart of STO Application

Applications where *parameter 5-19 Terminal 37 Safe Stop* is set to [3] *Safe Stop Warning* or combined STO and VLT® PTC Thermistor Card MCB 112 where *parameter 5-19 Terminal 37 Safe Stop* is set to [7] *PTC 1 & Relay W* or [8] *PTC 1 & Relay A/W*.

Procedure

1. Remove 24 V DC voltage supply to terminal 37 by the interrupt device while the drive runs the motor (that is, mains supply is not interrupted).
2. Check that:
 - a. The motor coasts.
 - b. The mechanical brake activates (if connected).
 - c. The LCP (if mounted) shows *Warning 68, Safe Stop*.
3. Reapply 24 V DC to terminal 37.
4. Ensure that the motor is operational again.

When all the given steps are passed, the commissioning test is successfully completed.

N O T I C E

See the warning on the restart behavior in [2.5 Safety Precautions](#).

4.6 System Configuration Security

- Security measures are the responsibility of the user.
- The drive parameters can be password-protected.

4.7 Service and Maintenance

It is required for PL d or SIL2 to conduct a functional test every 12 months to detect any failure or malfunction of the STO functionality. For lower PL or SIL, it is a recommendation.

4.7.1 Performing Functional Tests

It is required to perform successful functional tests. If hardware faults are detected during a test, leading to situations where step 3–5 and step 7 cannot be verified:

- Immediately initiate the STO.
- Replace the faulty unit and run a successful commissioning test before resuming normal operation.
- Operation is not allowed with a faulty unit.
- Repair is not allowed.
- If a failure is found in the periodic test, it must result in a safe state. The drive cannot guarantee a safe state so the test must be conducted in a way that secures a safe state, for example, via a safety PLC.

Procedure

1. Remove 24 V DC voltage supply at terminal 37.
2. Check if the LCP shows *Alarm 68, Safe Stop* or *Warning 68, Safe Stop*.
3. Verify that the drive trips the unit.
4. Verify that the motor is coasting and comes to a complete stop.
5. Verify that the motor cannot be started.
6. Reconnect 24 V DC supply to terminal 37.
7. If *parameter 5-19 Terminal 37 Safe Stop* is set to default value [1] *Safe Stop Alarm*, verify that the motor is not started automatically and restarts only by giving a reset signal via bus, digital I/O, or [Reset] key.

5 Application Examples

5.1 SISTEMA Data

SISTEMA (Safety Integrity Software Tool for the Evaluation of Machine Applications) is a software utility that provides developers and testers of safety-related machine controls with comprehensive support in the evaluation of safety in the context of ISO 13849-1. Functional safety data are available from a data library for use with the SISTEMA calculation tool from the ISA (Institute for Occupational Safety and Health of the German Social Accident Insurance), and data for manual calculation. SISTEMA is available for download at www.danfoss.com in the *Service and support/downloads* sections.

5.2 Emergency Stop of Drive with STO - Category 1, PL c, SIL1

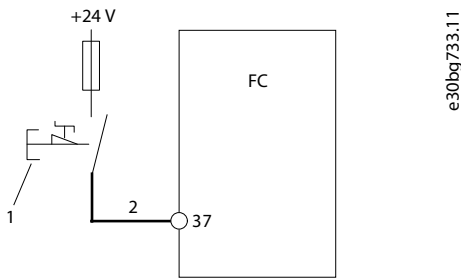


Illustration 4: Application Example, Emergency Stop with STO, Category 1, PL c, SIL1

- | | |
|---|--------------------------------|
| 1 | Emergency stop button. |
| 2 | Short-circuit protected cable. |

Safety function

If there is an emergency, the emergency stop device is activated. The STO function of the drive is activated. Following a stop or emergency stop command, the drive is halted.

Design features

- The circuit can be used up to Category 1, PL c (ISO 13849-1) or SIL1 (EN 62061 and IEC 61508).
- The STO function is activated via 1 NC positively operated switch contact (according to IEC 60947-1, IEC 60947-5-1, and IEC 60947-5-5).
- The PL c, the complete safety functions have to be calculated (MTTFd).
- Use the basic safety principles.
- Devices used for activation of STO must be suitable for the selected Category, PL, or SIL.

When implementing the emergency stop, pay attention to the following tips:

- Any non-safety related standards should be fulfilled for the application and its components.
- The application designer is responsible for selecting suitable components.
- To fulfill PL c, the MTTFd and DC for the whole safety function have to be calculated.
- The B_{10d} value of the emergency stop device shall be known. The B_{10d} value has to be high enough to fulfill MTTFd corresponding to PL c.

Implementation in SISTEMA using Danfoss VLT library

As an example, use the subsystem "VLT® AutomationDrive FC 302/FCD 302 Safe Torque Off (Terminal 37)". There is no need to edit all the parameters which are set in the library.

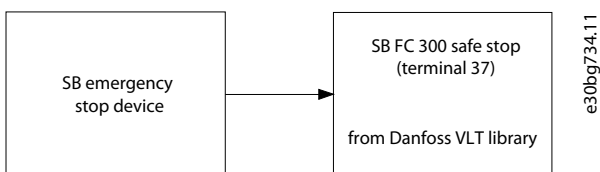


Illustration 5: Safety-related Block Diagram

5.3 Emergency Stop of Drive with STO Using Safety Relay - Category 3, PL d, SIL2

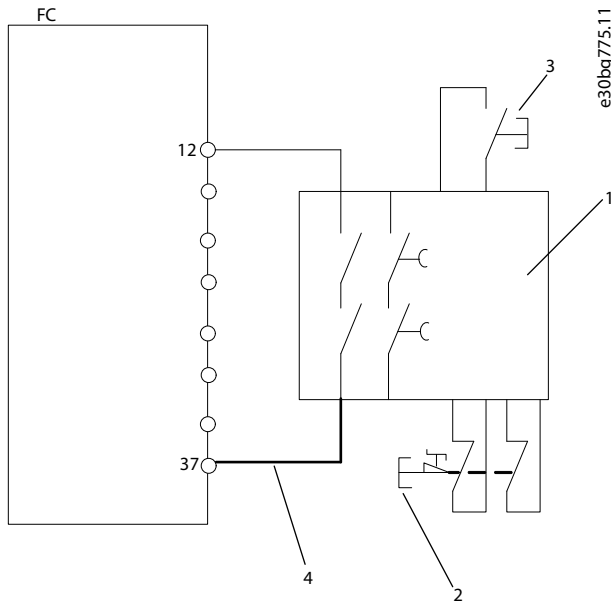


Illustration 6: Installation Example Achieving a Stop Category 0 (EN 60204-1) with Safety Cat. 3/PL "d" (ISO 13849-1) or SIL2 (EN 62061 and IEC 61508)

1	Safety relay (Category 3, PL d, SIL 2)	3	Reset button
2	Emergency stop button	4	Short-circuited protected cable (if not inside installation IP54 cabinet). See ISO 13489-2, Table D.4 for further information

Safety function

If there is an emergency, the emergency stop device is activated. The STO function of the drive is activated. Following a stop or emergency stop command, the drive is halted.

Design features

- The circuit can be used up to Category 3, PL s (ISO 13849-1) or SIL2 (EN 62061 and IEC 61508).
- For PL d, the complete safety functions have to be calculated (MTTFd).
- Use the basic safety principles.
- The device used for activation of STO and safety relay must be suitable for the selected category PL and SIL.

When implementing the emergency stop, pay attention to the following tips:

- Any non-safety related standards should be fulfilled for the application and its components.
- The application designer is responsible for selecting suitable components.
- The cable shown as bold in [Illustration 6](#) has to be short-circuit protected according to ISO 13849-2 table D.4.
- To fulfill PL d, the MTTFd and DC for the whole safety function have to be calculated.

This setup can be used if a dual positive switching device is used. Depending on the safety relay, it is also possible to connect several activation devices to 1 STO.

Implementation of SISTEMA using Danfoss VLT library

As an example, use the subsystem "VLT® AutomationDrive FC 302/FCD 302 Safe Torque Off (Terminal 37)". There is no need for editing all the parameters which are set in the library.

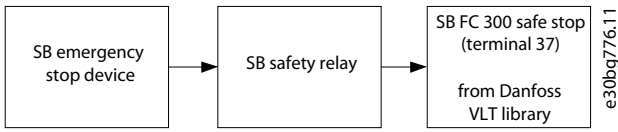


Illustration 7: Safety-related Block Diagram

5.4 Emergency Stop of Drive with STO, Safety Relay, and Output Contactor - Category 4, PL e, SIL3

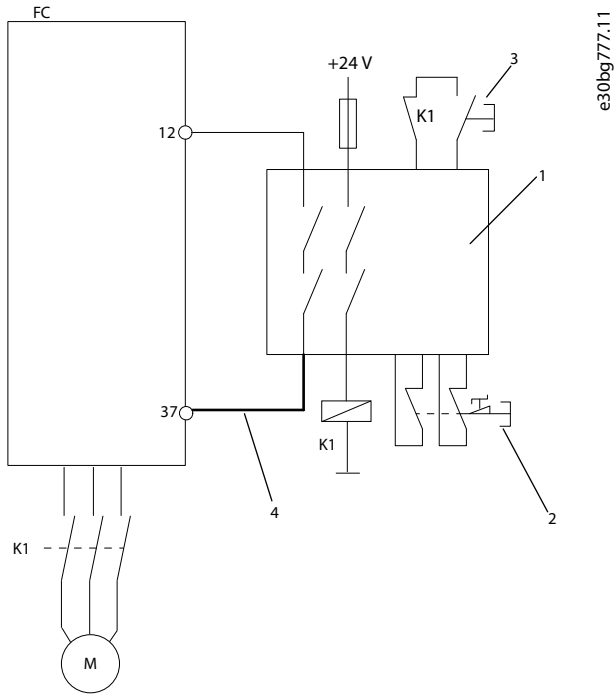


Illustration 8: Drive with STO, Safety Relay, and Output Contactor, Category 4, PL e, SIL3

1	Safety relay (Category 4, PL e, SIL 3)	3	Reset button
2	Emergency stop button	4	Short-circuit protected cable (if not inside installation IP54 cabinet). See ISO 13849-2, Table D.4 for further information.

Safety function

If there is an emergency, the emergency stop device is activated. The STO function in the drive is activated. Following a stop or emergency stop command, the drive is halted.

Where the safety control system must be in accordance with PL e ISO 13849-1 or SIL3 (EN 62061 and IEC 61508), it requires a 2-channel stop for the STO function. One channel can be implemented by the STO input on the drive and the other by a contactor, which may be connected in either the drive input or output power circuits. The contactor must be monitored through an auxiliary-guided contact, shown as K1 in [Illustration 8](#).

Design features

- The circuit can be used up to category 4 and PL e.
- For PL e, the complete safety functions have to be calculated (MTTFd).
- Use basic safety principles.
- Device used for activation of STO and safety relay must be suitable for the selected category, PL or SIL.

When implementing the emergency stop, pay attention to the following tips:

- Any non-safety related standards should be fulfilled for the application and its components.
- The application designer is responsible for selecting suitable components.
- The cable shown as bold in [Illustration 8](#) has to be short-circuit protected according to ISO 13849-2, table D.4.
- To fulfill PL e, the MTTFd and DC for the entire safety function have to be calculated.

This setup can be used if a dual positive switching device is used.

Implementation in SISTEMA using Danfoss VLT library

As an example, use the block "VLT® AutomationDrive FC 302 (Terminal 37)". There is no need for editing all the parameters which are set in the library.

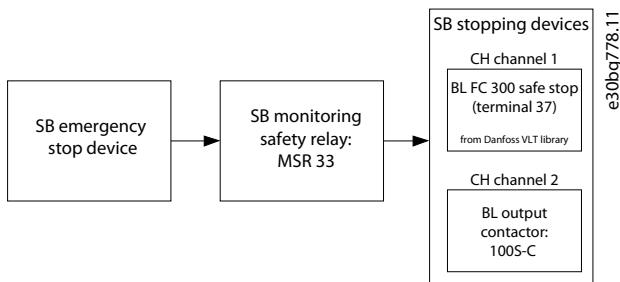


Illustration 9: Safety-related Block Diagram

5.5 Emergency Stop of Multiple Drives - Category 3, PL d, SIL2

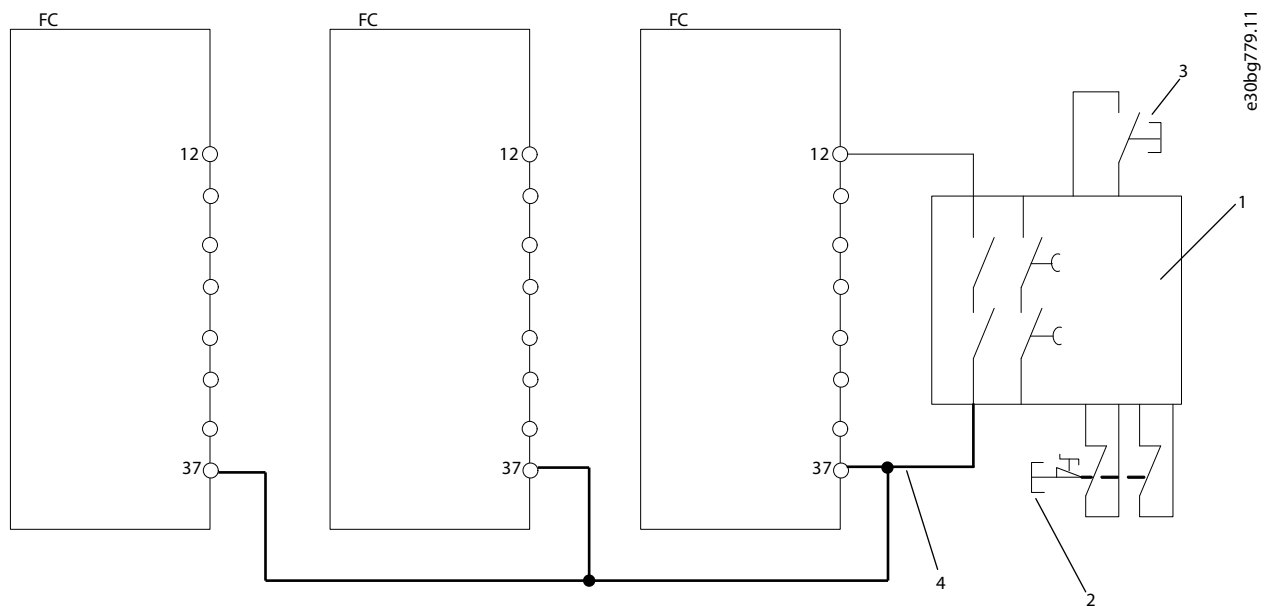


Illustration 10: Multiple Drives with Category 3, PL d, SIL2

1	Safety relay (Category 3, PL d, or SIL2)	3	Reset button
2	Emergency stop button	4	Short-circuit protected cable (if not inside an installation IP54 cabinet). See ISO 13849-2, Table D.4 for further information.

Safety function

If there is an emergency, the emergency stop device is activated. The STO function in the drive is activated. Following a stop or an emergency stop command, the drive is halted.

If it is required to control multiple drives from the same control line, the STO inputs may be interconnected directly.

Connecting inputs together increases the probability of a fault in the unsafe direction since a fault in 1 drive may result in all drives becoming enabled. However, the probability of a fault is so low, at 1×10^{-10} per hour, that the resulting probability still meets the requirement for SIL2 for a realistic number of drives. Do not connect more than 20 inputs in parallel.

N O T I C E

When using internal 24 V DC supply (terminal 12), the number of parallel inputs (terminal 37) is limited to 3, otherwise the available output power is exceeded.

Design features

- The circuit can be used up to Category 3, PL d, or SIL2.
- For PL d, the complete safety functions have to be calculated (MTTFd).
- Use basic safety principles.
- Device used for activation of STO and safety relay must be suitable for the selected category, PL or SIL.

When implementing the emergency stop, pay attention to the following tips:

- Any non-safety related standards should be fulfilled for the application and its components.
- The application designer is responsible for selecting suitable components.
- The cable shown as bold in [Illustration 10](#) has to be short-circuit protected according to ISO 13849-2, table D.4.
- To fulfill PL d, the MTTFd and DC for the entire safety function have to be calculated.

This setup can be used if a dual positive switching device is used. Depending on the safety relay, it is also possible to connect several activation devices to one STO.

Implementation in SISTEMA using Danfoss VLT library

As an example, use the subsystem "VLT® AutomationDrive FC 302/FCD 302 Safe Torque Off (Terminal 37)". There is no need for editing all the parameters which are set in the library. Put the subsystem into the safety function as often as the number of drives that are present on the single STO line.

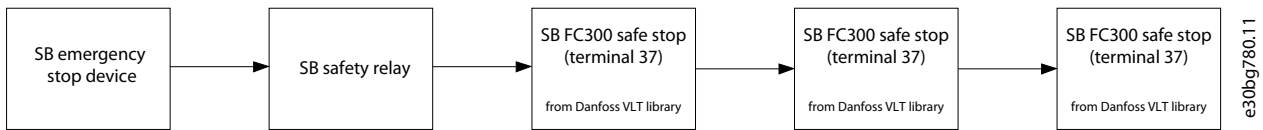


Illustration 11: Safety-related Block Diagram

6 STO Technical Data

6.1 Notices Regarding Technical Data

NOTICE

For technical specifications and operating conditions for the drive, refer to the Operating Guide of the relevant drive.

NOTICE

The STO signal must be SELV or PELV supplied.

6.2 European Directives

Machinery Directive (2006/42/EC)	EN ISO 13849-1, EN IEC 61800-5-2
EMC Directive (2014/30/EU)	EN 50011, EN 61000-6-3, EN 61800-3
Low Voltage Directive (2014/35/EU)	EN 50178, EN 61800-5-1

6.3 Safety Standards

Safety of Machinery	EN ISO 13849-1, IEC 60204-1
Functional Safety	IEC 61508-1 to -7, IEC 61800-5-2

6.4 Safety Function

Safe Torque Off (STO)	IEC 61800-5-2
Stop Category 0	IEC 60204-1

6.5 Safety Performance

ISO 13849-1

Category	Cat 3
Diagnostic coverage	DC: 90% (Medium)
Mean time to dangerous failure	MTTFd: 100 years (high)
Performance level	PL d

IEC 61508

Safety integrity level	SIL2
Probability of dangerous failure per hour	PFH: 1E-10/h; 1E-8/h for specific variants (High Demand Mode) ^{(1), (2)}
Probability of dangerous failure on demand	PFD: 1E-10; 1E-4 for specific variants (Low Demand Mode) ^{(1), (2)}
Subsystem classification	Type A
Proof test interval T1	20 years
Mission time TM	20 years

Reaction time

Input to output response time	Maximum 20 ms, 60 ms for specific variants ^{(1), (2)}
-------------------------------	--

¹ VLT® HVAC Drive FC 102, VLT® Refrigeration Drive FC 103, VLT® AQUA Drive FC 202, and VLT® AutomationDrive FC 302 high-power drives, enclosure size F:

- 400 V: 450/500 kW (600/650 hp)–800/1000 kW (1075/1350 hp) (High Overload/Normal Overload).
- 690 V: 630/710 kW (850/950 hp) – 1800/2000 kW (2400/2700 hp) (High Overload/Normal Overload).

² VLT® Parallel Drive Modules:

- 400 V: 250/315 kW (350/450 hp) – 800/1000 kW (1200/1350 hp) (High Overload/Normal Overload).
- 690 V: 315/400 kW (350/400 hp) – 1000/1200 kW (1150/1350 hp) (High Overload/Normal Overload).

7 Appendix

7.1 Abbreviations

Table 2: Abbreviations Related to Functional Safety

Abbreviations	Reference	Description
B _{10d}		Number of cycles until 10% of the components have a dangerous failure (for pneumatic and electromechanical components).
Cat.	EN ISO 13849-1	Category, level "B, 1–4"
CCF		Common cause failure
DC		Diagnostic coverage divided into Low, Medium, and High.
FIT		Failure in time: 1E-9/hour
MTTFd	EN ISO 13849-1	Mean time to failure - dangerous. Unit: Years are divided into Low, Medium, and High.
PFH	EN IEC 61508	Probability of dangerous failures per hour. Consider this value if the safety device is operated in high demand or continuous mode of operation, where the frequency of demands for operation made on a safety-related system is greater than 1 per year.
PFD	EN IEC 61508	Average probability of failure on demand, value used for low demand operation.
PL	EN ISO 13849-1	Discrete level used to specify the ability of safety-related parts of control systems to perform a safety function under foreseeable conditions. Levels divided into a to e.
PLr		Required performance level (the required performance level for a particular safety function).
SIL	EN IEC 61508	Safety integrity level
STO	EN IEC 61800-5-2	Safe Torque Off
SS1	EN IEC 61800-5-2	Safe Stop 1
SRECS	EN IEC 62061	Safety-related electrical control system
SRP/CS	EN ISO 13849-1	Safety-related parts of control systems
PDS/SR	EN IEC 61800-5-2	Power Drive System (safety-related)

7.2 Conventions

- Numbered lists indicate procedures.
- Bulleted and dashed lists indicate listings of other information where the order of the information is not relevant.
- Bolded text indicates highlighting and section headings.
- Italicized text indicates the following:
 - Cross-reference.
 - Link.
 - Footnote.
 - Parameter name.
 - Parameter option.
 - Parameter group name.
 - Alarms/warnings.

- All dimensions in drawings are in metric values (imperial values in brackets).
- An asterisk (*) indicates the default setting of a parameter.

Index

A		Signal.....	11
Abbreviations.....	22	SIL CL2.....	6
Alarm.....	13	SIL2.....	6, 15, 19, 21
Automatic restart.....	13	SISTEMA calculation tool.....	16
C		Standards and directives	
Commissioning test.....	14	EN IEC 61800-5-2.....	5
Conventions.....	22	EN 60204-1.....	5,8,9,9
I		EN ISO 13849-1.....	5
Identification.....	5	EN 62061.....	5,16,17,18
M		IEC/EN 61508.....	6
MCB 112.....	11, 13	IEC/EN 61800-5-2.....	6
MTTFd.....	21	ISO 13849-1.....	6,16,17,18,21,21,21,22
N		IEC/EN 60204-1.....	6
Nameplate.....	5	IEC 60529.....	7
P		ISO 13849-2.....	7,16,17,18,19
Parameter settings.....	13	ISO 12100.....	8,13
Q		EN 61800-5-2.....	9
Qualified personnel.....	7	IEC 61508.....	16,17,18,21,22
R		IEC 60947-1.....	16
Restart prevention.....	13, 14	IEC 60947-5-1.....	16
S		IEC 60947-5-5.....	16
Safety device.....	11	Machinery directive.....	21
Safety-guard switch.....	11	IEC 61800-5-2.....	21,21,21,22
Safety-related sensor.....	11	EMC directive.....	21
		EN 50011.....	21
		EN 61000-6-3.....	21
		EN 61800-3.....	21
		Low voltage directive.....	21
		EN 50178.....	21
		IEC 60204-1.....	21,21
		IEC 61508-1.....	21
		IEC 62061.....	22
		Symbols.....	7
		T	
		Type code.....	5

Danfoss A/S
Ulsnaes 1
DK-6300 Graasten
vlt-drives.danfoss.com

Danfoss can accept no responsibility for possible errors in catalogs, brochures, and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

