

ENGINEERING
TOMORROW

Danfoss

Operating Guide

VLT® Refrigeration Drive FC 103

110-800 kW, D9h-D10h and E5h-E6h Enclosed Drives





Danfoss A/S

6430 Nordborg
Denmark
CVR nr.: 20 16 57 15
Telephone: +45 7488 2222
Fax: +45 7449 0949

EU DECLARATION OF CONFORMITY

Danfoss A/S
Danfoss Drives A/S

declares under our sole responsibility that the

Product category: Frequency Converter

Type designation(s): FC-103XYYYZZ*****

Character X: N or P

Character YYY: 1K1, 1K5, 2K2, 3K0, 3K7, 4K0, 5K5, 7K5, 11K, 15K, 18K, 22K, 30K, 37K, 45K, 55K, 75K, 90K, 110, 132, 160, 200, 250, 315, 400, 450, 500, 560, 630, 710, 800.

Character ZZ: T2, T4, T6, T7

* may be any number or letter indicating drive options which do not impact this DoC.

The meaning of the 39 characters in the type code string can be found in appendix 00729776.

Covered by this declaration is in conformity with the following directive(s), standard(s) or other normative document(s), provided that the product is used in accordance with our instructions.

Low Voltage Directive 2014/35/EU

EN61800-5-1:2007 + A1:2017 Adjustable speed electrical power drive systems – Part 5-1:
Safety requirements – Electrical, thermal and energy.

EMC Directive 2014/30/EU

EN61800-3:2004 + A1:2012 Adjustable speed electrical power drive systems – Part 3: EMC
requirements and specific test methods.

RoHS Directive 2011/65/EU including amendment 2015/863.

EN63000:2018 Technical documentation for the assessment of electrical and
electronic products with respect to the restriction of
hazardous substances.

Date: 2020.09.15 Place of issue: Graasten, DK	Issued by  Signature: Name: Gert Kjær Title: Senior Director, GDE	Date: 2020.09.15 Place of issue: Graasten, DK	Approved by  Signature: Name: Michael Termansen Title: VP, PD Center Denmark
---------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Danfoss only vouches for the correctness of the English version of this declaration. In the event of the declaration being translated into any other language, the translator concerned shall be liable for the correctness of the translation

Contents

1	Introduction	8
1.1	Purpose of this Operating Guide	8
1.2	Additional Resources	8
1.3	Manual Version	8
1.4	Approvals and Certifications	8
1.5	Disposal	9
2	Safety	10
2.1	Safety Symbols	10
2.2	Qualified Personnel	10
2.3	Safety Precautions	10
3	Product Overview	13
3.1	Intended Use	13
3.2	What is an Enclosed Drive?	13
3.3	Location of Options within an Enclosed Drive	16
3.4	Drive Identification	18
3.4.1	Identifying the Drive and Its Options	18
3.4.2	Enclosure Size Identification	19
3.4.3	Type Code Identification	20
3.5	Power Ratings, Weight, and Dimensions	27
3.6	Control Compartment and Local Control Panel	28
3.6.1	Control Compartment Overview	28
3.6.2	Control Compartment Door	29
3.6.3	Local Control Panel (LCP)	30
3.6.4	LCP Menu	32
4	Mechanical Installation	34
4.1	Items Supplied	34
4.2	Split Shipment	34
4.3	Tools Needed	35
4.4	Storing the Drive	35
4.5	Operating Environment	35
4.5.1	Overview	35
4.5.2	Gases	35
4.5.3	Dust	35
4.5.4	Potentially Explosive Atmospheres	36
4.6	Installation Requirements	36

4.7	Cooling Requirements	37
4.8	Airflow Rates	37
4.9	Lifting the Drive	38
4.10	Combining Multiple Cabinets from a Split Shipment	39
4.11	Installing the Enclosed Drive	41
4.11.1	Creating an Entry for Cables	41
4.11.2	Installing the Drive with Back-channel Cooling Option	41
4.11.3	Securing the Cabinet(s) to the Floor	42
5	Electrical Installation	44
5.1	Safety Instructions	44
5.2	EMC-compliant Installation	44
5.3	Wiring Overview for D9h and D10h Enclosed Drives	48
5.4	Wiring Overview for E5h and E6h Enclosed Drives	49
5.5	Control Terminal Wiring Diagram Cross-reference	50
5.6	Split Shipment Wiring Harnesses	51
5.6.1	Connecting Wiring Harnesses	51
5.6.2	D10h Wiring Harness	52
5.6.3	E5h Wiring Harness	56
5.6.4	E6h Wiring Harness	62
5.7	Control Compartment Wiring	68
5.7.1	Safety Precautions	68
5.7.2	Control Compartment Interior View	69
5.7.3	Control Terminals	70
5.7.4	Relay Terminals	71
5.7.5	Option Card Terminals	71
5.7.6	Control Compartment Options	75
5.8	Connecting Motor, Mains, and Ground Cables	81
5.8.1	Power Cabling and Grounding Considerations	81
5.8.2	Connecting to the Mains	82
5.8.3	Connecting the Drive Module to the Motor	84
5.8.4	Connecting the Sine-wave Filter to the Motor	85
5.8.5	Connecting the dU/dt Filter to the Motor	87
5.8.6	Connecting to Ground	89
5.9	Installing Upstream Fuses	89
5.9.1	Upstream Fuse Considerations	89
5.9.2	Recommended Fuse Ratings for IEC Installation	90
5.9.3	Recommended Fuse Ratings for UL Installation	91

5.10	Enabling Motor Operation	92
5.11	Selecting the Voltage/Current Input Signal	92
5.12	Setting Up RS485 Serial Communication	93
5.13	Configuring the Passive Harmonic Filter (PHF)	94
5.14	Configuring the dU/dt Filter	94
5.15	Configuring the Sine-wave Filter	94
5.16	MCCB Configuration	94
5.17	Safe Torque Off (STO) Wiring	95
6	Pre-start Check List	96
7	Commissioning	98
7.1	Applying Power to the Drive	98
7.2	Programming the Drive	98
7.2.1	Parameter Overview	98
7.2.2	Parameter Navigation	99
7.2.3	Programming Example for an Open-loop Application	99
7.2.4	Entering System Information	100
7.2.5	Configuring Automatic Energy Optimization	101
7.2.6	Configuring Automatic Motor Adaptation	101
7.3	Testing Before System Start-up	101
7.3.1	Testing Motor Rotation	101
7.3.2	Testing Encoder Rotation	101
7.4	Starting Up the Drive for the First Time	102
7.5	Parameter Settings	102
7.5.1	Parameter Setting Overview	102
7.5.2	Uploading and Downloading Parameter Settings	102
7.5.3	Restoring Factory Default Settings Using the Recommended Initialization	103
7.5.4	Restoring Factory Default Settings Using Manual Initialization	103
8	Wiring Configuration Examples	104
8.1	Application Examples	104
8.1.1	Wiring Configuration for Automatic Motor Adaptation (AMA)	104
8.1.2	Wiring Configuration for Automatic Motor Adaptation (AMA) without T27	104
8.1.3	Wiring Configuration: Speed	105
8.1.4	Wiring Configuration: Feedback	107
8.1.5	Wiring Configuration: Run/Stop	108
8.1.6	Wiring Configuration: Start/Stop	110
8.1.7	Wiring Configuration: External Alarm Reset	112

8.1.8	Wiring Configuration: RS485	112
8.1.9	Wiring Configuration: Motor Thermistor	112
8.1.10	Wiring for Regeneration	113
8.1.11	Wiring Configuration for a Relay Set-up with Smart Logic Control	114
8.1.12	Wiring Configuration: Compressor	114
8.1.13	Wiring Configuration for Single or Multiple Refrigeration Fans/Pumps	115
8.1.14	Wiring Configuration for a Compressor Pack	117
9	Maintenance, Diagnostics, and Troubleshooting	118
9.1	Status Messages	118
9.1.1	Status Message Overview	118
9.1.2	Status Messages - Operating Mode	118
9.1.3	Status Messages - Reference Site	118
9.1.4	Status Messages - Operation Status	119
9.2	Maintenance and Service	121
9.3	Warnings and Alarms	121
9.4	Troubleshooting	138
10	Specifications	141
10.1	Electrical Data	141
10.1.1	Electrical Data, 380–480 V AC	141
10.1.2	Electrical Data, 525–690 V AC	144
10.2	Mains Supply	147
10.3	Motor Output and Motor Data	147
10.3.1	Motor Output (U, V, W)	147
10.3.2	Torque Characteristics	147
10.4	Ambient Conditions	148
10.5	Motor and Control Cables	148
10.6	Control Input/Output and Control Data	148
10.6.1	Control Card, USB Serial Communication	148
10.6.2	STO Terminal XD2.19 (Terminal XD2.19 is Fixed PNP Logic)	149
10.6.3	Control Card, 24 V DC Output	149
10.6.4	Control Card, 10 V DC Output	149
10.6.5	Digital Outputs	149
10.6.6	Digital Inputs	150
10.6.7	Pulse/Encoder Inputs	150
10.6.8	Control Characteristics	150
10.6.9	Relay Outputs	151
10.6.10	Analog Output	151

10.6.11 Analog Inputs	151
10.6.12 Control Card, RS485 Serial Communication	152
10.6.13 Control Card Performance	152
10.7 Filter Specifications	152
10.7.1 Passive Harmonic Filter Specifications	152
10.7.2 Line Reactor Specifications	153
10.7.3 dU/dt Filter Specifications	154
10.7.4 Sine-wave Filter Specifications	154
10.8 Fuses, Circuit Breakers, and Switches	155
10.8.1 Panel Fuses	156
10.8.2 Contactor Switches	157
10.8.3 Fusible Disconnect Switches	158
10.8.4 Non-fusible Disconnect Switches	159
10.8.5 Molded-case Circuit Breakers	160
10.9 Enclosure Dimensions	161
10.9.1 Pedestal Dimensions	161
10.9.2 D9h Enclosed Drive Exterior Dimensions	161
10.9.3 D10h Enclosed Drive Exterior Dimensions	162
10.9.4 E5h Enclosed Drive Exterior Dimensions	163
10.9.5 E6h Enclosed Drive Exterior Dimensions	164
10.10 Enclosure Airflow	165
10.11 Fastener Torque Ratings	165
11 Appendix	166
11.1 Conventions	166
11.2 Abbreviations	166
11.3 International/North American Default Parameter Settings	168
11.4 Required Parameter Settings for Drive Options	169
11.5 Block Diagrams	170
11.6 Input Power Option Losses	173
11.6.1 Contactor Losses	173
11.6.2 Fusible Disconnect Losses	174
11.6.3 Non-fusible Disconnect Losses	175
11.6.4 Molded-case Circuit Breaker (MCCB) Losses	176
11.6.5 Passive Harmonic Filter Losses	177
11.6.6 dU/dt Filter Losses	178
11.6.7 Sine-wave Filter Losses	179

1 Introduction

1.1 Purpose of this Operating Guide

This Operating Guide provides information for safe installation and commissioning of the AC drive. It is intended for use by qualified personnel. Read and follow the instructions to use the drive safely and professionally. Pay particular attention to the safety instructions and general warnings. Always keep this Operating Guide with the drive.

1.2 Additional Resources

Other resources are available to understand advanced drive functions and programming.

- The Programming Guide provides greater detail on working with parameters and shows many application examples.
- The Design Guide provides detailed information about capabilities and functionality to design motor control systems.
- The Safe Torque Off Operating Guide provides detailed specifications, requirements, and installation instructions for the Safe Torque Off function.
- Supplementary publications and manuals are available from Danfoss.

See <https://www.danfoss.com/en/search/?filter=type%3Adocumentation>.

1.3 Manual Version

This manual is regularly reviewed and updated. All suggestions for improvement are welcome.

The original language of this manual is English.

Table 1: Manual and Software Version

Version	Remarks	Software version
AQ357954340588 - 0201	Updated enclosure illustrations and the input power option loss tables.	2.33

1.4 Approvals and Certifications

The following list is a selection of possible type approvals and certifications for Danfoss drives:

The specific approvals and certification for the enclosed drive or drive module are on the nameplate of the drive. For more information, contact the local Danfoss office or partner.

Thermal memory retention requirement

The enclosed drive is UL listed per UL508A and CSA 14 standards. The drive module in the enclosed drive system complies with UL 508C or UL 61800-5-1 thermal memory retention requirements. For more information on UL 508C thermal memory retention requirements, refer to the *Motor Thermal Protection* section in the product-specific Design Guide.

N O T I C E**OUTPUT FREQUENCY LIMIT**

Due to export control regulations, the output frequency of the enclosed drive (with no output filters) is limited to 590 Hz. For demands exceeding 590 Hz, contact Danfoss. For enclosed drives with output filters, the maximum output frequency is limited to 60 Hz without derating and to 100/120 Hz with derating.

ADN-compliance

For more information on compliance with the European Agreement concerning International Carriage of Dangerous Goods by Inland Waterways (ADN), refer to section *ADN-compliant Installation* in the product-specific Design Guide.

1.5 Disposal

Do not dispose of equipment containing electrical components together with domestic waste. Collect it separately in accordance with applicable local regulations.

2 Safety

2.1 Safety Symbols

The following symbols are used in this manual:

D A N G E R

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

W A R N I N G

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

C A U T I O N

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

N O T I C E

Indicates information considered important, but not hazard-related (for example, messages relating to property damage).

2.2 Qualified Personnel

To allow trouble-free and safe operation of the unit, only qualified personnel with proven skills are allowed to transport, store, assemble, install, program, commission, maintain, and decommission this equipment.

Persons with proven skills:

- Are qualified electrical engineers, or persons who have received training from qualified electrical engineers and are suitably experienced to operate devices, systems, plant, and machinery in accordance with pertinent laws and regulations.
- Are familiar with the basic regulations concerning health and safety/accident prevention.
- Have read and understood the safety guidelines given in all manuals provided with the unit, especially the instructions given in the Operating Guide.
- Have good knowledge of the generic and specialist standards applicable to the specific application.

2.3 Safety Precautions

W A R N I N G

LACK OF SAFETY AWARENESS

This document gives important information on how to prevent injury and damage to the equipment or the system. Ignoring them can lead to death, serious injury, or severe damage to the equipment.

- Make sure to fully understand the dangers and safety measures incurred in the application.

⚠ W A R N I N G ⚠

DISCHARGE TIME

The drive contains DC-link capacitors and, if input filter options are present, extra capacitors and inductors. These components can remain charged even when the drive is not powered. High voltage can be present even when the warning indicator lights are off.

Failure to wait the specified time after power has been removed before performing service or repair work could result in death or serious injury.

- Stop the motor.
- Disconnect AC mains, permanent magnet type motors, and remote DC-link supplies, including battery back-ups, UPS, and DC-link connections to other drives.
- Wait for the capacitors to discharge fully. The minimum waiting time is specified both in the Discharge Time table and on the nameplate on top of the drive.
- Before performing any service or repair work, use an appropriate voltage measuring device to make sure that the capacitors are fully discharged.

Table 2: Discharge Time

Drive model	Minimum waiting time
D9h/D10h	20 minutes
E5h/E6h	40 minutes

⚠ W A R N I N G ⚠

HIGH VOLTAGE

AC drives contain high voltage when connected to AC mains input. Failure to perform installation, start-up, and maintenance by qualified personnel can result in death or serious injury.

- Only qualified personnel must perform installation, start-up, and maintenance.

⚠ W A R N I N G ⚠

UNINTENDED START

When the drive is connected to the AC mains, DC supply, or load sharing, the motor may start at any time, causing risk of death, serious injury, and equipment or property damage. The motor may start by activation of an external switch, a fieldbus command, an input reference signal from the LCP or LOP, via remote operation using MCT 10 Set-up software, or after a cleared fault condition.

- Press [Off] on the LCP before programming parameters.
- Disconnect the drive from the mains whenever personal safety considerations make it necessary to avoid unintended motor start.
- Check that the drive, motor, and any driven equipment are in operational readiness.

⚠ W A R N I N G ⚠

LEAKAGE CURRENT HAZARD

Leakage currents exceed 3.5 mA. Failure to ground the drive properly can result in death or serious injury.

- Ensure the correct grounding of the equipment by a certified electrical installer.

⚠ W A R N I N G ⚠**ROTATING SHAFTS**

Contact with rotating shafts and electrical equipment can result in death or serious injury.

- Ensure that only trained and qualified personnel perform installation, start-up, and maintenance.
- Ensure that electrical work conforms to national and local electrical codes.
- Follow the procedures in this guide.

⚠ C A U T I O N ⚠**HOT SURFACES**

The drive contains metal components that are still hot even after the drive has been powered off. Failure to observe the high temperature symbol (yellow triangle) on the drive can result in serious burns.

- Be aware that internal components, such as busbars, may be extremely hot even after the drive has been powered off.
- Do not touch exterior areas that are marked by the high temperature symbol (yellow triangle). These areas are hot while the drive is in use and immediately after being powered off.

⚠ C A U T I O N ⚠**INTERNAL FAILURE HAZARD**

An internal failure in the drive can result in serious injury when the drive is not properly closed.

- Ensure that all safety covers are in place and securely fastened before applying power.

3 Product Overview

3.1 Intended Use

NOTICE

OUTPUT FREQUENCY LIMIT

Due to export control regulations, the output frequency of the drive is limited to 590 Hz. For demands exceeding 590 Hz, contact Danfoss.

The enclosed drive is an electronic motor controller that converts AC mains input into a variable AC waveform output. The frequency and voltage of the output are regulated to control the motor speed or torque. Depending on the configuration, the drive can be used in standalone applications or form part of a larger system or installation. The enclosed drive is designed to:

- Regulate motor speed in response to system feedback or remote commands from external controllers.
- Provide motor overload protection.
- Monitor system and motor status.
- Reduce harmonics and increase the power factor using the optional passive harmonic filter or line reactor.
- Reduce motor acoustic noise and protect motor insulation with the optional output filters.
- Reduce bearing current and shaft voltage with the optional common-mode filter.
- Reduce high-frequency, electromagnetic noise in the motor cables with the optional dU/dt filter.
- Provide sinusoidal output with optional sine-wave filter.

The enclosed drive is designed for residential, industrial, and commercial environments in accordance with local laws and standards. Do not use this drive in applications that are non-compliant with specified operating conditions and environments.

NOTICE

RADIO INTERFERENCE

In a residential environment, this product can cause radio interference.

- Take supplementary mitigation measures.

3.2 What is an Enclosed Drive?

The enclosed drive is an IP21/54 (NEMA 1/12) enclosure surrounding an IP20 (Protected Chassis) drive to form the basis of the system. There are 4 enclosed drive models with varying power ratings.

- D9h model: 110–160 kW (125–250 hp)
- D10h model: 200–400 kW (250–450 hp)
- E5h model: 355–630 kW (450–650 hp)
- E6h model: 500–800 kW (650–950 hp)

The enclosed drive is available with various power options and input and output filters to create a factory-built, custom drive. Some options and filters result in extra cabinets attached to the left or right side of the drive cabinet. These optional cabinets are shown with dotted lines, while the drive cabinet is shaded.

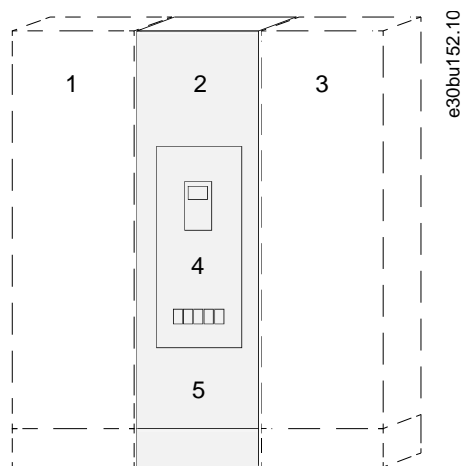


Illustration 1: Possible Configurations for a D9h Enclosed Drive

1	Input filter cabinet (passive harmonic filter or line reactor)	4	Control compartment
2	Drives cabinet	5	Input power options ⁽¹⁾
3	Sine-wave cabinet		

¹ The D9h enclosure does not require an input power options cabinet – the input power options are placed in the drive cabinet.

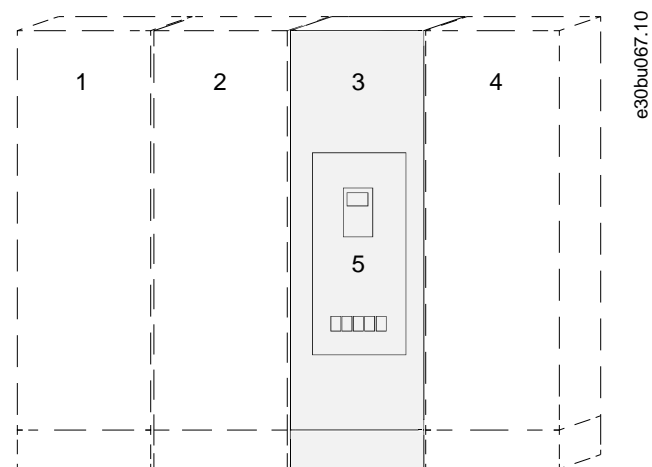


Illustration 2: Possible Configurations for a D10h Enclosed Drive

1	Input filter cabinet (passive harmonic filter or line reactor)	4	Sine-wave filter cabinet
2	Input power options cabinet ⁽¹⁾	5	Control compartment
3	Drive cabinet		

¹ If more than 1 input power option is ordered, the D10h enclosed drive requires an input power options cabinet. Otherwise the single input power option is placed below the control compartment in the drive cabinet.


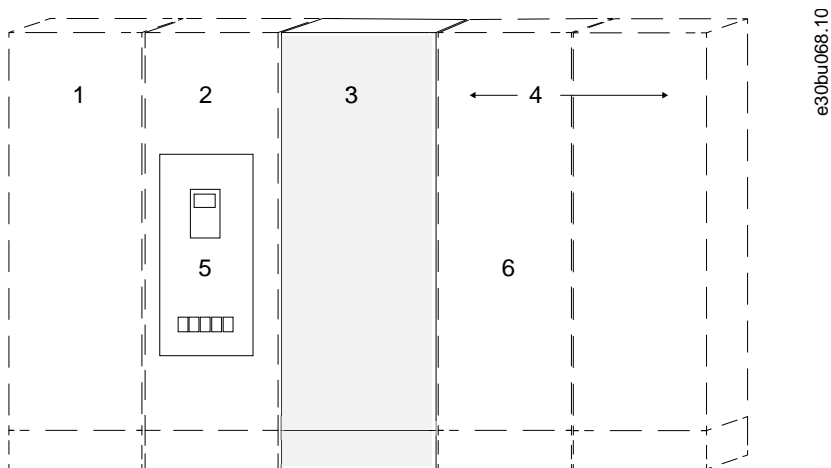


Illustration 3: Possible Configurations for an E5h or E6h Enclosed Drive

1	Input filter cabinet (passive harmonic filter or line reactor)	4	Sine-wave filter cabinet
2	Input power options cabinet	5	Control compartment
3	Drive cabinet	6	dU/dt filter cabinet

3.3 Location of Options within an Enclosed Drive

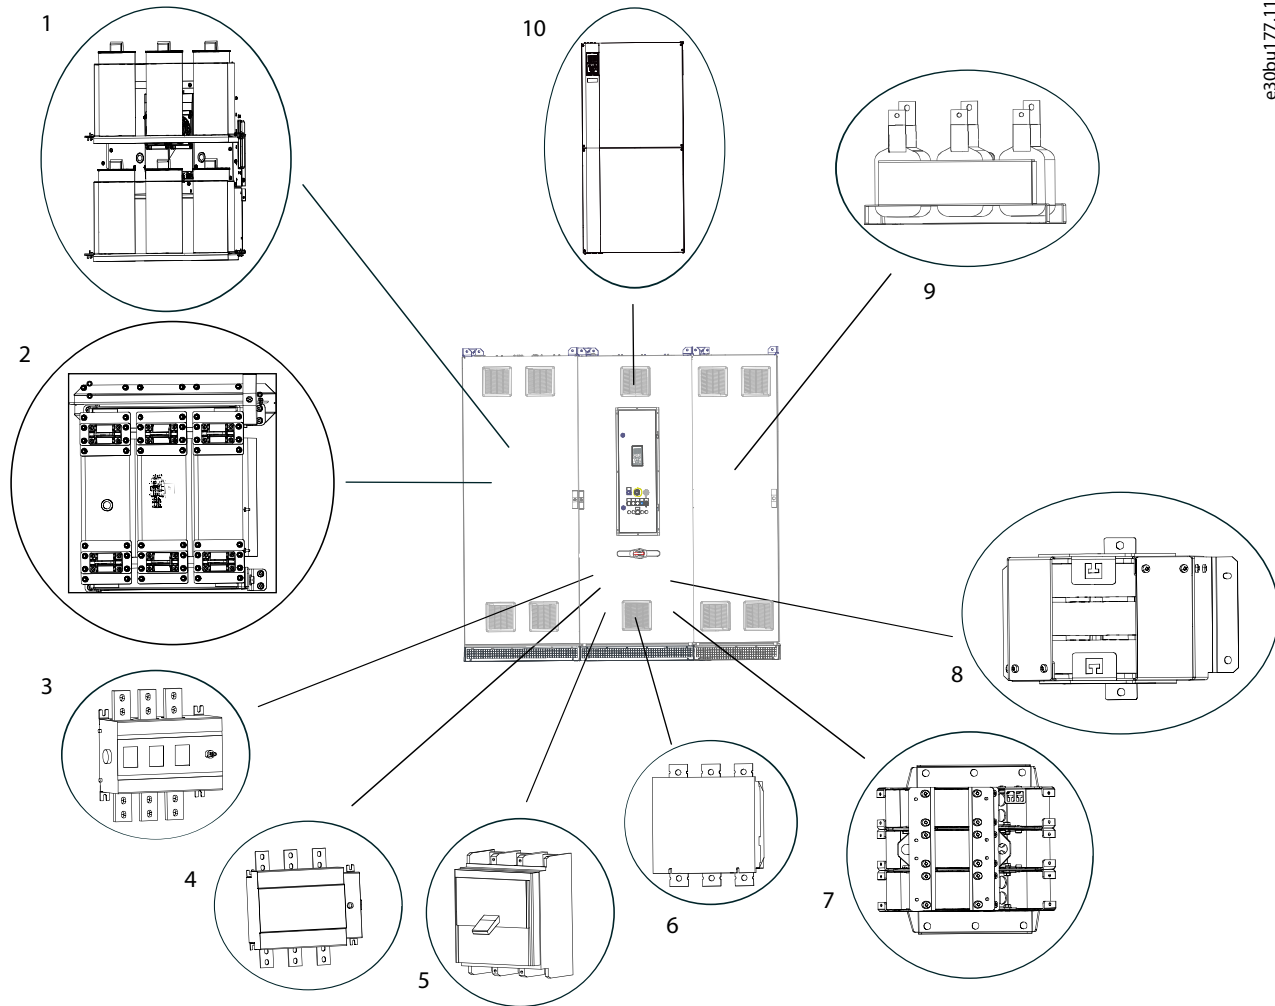

e30bu177.11

Illustration 4: Visual Representation of a D9h Enclosure and the Locations of Available Options

1	Passive harmonic filter (PHF)	6	Mains contactor
2	Line reactor	7	dU/dt filter
3	Non-fusible disconnect	8	Common-mode filter
4	Fusible disconnect	9	Sine-wave filter
5	Molded-case circuit breaker (MCCB)	10	Drive module (varies in power rating)

e30bu178.12

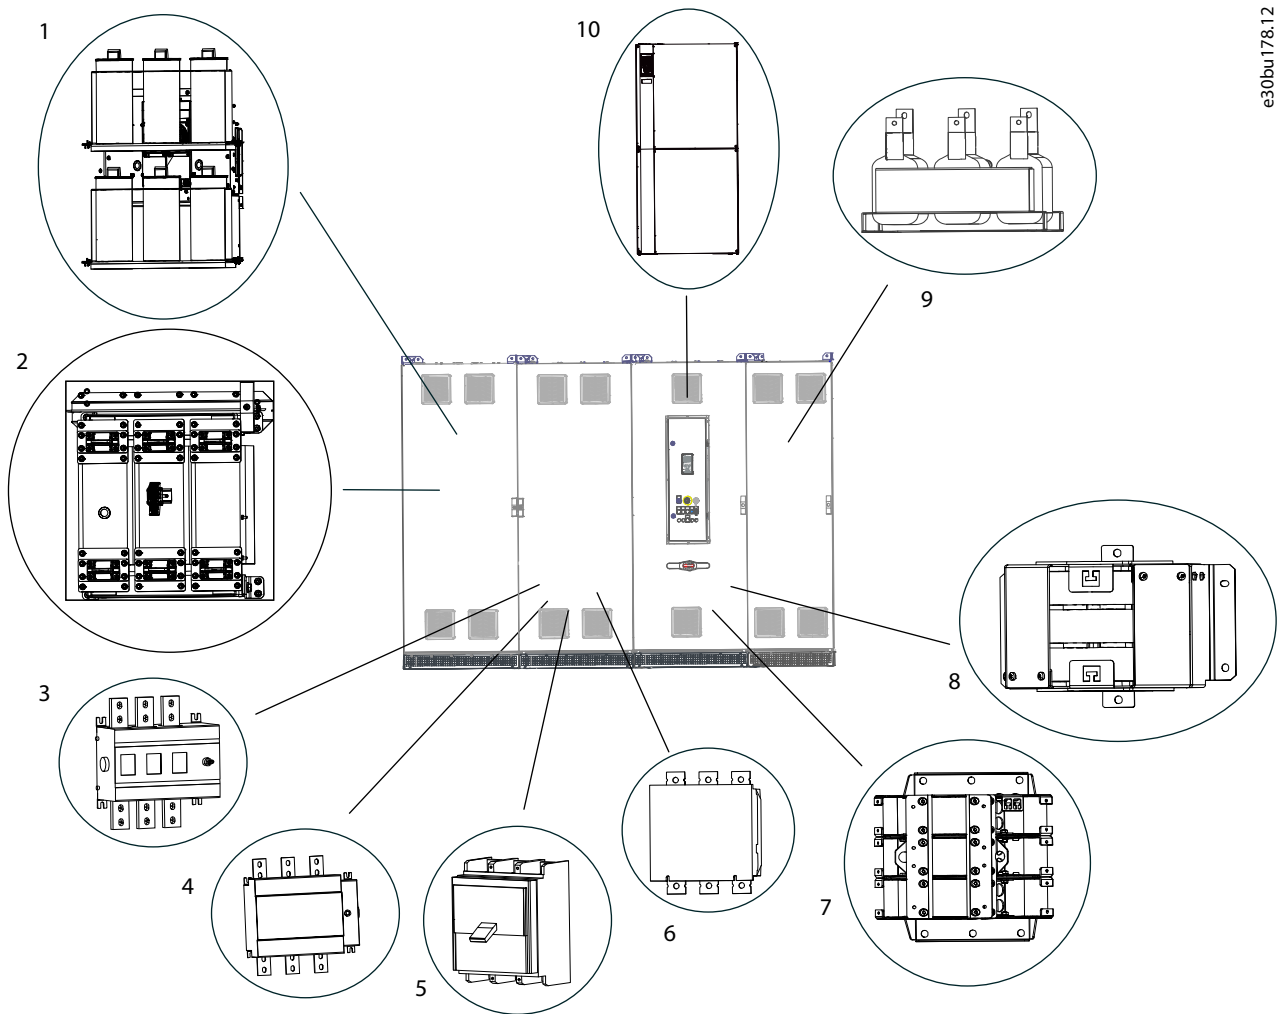


Illustration 5: Visual Representation of a D10h Enclosure and the Locations of Available Options

1	Passive harmonic filter (PHF)	6	Mains contactor
2	Line reactor	7	dU/dt filter
3	Non-fusible disconnect	8	Common-mode filter
4	Fusible disconnect	9	Sine-wave filter
5	Molded-case circuit breaker (MCCB)	10	Drive module (varies in power rating)

e30bu141.12

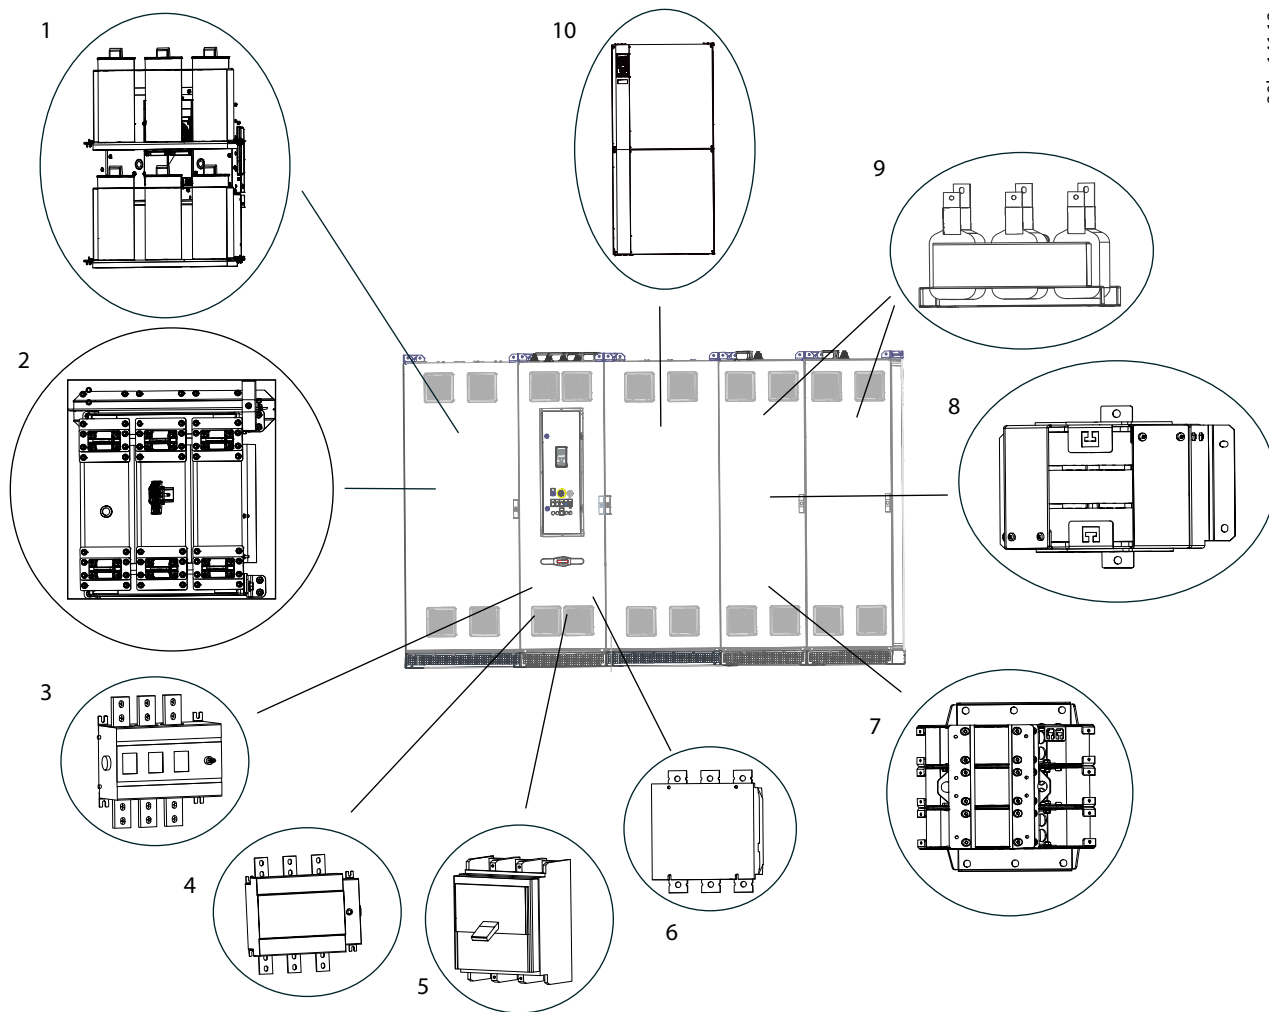


Illustration 6: Visual Representation of a E5h/E6h Enclosure and the Locations of Available Options

1	Passive harmonic filter (PHF)	6	Mains contactor
2	Line reactor	7	dU/dt filter
3	Non-fusible disconnect	8	Common-mode filter
4	Fusible disconnect	9	Sine-wave filter
5	Molded-case circuit breaker (MCCB)	10	Drive module (varies in power rating)

3.4 Drive Identification

3.4.1 Identifying the Drive and Its Options


Enclosure size and specific options are used throughout this guide whenever procedures or components differ based on the drive and its options. Use the following steps to identify the enclosed drive:

Procedure

1. Locate the type code (T/C) on the nameplate. The nameplate is found on the exterior of the drive by the bottom grill and on the control compartment door.
2. Determine the type of enclosure by obtaining the following information from the type code:
 - a. Product group and drive series (characters 1–6).
 - b. Voltage rating (character 8).
 - c. Model/power rating (characters 10–12).

3. Go to [Table 3](#) and use the model number and voltage rating to find the enclosure size.
4. Using the type code, refer to [3.4.3 Type Code Identification](#) to identify the installed options.

Example

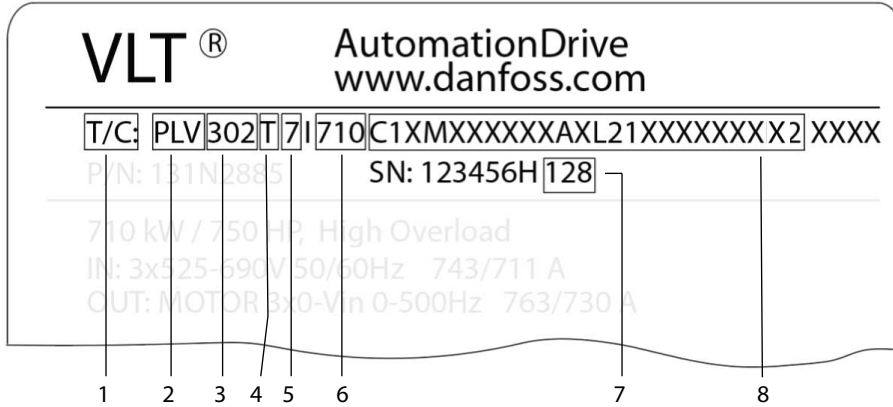

e30bur139.11

Illustration 7: Using the Nameplate to Find the Enclosure Size and Installed Options

<p>1 Type code</p> <p>2 Product group (PLV = enclosed drive)</p> <p>3 Drive series</p> <ul style="list-style-type: none"> • 102 = VLT® HVAC Drive • 103 = VLT® Refrigeration Drive • 202 = VLT® AQUA Drive • 302 = VLT® AutomationDrive <p>4 Low harmonic filter option (if any)</p>	<p>5 Mains voltage</p> <ul style="list-style-type: none"> • 4 = 380–480 V • 5 = 380–500 V • 7 = 525–690 V <p>6 Model/power rating</p> <p>7 Build date (wwy, where ww = the week and y = the last digit of the year)</p> <p>8 Option codes</p>
--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

3.4.2 Enclosure Size Identification

Table 3: Model by Drive Voltage

Model	Enclosure size (380–480 V)	Enclosure size (525–690 V)
N110	D9h	D9h
N132	D9h	D9h
N160	D9h	D9h
N200	D10h	D10h
N250	D10h	D10h
N315	D10h	D10h
N355	E5h	–
N400	E5h	D10h
N450	E5h	E5h
N500	E6h	E5h
N560	E6h	E5h

Model	Enclosure size (380–480 V)	Enclosure size (525–690 V)
N630	–	E5h
N710	–	E6h
N800	–	E6h

3.4.3 Type Code Identification

Table 4: Product Group Code

Character position	Code	Description
1–3	PLV	VLT® Enclosed Drives

Table 5: Drive Series Codes

Character position	Code	Description
4–6	102	VLT® HVAC Drive FC 102
	103	VLT® Refrigeration Drive FC 103
	202	VLT® AQUA Drive FC 202
	302	VLT® Automation Drive FC 302

Table 6: Low-harmonic Filter Codes

Character position	Code	Description
7	T	None
	P	Passive filter, THDi=5%, 50 Hz
	H	Passive filter, THDi=8%, 50 Hz
	L	Passive filter, THDi=5%, 60 Hz
	U	Passive filter, THDi=8%, 60 Hz

Table 7: Mains Voltage Codes

Character position	Code	Description
8	4	380–480 V
	5	380–500 V
	7	525–690 V (525–600 V for UL)

Table 8: Norms and Standards Codes

Character position	Code	Description
9	I	IEC
	U	UL

Table 9: Power Rating Codes

Character position	Code	Description
10–12	90K	(N90K) 90 kW/125 hp

Character position	Code	Description
	110	(N110) 110 kW/150 hp
	132	(N132) 132 kW/200 hp
	160	(N160) 160 kW/250 hp
	200	(N200) 200 kW/300 hp
	250	(N250) 250 kW/350 hp
	315	(N315) 315 kW/450 hp
	355	(N355) 355 kW/500 hp
	400	(N400) 400 kW/550 hp
	450	(N450) 450 kW/600 hp
	500	(N500) 500 kW/650 hp
	560	(N560) 560 kW/750 hp
	630	(N639) 630 kW/900 hp
	710	(N710) 710 kW/1000 hp
	800	(N800) 800 kW/1200 hp

Table 10: Drive Module PCB Coating Codes

Character position	Code	Description
13	C	Coated PCB
	R	Coated PCB + ruggedized

Table 11: Plinth (Pedestal) Codes

Character position	Code	Description
14	1	100 mm high pedestal
	2	200 mm high pedestal
	4	400 mm high pedestal
	5	Marine pedestal

Table 12: Drive Module Braking and Safety Codes

Character position	Code	Description
15	X	No brake IGBT
	B	Brake IGBT
	T	Safe Torque Off
	U	Brake IGBT + Safe Torque Off

Table 13: Mains Option Codes

Character position	Code	Description
16–17	MX	None
	M1	Fusible disconnect
	M2	Non-fusible disconnect
	M3	Circuit breaker (MCCB)
	M4	Mains contactor
	M5	AC reactor
	M6	Fuses
	MA	Fusible disconnect + mains contactor
	MB	Non-fusible disconnect + mains contactor
	MC	AC reactor + fusible disconnect
	MD	AC reactor + fusible disconnect + mains contactor
	ME	AC reactor + non-fusible disconnect
	MF	AC reactor + circuit breaker (MCCB)
	MG	AC reactor + mains contactor
MH	AC reactor + non-fusible disconnect + mains contactor	

Table 14: Output Filter Codes

Character position	Code	Description
18	X	None
	D	dU/dt filter
	S	Sine-wave filter
	C	Common-mode filter
	1	Common-mode + dU/dt filters
	2	Common-mode + sine-wave filters

Table 15: Reserved Code

Character position	Code	Description
19	X	None

Table 16: Cable Infeed Codes

Character position	Code	Description
20	X	Bottom
	T	Top
	L	Mains top, motor bottom

Character position	Code	Description
	M	Mains bottom, motor top

Table 17: Auxiliary Power Supply Codes

Character position	Code	Description
21	1	230 V AC external
	2	230 V AC internal
	4	230 V AC internal + 24 V DC internal
	5	230 V AC external + 24 V DC internal
	6	120 V AC external
	7	120 V AC internal
	8	120 V AC internal + 24 V DC internal
	9	120 V AC external + 24 V DC internal

Table 18: Back-channel Cooling Codes

Character position	Code	Description
22	X	Bottom in, top out
	1	Back in, back out
	C	Back in, top out
	D	Bottom in, back out
	N	None

Table 19: Auxiliary Function Codes

Character position	Code	Description
23–24	AX	No auxiliary options
	A1	AC socket+cabinet light
	A2	Extended I/O terminals
	A3	Cabinet heater
	A4	Motor heater control
	A5	Insulation monitor
	AA	AC socket + cabinet light + extended I/O terminals
	AB	AC socket + cabinet light + cabinet heater
	AC	AC socket + cabinet light + motor heater control
	AD	AC socket + cabinet light + insulation monitor
	AE	AC socket + cabinet light + extended I/O terminals + cabinet heater

Character position	Code	Description
	AF	AC socket + cabinet light + extended I/O terminals + motor heater control
	AG	AC socket + cabinet light + extended I/O terminals + insulation monitor
	AH	AC socket + cabinet light + extended I/O terminals + cabinet heater + motor heater control
	AI	AC socket + cabinet light + extended I/O terminals + cabinet heater + insulation monitor
	AJ	AC socket + cabinet light + extended I/O terminals + motor heater control + insulation monitor
	AK	AC socket + cabinet light + extended I/O terminals + cabinet heater + motor heater control + insulation monitor
	AL	AC socket + cabinet light + cabinet heater + motor heater control
	AM	AC socket + cabinet light + cabinet heater + insulation monitor
	AN	AC socket + cabinet light + cabinet heater + motor heater control + insulation monitor
	AO	AC socket + cabinet light + motor heater control + insulation monitor
	AP	Extended I/O terminals + cabinet heater
	AQ	Extended I/O terminals + motor heater control
	AR	Extended I/O terminals + insulation monitor
	AS	Extended I/O terminals + cabinet heater + motor heater control
	AT	Extended I/O terminals + cabinet heater + insulation monitor
	AU	Extended I/O terminals + cabinet heater + motor heater control + insulation monitor
	AV	Extended I/O terminals + motor heater control + insulation monitor
	AW	Cabinet heater + motor heater control
	A8	Cabinet heater + insulation monitor
	AY	Cabinet heater + motor heater control + insulation monitor
	AZ	Motor heater control + insulation monitor

Table 20: LCP Mounting Codes

Character position	Code	Description
25	L	LCP in the door
	N	No LCP in the door

Table 21: Protection Rating Codes

Character position	Code	Description
26–27	21	IP21
	54	IP54

Table 22: Door-mounted Codes

Character position	Code	Description
28–29	XX	None
	D1	Signal lights and reset button
	D2	Emergency switch off + emergency push-button
	D3	STO with emergency push-button (basic functional safety)
	D4	STO/SS1 with emergency push-button + safely limited speed (TTL encoder)
	D5	STO/SS1 with emergency push-button + safely limited speed (HTL encoder)
	DA	Indicator lights and reset button + emergency switch off and emergency push-button
	DB	Indicator lights and reset button + STO with emergency push-button (basic functional safety)
	DC	Indicator lights and reset button + STO/SS1 with emergency push-button + safely limited speed (TTL encoder)
	DE	Indicator lights and reset button + STO/SS1 with emergency push-button + safely limited speed (HTL encoder)

Table 23: A Option Codes

Character position	Code	Description
30	X	No A option
	0	VLT® PROFIBUS DP-V1 MCA 101
	4	VLT® DeviceNet MCA 104
	6	VLT® CANopen MCA 105
	8	VLT® EtherCAT MCA 124
	G	VLT® LonWorks MCA 108
	J	VLT® BACnet MCA 109
	L	VLT® PROFINET MCA 120
	N	VLT® EtherNet/IP MCA 121
	Q	VLT® Modbus TCP MCA 122
	T	VLT® PROFIBUS Converter VLT 3000 MCA 113
	U	VLT® PROFIBUS Converter VLT 5000 MCA 114
	Y	VLT® POWERLINK MCA 123
W	VLT® DeviceNet Converter MCA 194	

Table 24: B Option Codes

Character position	Code	Description
31	X	No B option
	0	VLT® Analog I/O MCB 109

Character position	Code	Description
	2	VLT® PTC Thermistor Card MCB 112
	4	VLT® Sensor Input MCB 114
	K	VLT® General Purpose I/O Option MCB 101
	P	VLT® Relay Option MCB 105
	Y	VLT® Extended Cascade Controller MCO 101
	R	VLT® Encoder Option MCB 102
	U	VLT® Resolver Option MCB 103
	Z	VLT® Safety PLC Interface MCB 108
	6	VLT® Safe Option TTL MCB 150
	7	VLT® Safe Option HTL MCB 151
	8	VLT® Safety Option MCB 152

Table 25: C0 Option MCO Codes

Character position	Code	Description
32	X	No C option software
	4	VLT® Motion Control MCO 305

Table 26: C1 Option Codes

Character position	Code	Description
33	X	No C1 option
	5	VLT® Advanced Cascade Controller MCO 102
	R	VLT® Extended Relay Card MCB 113

Table 27: C Option Software Codes

Character position	Code	Description
34	X	No software option
	0	VLT® Synchronizing Controller MCO 350
	1	VLT® Positioning Controller MCO 351
	2	VLT® Center Winder MCO 352
	5	VLT® SALT Controller MCO 360

Table 28: D Option Codes

Character position	Code	Description
35	X	No D option
	0	VLT® 24 V DC Supply MCB 107

Table 29: EMC Filter Codes

Character position	Code	Description
36	2	(H2) RFI class A2 (C3)
	4	(H4) RFI class A1 (C2)

Table 30: Reserved Code

Character position	Code	Description
37–39	X	None

Table 31: Documentation Language Codes

Character position	Code	Description
40	X	English, no 2 nd language
	G	English + German
	F	English + French

3.5 Power Ratings, Weight, and Dimensions

Table 32: Power Ratings and Dimensions for D9h–D10h and E5h–E6h Enclosures (Standard Configurations)

Enclosed drive	D9h	D10h	E5h	E6h
Rated power at 380–480 V [kW (hp)]	110–160 (150–250)	200–315 (300–450)	355–450 (500–600)	500–560 (650–750)
Rated power at 525–690 V [kW (hp)]	110–160 (125–200)	200–400 (250–400)	450–630 (450–650)	710–800 (750–950)
Protection rating	IP21 (NEMA 1)/ IP54 (NEMA 12)	IP21 (NEMA 1)/IP54 (NEMA 12)	IP21 (NEMA 1)/IP54 (NEMA 12)	IP21 (NEMA 1)/IP54 (NEMA 12)
Drive cabinet	D9h	D10h	E5h	E6h
Height [mm (in)] ⁽¹⁾	2100 (82.7)	2100 (82.7)	2100 (82.7)	2100 (82.7)
Width [mm (in)] ⁽²⁾	400 (15.8)	600 (23.6)	600 (23.6)	800 (31.5)
Depth [mm (in)]	600 (23.6)	600 (23.6)	600 (23.6)	600 (23.6)
Weight [kg (lb)] ⁽²⁾	280 (617)	355 (783)	400 (882)	431 (950)
Input filter cabinet	D9h	D10h	E5h	E6h
Height [mm (in)] ⁽¹⁾	2100 (82.7)	2100 (82.7)	2100 (82.7)	2100 (82.7)
Width [mm (in)]	400 (15.8)	400 (15.8)/600 (23.6)	600 (23.6)/800 (31.5)	600 (23.6)/800 (31.5)
Depth [mm (in)]	600 (23.6)	600 (23.6)	600 (23.6)	600 (23.6)
Weight [kg (lb)]	410 (904)	410 (904)/530 (1168)	530 (1168)	530 (1168)/955 (2105)
Input power options cabinet	D9h	D10h	E5h	E6h
Height [mm (in)] ⁽¹⁾	–	2100 (82.7)	2100 (82.7)	2100 (82.7)
Width [mm (in)]	–	600 (23.6)	600 (23.6)	600 (23.6)

Enclosed drive	D9h	D10h	E5h	E6h
Depth [mm (in)]	–	600 (23.6)	600 (23.6)	600 (23.6)
Weight [kg (lb)]	–	380 (838)	380 (838)	380 (838)
Sine-wave filter cabinet	D9h	D10h	E5h	E6h
Height [mm (in)] ⁽¹⁾	2100 (82.7)	2100 (82.7)	2100 (82.7)	2100 (82.7)
Width [mm (in)]	600 (23.6)	600 (23.6)	1200 (47.2)	1200 (47.2)
Depth [mm (in)]	600 (23.6)	600 (23.6)	600 (23.6)	600 (23.6)
Weight [kg (lb)]	384 (847)	384 (847)	768 (1693)	768 (1693)
dU/dt filter cabinet	D9h	D10h	E5h	E6h
Height [mm (in)] ⁽¹⁾	–	–	2100 (82.7)	2100 (82.7)
Width [mm (in)] ⁽³⁾	–	–	400 (15.8)	400 (15.8)
Depth [mm (in)]	–	–	600 (23.6)	600 (23.6)
Weight [kg (lb)]	–	–	240 (529)	240 (529)
Top entry/exit cabinet	D9h	D10h	E5h	E6h
Height [mm (in)] ⁽¹⁾	2100 (82.7)	2100 (82.7)	2100 (82.7)	2100 (82.7)
Width [mm (in)] ⁽³⁾	400 (15.8)	400 (15.8)	400 (15.8)	400 (15.8)
Depth [mm (in)]	600 (23.6)	600 (23.6)	600 (23.6)	600 (23.6)
Weight [kg (lb)]	164 (362)	164 (362)	164 (362)	164 (362)

¹ Cabinet height includes standard 100 mm (3.9 in) pedestal. A 200 mm (7.9 in) or 400 mm (15.8 in) pedestal is optional.

² Without options.

³ The E5h and E6h enclosures contain 2 sine-wave cabinets. The provided width is the total of both cabinets.

3.6 Control Compartment and Local Control Panel


3.6.1 Control Compartment Overview

The control compartment is a self-contained space that can be accessed without opening the drive enclosure. The control compartment contains the following:

- Control terminals.
- Relay terminals.
- Terminals for option cards.
- Optional components:
 - Auxiliary supply terminals.
 - Auxiliary voltage transformer connections.
 - +24 V DC external supply.
 - AC customer socket.
 - Extended I/O terminals.
 - Cabinet heater connections.
 - Motor heater control connections.
 - Thermal trip indicator relays.

- Insulation monitor.
- Magnetic cabinet light.
- Buttons and indicator lights (on the exterior door).
- Local control panel (LCP).
- Product nameplate.

3.6.2 Control Compartment Door

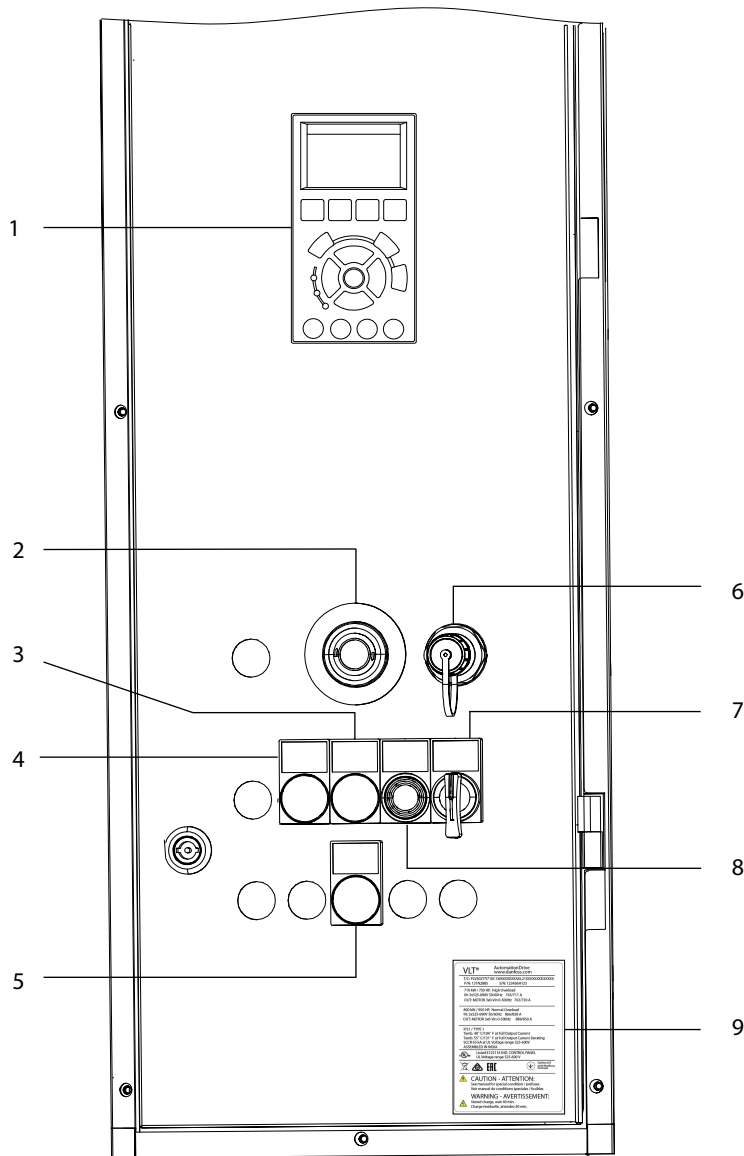


e30bu142.11

Illustration 8: Exterior Door of Control Compartment (Shown with All Options)

1	Local control panel (LCP)	6	USB slot
2	Emergency push-button	7	0–1 Start switch
3	Fault indicator light	8	Reset button
4	Run indicator light	9	Nameplate
5	Insulation fault indicator light		

3.6.3 Local Control Panel (LCP)

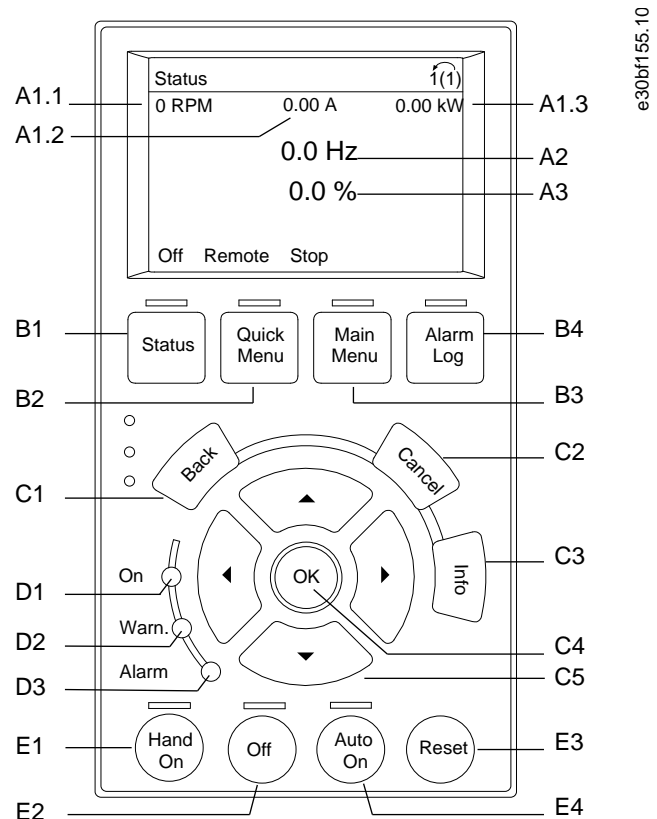

e30bf155.10

Illustration 9: Graphical Local Control Panel (LCP)

The local control panel (LCP) is the combined display and keypad on the front of the drive. The LCP is used to:

- Control the drive and motor.
- Access drive parameters and program the drive.
- Show operational data, drive status, and warnings.

A numeric local control panel (NLCP) is available as an option. The NLCP operates in a manner similar to the LCP, but there are differences. For details on how to use the NLCP, see the product-specific programming guide.

A. Display area

Each display readout has a parameter associated with it. The information shown on the LCP can be customized for specific applications. Refer to *My Personal Menu* in the *LCP Menu* section.

Table 33: LCP Display Area

Callout	Parameter	Default setting
A1.1	Parameter 0-20 Display Line 1.1 Small	ReferenceSpeed [%]
A1.2	Parameter 0-21 Display Line 1.2 Small	Motor current [A]
A1.3	Parameter 0-22 Display Line 1.3 Small	Power [kW]
A2	Parameter 0-23 Display Line 2 Large	Frequency [Hz]
A3	Parameter 0-24 Display Line 3 Large	kWh counter

B. Menu keys

Menu keys are used to access the menu for setting up parameters, toggling through status display modes during normal operation, and viewing fault log data.

Table 34: LCP Menu Keys

Callout	Key	Function
B1	Status	Shows operational information.
B2	Quick Menu	Allows access to parameters for initial set-up instructions. Also provides detailed application steps. Refer to <i>Quick Menu mode</i> in the <i>LCP Menu</i> section.
B3	Main Menu	Allows access to all parameters. Refer to <i>Main Menu mode</i> in the <i>LCP Menu</i> section.
B4	Alarm Log	Shows a list of current warnings and the last 10 alarms.

C. Navigation keys

Navigation keys are used for programming functions and moving the display cursor. The navigation keys also provide speed control in local (hand) operation. The display brightness can be adjusted by pressing [Status] and [▲]/[▼] keys.

Table 35: LCP Navigation Keys

Callout	Key	Function
C1	Back	Reverts to the previous step or list in the menu structure.
C2	Cancel	Cancels the last change or command as long as the display mode has not changed.
C3	Info	Shows a definition of the function being shown.
C4	OK	Accesses parameter groups or enables an option.
C5	[▲][▶] [▼] [◀]	Moves between items in the menu.

D. Indicator lights

Indicator lights identify the drive status and provide a visual notification of warning or fault conditions.

Table 36: LCP Indicator Lights

Callout	Indicator	LED	Function
D1	On	Green	Activates when the drive receives power from the mains voltage or a 24 V external supply.
D2	Warn.	Yellow	Activates when warning conditions are active. Text appears in the display area identifying the problem.
D3	Alarm	Red	Activates during a fault condition. Text appears in the display area identifying the problem.

E. Operation keys and reset

The operation keys are found toward the bottom of the local control panel.

Table 37: LCP Operation Keys and Reset

Callout	Key	Function
E1	[Hand On]	Starts the drive in local control. An external stop signal by control input or serial communication overrides the local [Hand On].
E2	Off	Stops the motor but does not remove power to the drive.
E3	Reset	Resets the drive manually after a fault has been cleared.
E4	Auto On	Puts the system in remote operational mode so it can respond to an external start command by control terminals or serial communication.

3.6.4 LCP Menu

Quick Menus

The *Quick Menus* mode provides a list of menus used to configure and operate the drive. Select the *Quick Menus* mode by pressing the [Quick Menu] key. The resulting readout appears on the LCP display.

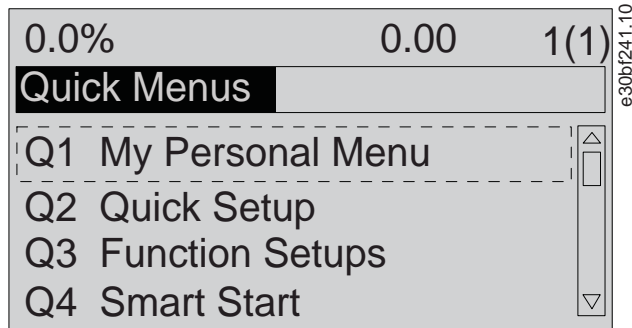


Illustration 10: Quick Menu View

Q1 My Personal Menu

The *Personal Menu* is used to determine what is shown in the display area. Refer to [3.6.3 Local Control Panel \(LCP\)](#). This menu can also show up to 50 pre-programmed parameters. These 50 parameters are manually entered using *parameter 0-25 My Personal Menu*.

Q2 Quick Setup

The parameters found in the *Q2 Quick Setup* contain basic system and motor data that are always necessary for configuring the drive. See [7.2.4 Entering System Information](#) for the set-up procedures.

Q3 Function Setups

The parameters found in the *Q3 Function Setups* contain data for fan, compressor, and pump functions. This menu also includes parameters for LCP display, digital preset speeds, scaling of analog references, closed-loop single-zone, and multizone applications.

Q4 Smart Setup

Q4 Smart Setup guides the user through typical parameter settings used to configure 1 of the following 3 applications:

- Mechanical brake.
- Conveyor.
- Pump/fan.

The [Info] key can be used to see help information for various selections, settings, and messages.

Q5 Changes Made

Select *Q5 Changes Mode* for information about:

- The 10 most recent changes.
- Changes made from default setting.

Q6 Loggings

Use *Q6 Loggings* for fault finding. To get information about the display line readout, select Loggings. The information is shown as graphs. Only parameters selected in *parameter 0-20 Display Line 1.1 Small* through *parameter 0-24 Display Line 3 Large* can be viewed. It is possible to store up to 120 samples in the memory for later reference.

Table 38: Logging Parameter Examples

Q6 Loggings	
<i>Parameter 0-20 Display Line 1.1 Small</i>	Reference [%]
<i>Parameter 0-21 Display Line 1.2 Small</i>	Motor Current [A]
<i>Parameter 0-22 Display Line 1.3 Small</i>	Power [kW]
<i>Parameter 0-23 Display Line 2 Large</i>	Frequency
<i>Parameter 0-24 Display Line 3 Large</i>	kWh Counter

Main Menu

The *Main Menu* mode is used to:

- List the parameter groups available to the drive and drive options.
- Change parameter values.

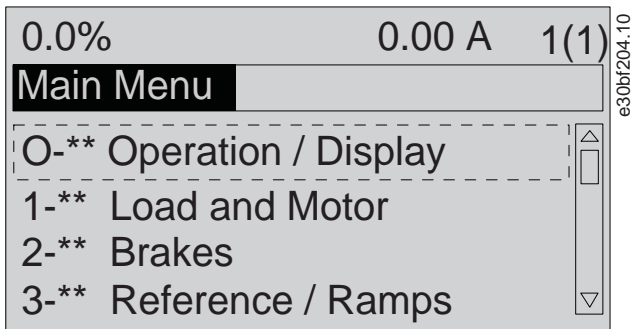



Illustration 11: Main Menu View

4 Mechanical Installation

4.1 Items Supplied

Items supplied can vary according to product configuration.

- Make sure that the items supplied and the information on the nameplate correspond to the order confirmation.
- Visually check the packaging and the drive for damage caused by inappropriate handling during shipment. File any claim for damage with the carrier. Retain damaged parts for clarification.

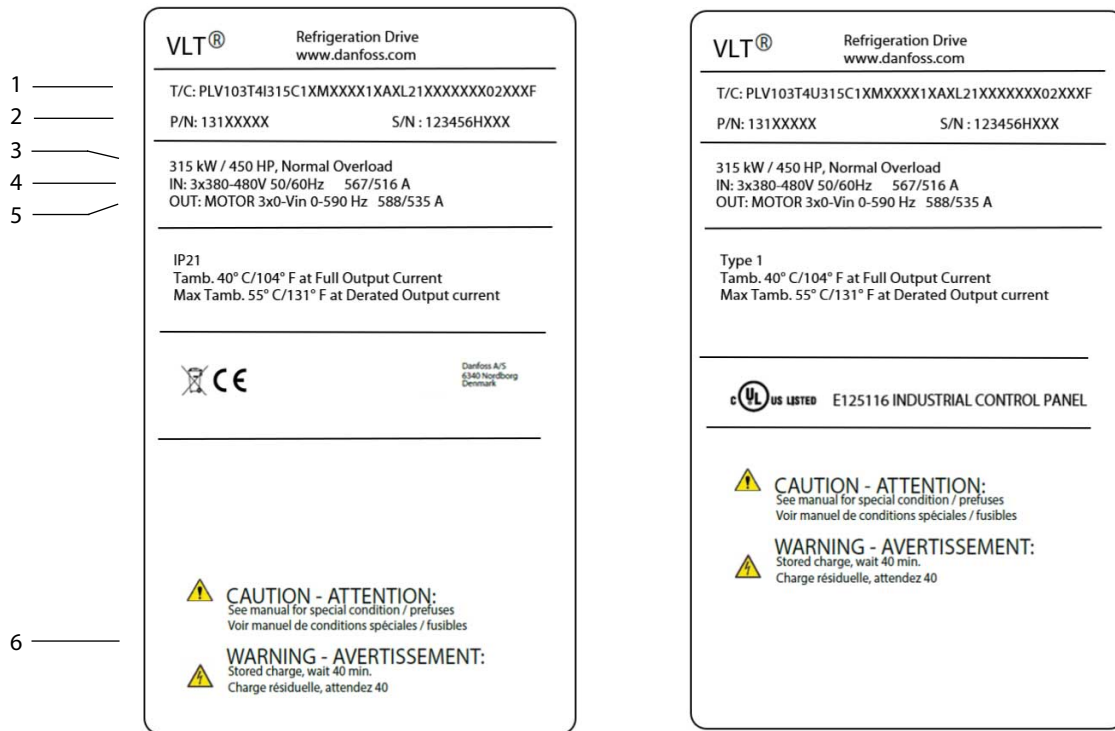

e30bu766.10

Illustration 12: Example of a Product Nameplate for E6h Enclosure (IEC Version on Left, UL Version on Right)

1	Type code	4	Input voltage, frequency, and current (at low/high voltages)
2	Part number and serial number	5	Output voltage, frequency, and current (at low/high voltages)
3	Power rating	6	Discharge time

NOTICE

WARRANTY

Removing the nameplate from the drive results in loss of warranty.

4.2 Split Shipment

Depending on what options are ordered with an enclosed drive, the drive can consist of 5 cabinets and measure 3400 mm (134 in) in width, which can be difficult to transport and handle. In cases where an enclosed drive exceeds 1800 mm (71 in) in width, the cabinets are separated and shipped in multiple boxes. All necessary fasteners needed for reassembly are provided in the delivery. To reassemble a split shipment, refer to [4.10 Combining Multiple Cabinets from a Split Shipment](#) and [5.6.1 Connecting Wiring Harnesses](#).

4.3 Tools Needed

- I-beam and hooks rated to lift the weight of the drive.
- Crane or other lifting aid to place the unit into position.
- Drill with a 12 mm (1/2 in) drill bit.
- Tape measurer.
- Phillips and flat bladed screwdrivers.
- Wrench with 7–17 mm metric sockets.
- Wrench extensions.
- T25 and T50 Torx drives.
- Sheet metal punch and/or pliers for cable entry plate.

4.4 Storing the Drive

Store the drive in a dry location. Keep the equipment sealed in its packaging until installation. Refer to the *Ambient Conditions* section for recommended ambient temperature.

Periodic forming (capacitor charging) is not necessary during storage unless storage exceeds 12 months.

4.5 Operating Environment

4.5.1 Overview

In environments with airborne liquids, particles, or corrosive gases, ensure that the IP/NEMA protection rating of the equipment matches the installation environment. Refer to the *Ambient Conditions* section.

N O T I C E

CONDENSATION

Moisture can condense on the electronic components and cause short circuits.

- Avoid installation in areas subject to frost.
- Install an optional space heater when the unit is colder than the ambient air.
- Operating in standby mode reduces the risk of condensation as long as the power dissipation keeps the circuitry free of moisture.

N O T I C E

EXTREME AMBIENT CONDITIONS

Hot or cold temperatures compromise unit performance and longevity.

- Do not operate in environments where the ambient temperature exceeds 50 °C (122 °F) for units rated at 400–500 V and 45 °C (113 °F) for units rated at 525–690 V unless the drive is derated. Refer to the *Derating section* in the design guide.
- The unit can operate at temperatures down to -10 °C (14 °F). However, proper operation at rated load is only guaranteed at 0 °C (32 °F) or higher. Also, temperature feedback is not shown when temperatures are below 0 °C (32 °F).
- Provide extra air conditioning for the cabinet or installation site when the temperature exceeds ambient temperature limits.

4.5.2 Gases

Aggressive gases, such as hydrogen sulphide, chlorine, or ammonia can damage the electrical and mechanical components. The unit uses conformal-coated circuit boards to reduce the effects of aggressive gases.

For conformal coating class specifications and ratings, see the *Ambient Conditions* section.

4.5.3 Dust

When installing the unit in a dusty environment, keep the following free from dust buildup:

- Electronic components.
- Heat sink.
- Fans.

Keep the heat sink and fans free from dust buildup. When dust accumulates on electronic components, it acts as a layer of insulation. This layer reduces the cooling capacity of the components, and the components become warmer. The hotter environment decreases the life of the electronic components. Dust can also accumulate on fan blades, causing an imbalance which prevents the fan from properly cooling the unit. Dust buildup can also damage fan bearings and cause premature fan failure.

For more information, refer to the *Maintenance and Service* section.

4.5.4 Potentially Explosive Atmospheres

⚠ WARNING ⚠

EXPLOSIVE ATMOSPHERE

Installing the drive in a potentially explosive atmosphere can lead to death, personal injury, or property damage.

- Install the unit in a cabinet outside of the potentially explosive area.
- Use a motor with an appropriate ATEX protection class.
- Install a PTC temperature sensor to monitor the motor temperature.
- Install short motor cables.
- Use sine-wave output filters when shielded motor cables are not used.

As required by the EU Directive 2014/34/EU, any electrical or electronic device intended for use in an environment with a potentially explosive mixture of air, flammable gas, or dust must be ATEX-certified. Systems operated in this environment must fulfill the following special conditions to comply with the ATEX protection class:

- Class d specifies that if a spark occurs, it is contained in a protected area.
- Class e prohibits any occurrence of a spark.

Motors with class d protection

Does not require approval. Special wiring and containment are required.

Motors with class e or class n protection

When combined with an ATEX-approved PTC monitoring device like the VLT® PTC Thermistor Card MCB 112, installation does not need an individual approval from an approbated organization.

Motors with class d/e protection

The motor itself has an e ignition protection class, while the motor cabling and connection environment are in compliance with the d classification. To attenuate the high peak voltage, use a sine-wave filter at the drive output.

N O T I C E

MOTOR THERMISTOR SENSOR MONITORING

Units with the VLT® PTC Thermistor Card MCB 112 option are PTB-certified for potentially explosive atmospheres.

4.6 Installation Requirements

N O T I C E

OVERHEATING

Improper mounting can result in overheating and reduced performance.

- Install the drive according to the installation and cooling requirements.
- Locate the unit as near to the motor as possible. For the maximum motor cable length, see [10.5 Motor and Control Cables](#).
 - Ensure unit stability by mounting the unit to a solid surface.
 - Ensure that the strength of the mounting location supports the unit weight.
 - Ensure that there is enough space around the unit for proper cooling. Refer to [10.10 Enclosure Airflow](#).
 - Ensure enough access to open the door.
 - Ensure cable entry from the bottom.

4.7 Cooling Requirements

NOTICE

OVERHEATING

Improper mounting can result in overheating and reduced performance.

- Install the drive following the installation and cooling requirements.

- Ensure that top and bottom clearance for air cooling is provided. Clearance requirement: 225 mm (9 in).
- Provide sufficient airflow flow rate. See [4.8 Airflow Rates](#).
- Consider derating for temperatures starting between 45 °C (113 °F) and 50 °C (122 °F) and elevation 1000 m (3300 ft) above sea level.

The enclosed drive, excluding the input power options cabinet, utilizes a back-channel cooling concept that removes the air used to cool the heat sink. The heat sink cooling air carries approximately 90% of the heat out of the back channel of the drive. Different back-channel cooling kits are available to redirect the airflow based on individual needs.

4.8 Airflow Rates

Table 39: Airflow Rates for D9h Enclosure

Cabinet	Back-channel fan [m ³ /hr (cfm)]	Drive module top fan [m ³ /hr (cfm)]	Cabinet door fan [m ³ /hr (cfm)]
PHF/line reactor	450 (265)	–	–
Drive	420 (250)	102 (60)	150 (90)
dU/dt	–	–	–
Sine-wave	900 (530)	–	–
Top entry/top exit	–	–	–

Table 40: Airflow Rates for D10h Enclosure

Cabinet	Back-channel fan [m ³ /hr (cfm)]	Drive module top fan [m ³ /hr (cfm)]	Cabinet door fan [m ³ /hr (cfm)]
PHF/line reactor	450 (265)	–	–
Input options	–	–	510 (310)
Drive	840 (500)	204 (120)	315 (185)
dU/dt	–	–	–
Sine-wave	900 (530)	–	–
Top entry/top exit	–	–	–

Table 41: Airflow Rates for E5h Enclosure

Cabinet	Back-channel fan [m ³ /hr (cfm)]	Drive module top fan [m ³ /hr (cfm)]	Cabinet door fan [m ³ /hr (cfm)]
PHF/line reactor	765 (450)	–	–
Input options	–	–	510 (310)
Drive	994 (585)	595 (350)	335 (200)
dU/dt	665 (392)	–	–
Sine-wave	2x900 (530)	–	–
Top entry/top exit	–	–	–

Table 42: Airflow Rates for E6h Enclosure

Cabinet	Back-channel fan [m ³ /hr (cfm)]	Drive module top fan [m ³ /hr (cfm)]	Cabinet door fan [m ³ /hr (cfm)]
PHF/line reactor	1285 (755)	–	–
Input options	–	–	510 (310)
Drive	1053–1206 (620–710)	629 (370)	430 (255)
dU/dt	665 (392)	–	–
Sine-wave	2x900 (530)	–	–
Top entry/top exit	–	–	–


4.9 Lifting the Drive

⚠ WARNING ⚠

HEAVY WEIGHT

The drive is heavy. Failure to follow local safety regulations for lifting heavy weights may cause death, personal injury, or property damage.

- Ensure that the lifting equipment is in proper working condition.
- Check the weight of the drive and verify that the lifting equipment can safely lift the weight.
- Ensure that the angle from the top of the drive to the lifting cable is 65° or greater.
- Test lift the drive approximately 610 mm (24 in) to verify the proper center of gravity lift point. Reposition the lifting point if the unit is not level.
- Never walk under suspended loads.

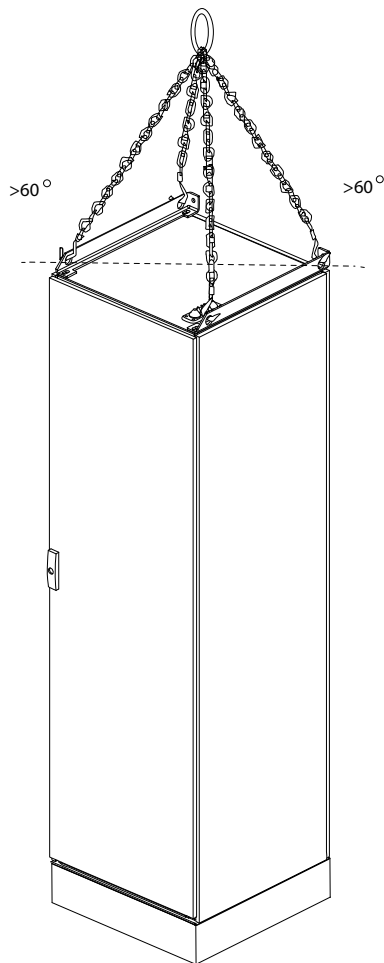

e30bu146.11


Illustration 13: Recommended Lifting Method

4.10 Combining Multiple Cabinets from a Split Shipment

Procedure

1. Make sure the cabinets are in the right order and place them side by side. For the proper order, refer to [3.2 What is an Enclosed Drive?](#)
2. Attach the cabinets to one another:
 - a. Remove the Rittal back cover from each cabinet.
 - b. Secure the back side of the cabinets to one another using the back brackets. See [Illustration 14](#).
 - c. Secure the front side of the cabinets to one another using the front brackets. See [Illustration 14](#).
 - d. Secure the lifting eyelets to the top of the cabinets. See [Illustration 15](#).
 - e. Join the grounding bars using the connector piece (see the shaded piece in [Illustration 16](#)).


Example

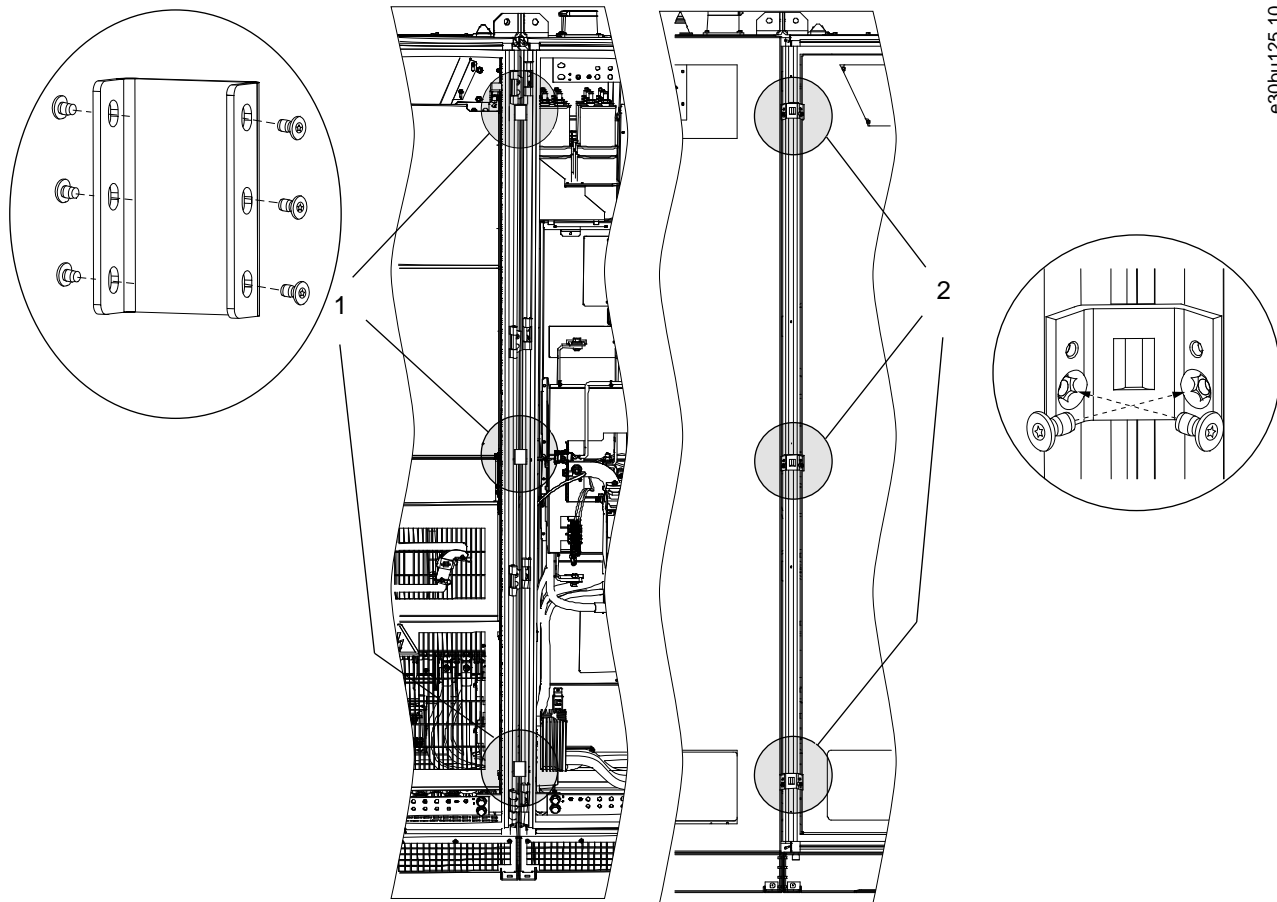

e30bu125.10


Illustration 14: Bracket Mounting Points for Cabinets

- | | |
|---|----------------|
| 1 | Front brackets |
| 2 | Back brackets |

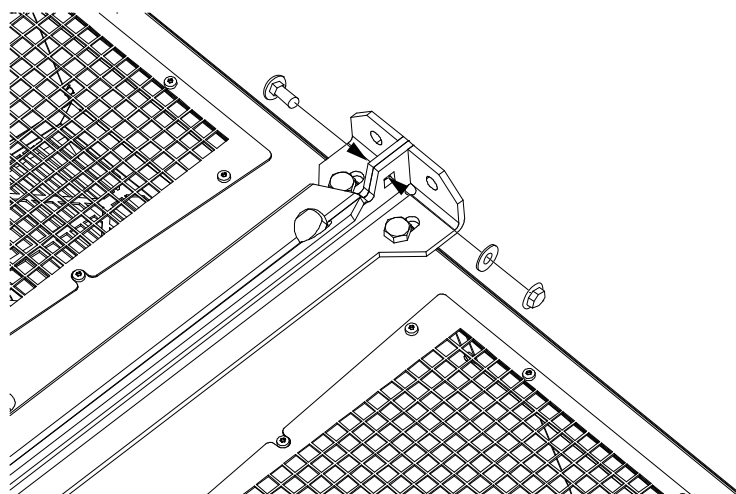

e30bu133.10

Illustration 15: Connecting the Lifting Eyelet Between Cabinets

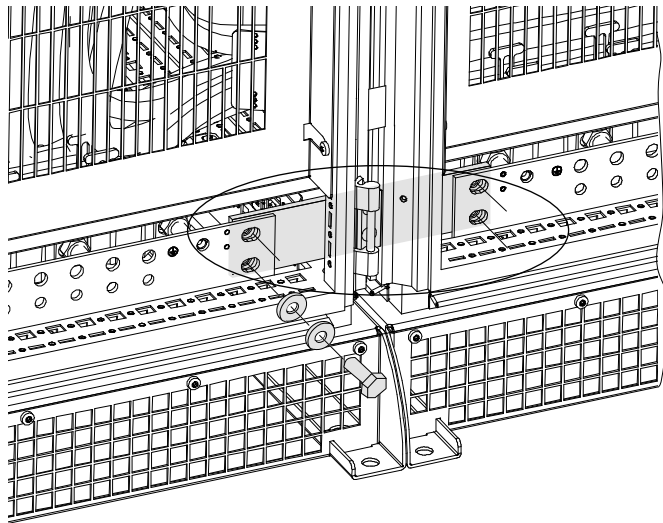

e30bu134.10

Illustration 16: Connecting the Grounding Bar Between Cabinets

4.11 Installing the Enclosed Drive

4.11.1 Creating an Entry for Cables

Procedure

1. Locate the cabinets that contain the motor and mains terminals.
2. Open the cabinet doors and remove any protective covers placed over the terminals.
3. Cut or drill openings in the cable entry plate and fit with appropriate Type-rated IEC/UL conduits, according to the mains and motor cable sizes.
4. Terminate the shields properly.

4.11.2 Installing the Drive with Back-channel Cooling Option

Procedure

1. Select an area in which to install the enclosure. Do not install the enclosure in an airtight space. The drive receives approximately 5–10% of intake air from the front of the cabinet.
2. Measure the duct openings in the back of the cabinets and create corresponding openings in the wall where the enclosure will be located.
3. If the enclosed drive is configured with a cabinet heater, connect the cabinet heater supply cable to the correct terminals in the control compartment. Refer to [5.7.2 Control Compartment Interior View](#).
4. Move the enclosure near the wall, lining up the enclosure ducts with the openings in the wall.
5. Make sure to provide an airtight seal for between the duct and wall opening.

Example

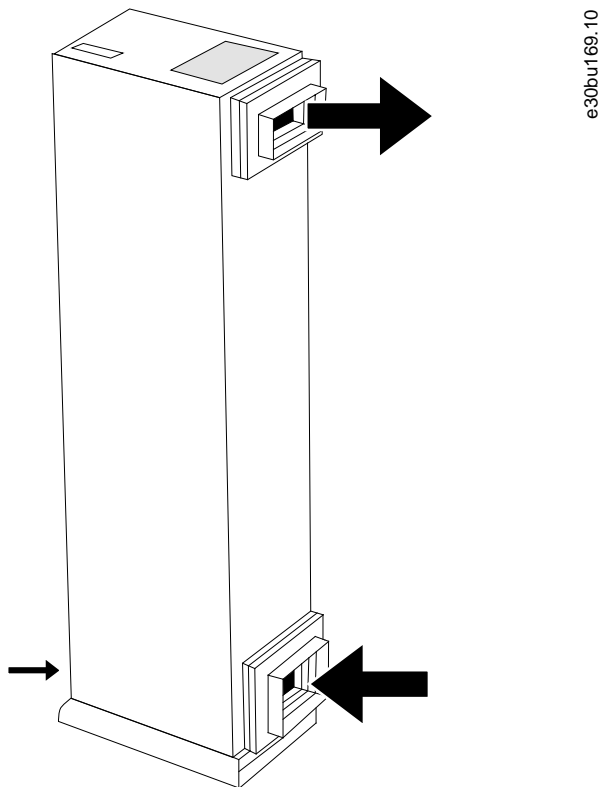


Illustration 17: Cabinet Airflow with the Back-channel Option (Duct Adapter Flanges not Provided with Option)


4.11.3 Securing the Cabinet(s) to the Floor

There are 3 methods to secure the cabinet to the floor:

- Use the 4 mounting points at the base of the pedestal.
- Use the 2 mounting points at the front base of the pedestal and the 2 mounting points at the upper back of the cabinet.
- Use the 2 mounting points in the mounting bracket and the 2 mounting points at the front base of the pedestal.

To use the mounting bracket, first attach it to the floor by sliding the edge of the cabinet pedestal under the mounting bracket. Then secure the 2 mounting holes to the front base of the pedestal.

Example

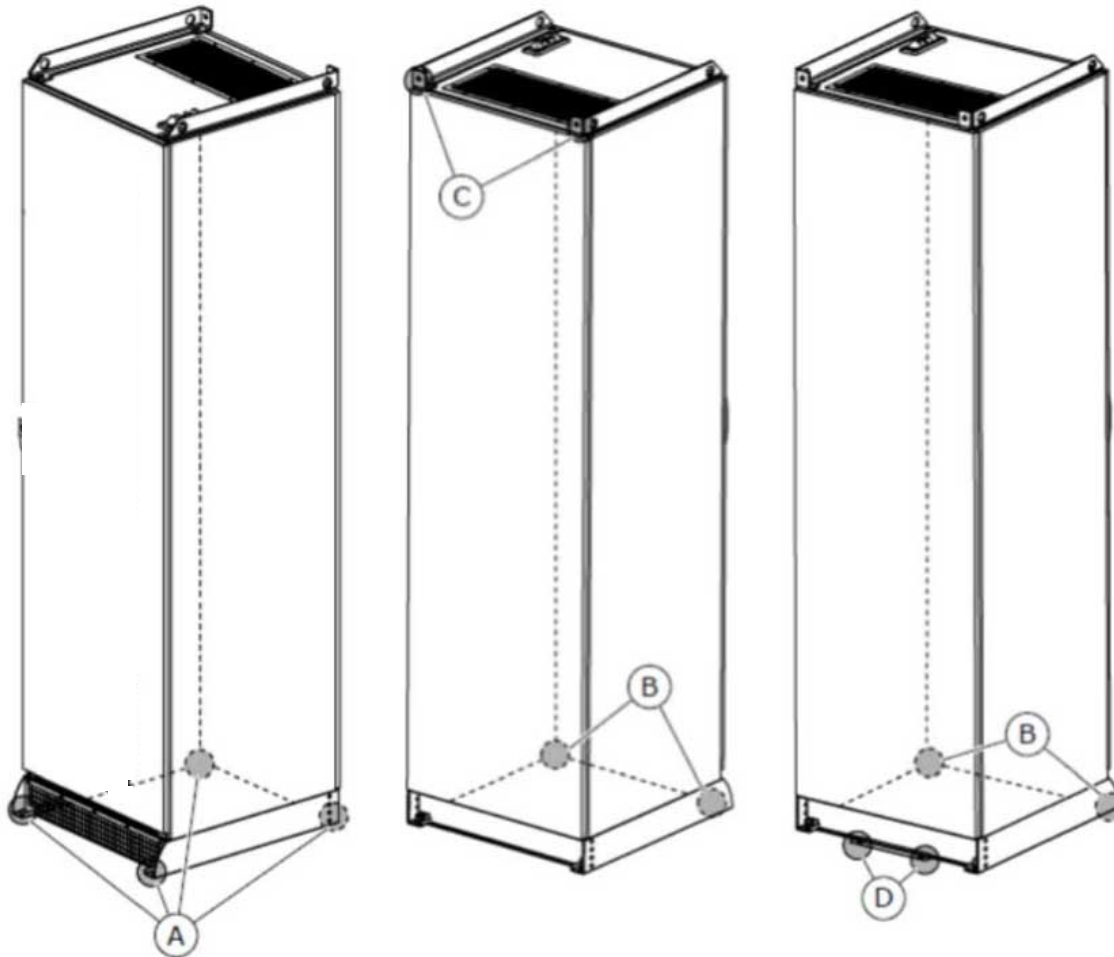

e30bu147.11

Illustration 18: Cabinet Mounting Points

A	The 4 mounting points at the base of the pedestal	C	The 2 mounting points at the upper back of the cabinet
B	The 2 mounting points at the front base of the pedestal	D	The 2 mounting points in the mounting bracket

5 Electrical Installation

5.1 Safety Instructions

See the *Safety Precautions* section for general safety warnings.

NOTICE

EXCESSIVE HEAT AND PROPERTY DAMAGE

Overcurrent can generate excessive heat within the drive. Failure to provide overcurrent protection can result in risk of fire and property damage.

- Additional protective equipment such as shortcircuit protection or motor thermal protection between drive and motor is required for applications with multiple motors.
- Input fusing is required to provide short circuit and overcurrent protection. If fuses are not factory-supplied, the installer must provide them. See maximum fuse ratings in the *Specifications* chapter.

NOTICE

WIRE TYPE AND RATINGS

All wiring must comply with local and national regulations regarding cross-section and ambient temperature requirements. For power connections, minimum 75 °C (167 °F) rated copper wire is recommended. Refer to the the *Specifications* chapter.

⚠ WARNING ⚠

INDUCED VOLTAGE

Induced voltage from output motor cables from different drives that are run together can charge equipment capacitors even with the equipment turned off and locked out. Failure to run output motor cables separately or use shielded cables could result in death or serious injury.

- Run output motor cables separately or use shielded cables.
- Simultaneously lock out all the drives.

⚠ WARNING ⚠

SHOCK HAZARD

The drive can cause a DC current in the PE conductor. Failure to use a Type B residual current-operated protective device (RCD) may lead to the RCD not providing the intended protection and therefore may result in death or serious injury.

- When an RCD is used for protection against electrical shock, only a Type B device is allowed on the supply side.

NOTICE

PROPERTY DAMAGE

Protection against motor overload is not included in the default setting. For the North American market, the ETR function provides class 20 motor overload protection in accordance with NEC. Failure to set the ETR function means that motor overload protection is not provided and property damage can occur if the motor overheats.

- Enable the ETR function by setting *parameter 1-90 Motor Thermal Protection* to *[ETR trip]* or *[ETR warning]*.

5.2 EMC-compliant Installation

To obtain an EMC-compliant installation, be sure to follow all electrical installation instructions.

Also, remember to practice the following:

- When using relays, control cables, a signal interface, fieldbus, or brake, connect the shield to the enclosure at both ends. If the ground path has high impedance, is noisy, or is carrying current, break the shield connection on 1 end to avoid ground current loops.
- Convey the currents back to the unit using a metal mounting plate. Ensure good electrical contact from the mounting plate by securely fastening the mounting screws to the drive chassis.
- Use shielded cables for motor output cables. An alternative is unshielded motor cables within metal conduit.
- Ensure that motor and brake cables are as short as possible to reduce the interference level from the entire system.
- Avoid placing cables with a sensitive signal level alongside motor and brake cables.
- For communication and command/control lines, follow the particular communication protocol standards. For example, USB must use shielded cables, but RS485/ethernet can use shielded UTP or unshielded UTP cables.
- Ensure that all control terminal connections are rated protective extra low voltage (PELV).

NOTICE**TWISTED SHIELD ENDS (PIGTAILS)**

Twisted shield ends increase the shield impedance at higher frequencies, which reduces the shield effect and increases the leakage current.

- Use integrated shield clamps instead of twisted shield ends.

NOTICE**SHIELDED CABLES**

If shielded cables or metal conduits are not used, the unit and the installation do not meet regulatory limits on radio frequency (RF) emission levels.

NOTICE**EMC INTERFERENCE**

Failure to isolate power, motor, and control cables can result in unintended behavior or reduced performance.

- Use shielded cables for motor and control wiring.
- Provide a minimum 200 mm (7.9 in) separation between mains input, motor cables, and control cables.


NOTICE**INSTALLATION AT HIGH ALTITUDE**

There is a risk for overvoltage. Isolation between components and critical parts could be insufficient and may not comply with PELV requirements.

- Use external protective devices or galvanic isolation. For installations above 2000 m (6500 ft) altitude, contact Danfoss regarding protective extra low voltage (PELV) compliance.

NOTICE**PROTECTIVE EXTRA LOW VOLTAGE (PELV) COMPLIANCE**

Prevent electric shock by using PELV electrical supply and complying with local and national PELV regulations.

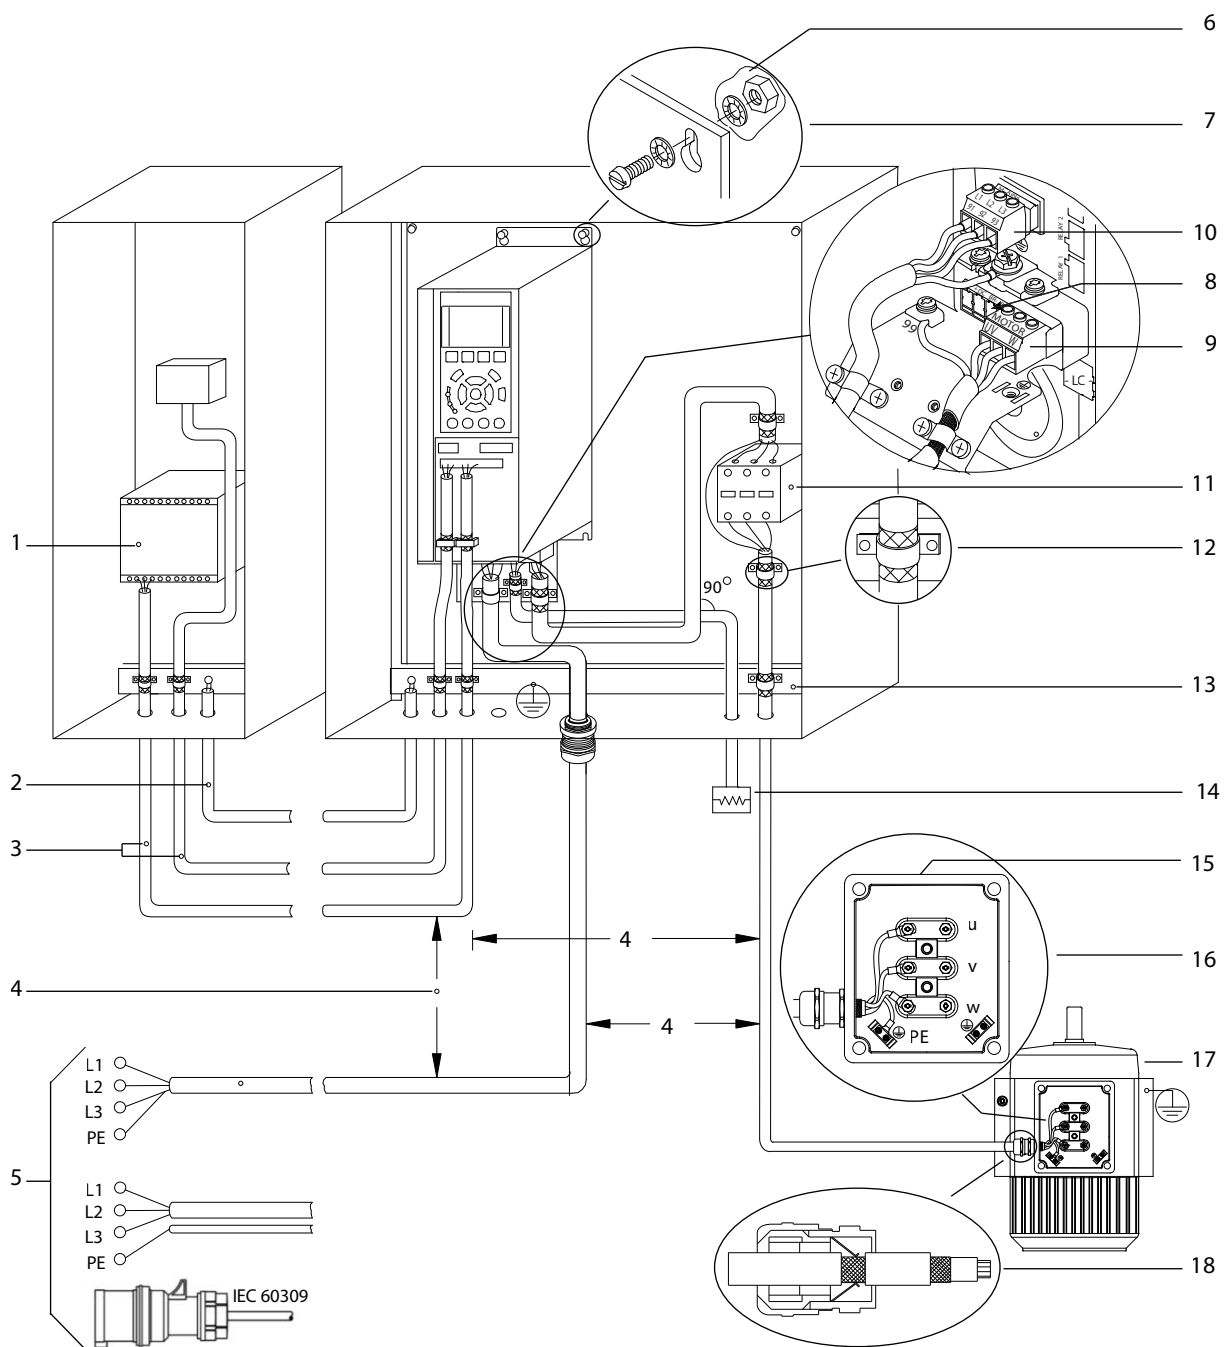

e30bf228.11

Illustration 19: Example of Proper EMC Installation

1	Programmable logic controller (PLC)	10	Mains cable (unshielded)
2	Minimum 16 mm ² (6 AWG) equalizing cable	11	Output contactor, and so on.
3	Control cables	12	Cable insulation stripped
4	Minimum 200 mm (7.9 in) between control cables, motor cables, and mains cables	13	Common ground busbar. Follow local and national requirements for cabinet grounding.
5	Mains supply options, see IEC/EN 61800-5-1	14	Brake resistor
6	Bare (unpainted) surface	15	Terminal box
7	Star washers	16	Connection to motor
8	Brake cable (shielded) – not shown, but same grounding principle applies as for motor cable	17	Motor
9	Motor cable (shielded)	18	EMC cable gland

N O T I C E

EMC INTERFERENCE

Use shielded cables for motor and control wiring, and separate cables for input power, motor wiring, and control wiring. Failure to isolate power, motor, and control cables can result in unintended behavior or reduced performance. Minimum 200 mm (7.9 in) clearance is required between power, motor, and control cables.

5.3 Wiring Overview for D9h and D10h Enclosed Drives


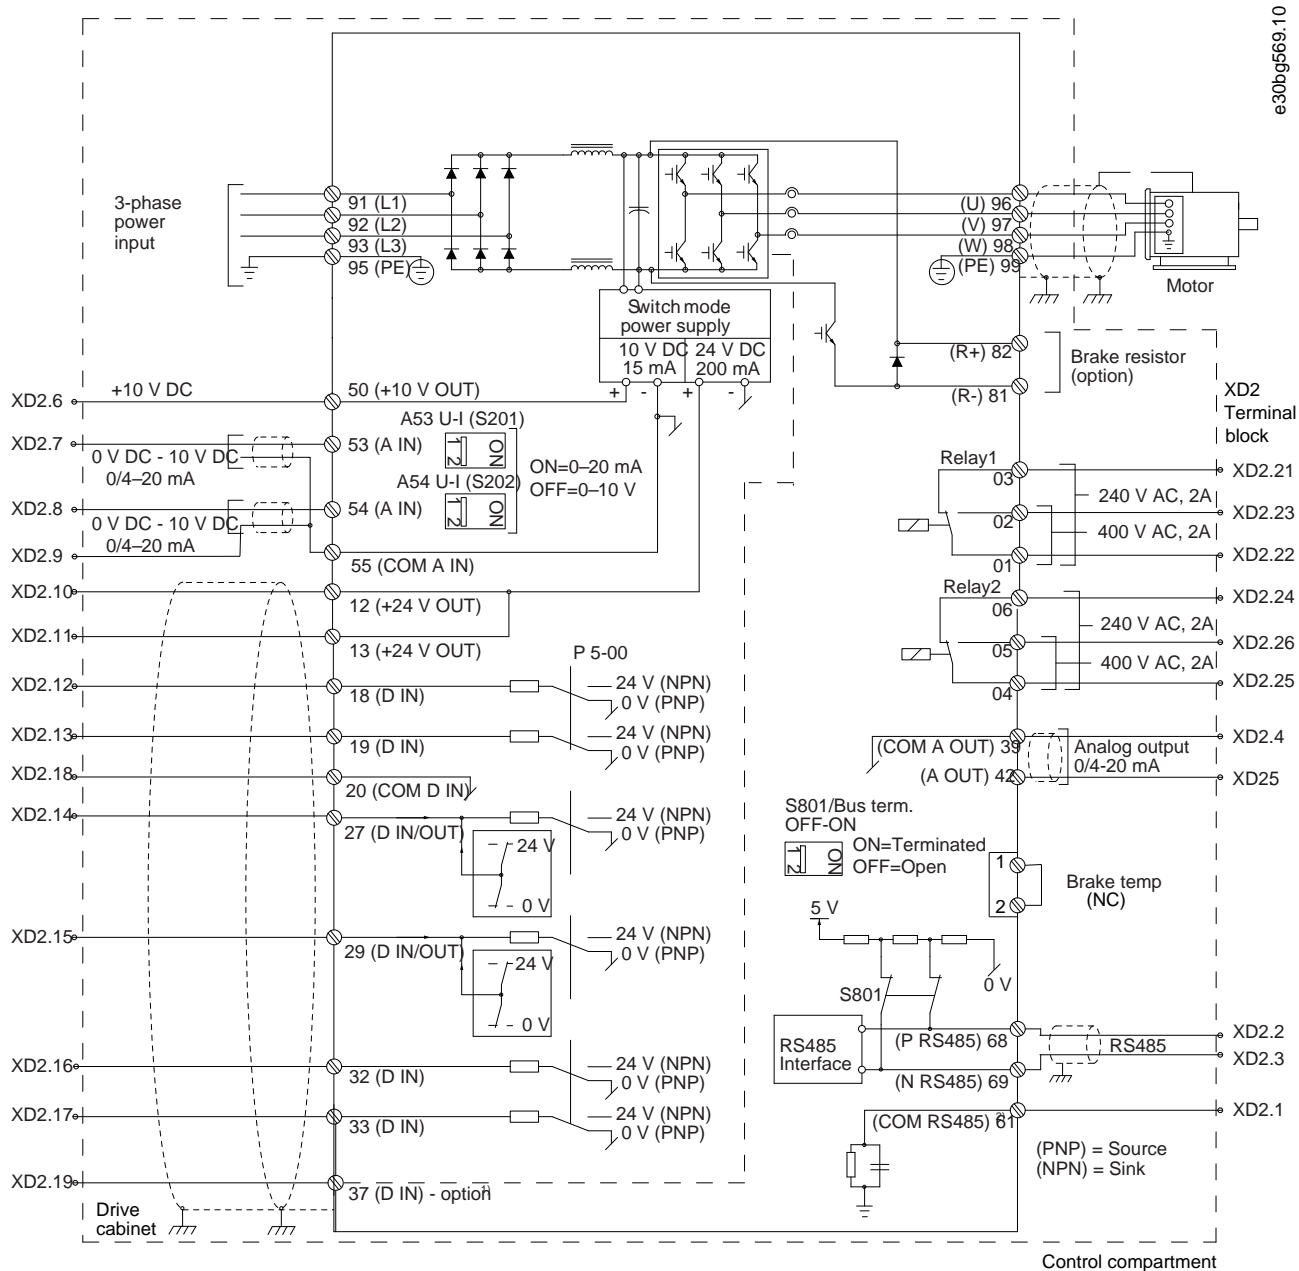


Illustration 20: Basic Wiring Overview for Enclosures D9h and D10h

1 Terminal 37 (optional) is used for Safe Torque Off. Refer to the *VLT® FC Series - Safe Torque Off Operating Guide* for installation instructions.

5.4 Wiring Overview for E5h and E6h Enclosed Drives

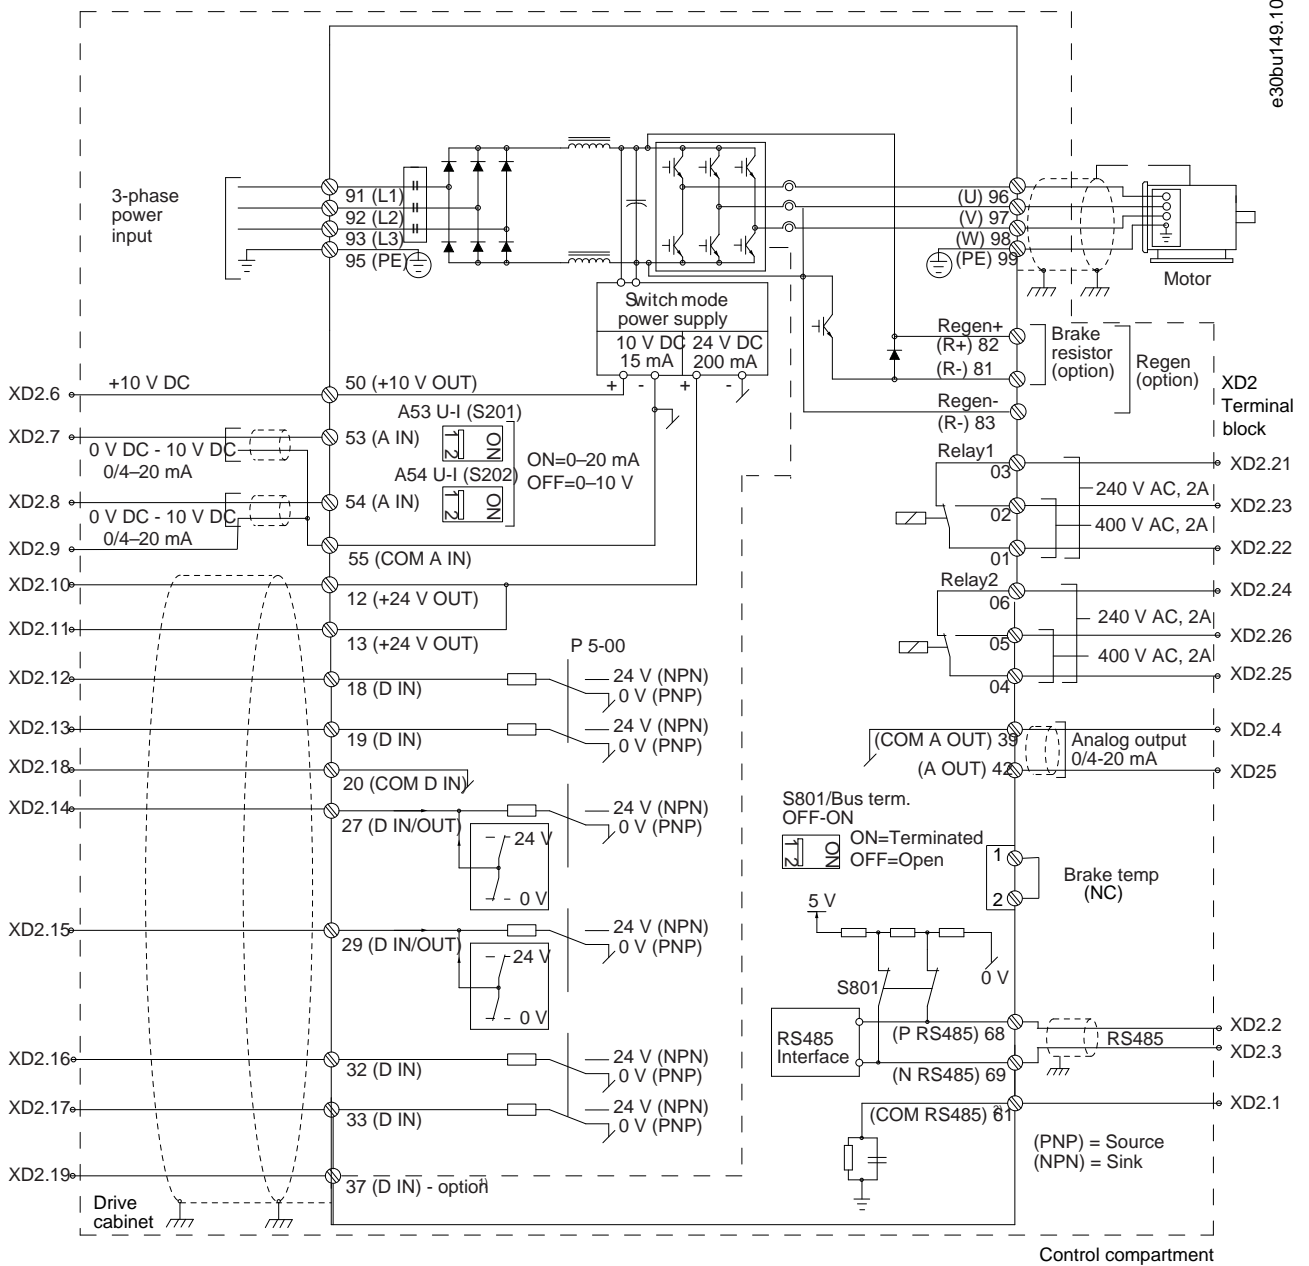

e30bu149.10

Illustration 21: Basic Wiring Overview for Enclosures E5h and E6h

1 Terminal 37 (optional) is used for Safe Torque Off. Refer to the *VLT® FC Series - Safe Torque Off Operating Guide* for installation instructions.

5.5 Control Terminal Wiring Diagram Cross-reference

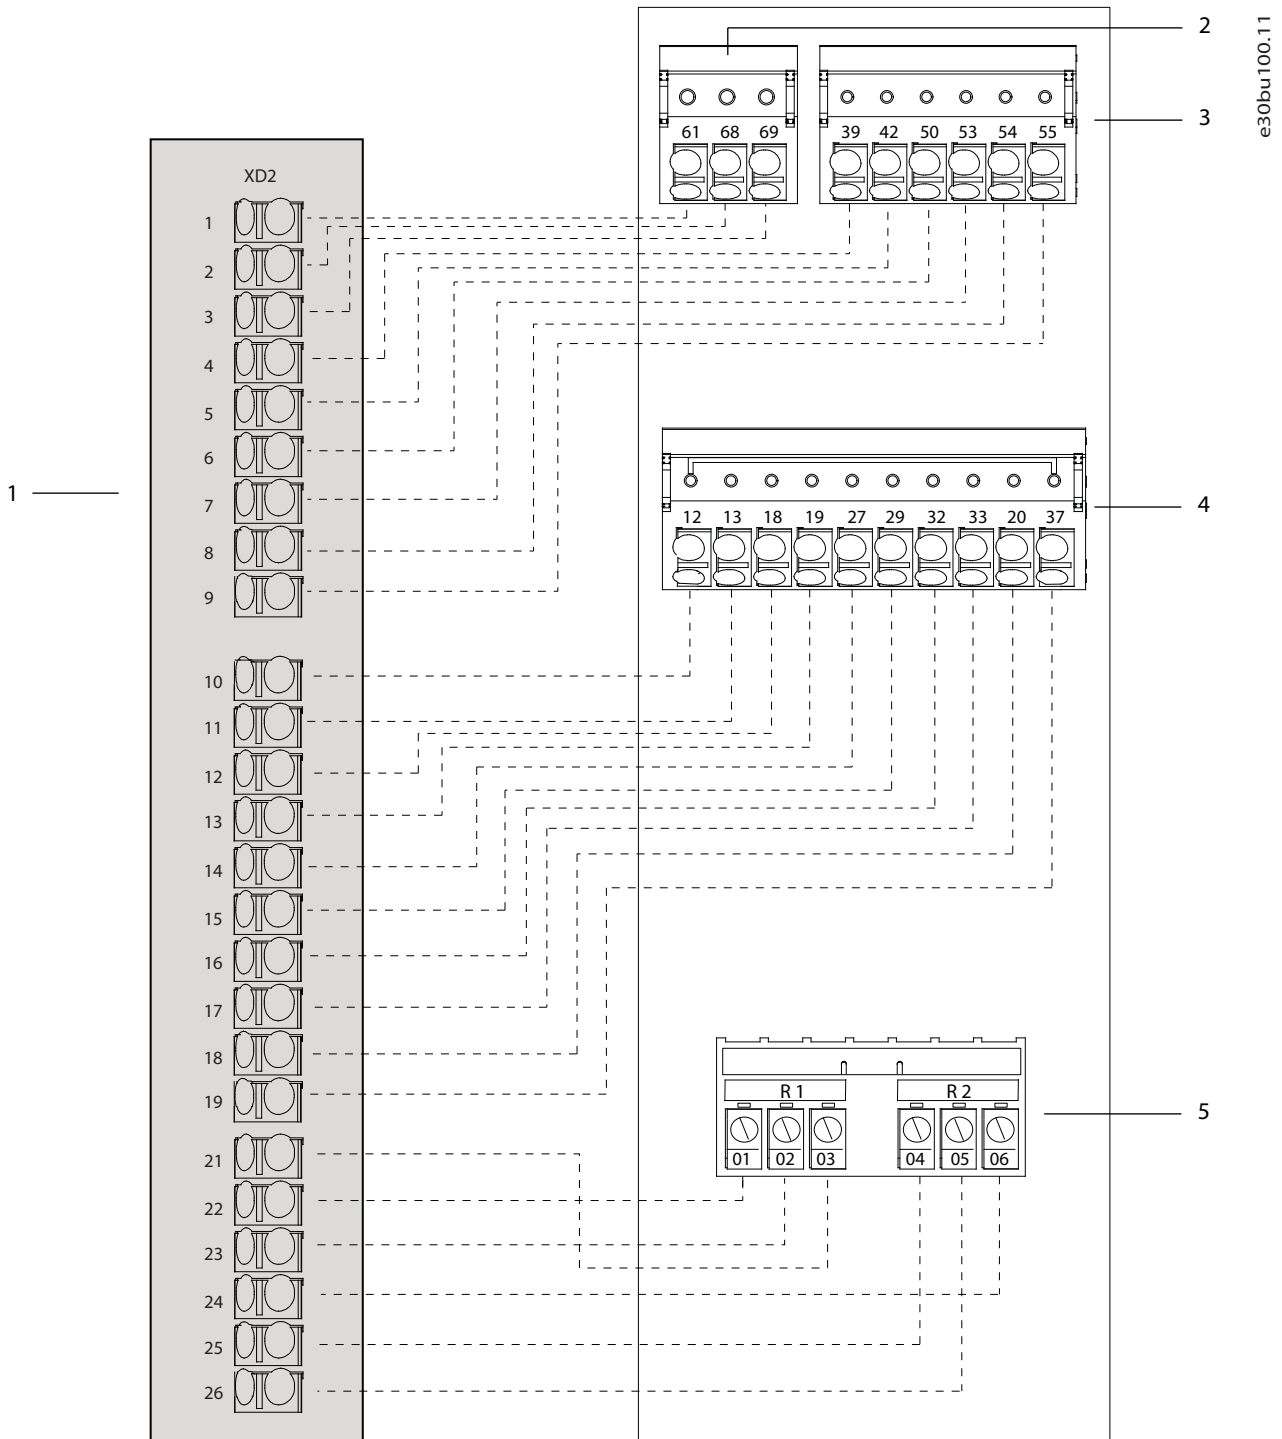


Illustration 22: Serial Communication, Digital Input/Output, Analog Input/Output, and Relay Terminals Cross-reference

1	User-accessible terminals (control compartment)	4	Digital input/output terminals (drive module)
2	Serial communication terminals (drive module)	5	Relay terminals (drive module)
3	Analog input/output terminals (drive module)		


5.6 Split Shipment Wiring Harnesses

5.6.1 Connecting Wiring Harnesses

Procedure

1. Connect the wiring harnesses according to how the enclosed drive is split. Each wiring harness in the enclosed drive is labeled. Refer to the illustrations in this section for label names and descriptions.
 - a. Connect the fan supply wiring harness.
 - b. Connect the thermal protection harness.
 - c. If applicable, connect the PHF contactor harnesses.
 - d. If applicable, connect the cabinet heater harness.
2. Connect the output filter cables. Refer to the illustrations in this section.
 - For the sine-wave filter option, there is 1 set of cables for each sine-wave filter. One end of each cable is already connected to the filter, the other end is bundled in the sine-wave filter cabinet. Connect the unattached sine-wave cable ends to the motor terminals inside the drive cabinet.
 - For the dU/dt filter option, the unattached filter cables are bundled inside the dU/dt filter cabinet. Connect the unattached cable ends to the motor terminals within the drive cabinet.
3. Connect the input filter cables. Refer to the illustrations in this section.
 - For the passive harmonic filter (PHF) option, the filter cables are bundled inside the input filter cabinet. First connect the unattached PHF cable ends (R/S/T) to the corresponding terminals in the input power options cabinet. Then connect the unattached PHF cable ends (L1R/L2S/L3T) to the R/S/T terminals in the drive cabinet.
 - For the line reactor option, the line reactor cables are bundled inside the input filter cabinet. First connect the unattached line reactor cable ends (R/S/T) to the corresponding terminals in the input power options cabinet. Then connect the unattached line reactor cable ends (L1R/L2S/L3T) to the R/S/T terminals in the drive cabinet.

5.6.2 D10h Wiring Harness

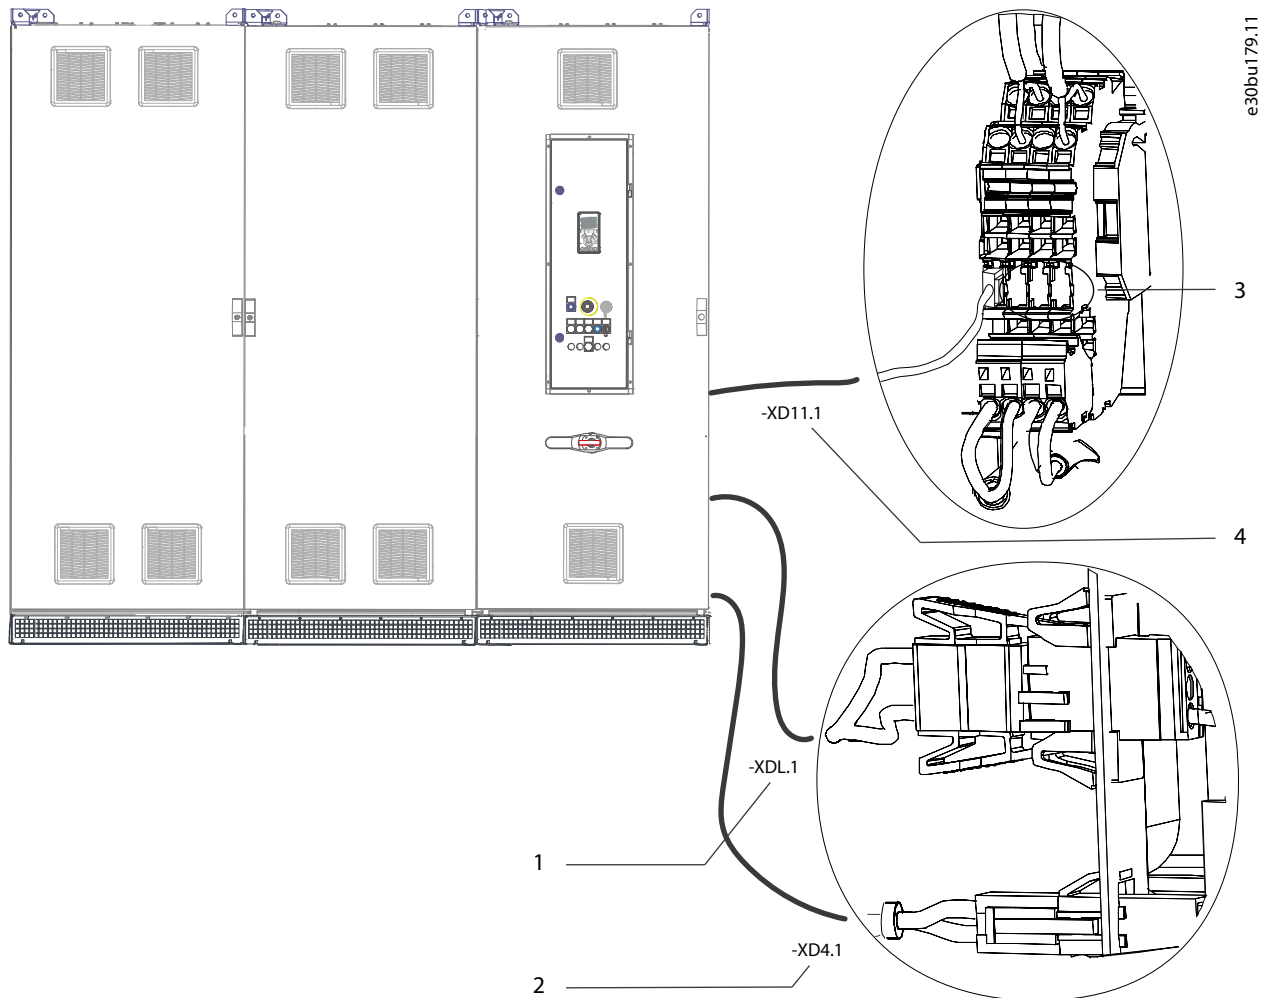

e30bu179.11

Illustration 23: Split Shipment Electrical Connections (Input Filter Cabinet + Input Power Options Cabinet + D10h Drive Cabinet)

1	DC-link harness to fan supply in output filter cabinet	3	Additional terminal connections
2	Cabinet heater supply harness to output filter cabinet	4	Thermal protection wiring harness to output filter cabinet

e30bu181.12

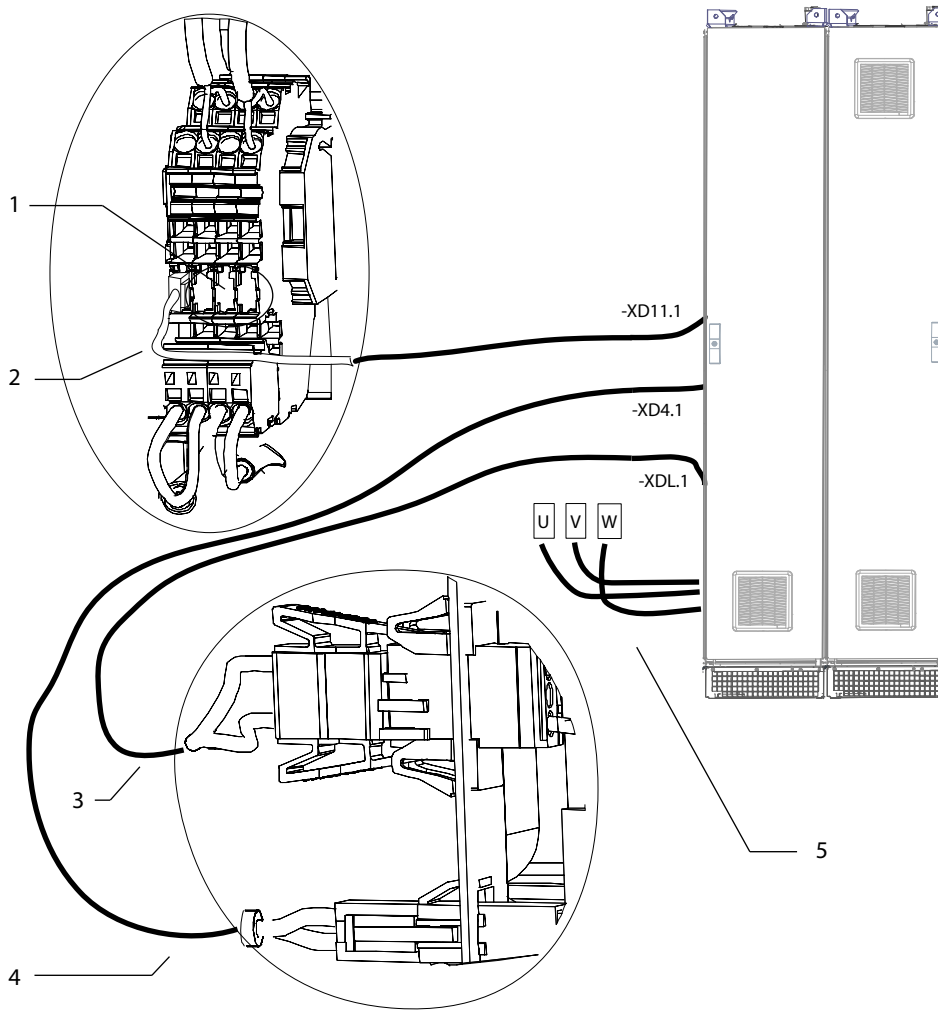


Illustration 24: Split Shipment Electrical Connections (dU/dt Cabinet + Top Exit Cabinet)

1	Additional terminal connections	4	Cabinet heater supply harness to drive cabinet
2	Thermal protection wiring harness to drive cabinet	5	Motor cables (U/V/W) to motor terminals (U/V/W) in drive cabinet
3	DC-link harness to fan supply in drive cabinet		

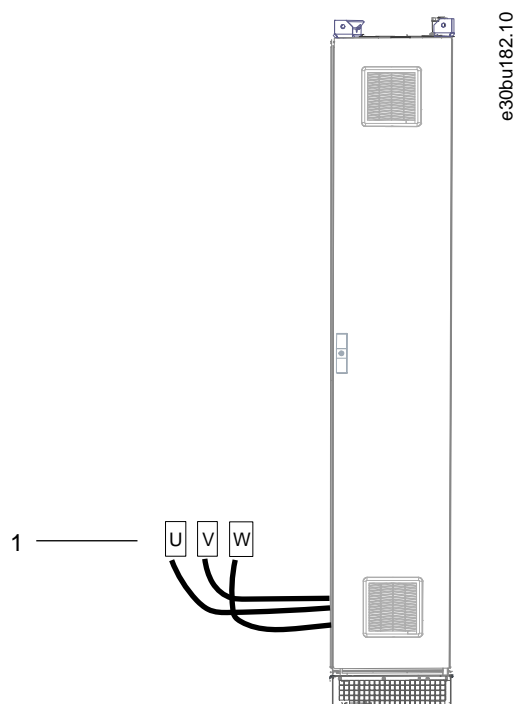


Illustration 25: Split Shipment Electrical Connections (Top Exit Cabinet)

- | | |
|---|------------------------------------------------------------------|
| 1 | Motor cables (U/V/W) to motor terminals (U/V/W) in drive cabinet |
|---|------------------------------------------------------------------|

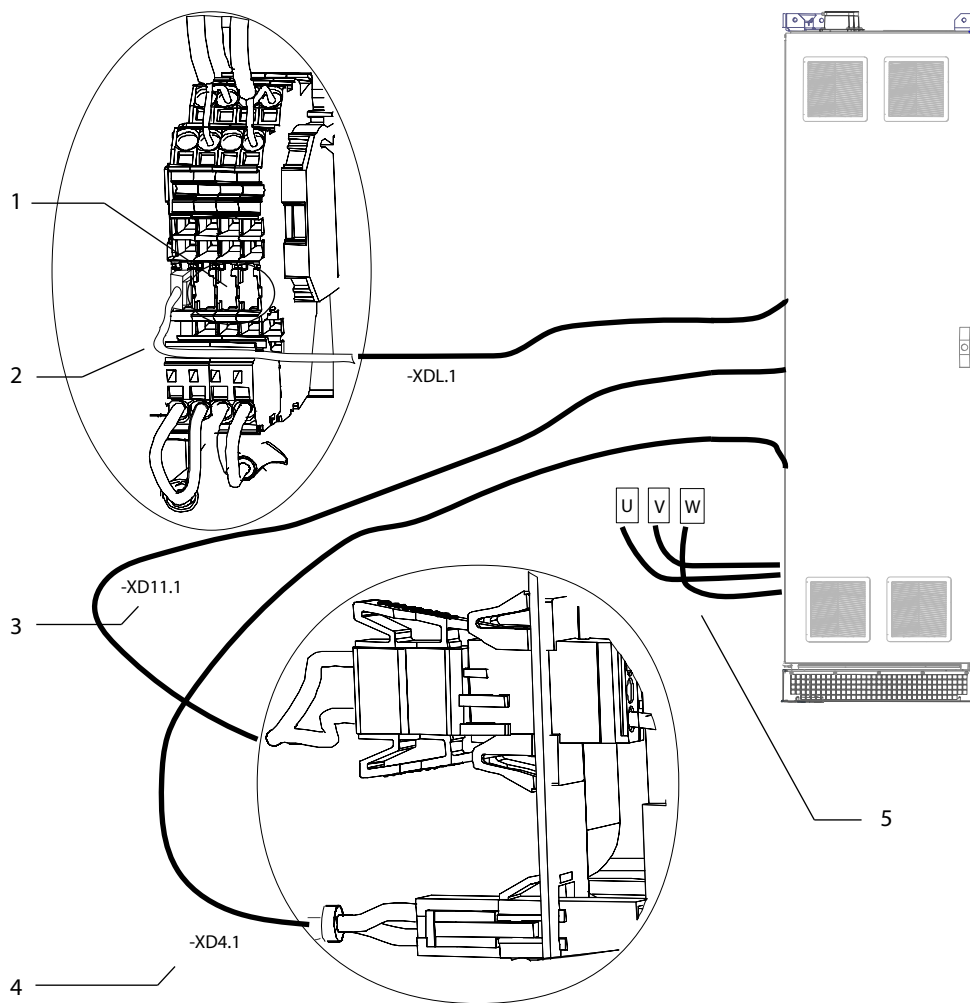


Illustration 26: Split Shipment Electrical Connections (D10h Sine-wave Cabinet)

1	Additional terminal connections	4	Cabinet heater supply harness to drive cabinet
2	Thermal protection wiring harness to drive cabinet	5	Motor cables (U/V/W) to motor terminals (U/V/W) in drive cabinet
3	DC-link harness to fan supply in drive cabinet		

5.6.3 E5h Wiring Harness

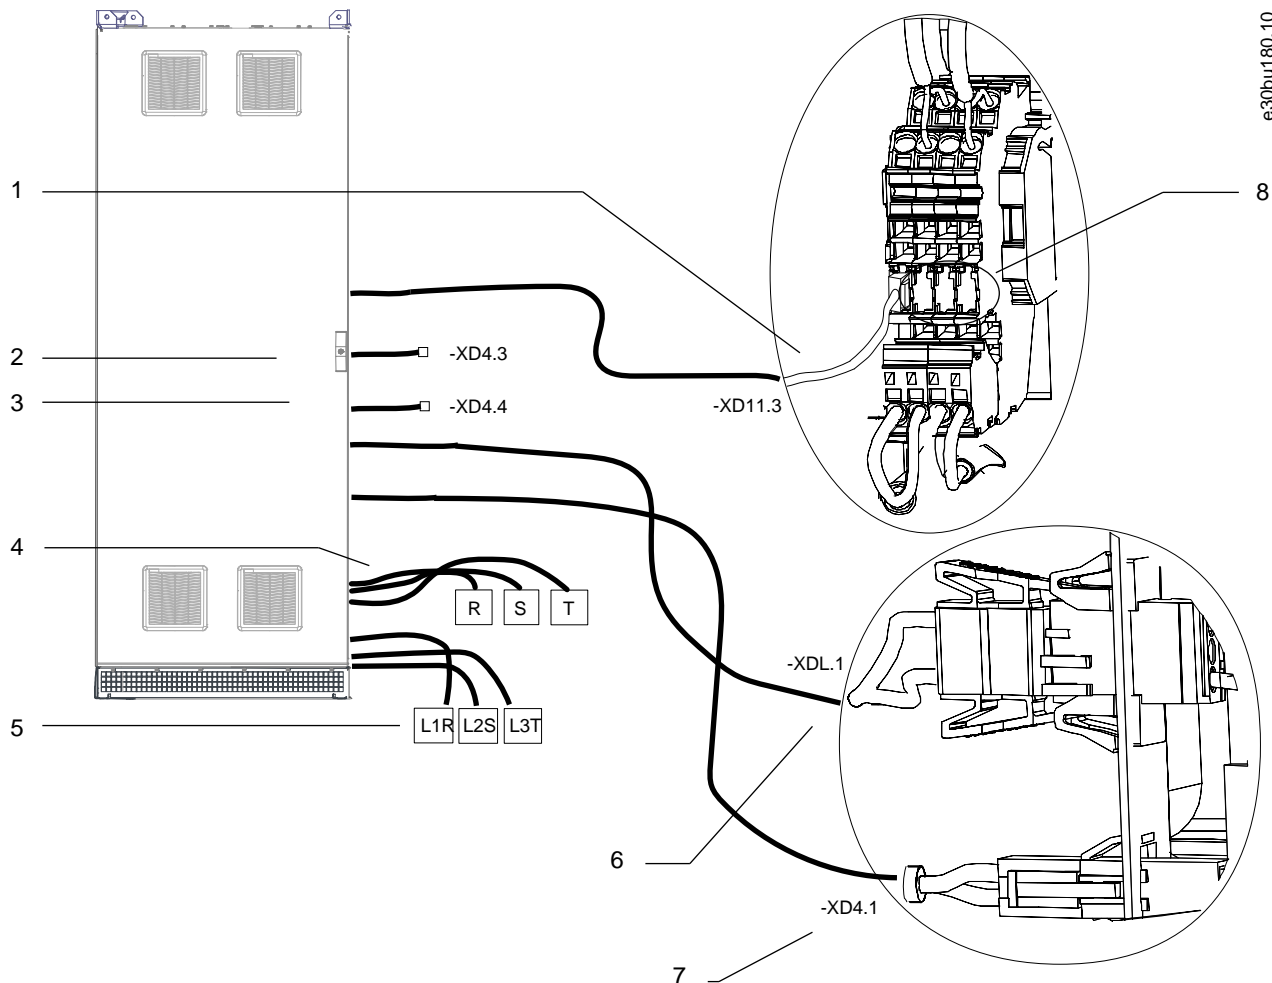


Illustration 27: Split Shipment Electrical Connections (Input Filter Cabinet)

1	Thermal protection wiring harness to input power options cabinet	5	Output terminal cables (L1R/L2S/L3T) to mains terminals (R/S/T) in the drives cabinet
2	PHF contactor 1 supply harness to input power options cabinet (only with PHF option)	6	DC-link harness to fan supply in the input power options cabinet
3	PHF contactor 2 supply harness to input power options cabinet (only with PHF option)	7	Cabinet heater supply harness to input power options cabinet
4	Input terminal cables (R/S/T) to mains terminals (R/S/T) in the input power options cabinet	8	Additional terminal connections

e30bu181.12

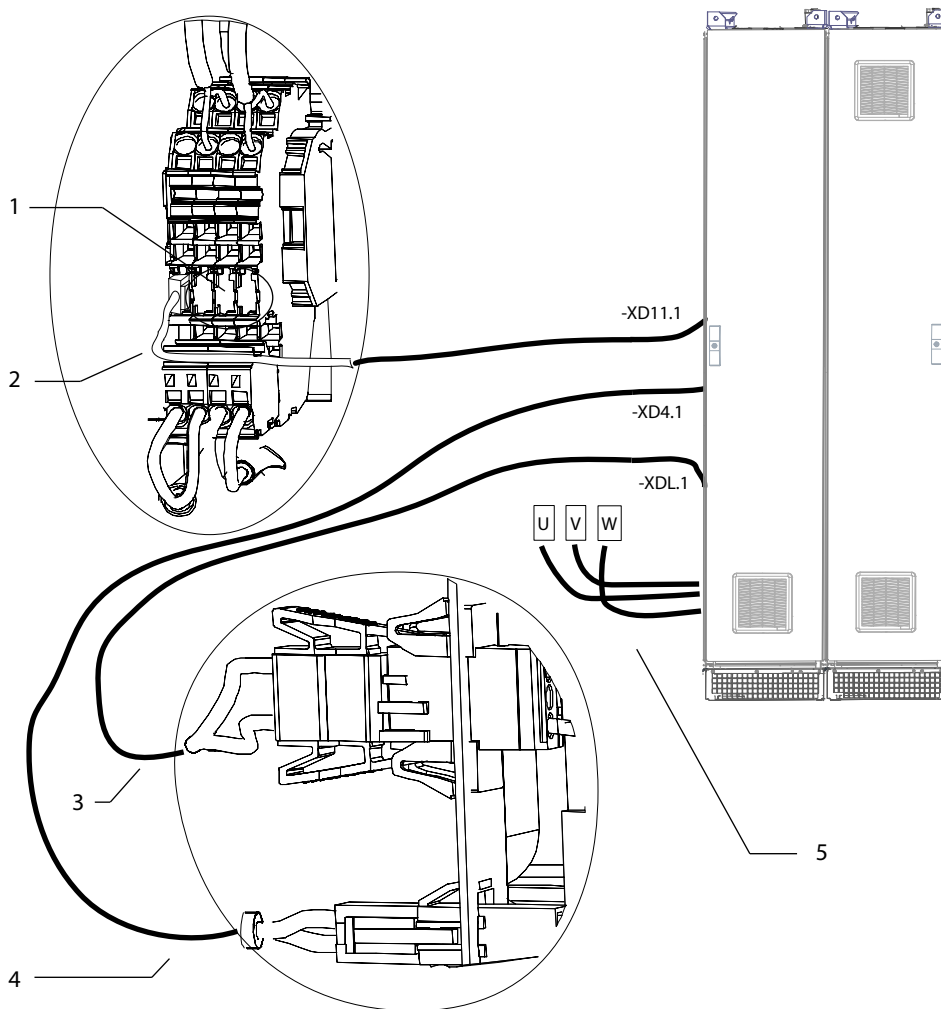


Illustration 28: Split Shipment Electrical Connections (dU/dt Cabinet + Top Exit Cabinet)

1	Additional terminal connections	4	Cabinet heater supply harness to drive cabinet
2	Thermal protection wiring harness to drive cabinet	5	Motor cables (U/V/W) to motor terminals (U/V/W) in drive cabinet
3	DC-link harness to fan supply in drive cabinet		

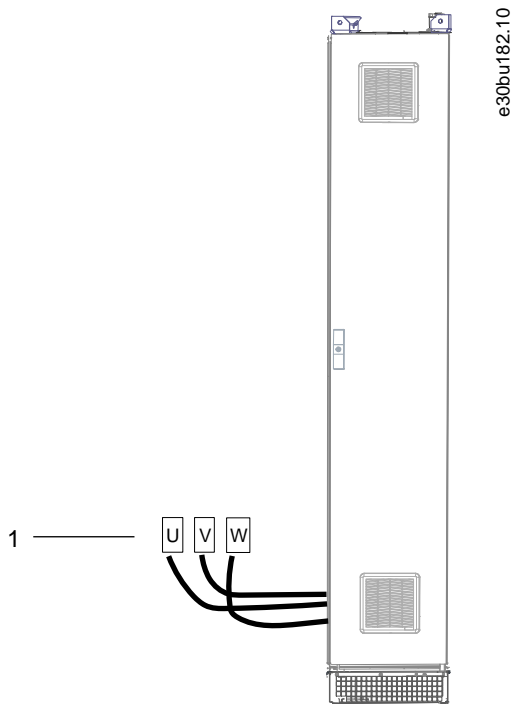


Illustration 29: Split Shipment Electrical Connections (Top Exit Cabinet)

- | | |
|---|------------------------------------------------------------------|
| 1 | Motor cables (U/V/W) to motor terminals (U/V/W) in drive cabinet |
|---|------------------------------------------------------------------|


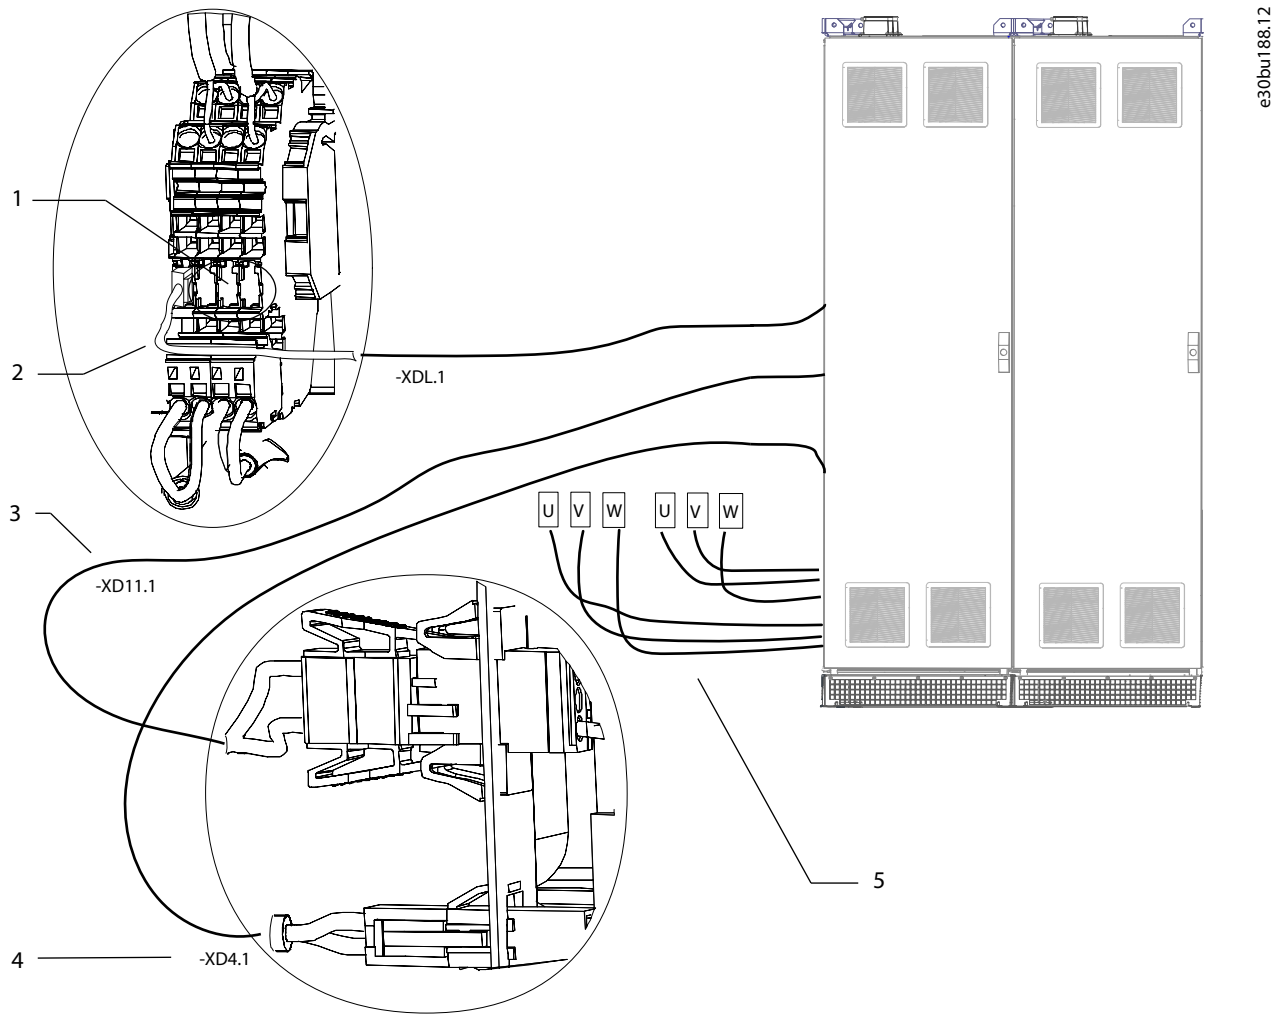


Illustration 30: Split Shipment Electrical Connections (E5h/E6h Sine-wave Cabinets)


1	Additional terminal connections	4	Cabinet heater supply harness to drive cabinet
2	Thermal protection wiring harness to drive cabinet	5	Motor cables (U/V/W) to motor terminals (U/V/W) in drive cabinet
3	DC-link harness to fan supply in drive cabinet		

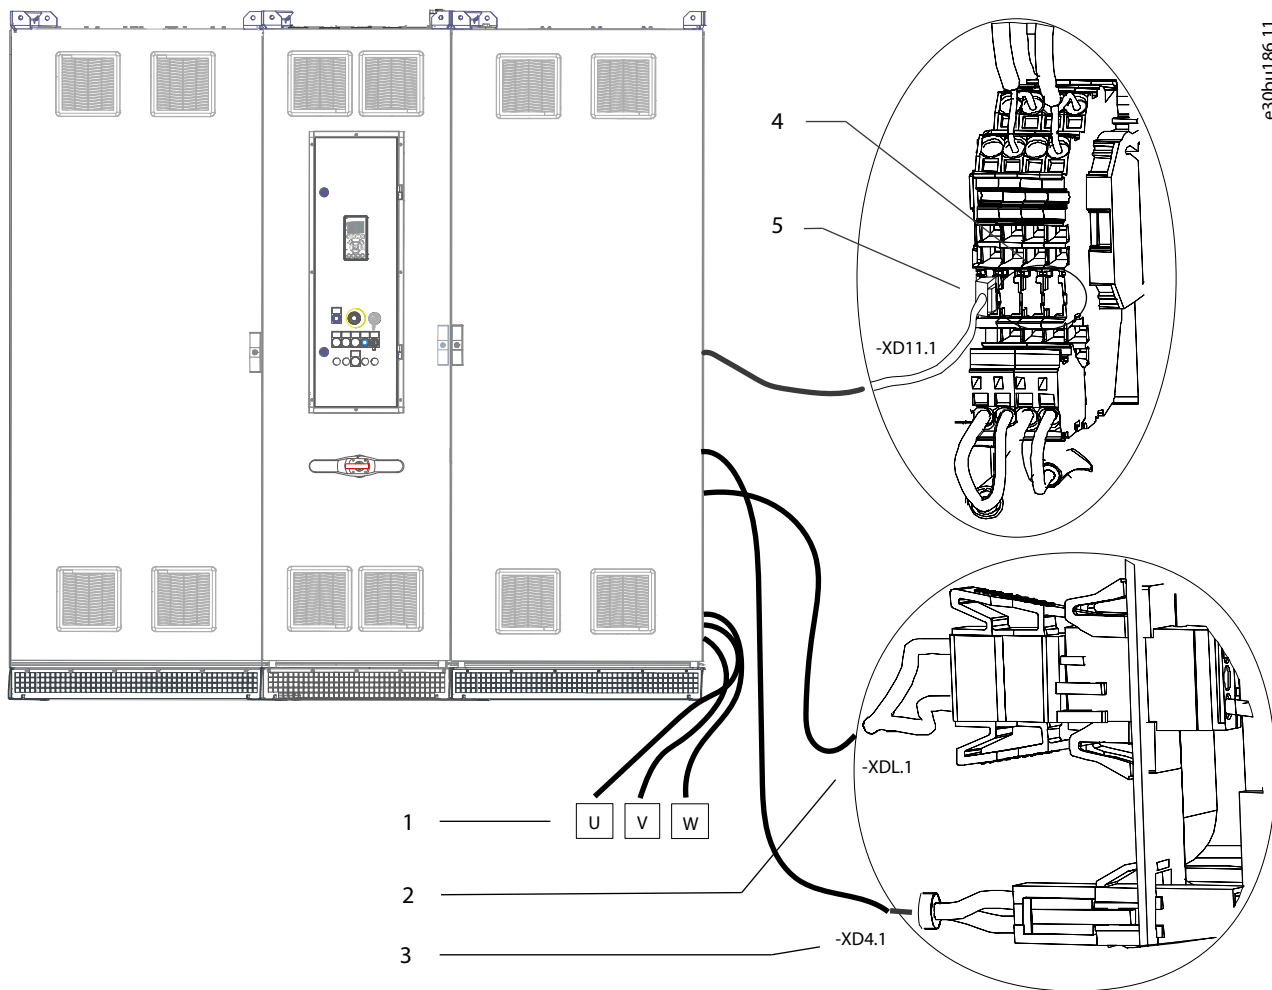

e30but186.11

Illustration 31: Split Shipment Electrical Connections (Input Filter Cabinet + Input Power Options Cabinet + E5h Drive Cabinet)

1	Motor cables (U/V/W) to motor terminals (U/V/W) in output filter cabinet	4	Additional terminal connections
2	DC-link harness to fan supply in output filter cabinet	5	Thermal protection wiring harness to output filter cabinet
3	Cabinet heater supply harness to output filter cabinet		

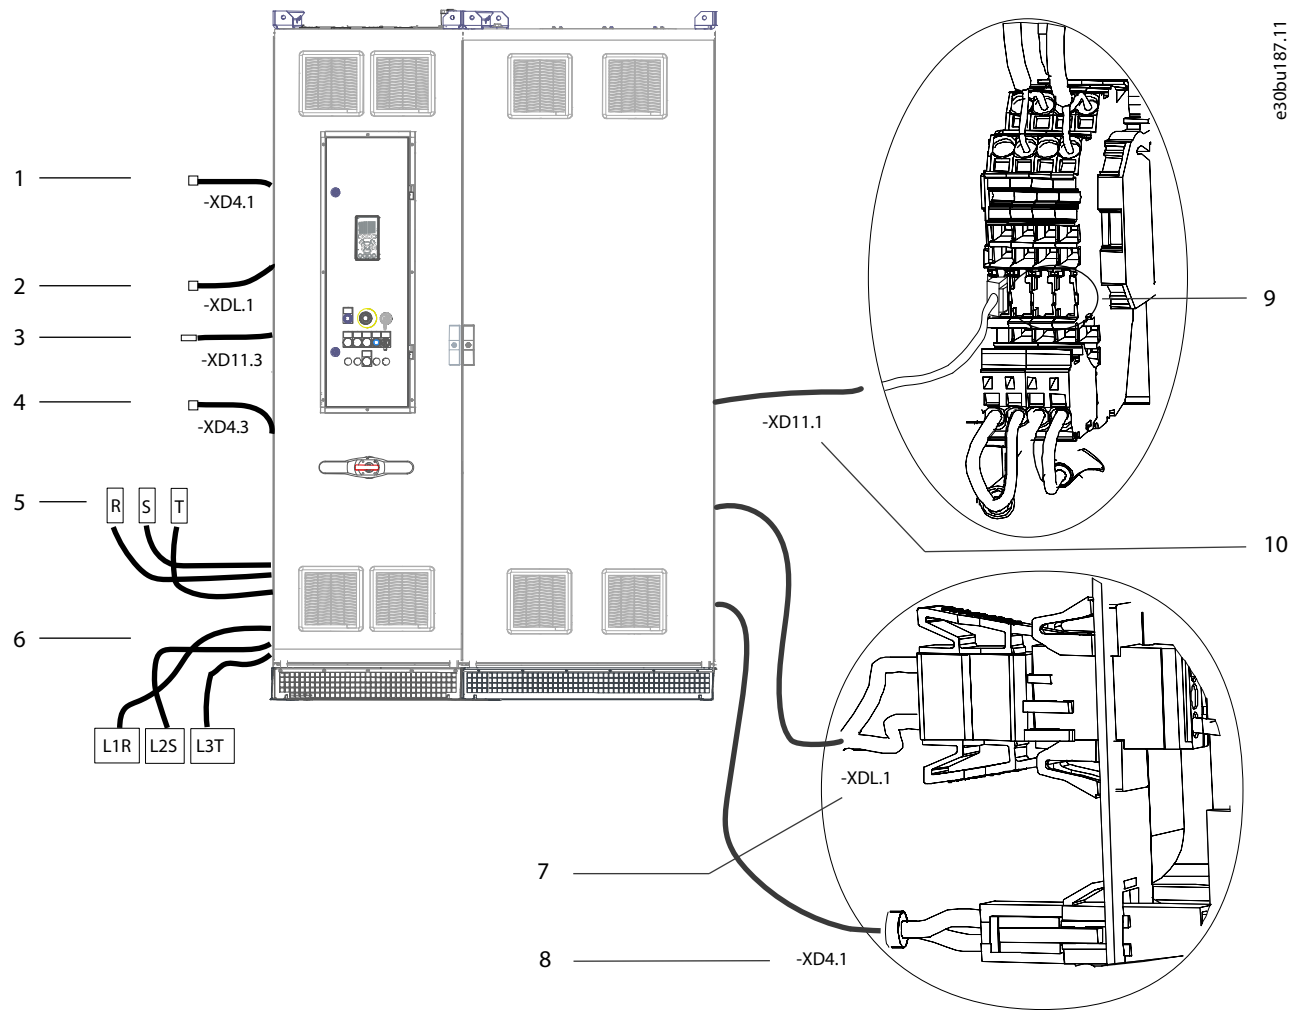

e30bu187.11

Illustration 32: Split Shipment Electrical Connections (Input Power Options Cabinet + E5h Drive Cabinet)

1	Cabinet heater supply harness to input filter cabinet	6	Mains cables (L1R/L2S/L3T) to output terminals (L1R/L2S/L3T) in the input filter cabinet
2	DC-link harness to fan supply in input filter cabinet	7	DC-link harness to fan supply to output filter cabinet
3	Thermal protection harness to input filter cabinet	8	Cabinet heater supply harness to output filter cabinet
4	PHF contactor 1 supply harness to input filter cabinet (only with PHF option)	9	Available terminal connections
5	Mains cables (R/S/T) to input terminals (R/S/T) in the input filter cabinet	10	Thermal protection wiring harness to output filter cabinet

5.6.4 E6h Wiring Harness

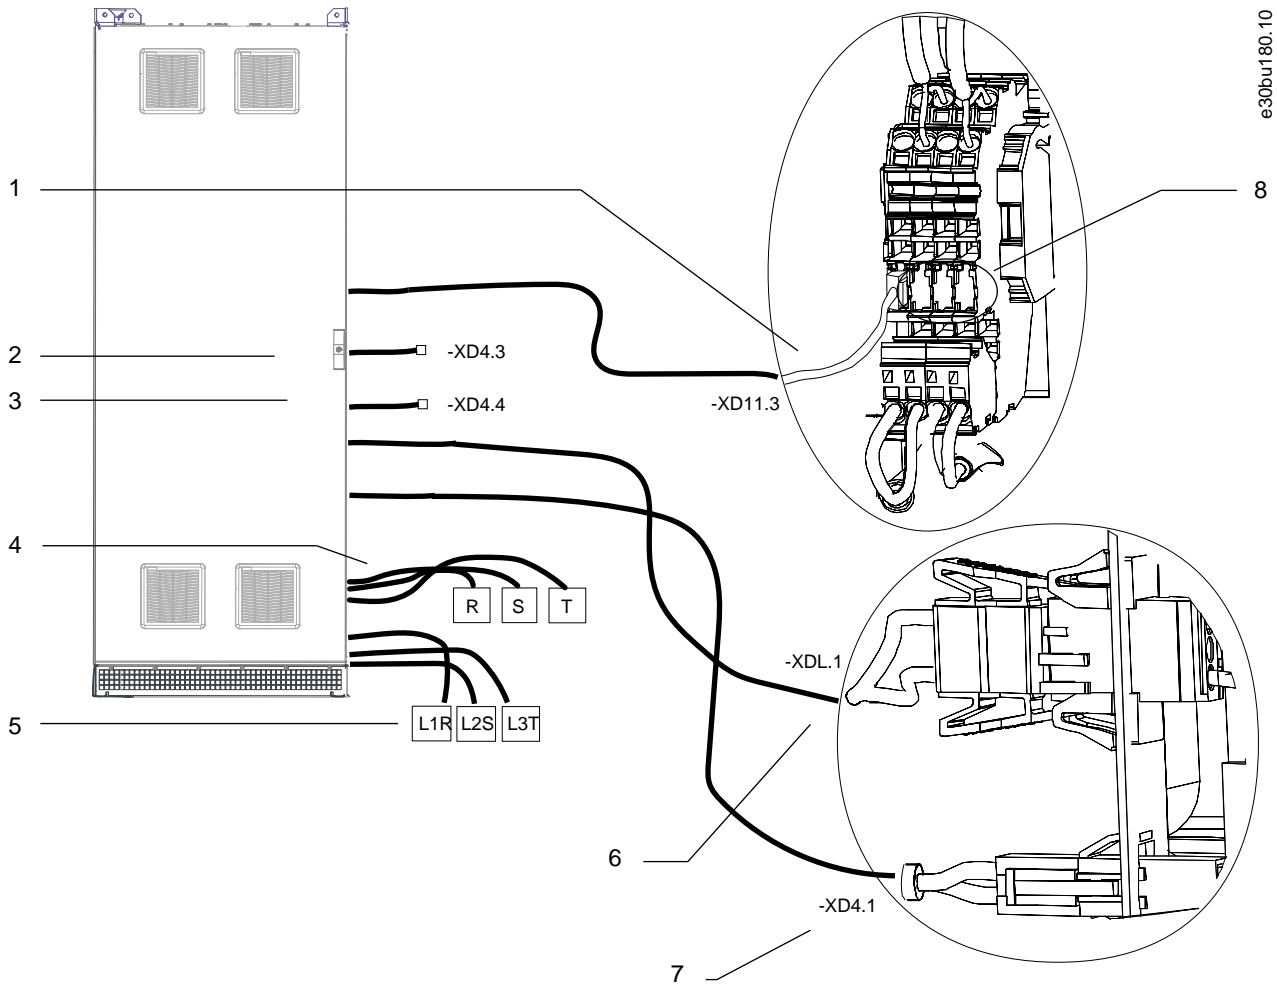


Illustration 33: Split Shipment Electrical Connections (Input Filter Cabinet)

<p>1 Thermal protection wiring harness to input power options cabinet</p>	<p>5 Output terminal cables (L1R/L2S/L3T) to mains terminals (R/S/T) in the drives cabinet</p>
<p>2 PHF contactor 1 supply harness to input power options cabinet (only with PHF option)</p>	<p>6 DC-link harness to fan supply in the input power options cabinet</p>
<p>3 PHF contactor 2 supply harness to input power options cabinet (only with PHF option)</p>	<p>7 Cabinet heater supply harness to input power options cabinet</p>
<p>4 Input terminal cables (R/S/T) to mains terminals (R/S/T) in the input power options cabinet</p>	<p>8 Additional terminal connections</p>

e30bu181.12

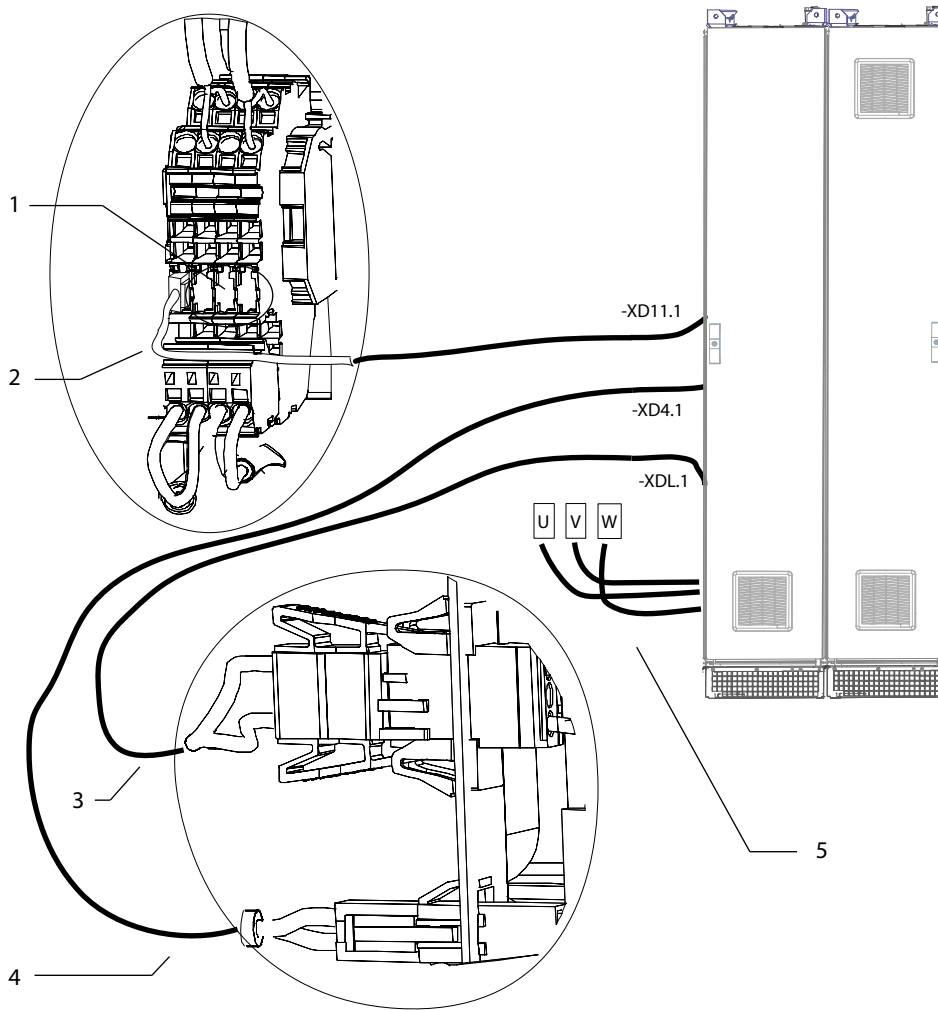


Illustration 34: Split Shipment Electrical Connections (dU/dt Cabinet + Top Exit Cabinet)

1	Additional terminal connections	4	Cabinet heater supply harness to drive cabinet
2	Thermal protection wiring harness to drive cabinet	5	Motor cables (U/V/W) to motor terminals (U/V/W) in drive cabinet
3	DC-link harness to fan supply in drive cabinet		

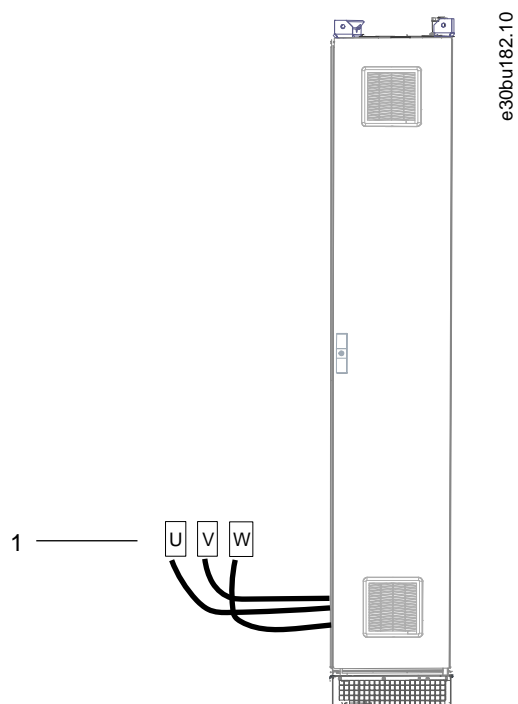


Illustration 35: Split Shipment Electrical Connections (Top Exit Cabinet)

1	Motor cables (U/V/W) to motor terminals (U/V/W) in drive cabinet
---	------------------------------------------------------------------

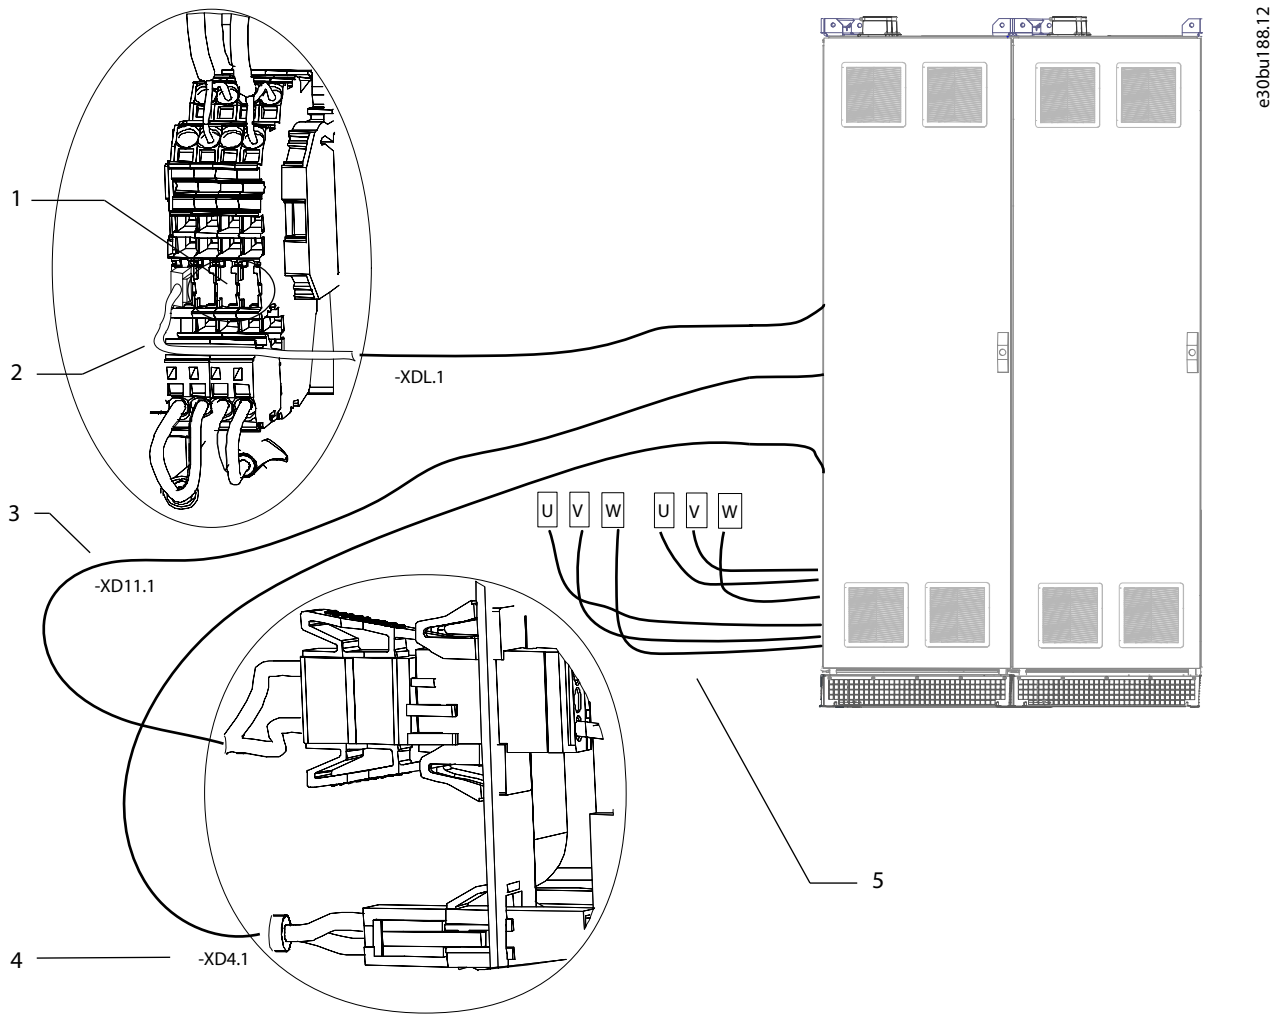


Illustration 36: Split Shipment Electrical Connections (E5h/E6h Sine-wave Cabinets)

1	Additional terminal connections	4	Cabinet heater supply harness to drive cabinet
2	Thermal protection wiring harness to drive cabinet	5	Motor cables (U/V/W) to motor terminals (U/V/W) in drive cabinet
3	DC-link harness to fan power supply in drive cabinet		

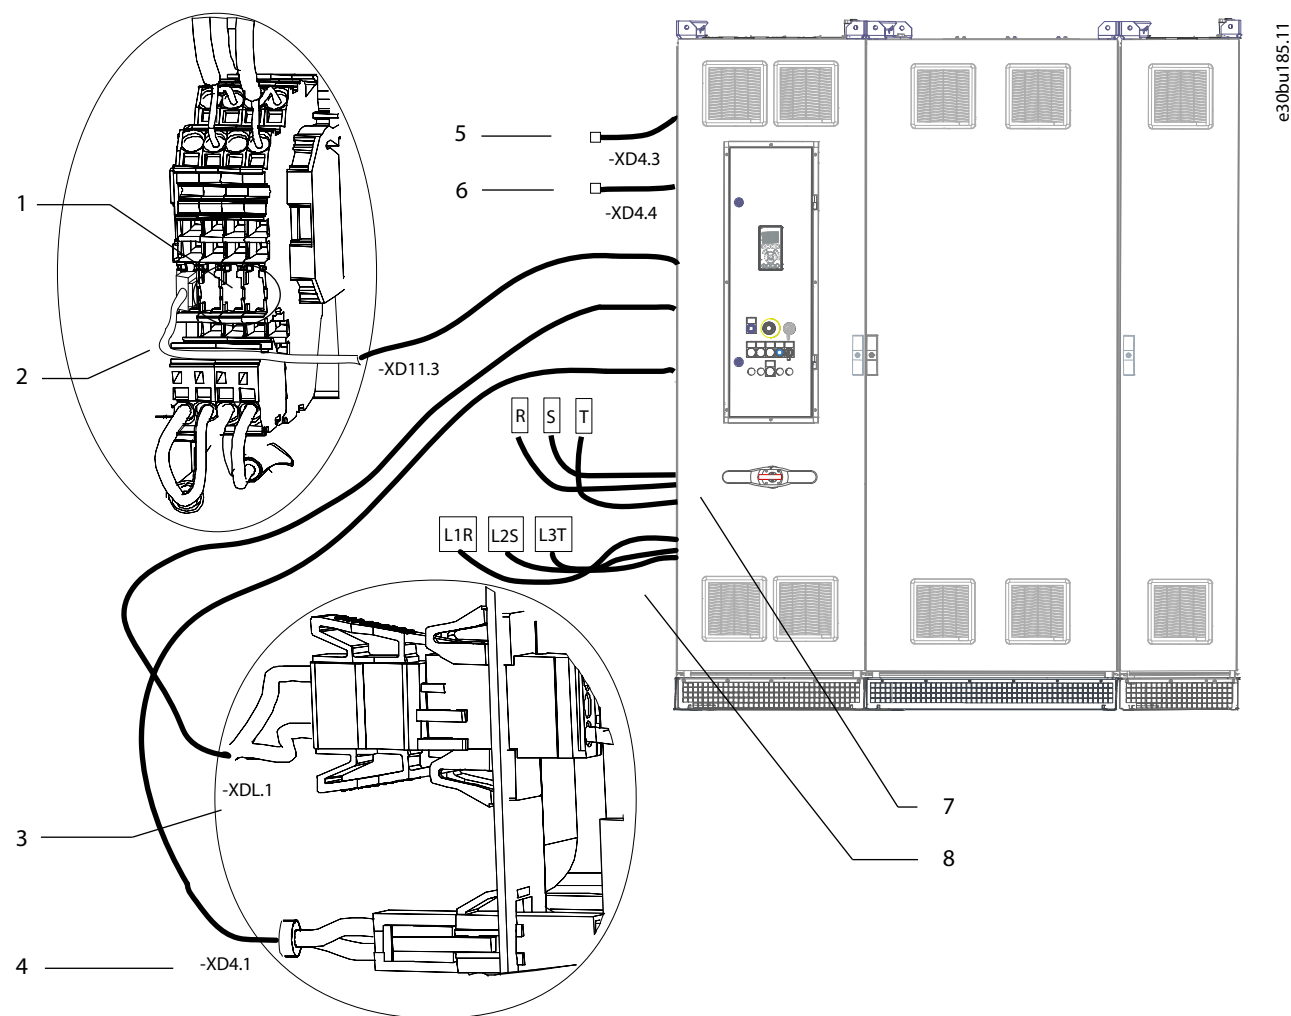


Illustration 37: Split Shipment Electrical Connections (Input Power Options Cabinet + E6h Drive Cabinet + Top Exit Cabinet)

<p>1 Additional terminal connections</p>	<p>5 PHF contactor 1 supply harness to input filter cabinet (only with PHF option)</p>
<p>2 Thermal protection wiring harness to input filter cabinet</p>	<p>6 PHF contactor 2 supply harness to input filter cabinet (only with PHF option)</p>
<p>3 DC-link harness to fan supply in the input filter cabinet</p>	<p>7 Mains cables (R/S/T) to input terminals (R/S/T) in the input filter cabinet</p>
<p>4 Cabinet heater supply harness to input filter cabinet</p>	<p>8 Mains cables (L1R/L2S/L3T) to output terminals (L1R/L2S/L3T) in the input filter cabinet</p>

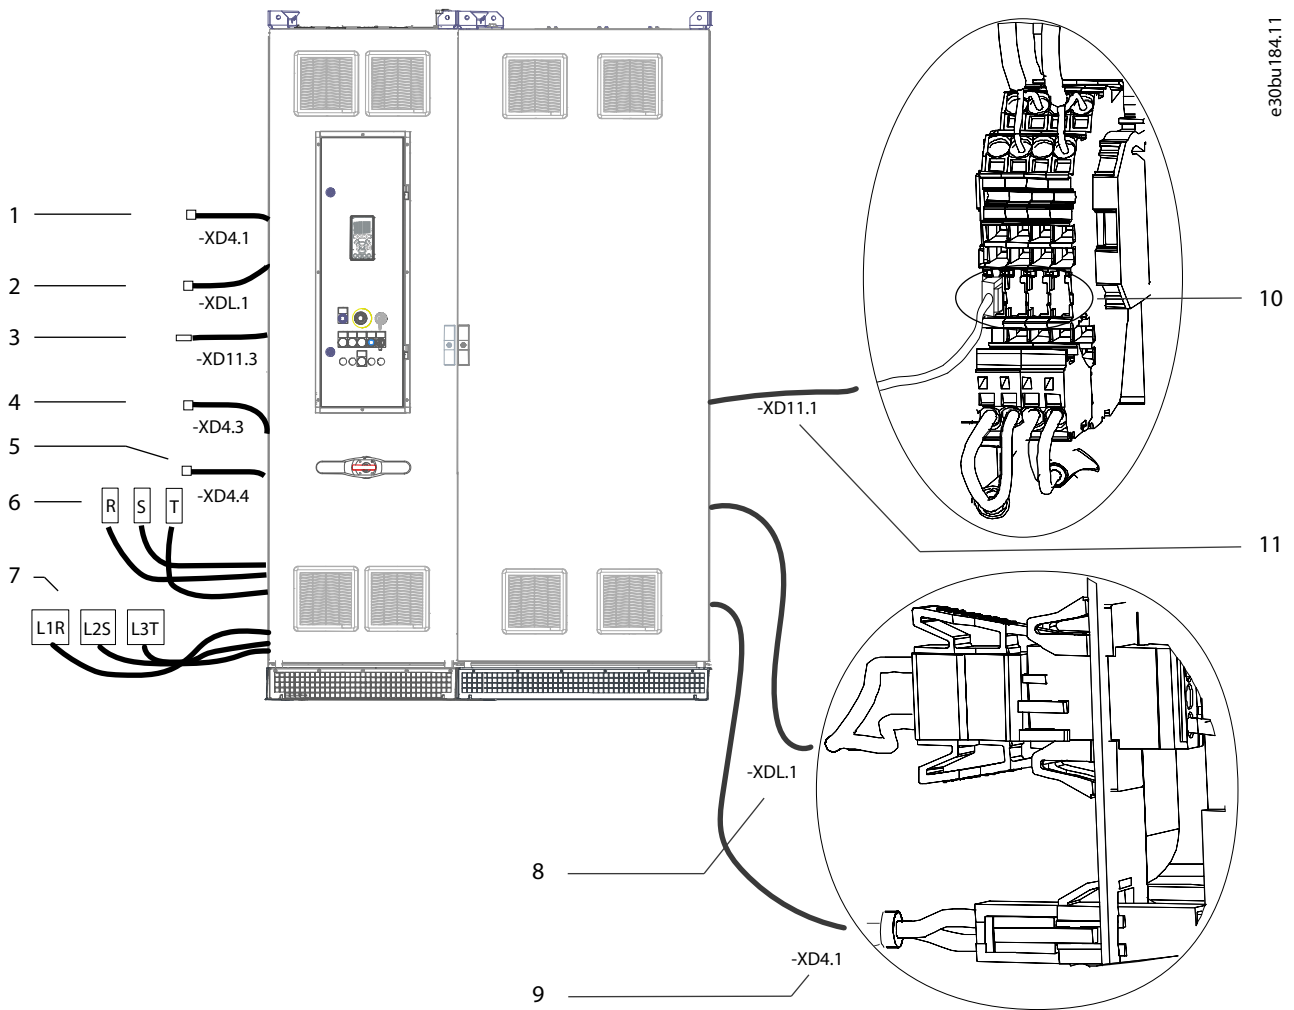


Illustration 38: Split Shipment Electrical Connections (Input Power Options Cabinet + E6h Drive Cabinet)

1	Cabinet heater supply harness to input filter cabinet	7	Mains cables (L1R/L2S/L3T) to output terminals (L1R/L2S/L3T) in the input filter cabinet
2	DC-link harness to fan supply to input filter cabinet	8	DC-link harness to fan supply in output filter cabinet
3	Thermal protection wiring harness in the input filter cabinet	9	Cabinet heater supply harness to output filter cabinet
4	PHF contactor 1 supply harness to PHF cabinet (only with PHF option)	10	Available terminal connections
5	PHF contactor 2 supply harness to PHF cabinet (only with PHF option)	11	Thermal protection wiring harness to output filter cabinet
6	Mains cables R, S, T to input terminals (R/S/T) in the input filter cabinet		

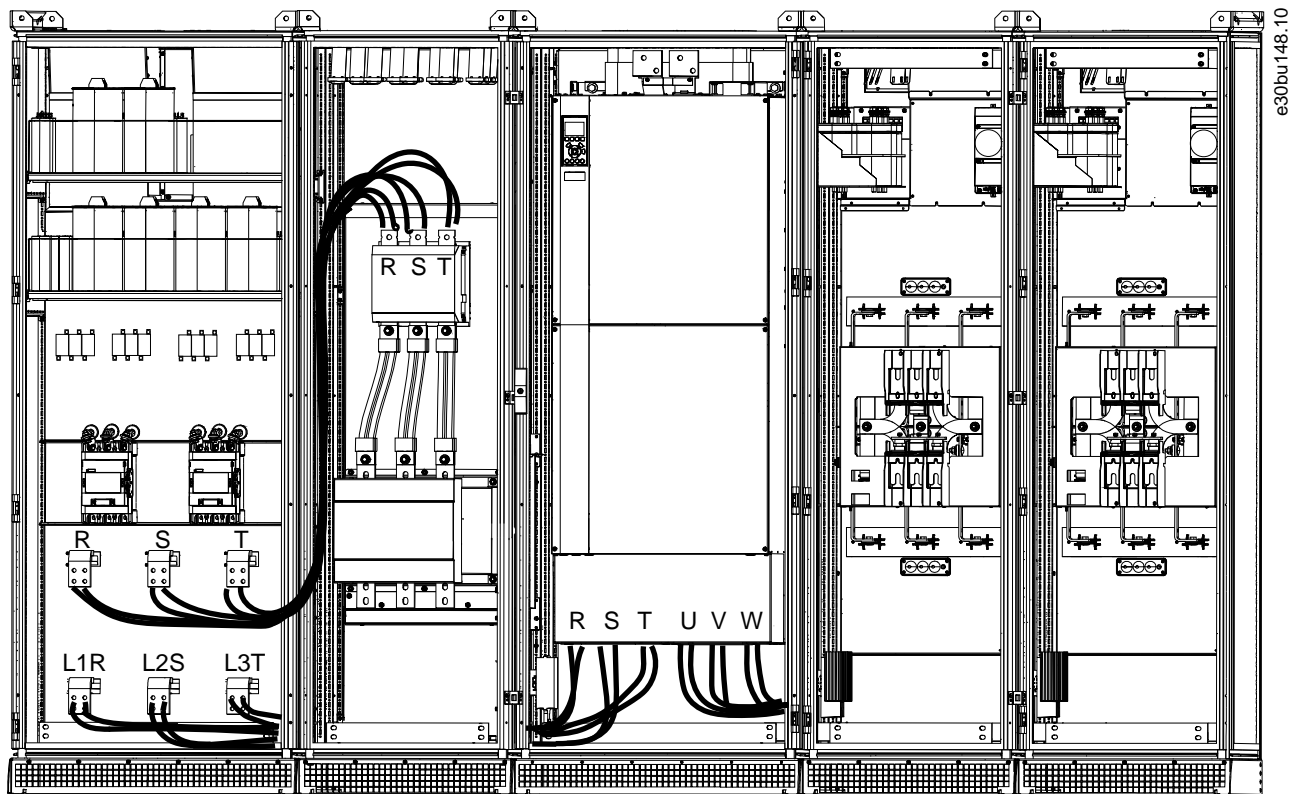


Illustration 39: Connecting Motor and Mains Cables (Example Shows a PHF Cabinet + Input Power Options Cabinet + E6h Drive Cabinet + Sine-wave Cabinets)

5.7 Control Compartment Wiring

5.7.1 Safety Precautions

⚠ WARNING ⚠

HIGH VOLTAGE

The mains disconnect switch does not disconnect the external voltage supply. Failure to disconnect the external voltage supply before touching any components in the control compartment can result in death or serious injury.

- Only qualified personnel must install, start up, and maintain the drive.
- Disconnect the external voltage supply.

5.7.2 Control Compartment Interior View

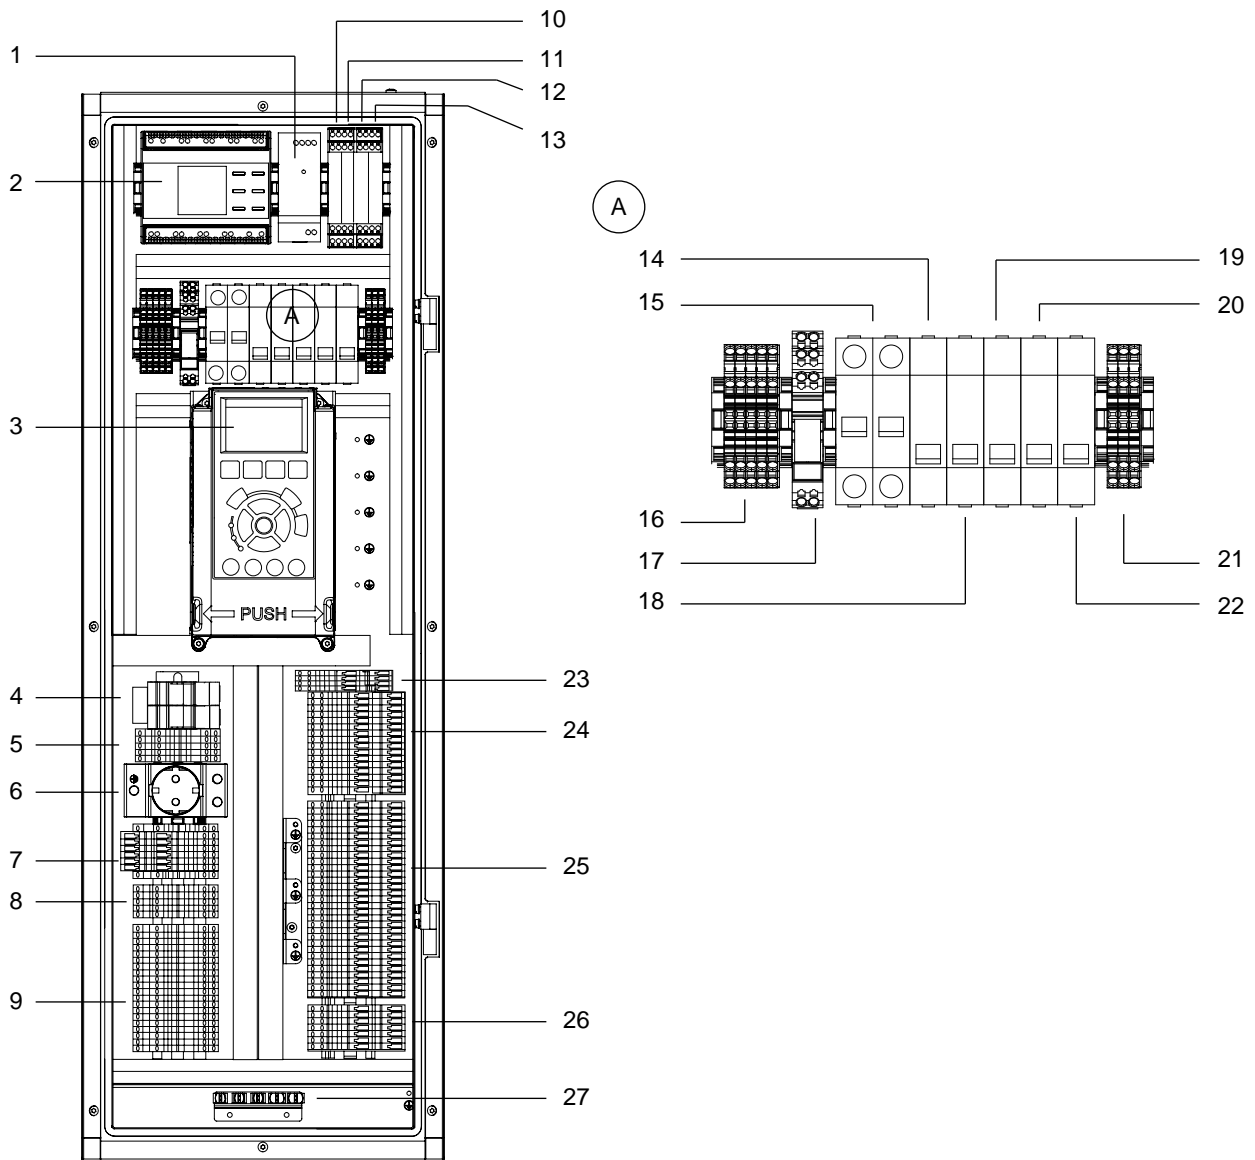


Illustration 40: Layout of Control Compartment Interior with All Options

1	24 V DC supply (-TB7)	15	AC circuit protection MCB (-FC6)
2	Insulation monitor (-BE1)	16	AC distribution circuit terminal block (-XD1)
3	Local control panel (LCP).	17	Auxiliary relay for heater (-QAM)
4	RJ45 terminal blocks 1 and 2 (-RJ45_1 and RJ45_2)	18	Contactora control circuit protection MCB (-FC10)
5	Protection terminal block set (-XD11)	19	Cabinet light/socket outlet protection MCB (-FCC)
6	Socket outlet (-XD10)	20	Cabinet heater(s) circuit protection MCB (-FCE)
7	Contactora control circuit terminal block (-XD0)	21	DC distribution circuit terminal block (-XD3)
8	Cabinet heater terminal block (-XD4)	22	Motor heater circuit protection MCB (-FCN)
9	Customer terminal block/option C0 terminal block (-XDW)	23	AC fan supply terminal block set (-XDY)
10	Thermal trip indicator relay, input power options cabinet (-KFJ.1)	24	Option C2 terminal block set (-XDF)
11	Thermal trip indicator relay, output filter cabinet (-KFJ.2)	25	Basic I/O terminal block and option A, B, D card terminal block set (-XD2)
12	Thermal trip indicator relay, input filter cabinet (-KFJ.3)	26	Door components terminal block set (-XDJ)
13	PHF capacitor connect/disconnect contactora relay (-QAF)	27	Grounding clamp for the shield termination of wires.
14	+24 DC supply protection MCB (-FC7)		

5.7.3 Control Terminals

Table 43: Serial Communication Terminals

XD2 terminal	Parameter	Default Setting	Description
1	–	–	Integrated RC-filter for cable shield. Used only for connecting the shield in case of EMC problems.
2	<i>Parameter group 8-3* FC Port Settings</i>	–	RS485 interface. A switch (BUS TER.) is provided on the control card for bus termination resistance. See <i>Illustration 5.22</i> .
3	<i>Parameter group 8-3* FC Port Settings</i>	–	

Table 44: Digital Input/Output Terminal Descriptions

XD2 terminal	Parameter	Default setting	Description
10, 11	–	+24 V DC	24 V DC supply voltage for digital inputs and external transducers. Maximum output current 200 mA for all 24 V loads.
12	<i>Parameter 5-10 Terminal 18 Digital Input</i>	<i>[8] Start</i>	Digital inputs.
13	<i>Parameter 5-11 Terminal 19 Digital Input</i>	<i>[10] Reversing</i>	
16	<i>Parameter 5-14 Terminal 32 Digital Input</i>	<i>[0] No operation</i>	

XD2 terminal	Parameter	Default setting	Description
17	<i>Parameter 5-15 Terminal 33 Digital Input</i>	<i>[0] No operation</i>	
14	<i>Parameter 5-12 Terminal 27 Digital Input</i>	<i>[2] Coast inverse</i>	For digital input or output. Default setting is input.
15	<i>Parameter 5-13 Terminal 29 Digital Input</i>	<i>[14] JOG</i>	
18	–	–	Common for digital inputs and 0 V potential for 24 V supply.
19	–	STO	When not using the optional STO feature, a jumper wire is required between terminal 10 (or 11) and terminal 19. This setup allows the drive to operate with factory default programming values.

Table 45: Analog Input/Output Terminal Descriptions

XD2 terminal	Parameter	Default setting	Description
4	–	–	Common for analog output.
5	<i>Parameter 6-50 Terminal 42 Output</i>	<i>[0] No operation</i>	Programmable analog output. 0–20 mA or 4–20 mA at a maximum of 500 Ω.
6	–	+10 V DC	10 V DC analog supply voltage for potentiometer or thermistor. 15 mA maximum.
7	<i>Parameter group 6-1* Analog Input 1</i>	Reference	Analog input. For voltage (V) or current (mA).
8	<i>Parameter group 6-2* Analog Input 2</i>	Feedback	
9	–	–	Common for analog input.

5.7.4 Relay Terminals

Table 46: Relay Terminal Descriptions

XD2 terminal	Parameter	Default setting	Description
21, 22, 23	<i>Parameter 5-40 Function Relay [0]</i>	<i>[0] No operation</i>	Form C relay outputs. For AC or DC voltage.
24, 25, 26	<i>Parameter 5-40 Function Relay [1]</i>	<i>[0] No operation</i>	

5.7.5 Option Card Terminals

The option cards extend the functionality of drives and provide a high variety of interfaces to automation systems. When the option cards are specified in the type code, they are mounted in slots A, B, C, and D of the control card within the drive module. The option card wiring is routed to a terminal block within the control compartment. For more details, refer to the Installation/Operating Guide for the respective option card.

N O T I C E

OPTION CARD INSTALLATION

If the option card is ordered along with the drive using the type code, the factory installs the option card and its wiring. If the option is ordered separately, the customer is responsible for installing the option card and the wiring extensions to the control compartment.

Table 47: Option A Terminal Connections for VLT® DeviceNet MCA 104, VLT® CANopen MCA 105, VLT® DeviceNet Converter MCA 194

Option card terminal	Corresponding terminal within the control compartment
1	XD2.40
2	XD2.41
3	XD2.42
4	XD2.43
5	XD2.44

Table 48: Option A Terminal Connections for VLT® PROFIBUS DP-V1 MCA 101, VLT® PROFIBUS Converter VLT 300 MCA 113, VLT® PROFIBUS Converter VLT 5000 MCA 114

Option card terminal	Corresponding terminal within the control compartment
67	XD2.40
66	XD2.41
63	XD2.42
62	XD2.43
CS	XD2.44

Table 49: Option A Terminal Connections for VLT® EtherNet/IP MCA 121, VLT® Modbus TCP MCA 122, VLT® POWERLINK MCA 123, VLT® EtherCAT MCA 124

Option card terminal	Corresponding terminal within the control compartment
Port 1	RJ45_1
Port 2	RJ45_2

Table 50: Option B Terminal Connections

Option card terminal	Corresponding terminal within the control compartment
1	XD2.46
2	XD2.47
3	XD2.48
4	XD2.49
5	XD2.50
6	XD2.51
7	XD2.52
8	XD2.53
9	XD2.54
10	XD2.55
11	XD2.56
12	XD2.57

Table 51: Option C1 Terminal Connections for VLT® Extended Relay Card MCB 113

Option card terminal	Corresponding terminal within the control compartment
X45.1	XDF.17
X45.2	XDF.18
X45.3	XDF.19
X45.4	XDF.20
X46.1	XDF.1
X46.2	XDF.2
X46.3	XDF.3
X46.4	XDF.4
X46.5	XDF.5
X46.6	XDF.6
X46.7	XDF.7
X46.8	XDF.8
X46.9	XDF.9
X46.10	XDF.10
X46.11	XDF.11
X46.12	XDF.12
X46.13	XDF.13
X46.14	XDF.14
X47.1	XDF.21
X47.2	XDF.22
X47.3	XDF.23
X47.4	XDF.24
X47.5	XDF.25
X47.6	XDF.26
X47.7	XDF.27
X47.8	XDF.28
X47.9	XDF.29
X47.10	XDF.30
X47.11	XDF.31
X47.12	XDF.32
X58.1	XDF.15
X58.2	XDF.16

Table 52: Option C1 Terminal Connections for VLT® Advanced Cascade Controller MCO 102

Option card terminal	Corresponding terminal within the control compartment
X67.1	XDF.21
X67.2	XDF.22
X67.3	XDF.23
X67.4	XDF.24
X67.5	XDF.25
X67.6	XDF.26
X67.7	XDF.27
X67.8	XDF.28
X67.9	XDF.29
X67.10	XDF.30
X67.11	XDF.31
X67.12	XDF.32
X66.1	XDF.1
X66.2	XDF.2
X66.3	XDF.3
X66.4	XDF.4
X66.5	XDF.5
X66.6	XDF.6
X66.7	XDF.7
X66.8	XDF.8
X66.9	XDF.9
X66.10	XDF.10
X66.11	XDF.11
X66.12	XDF.12
X66.13	XDF.13
X66.14	XDF.14
X58.1	XDF.15
X58.2	XDF.16

Table 53: Option D Terminal Connections

Option card terminal	Corresponding terminal within the control compartment
35	XD2.28

Option card terminal	Corresponding terminal within the control compartment
36	XD2.29

5.7.6 Control Compartment Options

5.7.6.1 Auxiliary Supply Terminals

Table 54: Auxiliary Supply Type Codes

Character position	Code	Description
21	1	230 V AC external
	5	230 V AC external + 24 V DC internal
	6	120 V AC external
	9	120 V AC external + 24 V DC internal

The auxiliary supply terminal option provides an external voltage supply to the -XD1.1 terminal. The external supply must be short-circuit protected. The power of the external supply depends on other selected cabinet options.



Illustration 41: Auxiliary AC Supply Terminals

⚠ WARNING ⚠

HIGH VOLTAGE

The mains disconnect switch does not disconnect the external voltage supply. Failure to disconnect the external voltage supply before touching any components in the control compartment can result in death or serious injury.

- Disconnect the external voltage supply.
- Only qualified personnel must install, start up, and maintain the drive.

5.7.6.2 Auxiliary Voltage Transformer

Table 55: Auxiliary Supply Type Codes for Auxiliary Voltage Transformer

Character position	Code	Description
21	2	230 V AC internal
	4	230 V AC internal + 24 V DC internal
	7	120 V AC internal
	8	120 V AC internal + 24 V DC internal

The auxiliary voltage transformer is an option fitted internally that allows for the supply to be tapped from the mains. For example, if the enclosed drive is specified with a fused disconnect, the supply for the auxiliary voltage transformer is taken from between the drive and the fused disconnect. This configuration allows the control voltage to be disconnected with the main switch.

The transformer has multiple tapings on the primary side for the standard range of voltages on which the drive operates. The factory default wiring connects to the highest voltage tapping on the primary side, and the trip settings for the -FC4 terminal is set accordingly. The customer can change the tapping provided the correct voltage is applied and the thermal magnetic circuit breaker is set accordingly.

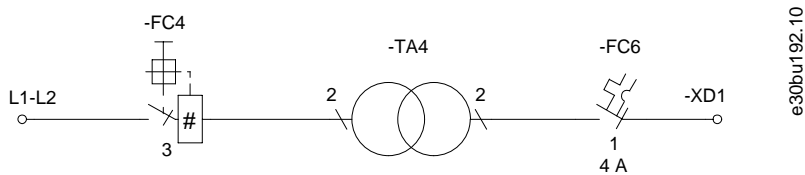


Illustration 42: Auxiliary Voltage Transformer Terminals

NOTICE

AUXILIARY COMPONENT FAILURE

Incorrect voltage or incorrect tapping installation will cause other auxiliary components in the control compartment to fail.

- When tapping the transformer, make sure to apply the correct voltage for the drive.
- Use the correct tapping and trip settings.

5.7.6.3 +24 V DC External Supply

Table 56: Auxiliary Supply Type Codes

Character position	Code	Description
21	4	230 V AC internal+24 V DC internal
	5	230 V AC external+24 V DC internal
	8	120 V AC internal+24 V DC internal
	9	120 V AC external+24 V DC internal

The 24 V DC external supply option enables other auxiliary options to be connected to a 24 V DC supply within the control compartment.

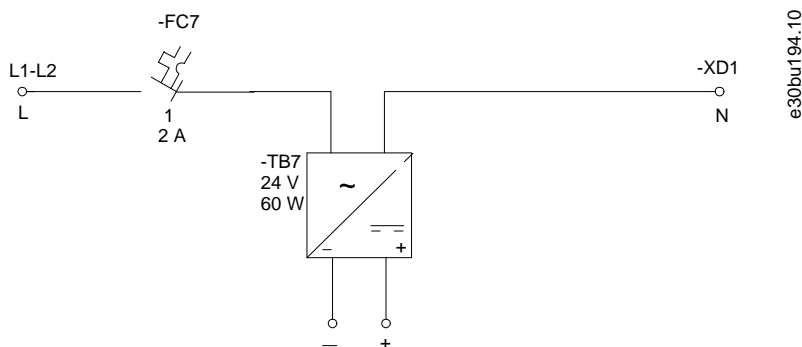


Illustration 43: 24 V DC External Supply Terminals

5.7.6.4 AC Customer Socket

Table 57: Auxiliary Function Type Codes

Character position	Code	Description
23–24	A1	AC socket + cabinet light
	AA	AC socket + cabinet light + extended I/O terminals
	AB	AC socket + cabinet light + cabinet heater
	AC	AC socket + cabinet light + motor heater control
	AD	AC socket + cabinet light + insulation monitor

Character position	Code	Description
	AE	AC socket + cabinet light + extended I/O terminals + cabinet heater
	AF	AC socket + cabinet light + extended I/O terminals + motor heater control
	AG	AC socket + cabinet light + extended I/O terminals + insulation monitor
	AH	AC socket + cabinet light + extended I/O terminals + cabinet heater + motor heater control
	AI	AC socket + cabinet light + extended I/O terminals + cabinet heater + insulation monitor
	AJ	AC socket + cabinet light + extended I/O terminals + motor heater control + insulation monitor
	AK	AC socket + cabinet light + extended I/O terminals + cabinet heater + motor heater control + insulation monitor
	AL	AC socket + cabinet light + cabinet heater + motor heater control
	AM	AC socket + cabinet light + cabinet heater + insulation monitor
	AN	AC socket + cabinet light + cabinet heater + motor heater control + insulation monitor
	AO	AC socket + cabinet light + motor heater control + insulation monitor

The customer socket provides a supply for measurement tools, equipment, or a computer. The socket type is CEE 7/3 ("Schuko", Type F) or NEMA 5-15 grounded (Type B). The default voltage is 230 V AC (IEC variant) and 115 V AC (UL variant). When using an external supply, the maximum output power is 450 VA (IEC variant) and 230 VA (UL variant). When using a transformer supply, the maximum output power is 200 VA for both variants.

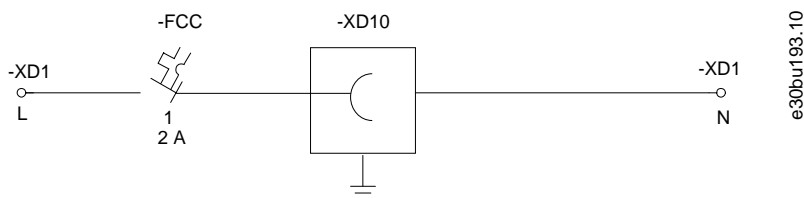


Illustration 44: AC Customer Socket Terminals

5.7.6.5 Extended I/O Terminals

Table 58: Auxiliary Function Type Codes

Character position	Code	Description
23-24	A2	Extended I/O terminals
	AA	AC socket+cabinet light + extended I/O terminals
	AE	AC socket+cabinet light + extended I/O terminals + cabinet heater
	AF	AC socket+cabinet light + extended I/O terminals + motor heater control
	AG	AC socket+cabinet light + extended I/O terminals + insulation monitor
	AH	AC socket+cabinet light + extended I/O terminals + cabinet heater + motor heater control
	AI	AC socket+cabinet light + extended I/O terminals + cabinet heater + insulation monitor
	AJ	AC socket+cabinet light + extended I/O terminals + motor heater control + insulation monitor
	AK	AC socket+cabinet light + extended I/O terminals + cabinet heater + motor heater control + insulation monitor

Character position	Code	Description
	AP	Extended I/O terminals + cabinet heater
	AQ	Extended I/O terminals + motor heater control
	AR	Extended I/O terminals + insulation monitor
	AS	Extended I/O terminals + cabinet heater + motor heater control
	AT	Extended I/O terminals + cabinet heater + insulation monitor
	AU	Extended I/O terminals + cabinet heater + motor heater control + insulation monitor
	AV	Extended I/O terminals + motor heater control + insulation monitor

The extended I/O terminal option includes 25 control terminals (-XDW) in the control compartment for use by the customer. If the enclosed drive is configured with any option C1 card, the -XDW terminal block is used for the option C1 card wiring.

5.7.6.6 Cabinet Heater

Table 59: Auxiliary Function Type Codes

Character position	Code	Description
23–24	A3	Cabinet heater
	AB	AC socket + cabinet light + cabinet heater
	AE	AC socket + cabinet light + extended I/O terminals + cabinet heater
	AH	AC socket + cabinet light + extended I/O terminals + cabinet heater + motor heater control
	AI	AC socket + cabinet light + extended I/O terminals + cabinet heater + insulation monitor
	AK	AC socket + cabinet light + extended I/O terminals + cabinet heater + motor heater control + insulation monitor
	AL	AC socket + cabinet light + cabinet heater + motor heater control
	AM	AC socket + cabinet light + cabinet heater + insulation monitor
	AN	AC socket + cabinet light + cabinet heater + motor heater control + insulation monitor
	AP	Extended I/O terminals + cabinet heater
	AS	Extended I/O terminals + cabinet heater + motor heater control
	AT	Extended I/O terminals + cabinet heater + insulation monitor
	AU	Extended I/O terminals + cabinet heater + motor heater control + insulation monitor
	AW	Cabinet heater + motor heater control
	A8	Cabinet heater + insulation monitor
AY	Cabinet heater + motor heater control + insulation monitor	

The cabinet heater option increases the inside temperature of the cabinet above the ambient temperature, preventing condensation in the cabinet. Each cabinet has 1 cabinet heater. The heater element is self regulating. The external supply is connected to terminal -XD1.1. When the drive is not in run state, the control relay -QAM changes the supply to the output terminals (-XD4). When the drive is in run state, the control relay disconnects the supply to the cabinet heater. The function is disabled when MCB -FCE is open.

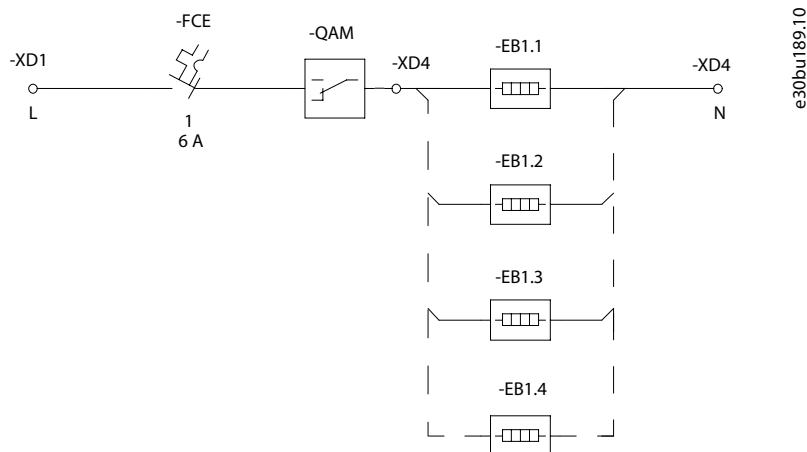


Illustration 45: Cabinet Heater Terminals

5.7.6.7 Motor Heater Control

Table 60: Auxiliary Function Type Codes

Character position	Code	Description
23–24	A4	Motor heater control
	AC	AC socket + cabinet light + motor heater control
	AF	AC socket + cabinet light + extended I/O terminals + motor heater control
	AH	AC socket + cabinet light + extended I/O terminals + cabinet heater + motor heater control
	AJ	AC socket + cabinet light + extended I/O terminals + motor heater control + insulation monitor
	AK	AC socket + cabinet light + extended I/O terminals + cabinet heater + motor heater control + insulation monitor
	AL	AC socket + cabinet light + cabinet heater + motor heater control
	AN	AC socket + cabinet light + cabinet heater + motor heater control + insulation monitor
	AO	AC socket + cabinet light + motor heater control + insulation monitor
	AQ	Extended I/O terminals + motor heater control
	AS	Extended I/O terminals + cabinet heater + motor heater control
	AU	Extended I/O terminals + cabinet heater + motor heater control + insulation monitor
	AV	Extended I/O terminals + motor heater control + insulation monitor
	AW	Cabinet heater + motor heater control
	AY	Cabinet heater + motor heater control + insulation monitor
AZ	Motor heater control + insulation monitor	

The motor heater option provides the ability to control the supply for the motor anti-condensation heater. The 24 V DC external supply is connected to terminal -XD1.1 in the lower part of the cabinet. When the drive is not in run state, the control relay -QAM changes the external supply to the -XDM output terminals. When the drive is in run state, the control relay disconnects the external supply to the motor heater. The function is disabled when MCB -FCN is open.

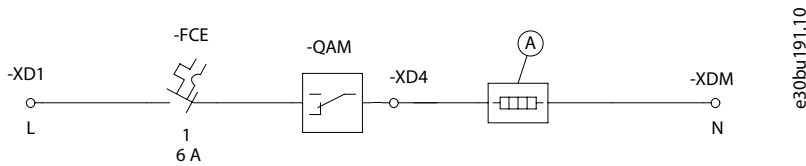


Illustration 46: Motor Heater Control (A = Heater element, not included)

5.7.6.8 Insulation Monitor

Table 61: Auxiliary Function Type Codes

Character position	Code	Description
23–24	A5	Insulation monitor
	AD	AC socket+cabinet light + insulation monitor
	AG	AC socket+cabinet light + extended I/O terminals + insulation monitor
	AI	AC socket+cabinet light + extended I/O terminals + cabinet heater + insulation monitor
	AJ	AC socket+cabinet light + extended I/O terminals + motor heater control + insulation monitor
	AK	AC socket+cabinet light + extended I/O terminals + cabinet heater + motor heater control + insulation monitor
	AM	AC socket+cabinet light + cabinet heater + insulation monitor
	AN	AC socket+cabinet light + cabinet heater + motor heater control + insulation monitor
	AO	AC socket+cabinet light + motor heater control + insulation monitor
	AR	Extended I/O terminals + insulation monitor
	AT	Extended I/O terminals + cabinet heater + insulation monitor
	AU	Extended I/O terminals + cabinet heater + motor heater control + insulation monitor
	AV	Extended I/O terminals + motor heater control + insulation monitor
	A8	Cabinet heater + insulation monitor
	AY	Cabinet heater + motor heater control + insulation monitor
AZ	Motor heater control + insulation monitor	

The insulation monitor option monitors the supply and insulation faults within the insulation level in an IT supply network with an insulation monitor in the control compartment.

5.7.6.9 Signal Lights and Reset Buttons

Table 62: Door-mounted Option Type Codes

Character position	Code	Description
28–29	D1	Signal lights and reset button
	DA	Signal lights and reset button + emergency switch off and emergency push-button
	DB	Signal lights and reset button + STO with emergency push-button (no functional safety)
	DC	Signal lights and reset button + STO/SS1 with emergency push-button + safely limited speed (TTL encoder)

Character position	Code	Description
	DE	Signal lights and reset button + STO/SS1 with emergency push-button + safely limited speed (HTL encoder)

The signal light and reset button option includes signal lights on the control compartment door for run and fault states of the AC drive. The door also has a button for the reset function of the drive.

5.7.6.10 Emergency Switch Off

Table 63: Door-mounted Option Type Codes

Character position	Code	Description
28–29	D2	Emergency switch off + emergency push-button
	DA	Signal lights and reset button + emergency switch off and emergency push-button

The emergency switch off option uses an input contactor to disconnect the drive from mains. Pushing the emergency stop push-button on the control compartment door opens the control circuit of the input contactor.

5.7.6.11 STO with Emergency Push-button on Door

Table 64: Door-mounted Option Type Codes

Character position	Code	Description
28–29	D3	STO with emergency push-button (no functional safety)
	DB	Signal lights and reset button + STO with emergency push-button (no functional safety)

This option provides the STO (Safe Torque Off) function via an emergency push-button mounted on the door of the control compartment. The control terminals of the control card are extended from inside the drive module and routed out to the terminal block set -XD2 in the control compartment. The emergency push-button is wired between terminals -XD2.10 and -XD2.19.

Activating the emergency push-button prevents the unit from generating the voltage required to rotate the motor. The option provides:

- Safe Torque Off (STO), as defined by EN IEC 61800-5-2.
- Stop Category 0, as defined in EN 60204-1.

5.8 Connecting Motor, Mains, and Ground Cables

5.8.1 Power Cabling and Grounding Considerations

Motor and mains connections

- Size the wiring according to the input current of the drive. For maximum wire sizes, see the *Electrical Data* section.
- Use cables rated for 75 °C (167 °F) of insulation for UL installations.
- Comply with local and national electrical codes for cable sizes.
- Follow motor manufacturer wiring requirements.
- Motor wiring knockouts or access panels are provided on the pedestal of IP21/IP54 (NEMA 1/NEMA 12) units.
- Do not wire a starting or pole-changing device (for example Dahlander motor or slip ring induction motor) between the drive and the motor.

Ground connection

- Ground the drive in accordance with applicable standards and directives.
- Use a dedicated ground wire for input power, motor power, and control wiring.
- Do not ground 1 drive to another in a daisy chain fashion.
- Keep the ground wire connections as short as possible.
- Follow motor manufacturer wiring requirements.

- Minimum cable cross-section: 10 mm² (6 AWG) (or 2 rated ground wires terminated separately).
- Tighten the terminals in accordance with the information provided in [10.11 Fastener Torque Ratings](#).

EMC-compliant Installation

Refer to the *EMC-compliant Installation* section.

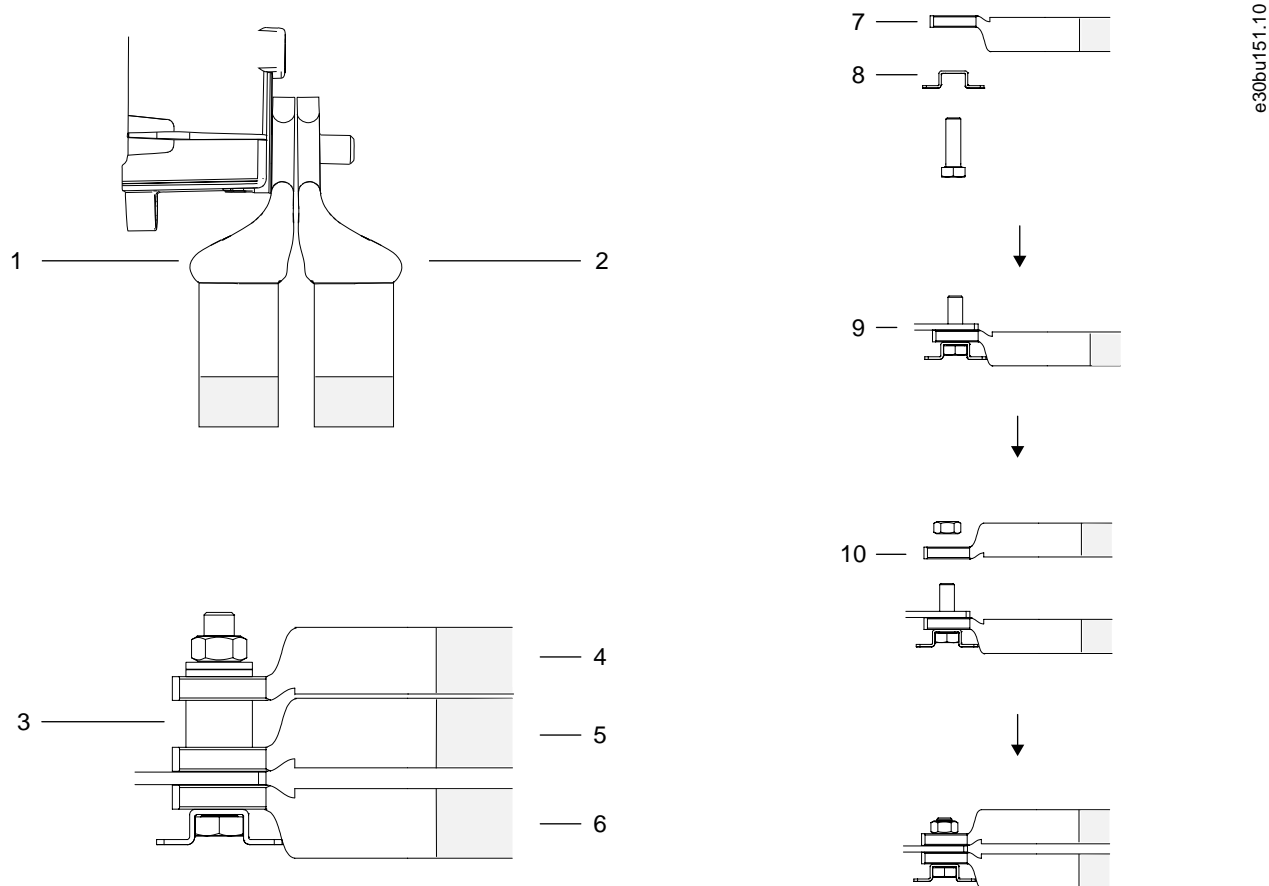


Illustration 47: Different Ways of Connecting Multiple Cables to 1 Terminal

1	Cable 1	6	Cable 3
2	Cable 2	7	Cable 1 lug
3	Connection bushing	8	Bolt holder on the connector
4	Cable 1	9	Terminal connector
5	Cable 2	10	Cable 2 lug

5.8.2 Connecting to the Mains


If the enclosed drive is not configured with an input filter or input power option, connect the mains to the drive module. Otherwise, connect the mains to the input power option.

Procedure

1. Strip a section of the outer cable insulation.
2. Fasten a connector/cable lug to the end of the stripped cable.
3. Create an electrical connection between the cable shield and ground by securing the stripped wire under the cable clamp.
4. Connect the ground wire to the nearest grounding terminal in accordance with the grounding instructions provided in [5.8.6 Connecting to Ground](#).
5. Connect the 3-phase AC input power cables to terminals R (L1), S (L2), and T (L3).

6. When supplied from an isolated mains source (IT mains or floating delta) or TT/TN-S mains with a grounded leg (grounded delta), ensure that *parameter 14-50 RFI Filter* is set to [0] Off to avoid damage to the DC link and to reduce ground capacity currents.
7. Tighten the terminals in accordance with the specifications shown in [10.11 Fastener Torque Ratings](#).


Example

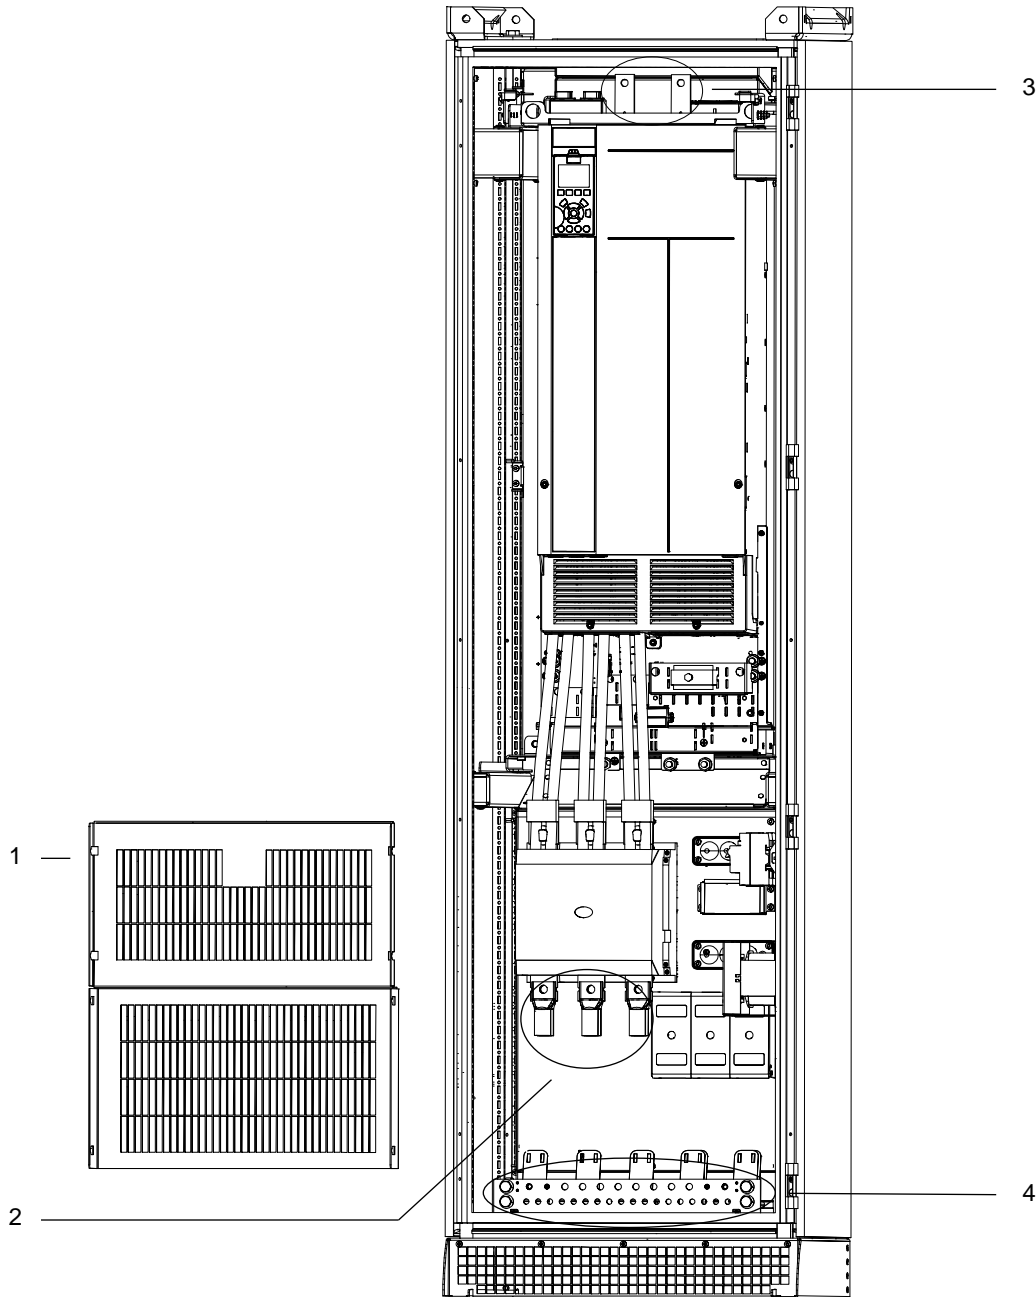

e30bu172.10

Illustration 48: Connection Points for Mains to Input Power Option (Enclosed Drive Configured Without Power Options Cabinet)

1	Lower cover	3	DC terminals
2	Input power terminals (contactor option is shown)	4	Grounding bar

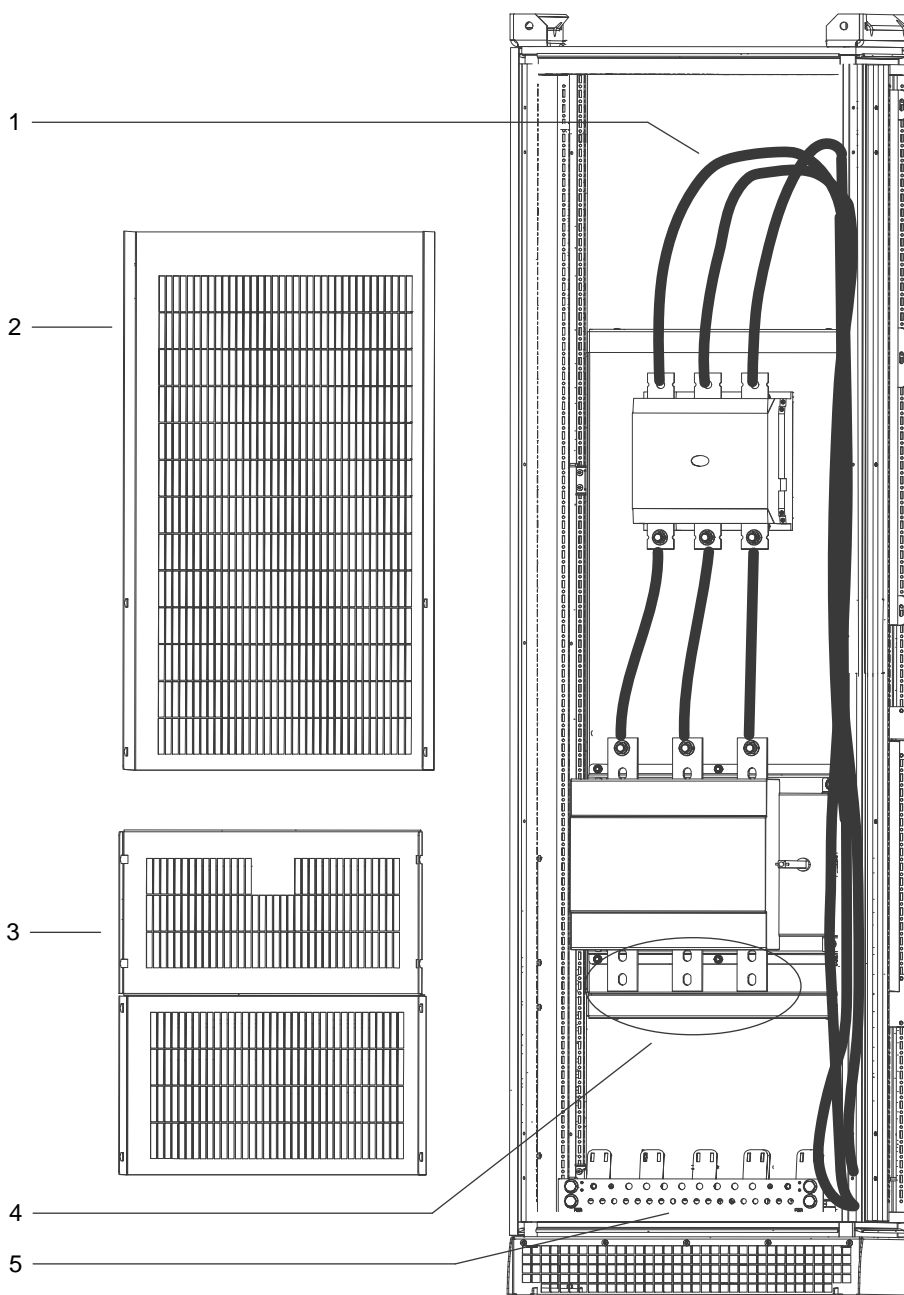

e30bu173.10

Illustration 49: Connection Points for Mains to Input Power Option (Enclosed Drive Configured With Power Options Cabinet)

1	Factory cables connecting contactor to drive input terminals	4	Input power terminals (disconnect option is shown)
2	Upper cover	5	Grounding bar
3	Lower cover		


5.8.3 Connecting the Drive Module to the Motor

Procedure

1. Strip a section of the outer cable insulation.
2. Fasten a connector/cable lug to the end of the stripped cable.
3. Create an electrical connection between the cable shield and ground by securing the stripped wire under the cable clamp.

4. Connect the ground wire to the nearest grounding terminal in accordance with the grounding instructions provided in [5.8.6 Connecting to Ground](#).
5. Connect the 3-phase AC motor cables to terminals U (T1), V (T2), and W (T3).
6. Tighten the terminals in accordance with the specifications shown in [10.11 Fastener Torque Ratings](#).

Example

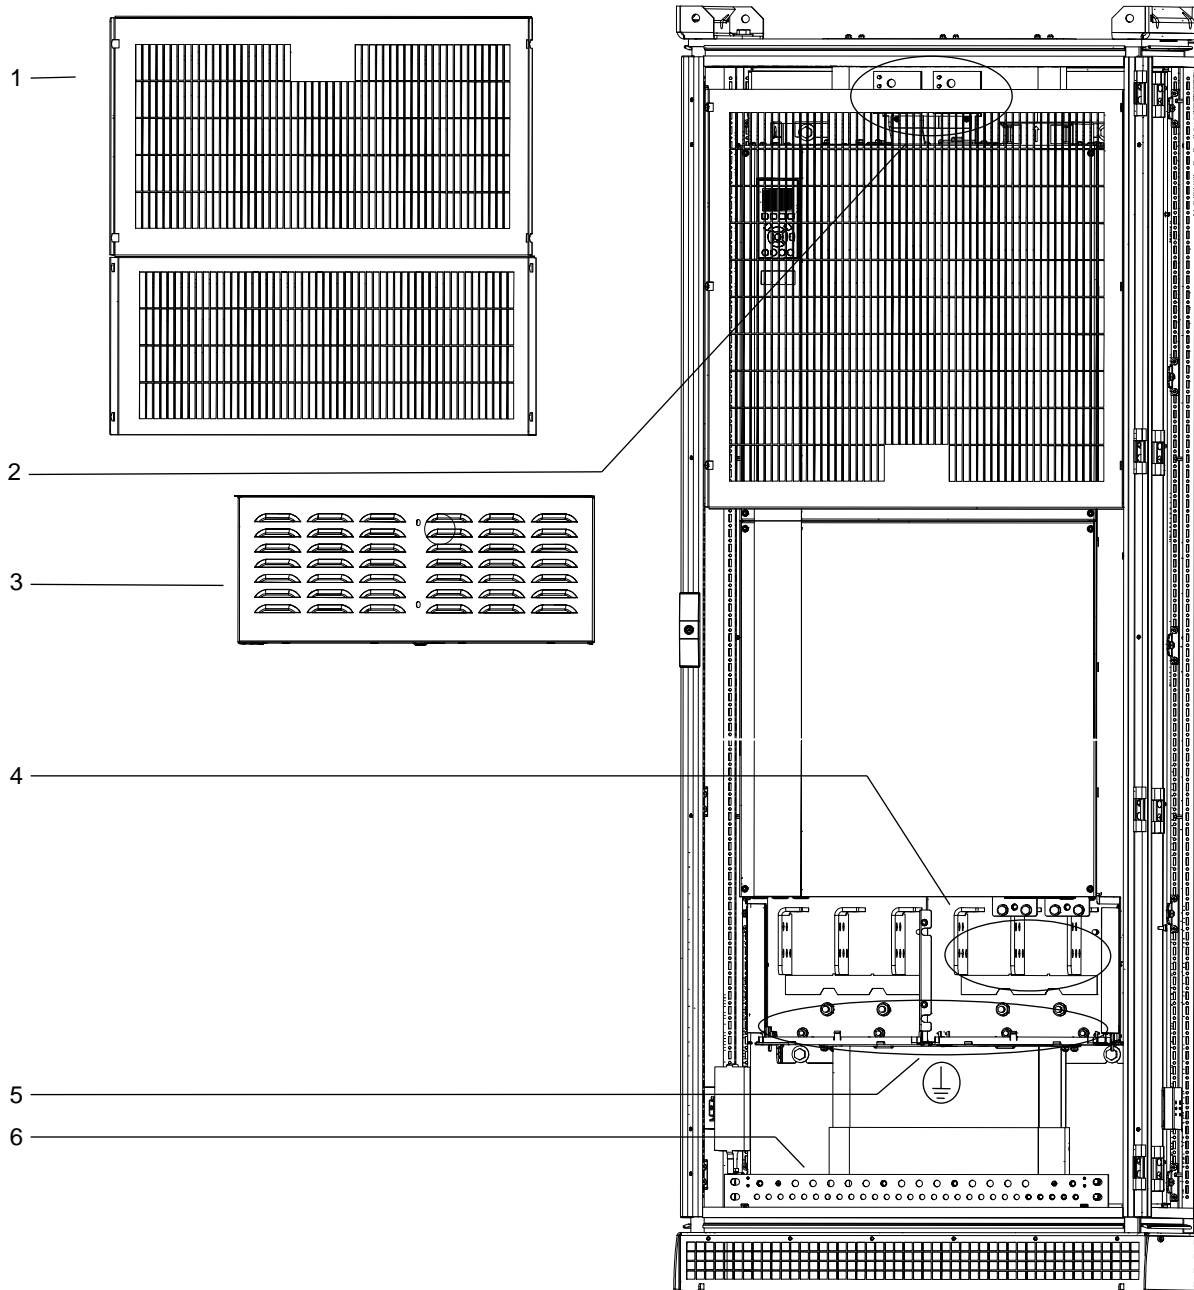

e30bu171.10

Illustration 50: Connection Points for Drive Module to Motor (E6h Model Shown)

1	Lower cover	4	Motor terminals
2	DC terminals	5	Ground terminals on drive module
3	Terminal cover	6	Grounding bar

5.8.4 Connecting the Sine-wave Filter to the Motor

Procedure


1. Strip a section of the outer cable insulation.
2. Fasten a connector/cable lug to the end of the stripped cable.
3. Create an electrical connection between the cable shield and ground by securing the stripped wire under the cable clamp.
4. Connect the ground cable to the nearest grounding terminal in accordance with the grounding instructions provided in [5.8.6 Connecting to Ground](#).
5. Connect the 3-phase AC motor cable to the sine-wave terminals U, V, and W.
 - If the enclosed drive has 1 sine-wave filter cabinet, run 1 set of motor cables to the cabinet.
 - If the enclosed drive has 2 sine-wave filter cabinets, run 2 sets of motor cables, 1 set to each sine-wave filter cabinet.

NOTICE

- Each sine-wave cabinet must have the same number of motor phase cables and they must be in quantities of 2 (for example, 2, 4, 6, or 8). 1 cable is not allowed. The cables are required to be equal length.

6. Tighten the terminals in accordance with the specifications shown in [10.11 Fastener Torque Ratings](#).

Example

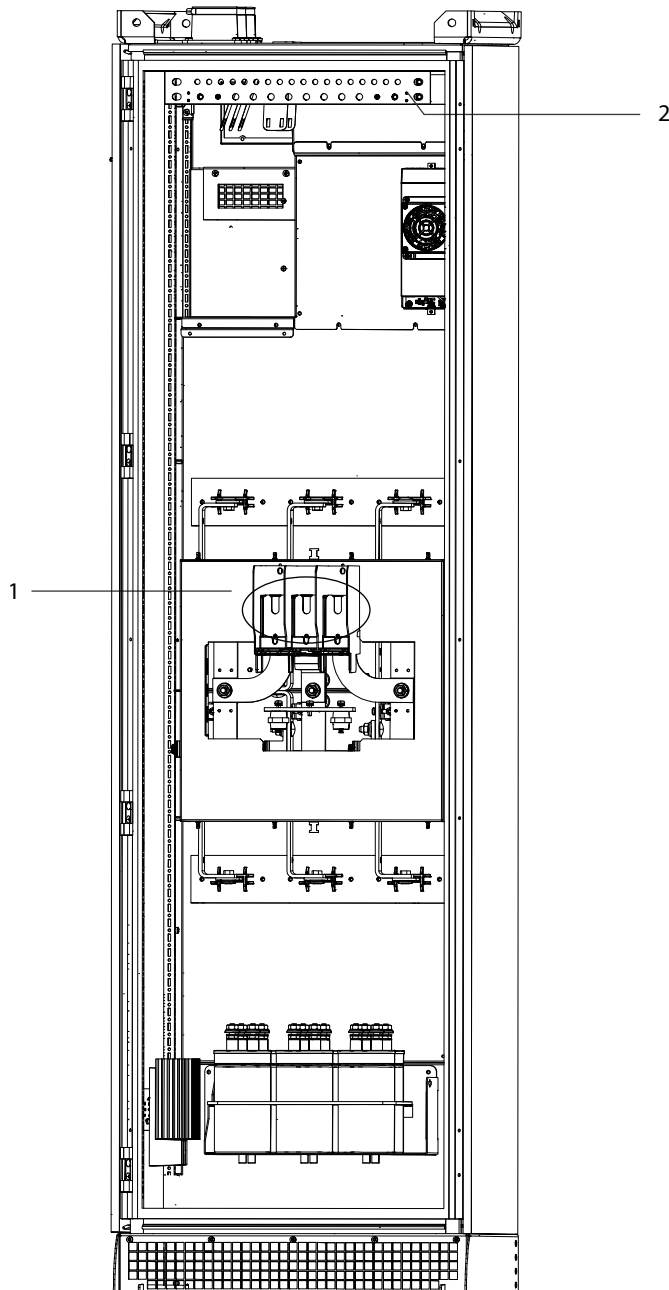

e30bu176.12

Illustration 51: Connection Points for the Sine-wave Filter to Motor (Top-exit Configuration Shown)

1	Motor terminals
2	Grounding bar


5.8.5 Connecting the dU/dt Filter to the Motor

Procedure

1. Strip a section of the outer cable insulation.
2. Fasten a connector/cable lug to the end of the stripped cable.
3. Create an electrical connection between the cable shield and ground by securing the stripped wire under the cable clamp.
4. Connect the ground cable to the nearest grounding terminal in accordance with the grounding instructions provided in [5.8.6 Connecting to Ground](#).

5. Connect the 3-phase AC motor wiring to the dU/dt terminals U (T1), V (T2), and W (T3).
6. Tighten the terminals in accordance with the specifications shown in [10.11 Fastener Torque Ratings](#).

Example

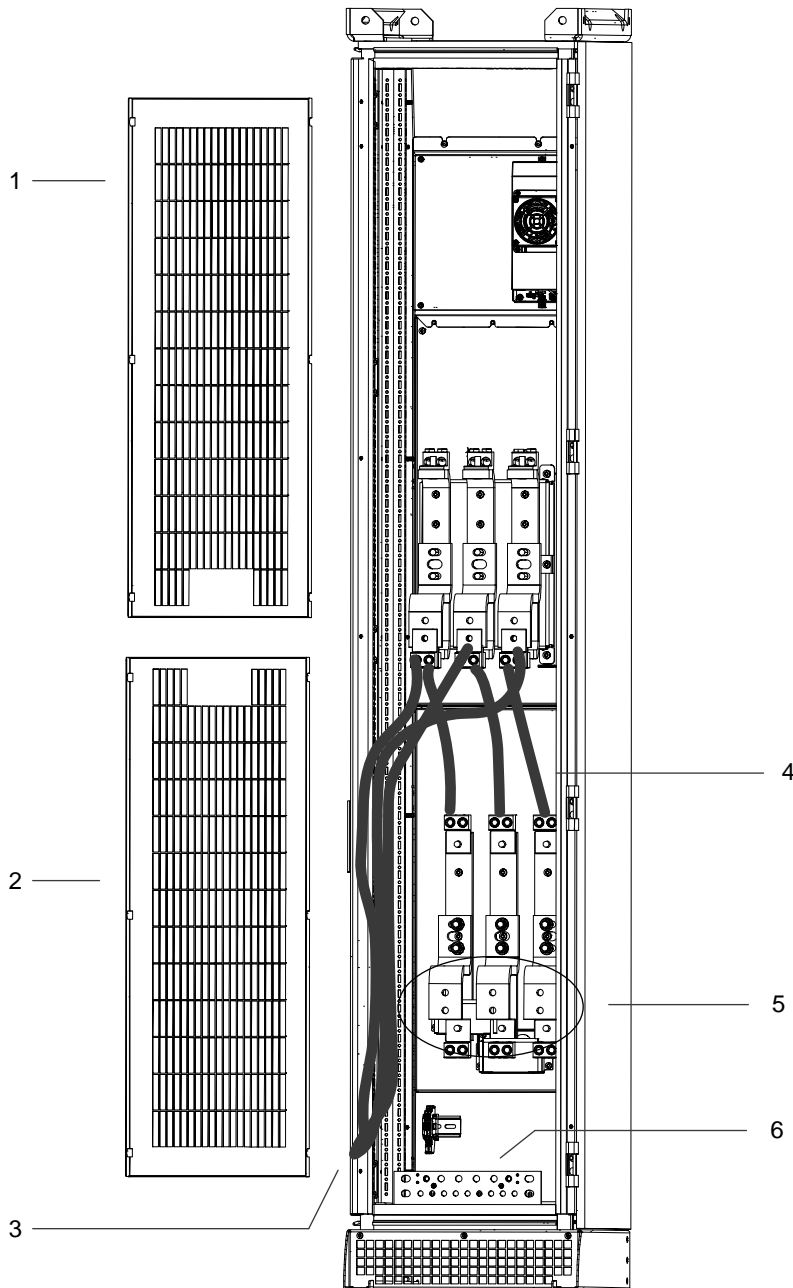

e30bu175.10

Illustration 52: Connection Points for the dU/dt Filter to Motor

1	Upper cover	4	Factory-installed cables
2	Lower cover	5	Motor terminals
3	Factory-installed power cables from the drive module	6	Grounding bar

5.8.6 Connecting to Ground

⚠ WARNING ⚠

LEAKAGE CURRENT HAZARD

Leakage currents exceed 3.5 mA. Failure to ground the drive properly can result in death or serious injury.

- Ensure the correct grounding of the equipment by a certified electrical installer.

NOTICE


POTENTIAL EQUALIZATION

There is a risk of burst transient when the ground potential between the drive and the control system is different.

- Install equalizing cables between the system components. Recommended cable cross-section: 16 mm² (5 AWG).

1. Strip a section of the outer cable insulation.
2. Fasten a connector/cable lug to the end of the stripped cable.
3. Connect the ground cable to the nearest grounding terminal.
4. Tighten the terminals in accordance with the specifications shown in [10.11 Fastener Torque Ratings](#).

Example

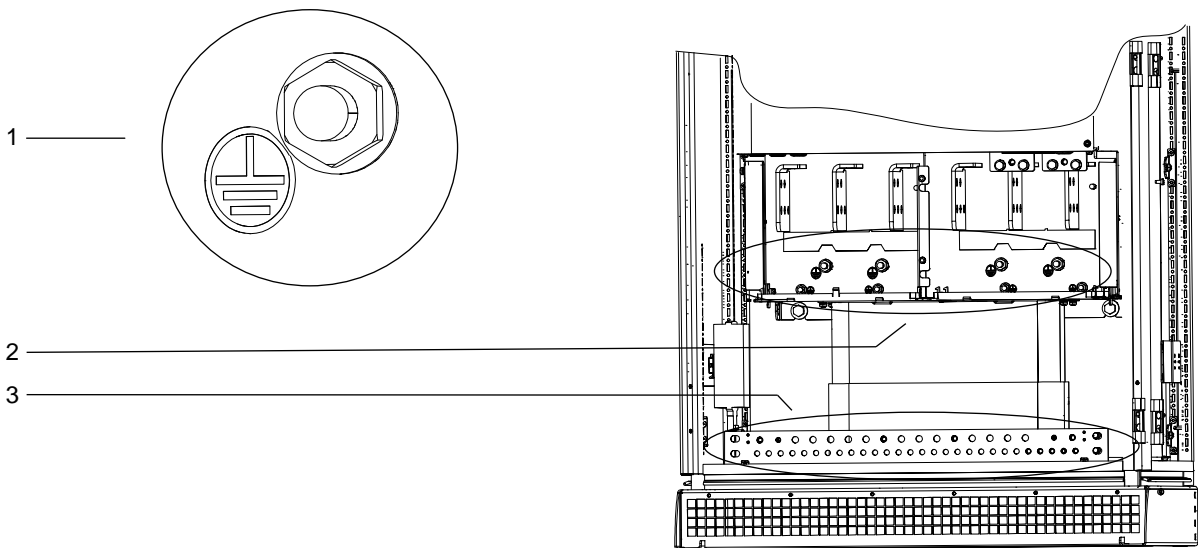

e30bu174.10

Illustration 53: Connection Grounding Points

1	Symbol indicating grounding terminals	3	Grounding bar (provided in every cabinet)
2	Grounding points on drive module		

5.9 Installing Upstream Fuses

5.9.1 Upstream Fuse Considerations

Factory fuse options like a fusible disconnect or MCCB protect the busbars and circuits within the drive. To protect the cables, an installer should use separate F1 fuses for upstream protection.

- Danfoss recommends the fuse type gG (IEC 60269-1) for the mains fuses. Use only fuses with a sufficient voltage rating according to the mains voltage. Do not use larger fuses than what is recommended. These fuses are selected for short-circuit protection only.
- Operation time of the fuse must be less than 0.4 s. The operation time must also agree with the fuse type and the impedance of the supply circuit.
- The recommended mains cable and fuse sizes are valid up to a cable length of 100 m (328 ft), with mains having a short-circuit current of 20 kA. Recommended cable sizes are shown in the *Electrical Data* section.
- Danfoss recommends the use of FC1 fuses to meet short-circuit protection for any enclosed drives supplied with only the non-fusible disconnect, a non-fusible disconnect and contactor, or a contactor only option.

5.9.2 Recommended Fuse Ratings for IEC Installation

Table 65: Recommended Fuse Ratings for IEC Installation, 380–480 V

Model	Fuse P/N	Fuse size	Rated current [A]	Minimum prospective SC current of the grid [kA]	Maximum fuse rating F1 [A]	Minimum voltage rating [V]	Type F1
N110K	Mersen NH1GG50V250	1	250	6.8	250	500	gG/gL
N132	Mersen NH2GG50V315	2	315	7	315	500	gG/gL
N160	Mersen NH2GG50V355	2	355	8.5	355	500	gG/gL
N200	Mersen NH3GG50V425	3	425	10	425	500	gG/gL
N250	Mersen NH3AGG50V630	3	630	13	630	500	gG/gL
N315	Mersen NH3AGG50V630	3	630	13	630	500	gG/gL
N355	Mersen NH4GG50V800	4	800	18	800	500	gG/gL
N400	Mersen NH4GG50V1000	4	1000	25	1000	500	gG/gL
N450	Mersen NH4GG50V1000	4	1000	25	1000	500	gG/gL
N500	Mersen NH4GG50V1000	4	1000	25	1000	500	gG/gL
N560	Mersen NH4GG50V1250	4	1250	33	1250	500	gG/gL

Table 66: Recommended Fuse Ratings for IEC Installation, 525–690 V

Model	Fuse P/N	Fuse size	Rated current [A]	Minimum prospective SC current of the grid [kA]	Maximum fuse rating F1 [A]	Minimum voltage rating [V]	Type F1
N110	Mersen NH2GG69V250	2	250	6.5	250	690	gG/gL
N132	Mersen NH2GG69V250	2	250	6.5	250	690	gG/gL
N160K	Mersen NH2GG69V250	2	250	6.5	250	690	gG/gL
N200	Mersen NH2GG69V315	2	315	7.5	315	690	gG/gL
N250	Mersen NH3GG69V355	3	355	8.5	355	690	gG/gL
N315	Mersen NH3GG69V425	3	425	9.5	425	690	gG/gL
N400	Mersen NH3GG69V500	3	500	12	500	690	gG/gL
N450	Mersen NH3GG69V500	3	500	12	500	690	gG/gL
N500	Mersen NH4GG69V630	4	630	14	630	690	gG/gL

Model	Fuse P/N	Fuse size	Rated current [A]	Minimum prospective SC current of the grid [kA]	Maximum fuse rating F1 [A]	Minimum voltage rating [V]	Type F1
N560	Mersen NH4GG69V800	4	800	19	800	690	gG/gL
N630	Mersen NH4GG69V800	4	800	19	800	690	gG/gL
N710	ABB OFAA4AM1000	4	1000	25	1000	690	aM
N800	ABB OFAA4AM1000	4	1000	25	1000	690	aM

5.9.3 Recommended Fuse Ratings for UL Installation

The fuses and MCCBs contained in the enclosed drive are suitable for both short circuit and branch circuit protection. Use only these fuses.

UL Approval is valid for maximum input voltage of 600 V. Per UL508A, the short-circuit current rating (SCCR) is as follows:

- Enclosed drives with a fusible disconnect or fusible disconnect and contactor option have 65 kA SCCR at the rated voltage.
- Enclosed drives with single switchgear (mains contactor only or non-fusible disconnect only option) have a 5 kA SCCR, but can reach 65 kA if the recommended Class fuses are used upstream.
- Enclosed drives with the MCCB option have a 65 kA interrupting rating for 380–480 V, and a 50 kA interrupting rating for 525–690 V.

The table values are calculated using correction factors for a 40 °C (104 °F) ambient operating condition and using cables with a minimum insulation rating of 90 °C (194 °F).

Table 67: Recommended Fuse Ratings for UL Installation, 380–480 V

Model	Fuse P/N (Mersen)	Fuse P/N (Danfoss)	Maximum current [A]	Maximum fuse rating F1 [A]	Minimum voltage rating [V]	Class F1
N110	A4J300	70CPE10965	300	300	500	Class J
N132	A4J350	70CPE10966	350	350	500	Class J
N160	A4J400	70CPE10522	400	400	500	Class J
N200	A4J500	70CPE10968	500	500	500	Class J
N250	A4J600	70CPE10523	600	600	500	Class J
N315	A4BY750	70CPE10969	750	750	500	Class L
N355	A4BY800	70CPE10974	800	800	500	Class L
N400	A4BY1000	70CPE10975	1000	1000	500	Class L
N450	A4BY1000	70CPE10975	1000	1000	500	Class L
N500	A4BY1100	70CPE10976	1100	1100	500	Class L
N560	A4BY1200	70CPE10977	1200	1200	500	Class L

Table 68: Recommended Fuse Ratings for UL Installation, 525–600 V

Model	Fuse P/N (Mersen)	Fuse P/N (Danfoss)	Maximum current [A]	Maximum fuse rating F1 [A]	Minimum voltage rating [V]	Class F1
N110	A4J175	70CPE10971	175	175	600	Class J
N132	A4J200	70CPE10521	200	200	600	Class J
N160	A4J250	70CPE10972	250	250	600	Class J

Model	Fuse P/N (Mersen)	Fuse P/N (Danfoss)	Maximum current [A]	Maximum fuse rating F1 [A]	Minimum voltage rating [V]	Class F1
N200	A4J350	70CPE10966	350	350	600	Class J
N250	A4J400	70CPE10522	400	400	600	Class J
N315	A4J500	70CPE10968	500	500	600	Class J
N400	A4J600	70CPE10523	600	600	600	Class J
N450	A4J600	70CPE10523	600	600	600	Class J
N500	A4BY650	70CPE110003	650	650	600	Class L
N560	A4BY750	70CPE10969	750	750	600	Class L
N630	A4BY800	70CPE10974	800	800	600	Class L
N710	A4BY1000	70CPE10975	1000	1000	600	Class L
N800	A4BY1100	70CPE10976	1100	1100	600	Class L

5.10 Enabling Motor Operation

If the status line at the bottom of the LCP reads AUTO REMOTE COAST, the unit is ready to operate but is missing an input signal from terminal XD2.14 in the control compartment. Digital input terminal XD2.14 is designed to receive a 24 V DC external interlock command that allows the drive to operate when using factory default programming values.

N O T I C E

FACTORY-INSTALLED OPTIONAL EQUIPMENT

Do not remove factory-installed wiring to terminal XD2.14. If the drive does not run, refer to the documentation for the optional equipment that is wired into terminal XD2.14.

Procedure

1. When no interlock device is used, use a push-in type jumper (WAGO 2002-433) between terminal XD2.11 and XD2.14 in the control compartment. This wire provides an internal 24 V signal on terminal XD2.14. The drive is ready for operation.

5.11 Selecting the Voltage/Current Input Signal

The analog input terminals XD2.7 and XD2.8 in the control compartment allow setting of input signal to voltage (0–10 V) or current (0/4–20 mA).

- Terminal XD2.7: Speed reference signal in open loop (see *parameter 16-61 Terminal 53 Switch Setting*).
- Terminal XD2.8: Feedback signal in closed loop (see *parameter 16-63 Terminal 54 Switch Setting*).

Procedure

1. Disconnect power to the drive.
2. Remove the LCP (local control panel).
3. Remove any optional equipment covering the switches.
4. Set switches A53 and A54 to select the signal type (U = voltage, I = current).

Example

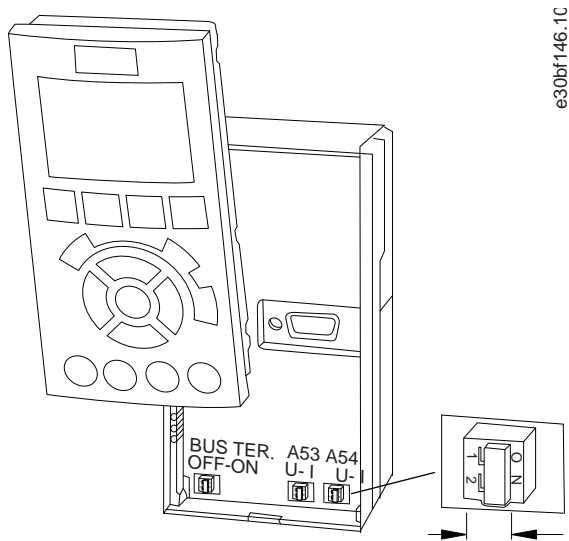


Illustration 54: Location of Switches A53 and A54

5.12 Setting Up RS485 Serial Communication

5.12.1 RS485 Features

RS485 is a 2-wire bus interface compatible with multi-drop network topology. This interface contains the following features:

- Ability to select from the following communication protocols:
 - FC, FC MC, FC option
 - Modbus RTU
 - Metasys N2
 - FLN
 - BACnet
- Functions can be programmed remotely using the protocol software and RS485 connection or in *parameter group 8-** Communications and Options*.
- Selecting a specific communication protocol changes various default parameter settings to match the specifications of the protocol, making more protocol-specific parameters available.
- Option cards for the drive are available to provide more communication protocols. See the option card documentation for installation and operation instructions.
- A switch (BUS TER) is provided on the control card for bus termination resistance.

5.12.2 Configuring RS485 Serial Communication

Procedure

1. Connect RS485 serial communication wiring to terminals (+) XD2.2 and (-) XD2.3.
 - - Use shielded serial communication cable.
 - - Properly ground the wiring. Refer to [5.8.6 Connecting to Ground](#).
2. Select the protocol type in *parameter 8-30 Protocol*.
3. Select the drive address in *parameter 8-31 Address*.
4. Select the baud rate in *parameter 8-32 Baud Rate*.

Example

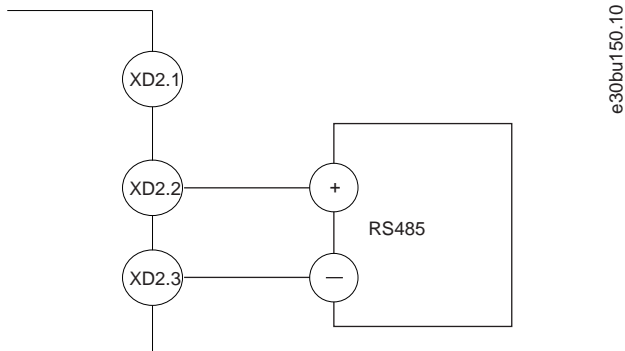


Illustration 55: RS485 Wiring Connection

5.13 Configuring the Passive Harmonic Filter (PHF)

NOTICE

EQUIPMENT DAMAGE

Failure to use the correct settings can result in the AC drive overheating, resulting in damage to the AC drive and its surroundings.

Procedure

1. Set parameter 5-02 Terminal 29 Mode to [1] Output.
2. Set parameter 5-31 Terminal 29 to [188] AHF Capacitor Connect.
3. Set parameter 14-51 DC-link Compensation to [0] Off.

5.14 Configuring the dU/dt Filter

NOTICE

EQUIPMENT DAMAGE

Failure to use the correct settings for the D9h and D10h enclosures can result in the AC drive overheating, resulting in damage to the AC drive and its surroundings. E5h and E6h enclosures are not required to use a specific setting.

Procedure

1. Set parameter 14-52 Output Filter to [3] 100%.

5.15 Configuring the Sine-wave Filter

NOTICE

EQUIPMENT DAMAGE

Failure to use the correct settings can result in the AC drive overheating, resulting in damage to the AC drive and its surroundings.

Procedure

1. Set parameter 14-55 Output Filter to [1] Sine-wave.

5.16 MCCB Configuration

The molded-case circuit breaker (MCCB) offers the following trip settings:

- **Protection against overload (L).** The drive trips when there is an overload with inverse long-time delay trip according to the IEC 60947-2 Standard ($I_2t=k$).
- **Protection against short circuit with time delay (S).** The drive trips when there is a short circuit with long inverse time-delay trip ($I_2t=k$ ON), or a constant trip time ($I_2t=k$ OFF).
- **Instant protection against short circuit (I).** The drive trips immediately if there is a short circuit. The trip function (L) is always available and either (S) or (I) can be selected by the DIP switch[S/I] on the trip unit of the MCCB.

Factory default settings are provided for functions L and I.

- Overcurrent setting (L) is done at 100% of the 1.5 times high overload FLA (I_1).
- Time delay (t_1) is selected as 12 s for 6 times of I_1 .
- Short circuit instant trip setting (I) is followed. Short circuit trip with time delay (S) is ignored with the factory settings.
- Short circuit instant trip setting (I) is targeted at 300% of the 100% normal overload FLA (I_3) of the drive.
- Neutral setting (N) is 100%.
- Frequency of operation is set at 50 Hz from the factory.

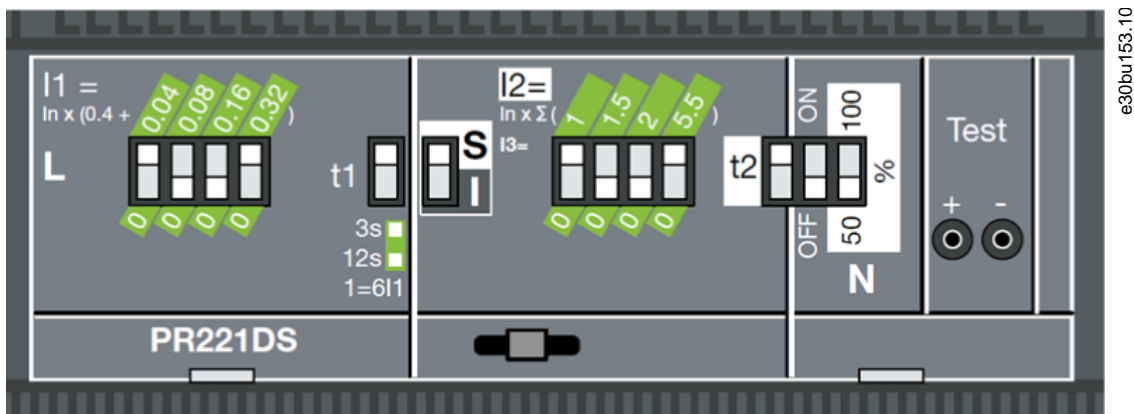


Illustration 56: MCCB Factory Default Settings

5.17 Safe Torque Off (STO) Wiring

The Safe Torque Off (STO) function is a component in a safety control system. STO prevents the unit from generating the voltage required to rotate the motor. To run the STO function, more wiring for the drive is required. Refer to the *VLT®FC Series - Safe Torque Off Operating Guide*.

6 Pre-start Check List

6.1 Pre-start Check List

Motor
<ul style="list-style-type: none"> • Confirm continuity of the motor by measuring ohm values on U–V (96–97), V–W (97–98), and W–U (98–96). • Confirm that the supply voltage matches the voltage of the drive and the motor.
Switches
<ul style="list-style-type: none"> • Ensure that all switch and disconnect settings are in the proper positions.
Auxiliary equipment
<ul style="list-style-type: none"> • Look for auxiliary equipment, switches, disconnects, or input fuses/circuit breakers that reside on the input power side of the drive or output side to the motor. Ensure that they are ready for full-speed operation. • Check function and installation of any sensors used for feedback to the drive. • Remove any power factor correction caps on motor. • Adjust any power factor correction caps on the mains side and ensure that they are dampened.
Cable/wire routing
<ul style="list-style-type: none"> • Ensure that motor wiring, brake wiring (if equipped), and control wiring are separated or shielded or in 3 separate metallic conduits for high-frequency interference isolation.
Control wiring
<ul style="list-style-type: none"> • Check for broken or damaged wires and loose connections. • Check that control wiring is isolated from high-power wiring for noise immunity. • Check the voltage source of the signals, if necessary. • Use shielded or twisted pair cable. • Ensure that the shield is terminated correctly.
Input and output power wiring
<ul style="list-style-type: none"> • Check for loose connections. • Check that motor and mains are in separate conduit or separated shielded cables.
Grounding
<ul style="list-style-type: none"> • Make sure that a proper ground is used. Grounding to conduit or mounting the back panel to a metal surface is not a suitable grounding. • Check for good ground connections that are tight and free of oxidation.
Fuses and circuit breakers
<ul style="list-style-type: none"> • Check for proper fusing or circuit breakers. • Check that all fuses are inserted firmly and are in operational condition. • Check that all circuit breakers (if used) are in the open position.
Cooling clearance

- Look for any obstructions in the airflow path.
- Measure top and bottom clearance of the drive to verify that there is at least 225 mm (9 in) of clearance for adequate airflow.

Ambient conditions

- Check that requirements for ambient conditions are met. See the *Ambient Conditions* section.

Interior of drive

- Inspect that the unit interior is free of dirt, metal chips, moisture, and corrosion.
- Verify that all installation tools have been removed from unit interior.
- For enclosures with an IP20/Chassis protection rating, ensure that the unit is mounted to an unpainted metal surface.

Vibration

- Ensure that the unit is mounted solidly, or that shock mounts are used, if necessary.
- Check for an unusual amount of vibration.

7 Commissioning

7.1 Applying Power to the Drive

Before applying power to the drive, verify that the drive and any associated equipment is ready for operation. Refer to the *Pre-start Checklist* section.

⚠ WARNING ⚠

UNINTENDED START

When the drive is connected to the AC mains, DC supply, or load sharing, the motor may start at any time, causing risk of death, serious injury, and equipment, or property damage. The motor may start by activation of an external switch, a fieldbus command, an input reference signal from the LCP or LOP, via remote operation using MCT 10 Set-up software, or after a cleared fault condition.

- Press [Off] on the LCP before programming parameters.
- Disconnect the drive from the mains whenever personal safety considerations make it necessary to avoid unintended motor start.
- Check that the drive, motor, and any driven equipment is in operational readiness.

N O T I C E

MISSING SIGNAL

If the status line at the bottom of the LCP reads AUTO REMOTE COASTING, or if *alarm 60, External interlock* is shown, it indicates that the unit is ready to operate but is missing an input signal on, for example, terminal 27.

- See [5.10 Enabling Motor Operation](#) for details.

Procedure

1. Confirm that the input voltage is balanced within 3%. If not balanced, correct the input voltage imbalance before proceeding. Repeat this procedure after the voltage correction.
2. Ensure that any optional equipment wiring matches the installation requirements.
3. Ensure that all operator devices are in the OFF position.
4. Close and securely fasten all covers and doors on the drive.
5. Apply power to the unit, but do not start the drive. For units with a disconnect switch, turn the switch to the ON position to apply power to the drive.

7.2 Programming the Drive

7.2.1 Parameter Overview

Parameters contain various settings that are used to configure and operate the drive and motor. These parameter settings are programmed into the local control panel (LCP) through the different LCP menus. For more detail on parameters, see the Programming Guide.

Parameter settings are assigned a default value at the factory, but can be configured for their unique application. Each parameter has a name and number that remain the same regardless of the programming mode.

In the *Main Menu* mode, the parameters are divided into groups. The 1st digit of the parameter number (from the left) indicates the parameter group number. The parameter group is then broken down into subgroups, if necessary. For example:

Table 69: Example of Parameter Group Hierarchy

Example	Description
0-** Operation/Display	Parameter group
0-0* Basic Settings	Parameter subgroup
Parameter 0-01 Language	Parameter
Parameter 0-02 Motor Speed Unit	Parameter

Example	Description
<i>Parameter 0-03 Regional Settings</i>	Parameter

7.2.2 Parameter Navigation

Use the following LCP keys to navigate through the parameters.

- Press [▲] [▼] to scroll up or down.
- Press [◀] [▶] to shift a space to the left or right of a decimal point while editing a decimal parameter value.
- Press [OK] to accept the change.
- Press [Cancel] to disregard the change and exit edit mode.
- Press [Back] twice to show the status view.
- Press [Main Menu] once to go back to the main menu.

7.2.3 Programming Example for an Open-loop Application

This procedure, which is used to configure a typical open-loop application, programs the drive to receive a 0–10 V DC analog control signal on input terminal 53. The drive responds by providing 20–50 Hz output to the motor proportional to the input signal (0–10 V DC=20–50 Hz). The wiring connections used to enable the external device set-up are shown in [Illustration 57](#).

Procedure

1. Press [Quick Menu].
2. Select Q3 Function Setups and press [OK].
3. Select Parameter Data Set and press [OK].
4. Select Q3-2 Open Loop Settings and press [OK].
5. Select Q3-21 Analog Reference and press [OK].
6. Select *parameter 3-02 Minimum Reference*. Set the minimum internal drive reference to 0 Hz and press [OK].
7. Select *parameter 3-03 Maximum Reference*. Set the maximum internal drive reference to 60 Hz and press [OK].
8. Select *parameter 6-10 Terminal 53 Low Voltage*. Set the minimum external voltage reference on terminal 53 at 0 V and press [OK].
9. Select *parameter 6-11 Terminal 53 High Voltage*. Set maximum external voltage reference on terminal 53 at 10 V and press [OK].
10. Select *parameter 6-14 Terminal 53 Low Ref./Feedb. Value*. Set minimum speed reference on terminal 53 at 20 Hz and press [OK].
11. Select *parameter 6-15 Terminal 53 High Ref./Feedb. Value*. Set maximum speed reference on terminal 53 at 50 Hz and press [OK].

➡ With an external device providing a 0–10 V control signal connected to drive terminal 53, the system is now ready for operation.

NOTICE

SET-UP STATUS

When the scroll bar on the right of the display is at the bottom, the procedure is complete.

Example

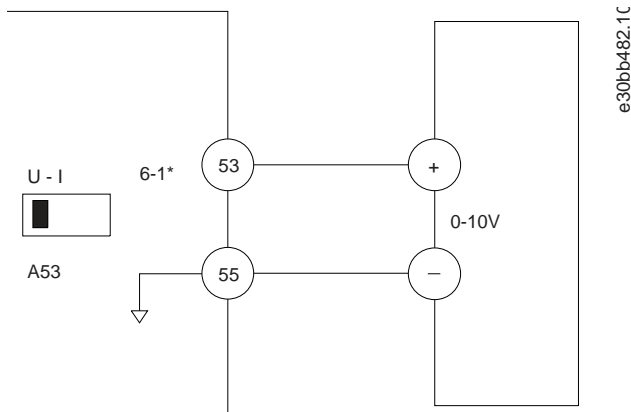


Illustration 57: Wiring Example for External Device Providing 0–10 V Control Signal

7.2.4 Entering System Information

The following steps are used to enter basic system information into the drive. Recommended parameter settings are intended for start-up and checkout purposes. Application settings vary.

Although these steps assume that an induction motor is used, a permanent magnet motor can also be used. For more information on specific motor types, see the product-specific Programming Guide.

N O T I C E

SOFTWARE DOWNLOAD

For commissioning via a PC, install VLT® Motion Control Tool MCT 10 set-up software. A basic version, which is sufficient for most applications, is available for download. An advanced version, which can commission multiple drives at once, can be ordered.

- See https://www.danfoss.com/en/service-and-support/downloads/?sort=title_asc&filter=download-type%3Dtools.

Procedure

1. Press [Main Menu] on the LCP.
2. Select *0-** Operation/Display* and press [OK].
3. Select *0-0* Basic Settings* and press [OK].
4. Select *parameter 0-03 Regional Settings* and press [OK].
5. Select *[0] International* or *[1] North America* as appropriate and press [OK]. (This action changes the default settings for some basic parameters).
6. Press [Quick Menus] on the LCP and then select *02 Quick Setup*.
7. If needed, change the following parameter settings. Motor data is found on the motor nameplate.
 - a. *Parameter 0-01 Language* (English)
 - b. *Parameter 1-20 Motor Power [kW]* (4.00 kW)
 - c. *Parameter 1-22 Motor Voltage* (400 V)
 - d. *Parameter 1-23 Motor Frequency* (50 Hz)
 - e. *Parameter 1-24 Motor Current* (9.00 A)
 - f. *Parameter 1-25 Motor Nominal Speed* (1420 RPM)
 - g. *Parameter 5-12 Terminal 27 Digital Input* (Coast Inverse)
 - h. *Parameter 3-02 Minimum Reference* (0.000 RPM)
 - i. *Parameter 3-03 Maximum Reference* (1500.000 RPM)
 - j. *Parameter 3-41 Ramp 1 Ramp up Time* (3.00 s)
 - k. *Parameter 3-42 Ramp 1 Ramp Down Time* (3.00 s)
 - l. *Parameter 3-13 Reference Site* (Linked to Hand/Auto)
 - m. *Parameter 1-29 Automatic Motor Adaptation (AMA)* (Off)

7.2.5 Configuring Automatic Energy Optimization

Automatic energy optimization (AEO) is a procedure that minimizes voltage to the motor, reducing energy consumption, heat, and noise.

Procedure

1. Press [Main Menu].
2. Select *1-** Load and Motor* and press [OK].
3. Select *1-0* General Settings* and press [OK].
4. Select *parameter 1-03 Torque Characteristics* and press [OK].
5. Select either *[2] Auto Energy Optim CT* or *[3] Auto Energy Optim VT* and press [OK].

7.2.6 Configuring Automatic Motor Adaptation

Automatic motor adaptation (AMA) is a procedure that optimizes compatibility between the drive and the motor.

The drive builds a mathematical model of the motor for regulating output motor current. The procedure also tests the input phase balance of electrical power. It compares the motor characteristics with the data entered in *parameters 1-20 to 1-25*.

N O T I C E

SOME MOTORS ARE UNABLE TO RUN THE COMPLETE VERSION OF THE TEST AND WILL TRIGGER AN ALARM.

- In that case, or if an output filter is connected to the motor, select *[2] Enable reduced AMA*.

Procedure

1. Press [Main Menu].
2. Select *1-** Load and Motor* and press [OK].
3. Select *1-2* Motor Data* and press [OK].
4. Select *parameter 1-29 Automatic Motor Adaptation (AMA)* and press [OK].
5. Select *[1] Enable complete AMA* and press [OK].
6. Press [Hand On] and then [OK].

The test runs automatically and indicates when it is complete.

7.3 Testing Before System Start-up

7.3.1 Testing Motor Rotation

N O T I C E

INCORRECT MOTOR ROTATION

If the motor runs in the wrong direction, it can damage equipment.

- Before running the unit, check the motor rotation by briefly running the motor.

Procedure

1. Press [Hand On].
2. Move the left cursor to the left of the decimal point by using the left arrow key.
3. Enter an RPM that slowly rotates the motor and press [OK].

The motor runs briefly at either 5 Hz or the minimum frequency set in *parameter 4-12 Motor Speed Low Limit [Hz]*.

4. If the motor rotation is wrong, set *parameter 1-06 Clockwise Direction* to *[1] Inverse*.

7.3.2 Testing Encoder Rotation

Use this procedure if encoder feedback is used. For more information on the encoder option, refer to the option manual.

Procedure

1. Select *[0] Open Loop* in *parameter 1-00 Configuration Mode*.

2. Select [1] 24 V encoder in *parameter 7-00 Speed PID Feedback Source*.
3. Press [Hand On].
4. Press [▶] for positive speed reference (*parameter 1-06 Clockwise Direction* at [0] Normal).
5. Check feedback in *parameter 16-57 Feedback [RPM]*.
 - If feedback is positive, the test was successful.
 - If feedback is negative, the encoder connection is wrong. Use either *parameter 5-71 Term 32/33 Encoder Direction* or *parameter 17-60 Feedback Direction* to inverse the direction, or reverse the encoder cables. *Parameter 17-60 Feedback Direction* is only available with the VLT® Encoder Input MCB 102 option.

7.4 Starting Up the Drive for the First Time

The procedure in this section requires user-wiring and application programming to be completed. The following procedure is recommended after application setup is completed.

⚠ W A R N I N G ⚠

MOTOR START

Starting the drive can cause the motor to start. Failure to ensure that the motor, system, and any attached equipment are ready for start can result in personal injury or equipment damage.

- Ensure that equipment is safe to operate under any condition.
- Ensure that the motor, system, and any attached equipment are ready for start.

1. Press [Auto On].

If warnings or alarms occur, see the *Warnings and Alarms* section.

2. Apply an external run command. Examples of external run commands are a switch, button, or programmable logic controller (PLC).
3. Adjust the speed reference throughout the speed range.
4. Ensure that the system is working as intended by checking the sound and vibration levels of the motor.
5. Remove the external run command.

7.5 Parameter Settings

7.5.1 Parameter Setting Overview

Parameters are operational settings accessed through the LCP that are used to configure and operate the drive and motor for specific applications.

Some parameters have different default settings for international or North America. For a list of the different default values, see the *International/North American Default Parameter Settings* section.

Parameter settings are stored internally in the drive, allowing the following advantages:

- Parameter settings can be uploaded into the LCP memory and stored as a back-up.
- Multiple units can be programmed quickly by connecting the LCP to the unit and downloading the stored parameter settings.
- Settings that are stored in the LCP are not changed when restoring factory default settings.
- Changes made to default settings and parameter variables are stored and available for viewing in the quick menu. See the *LCP Menu* section.

7.5.2 Uploading and Downloading Parameter Settings

The drive operates using parameters stored on the control card, which is located within the drive. The upload and download functions move the parameters between the control card and the LCP.

Procedure

1. Press [Off].
2. Go to *parameter 0-50 LCP Copy* and press [OK].
3. Select 1 of the following:
 - To upload data from the control card to the LCP, select [1] *All to LCP*.

- - To download data from the LCP to the control card, select [2] *All from LCP*.
4. Press [OK].

A progress bar shows the uploading or downloading process.

5. Press [Hand On] or [Auto On].

7.5.3 Restoring Factory Default Settings Using the Recommended Initialization

N O T I C E

LOSS OF DATA

Restoring default settings results in a loss of programming, motor data, localization, and monitoring records.

- To create a back-up, upload data to the LCP before initialization. See [7.5.2 Uploading and Downloading Parameter Settings](#).

1. Press [Main Menu] twice to access parameters.
2. Go to *parameter 14-22 Operation Mode* and press [OK].

Parameter 14-22 Operation Mode does not reset the following settings:

- Running hours.
- Serial communication options.
- Personal menu settings.
- Fault log, alarm log, and other monitoring functions.

3. Scroll to Initialization and press [OK].
4. Remove power to the unit and wait for the display to turn off.
5. Apply power to the unit. Default parameter settings are restored during start-up. Start-up takes slightly longer than normal.
6. After *alarm 80, Drive initialized* appears, press [Reset].

7.5.4 Restoring Factory Default Settings Using Manual Initialization

N O T I C E

LOSS OF DATA

Restoring default settings results in a loss of programming, motor data, localization, and monitoring records.

- To create a back-up, upload data to the LCP before initialization. See [7.5.2 Uploading and Downloading Parameter Settings](#).

Procedure

1. Remove power to the unit and wait for the display to turn off.
2. Press and hold [Status], [Main Menu], and [OK] simultaneously while applying power to the unit (approximately 5 s or until an audible click sounds and the fan starts).

Manually initializing does not reset the following parameter settings:

- *Parameter 15-00 Operating Hours*
- *Parameter 15-03 Power Up's*
- *Parameter 15-04 Over Temp's*
- *Parameter 15-05 Over Volt's*

Start-up takes slightly longer than normal.

8 Wiring Configuration Examples

8.1 Application Examples

The examples in this section are intended as a quick reference for common applications.

- Parameter settings are the regional default values selected in *parameter 0-03 Regional Settings*, unless otherwise indicated.
- Parameters associated with the terminals and their settings are shown next to the drawings.
- Required switch settings for analog terminals A53 or A54 are also shown.

8.1.1 Wiring Configuration for Automatic Motor Adaptation (AMA)

Table 70: Wiring Configuration for AMA with T27 Connected

		Parameters	
	e30bu099.10	Function	Setting
		Parameter 1-29 Automatic Motor Adaptation (AMA)	[1] Enable complete AMA
		Parameter 5-12 Terminal 27 Digital Input	[2]* Coast inverse
		*=Default value	
		Notes/comments: Set <i>parameter group 1-2* Motor Data</i> according to motor nameplate. Terminal 27 in the parameter title corresponds to terminal XD2.14 in the control compartment.	

8.1.2 Wiring Configuration for Automatic Motor Adaptation (AMA) without T27

Table 71: Wiring Configuration for AMA without T27 Connected

		Parameters	
	e30bu091.10	Function	Setting
		Parameter 1-29 Automatic Motor Adaptation (AMA)	[1] Enable complete AMA
		Parameter 5-12 Terminal 27 Digital Input	[0] No operation
		*=Default value	
		Notes/comments: Set <i>parameter group 1-2* Motor Data</i> according to motor nameplate. Terminal 27 in the parameter title corresponds to terminal XD2.14 in the control compartment.	

8.1.3 Wiring Configuration: Speed

Table 72: Wiring Configuration for Analog Speed Reference (Voltage)

Parameters	
Function	Setting
Parameter 6-10 Terminal 53 Low Voltage	0.07 V*
Parameter 6-11 Terminal 53 High Voltage	10 V*
Parameter 6-14 Terminal 53 Low Ref./Feedb. value	0 Hz
Parameter 6-15 Terminal 53 High Ref./Feedb. Value	50 Hz
*=Default value	
Notes/comments: D IN 37 is an option. Terminal 53 in the parameter title corresponds to terminal XD2.7 in the control compartment.	


Table 73: Wiring Configuration for Analog Speed Reference (Current)

Parameters	
Function	Setting
Parameter 6-12 Terminal 53 Low Current	4 mA*
Parameter 6-13 Terminal 53 High Current	20 mA*
Parameter 6-14 Terminal 53 Low Ref./Feedb. value	0 Hz
Parameter 6-15 Terminal 53 High Ref./Feedb. Value	50 Hz
*=Default value	
Notes/comments: D IN 37 is an option. Terminal 53 in the parameter title corresponds to terminal XD2.7 in the control compartment.	

Table 74: Wiring Configuration for Speed Reference (Using a Manual Potentiometer)

Parameters	
Function	Setting
Parameter 6-10 Terminal 53 Low Voltage	0.07 V*
Parameter 6-11 Terminal 53 High Voltage	10 V*
Parameter 6-14 Terminal 53 Low Ref./Feedb. value	0 Hz
Parameter 6-15 Terminal 53 High Ref./Feedb. Value	50 Hz
*=Default value	
Notes/comments: D IN 37 is an option. Terminal 53 in the parameter title corresponds to terminal XD2.7 in the control compartment.	

Table 75: Wiring Configuration for Speed Up/Down

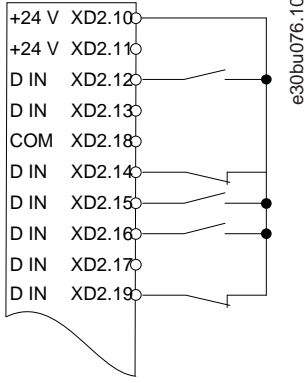	Parameter	
	Function	Setting
	Parameter 5-10 Terminal 18 Digital Input	[8] Start*
	Parameter 5-12 Terminal 27 Digital Input	[19] Freeze Reference
	Parameter 5-13 Terminal 29 Digital Input	[21] Speed Up
	Parameter 5-14 Terminal 32 Digital Input	[22] Speed Down
	* = Default value	
	Notes/comments: D IN 37 is an option. Terminal 18 in the parameter title corresponds to terminal XD2.12 in the control compartment. Terminal 27 in the parameter title corresponds to terminal XD2.14 in the control compartment. Terminal 29 in the parameter title corresponds to terminal XD2.15 in the control compartment. Terminal 32 in the parameter title corresponds to terminal XD2.16 in the control compartment.	

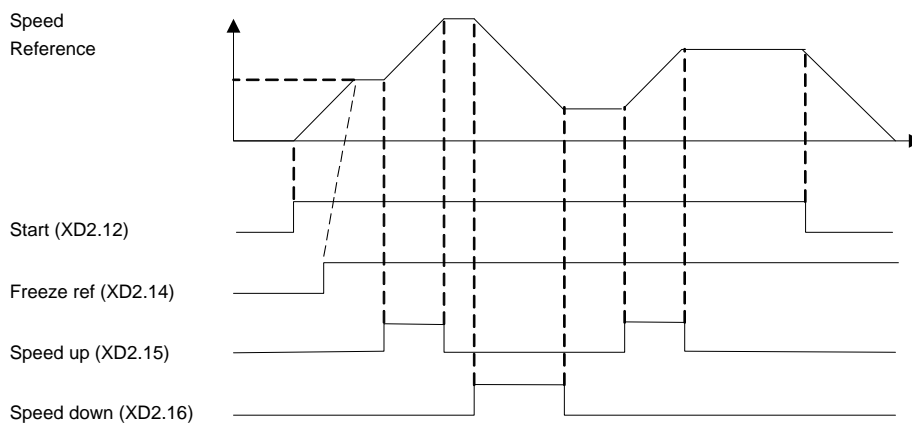


Illustration 58: Speed Up/Down

8.1.4 Wiring Configuration: Feedback

Table 76: Wiring Configuration for Analog Current Feedback Transducer (2-wire)

		Parameters	
		Function	Setting
<p style="text-align: center;">e30bu078.10</p> <p style="text-align: center;">4-20 mA</p> <p style="text-align: center;">U - I A54</p>	Parameter 6-22 Terminal 54 Low Current	4 mA*	
	Parameter 6-23 Terminal 54 High Current	20 mA*	
	Parameter 6-24 Terminal 54 Low Ref./Feedb. value	0*	
	Parameter 6-25 Terminal 54 High Ref./Feedb. Value	50*	
	* = Default value		
Notes/comments: D IN 37 is an option. Terminal 54 in the parameter title corresponds to terminal XD2.8 in the control compartment.			

Table 77: Wiring Configuration for Analog Voltage Feedback Transducer (3-wire)

		Parameters	
		Function	Setting
<p style="text-align: center;">e30bu079.10</p> <p style="text-align: center;">0-10 V</p> <p style="text-align: center;">U - I A54</p>	Parameter 6-20 Terminal 54 Low Voltage	0.07 V*	
	Parameter 6-21 Terminal 54 High Voltage	10 V*	
	Parameter 6-24 Terminal 54 Low Ref./Feedb. value	0*	
	Parameter 6-25 Terminal 54 High Ref./Feedb. Value	50*	
	* = Default value		
Notes/comments: D IN 37 is an option. Terminal 54 in the parameter title corresponds to terminal XD2.8 in the control compartment.			

Table 78: Wiring Configuration for Analog Voltage Feedback Transducer (4-wire)

Parameters		
	Function	
	<i>Parameter 6-20 Terminal 54 Low Voltage</i>	0.07 V*
	<i>Parameter 6-21 Terminal 54 High Voltage</i>	10 V*
	<i>Parameter 6-24 Terminal 54 Low Ref./Feedb. value</i>	0*
	<i>Parameter 6-25 Terminal 54 High Ref./Feedb. Value</i>	50*
*=Default value		
Notes/comments: D IN 37 is an option. Terminal 54 in the parameter title corresponds to terminal XD2.8 in the control compartment.		

8.1.5 Wiring Configuration: Run/Stop

Table 79: Wiring Configuration for Run/Stop Command with External Interlock

Parameter		
	Function	
	<i>Parameter 5-10 Terminal 18 Digital Input</i>	[8] Start*
	<i>Parameter 5-12 Terminal 27 Digital Input</i>	[7] External interlock
*=Default value		
Notes/comments: D IN 37 is an option. Terminal 18 in the parameter title corresponds to terminal XD2.12 in the control compartment. Terminal 27 in the parameter title corresponds to terminal XD2.14 in the control compartment.		

Table 80: Wiring Configuration for Run/Stop Command without External Interlock

	Parameter	
	Function	Setting
	Parameter 5-10 Terminal 18 Digital Input	[8] Start*
	Parameter 5-12 Terminal 27 Digital Input	[7] External interlock
	*=Default value	
	Notes/comments: If parameter 5-12 Terminal 27 Digital Inputs is set to [0] No operation, a jumper wire to terminal XD2.14 is not needed. D IN 37 is an option. Terminal 18 in the parameter title corresponds to terminal XD2.12 in the control compartment. Terminal 27 in the parameter title corresponds to terminal XD2.14 in the control compartment.	


Table 81: Wiring Configuration for Run Permissive

	Parameter	
	Function	Setting
	Parameter 5-10 Terminal 18 Digital Input	[8] Start*
	Parameter 5-11 Terminal 19 Digital Input	[52] Run permissive
	Parameter 5-12 Terminal 27 Digital Input	[7] External interlock
	Parameter 5-40 Function Relay	[167] Start command act.
	*=Default value	
	Notes/comments: D IN 37 is an option. Terminal 18 in the parameter title corresponds to terminal XD2.12 in the control compartment. Terminal 19 in the parameter title corresponds to terminal XD2.13 in the control compartment. Terminal 27 in the parameter title corresponds to terminal XD2.14 in the control compartment.	

8.1.6 Wiring Configuration: Start/Stop

Table 82: Wiring Configuration for Start/Stop Command with Safe Torque Off Option

Parameter	
Function	Setting
Parameter 5-10 Terminal 18 Digital Input	[Start]*
Parameter 5-12 Terminal 27 Digital Input	[0] No operation
Parameter 5-19 Terminal 37 Safe Stop	[1] Safe Stop Alarm
* = Default value	
Notes/comments: If parameter 5-12 Terminal 27 Digital Input is set to [0] No operation, a jumper wire to terminal XD2.14 is not needed. D IN 37 is an option. Terminal 18 in the parameter title corresponds to terminal XD2.12 in the control compartment. Terminal 27 in the parameter title corresponds to terminal XD2.14 in the control compartment. Terminal 37 in the parameter title corresponds to terminal XD2.19 in the control compartment.	

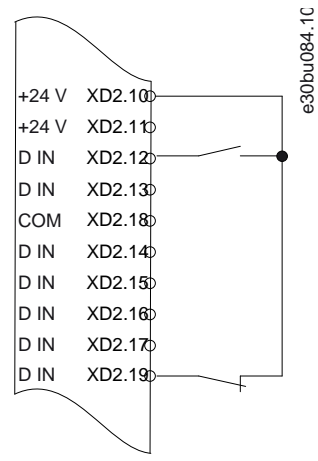



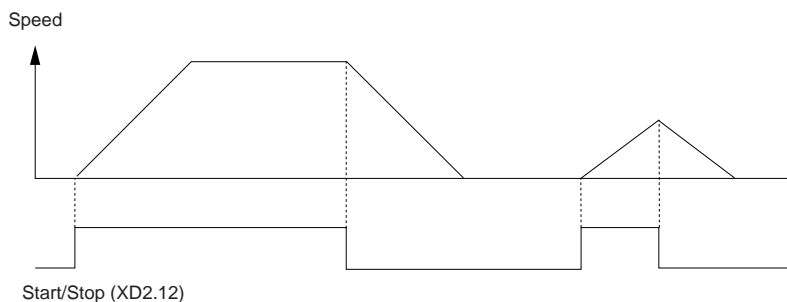


Illustration 59: Wiring Configuration for Start/Stop Command with Safe Torque Off

Table 83: Wiring Configuration for Pulse Start/Stop

Parameter	
Function	Setting
Parameter 5-10 Terminal 18 Digital Input	[9] Latched Start
Parameter 5-12 Terminal 27 Digital Input	[6] Stop Inverse
* = Default value	
Notes/comments: If parameter 5-12 Terminal 27 Digital Input is set [0] No operation, a jumper wire to terminal XD2.14 is not needed. D IN 37 is an option. Terminal 18 in the parameter title corresponds to terminal XD2.12 in the control compartment. Terminal 27 in the parameter title corresponds to terminal XD2.14 in the control compartment.	

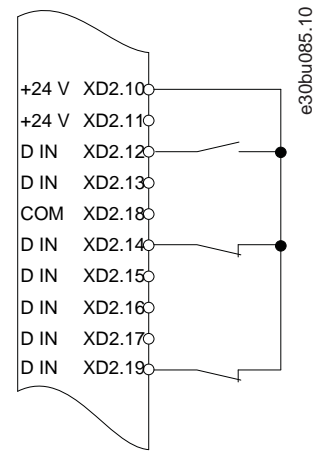

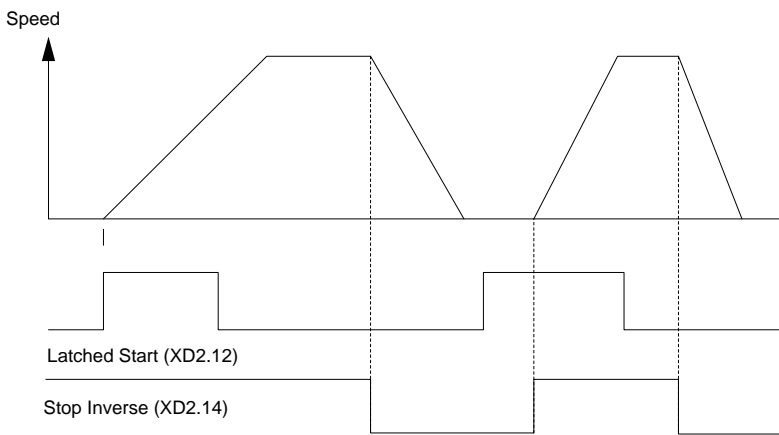

e130bu087.10

Illustration 60: Latched Start/Stop Inverse

Table 84: Wiring Configuration for Start/Stop with Reversing and 4 Preset Speeds

		Parameters	
	<p>e30bu086.10</p>	Function	Setting
		Parameter 5-10 Terminal 18 Digital Input	[8] Start
		Parameter 5-11 Terminal 19 Digital Input	[10] Reversing*
		Parameter 5-12 Terminal 27 Digital Input	[0] No operation
		Parameter 5-14 Terminal 32 Digital Input	[16] Preset ref bit 0
		Parameter 5-15 Terminal 33 Digital Input	[17] Preset ref bit 1
		Parameter 3-10 Preset Reference	<ul style="list-style-type: none"> • Preset ref. 0 = 25% • Preset ref. 1 = 50% • Preset ref. 2 = 75% • Preset ref. 3 = 100%
<p>*=Default value</p> <p>Notes/comments: D IN 37 is an option. Terminal 18 in the parameter title corresponds to terminal XD2.12 in the control compartment. Terminal 19 in the parameter title corresponds to terminal XD2.13 in the control compartment. Terminal 27 in the parameter title corresponds to terminal XD2.14 in the control compartment. Terminal 32 in the parameter title corresponds to terminal XD2.16 in the control compartment. Terminal 33 in the parameter title corresponds to terminal XD2.17 in the control compartment.</p>			

8.1.7 Wiring Configuration: External Alarm Reset

Table 85: Wiring Configuration for External Alarm Reset

	Parameter	
	Function	Setting
	<i>Parameter 5-11 Terminal 19 Digital Input</i>	[1] Reset
	* = Default value	
	Notes/comments: D IN 37 is an option. Terminal 19 in the parameter title corresponds to terminal XD2.13 in the control compartment.	

8.1.8 Wiring Configuration: RS485

Table 86: Wiring Configuration for RS485 Network Connection

	Parameter	
	Function	Setting
	<i>Parameter 8-30 Protocol</i>	FC*
	<i>Parameter 8-31 Address</i>	1*
	<i>Parameter 8-32 Baud Rate</i>	9600*
	* = Default value	
	Notes/comments: Select protocol, address, and baud rate in the above-mentioned parameters. D IN 37 is an option.	

8.1.9 Wiring Configuration: Motor Thermistor

⚠ CAUTION ⚠

THERMISTOR INSULATION

Risk of personal injury or equipment damage.

- Use only thermistors with reinforced or double insulation to meet PELV insulation requirements.

Table 87: Wiring Configuration for Motor Thermistor

		Parameters	
	e30bu090.1C	Function	Setting
		Parameter 1-90 Motor Thermal Protection	[2] Thermistor trip
		Parameter 1-93 Thermistor Source	[1] Analog input 53
		* = Default value	
<p>If only a warning is required, set <i>parameter 1-90 Motor Thermal Protection</i> to [1] Thermistor warning.</p> <p>D IN 37 is an option.</p> <p>Input 53 in the parameter corresponds to terminal XD2.7 in the control compartment.</p>			

8.1.10 Wiring for Regeneration

Table 88: Wiring Configuration for Regeneration

		Parameters	
	e30bu091.10	Function	Setting
		Parameter 1-90 Motor Thermal Protection	100%*
		* = Default value	
		<p>To disable regeneration, decrease <i>parameter 1-90 Motor Thermal Protection</i> to 0%. However, if the application uses motor brake power and regeneration is not enabled, the drive will trip.</p>	

8.1.11 Wiring Configuration for a Relay Set-up with Smart Logic Control

Table 89: Wiring Configuration for a Relay with Smart Logic Control

Parameters		
Function	Setting	
	Parameter 4-30 Motor Feedback Loss Function	[1] Warning
	Parameter 4-31 Motor Feedback Speed Error	100 RPM
	Parameter 4-32 Motor Feedback Loss Timeout	5 s
	Parameter 7-00 Speed PID Feedback Source	[2] MCB 102
	Parameter 17-11 Resolution (PPR)	1024*
	Parameter 13-00 SL Controller Mode	[1] On
	Parameter 13-01 Start Event	[19] Warning
	Parameter 13-02 Stop Event	[44] Reset key
	Parameter 13-10 Comparator Operand	[21] Warning no.
	Parameter 13-11 Comparator Operator	[1] ≈ (equal)*
	Parameter 13-12 Comparator Value	90
	Parameter 13-51 SL Controller Event	[22] Comparator 0
	Parameter 13-52 SL Controller Action	[32] Set digital out A low
	Parameter 5-40 Function Relay	[80] SL digital output A
	*=Default value	
Notes/comments: If the limit in the feedback monitor is exceeded, <i>warning 90, Feedback Mon.</i> is issued. The SLC monitors <i>warning 90, Feedback Mon.</i> and if the warning becomes true, relay 1 is triggered. External equipment may require service. However, if the feedback error goes below the limit again within 5 s and the warning disappears, press [Reset] on the LCP.		

8.1.12 Wiring Configuration: Compressor

The SmartStart guides the user through the set-up of a refrigeration compressor asking for input data about the compressor and the refrigeration system on which the drive is running. All terminology and units used within the SmartStart are common refrigeration type and set up is thus completed in 10–15 easy steps using just 2 keys of the LCP.

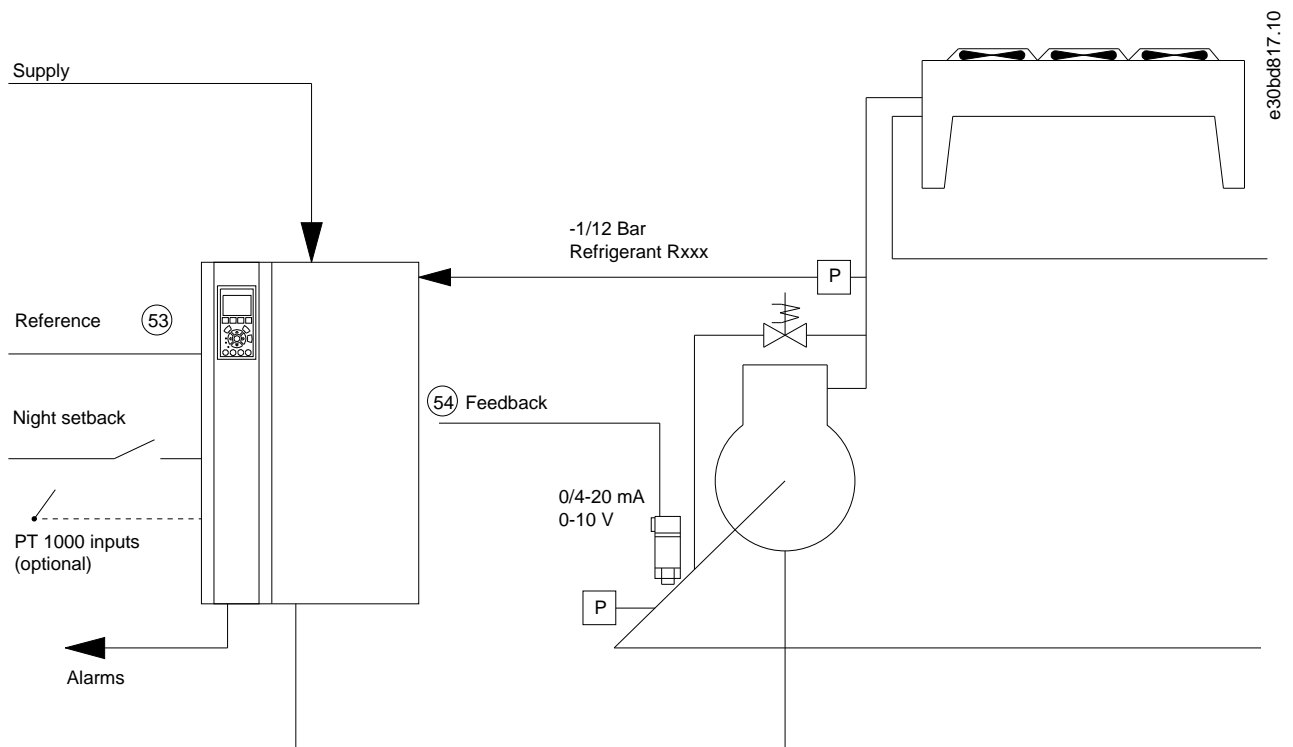



Illustration 61: Standard Configuration of “Compressor with Internal Control”

SmartStart Input:

- Bypass valve
- Recycling time (start to start)
- Minimum frequency (Hz)
- Maximum frequency (Hz)
- Setpoint
- Cut in/cut out
- 400/230 V AC
- Current (A)
- Speed (RPM)


8.1.13 Wiring Configuration for Single or Multiple Refrigeration Fans/Pumps

The SmartStart guides through the process of setting up of a refrigeration condenser fan or pump. Enter data about the condenser or pump and the refrigeration system on which the drive is running. All terminology and units used within the SmartStart are common refrigeration type and set-up is thus completed in 10–15 easy steps using 2 keys on the LCP.

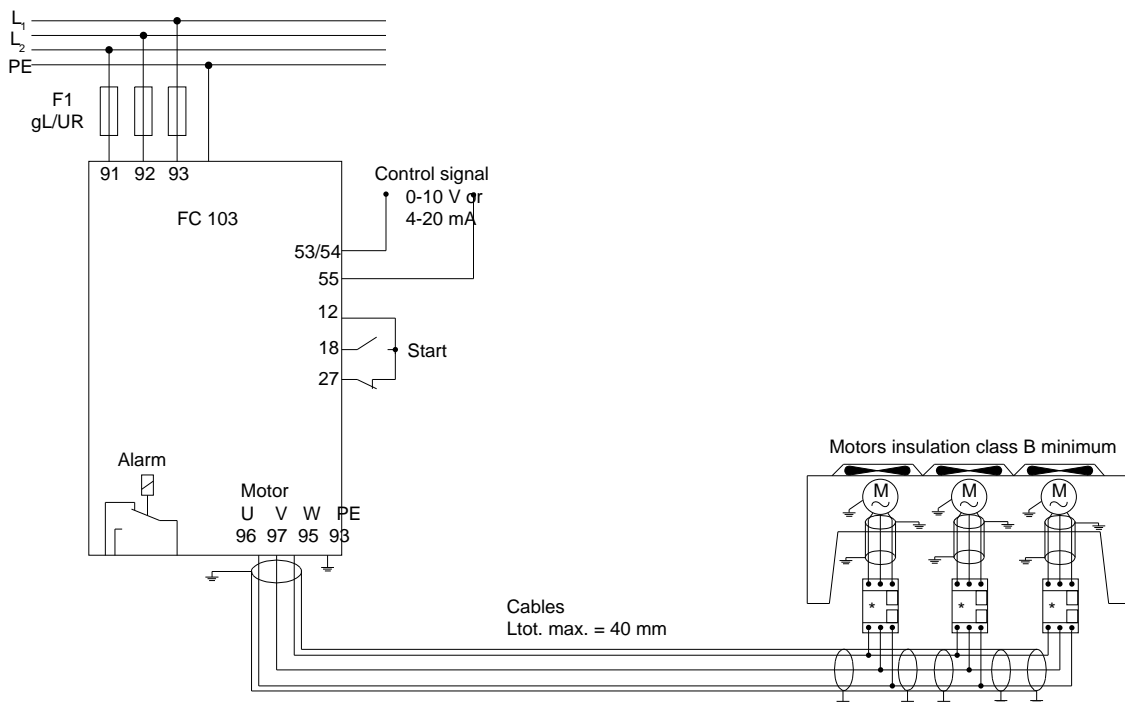

e30bd824.10

Illustration 62: Speed Control Using Analog Reference (Open Loop) – Single Fan or Pump/Multiple Fans or Pumps in Parallel

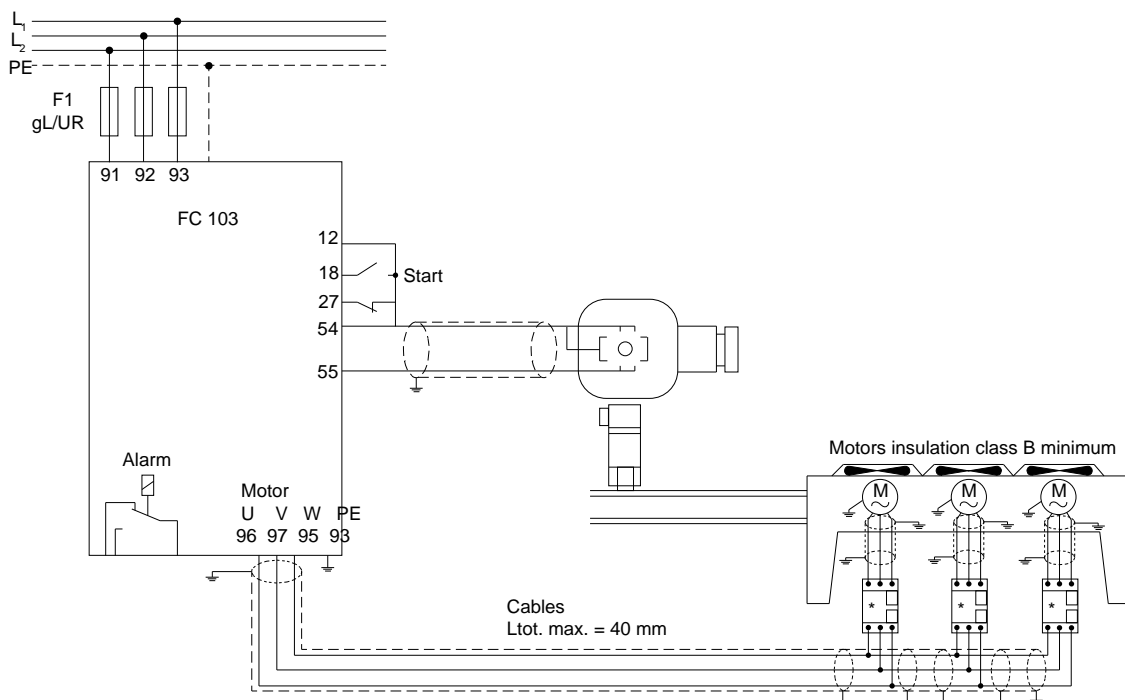

e30bd823.10

Illustration 63: Pressure Control in Closed Loop – Standalone System - Single Fan or Pump/Multiple Fans or Pumps in Parallel

Recommended motor cable types are:

- LIYCY
- Lapp Oelflex 100CY 450/750 V
- Lapp Oelflex 110CY 600/1000 V
- Lapp Oelflex SERVO 2YSLCY-J9
- Lapp Oelflex SERVO 2YSLCYK-J9
- HELU TOPFLEX-EWV-2YSLCY-J

- HELU TOPFLEX-EWV-UV 2YSLCYK-J
- HELU TOPFLEX-EWV-3PLUS 2YSLCY-J
- HELU TOPFLEX-EWV-UV-3PLUS 2YSLCYK-J
- Faber Kabel EWV-Motorleitung 2YSL(St)Cyv
- Nexans MOTIONLINE RHEXFLEX-EWV 2XSLSTCY-J

8.1.14 Wiring Configuration for a Compressor Pack

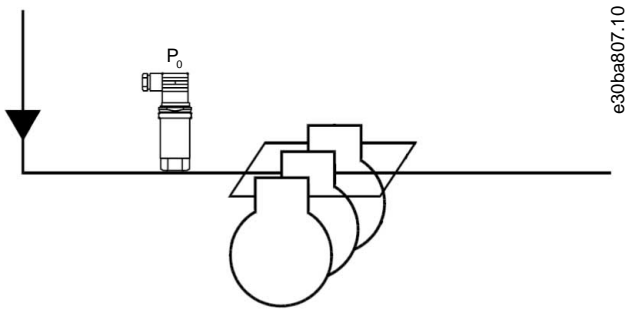


Illustration 64: P₀ Pressure Transmitter

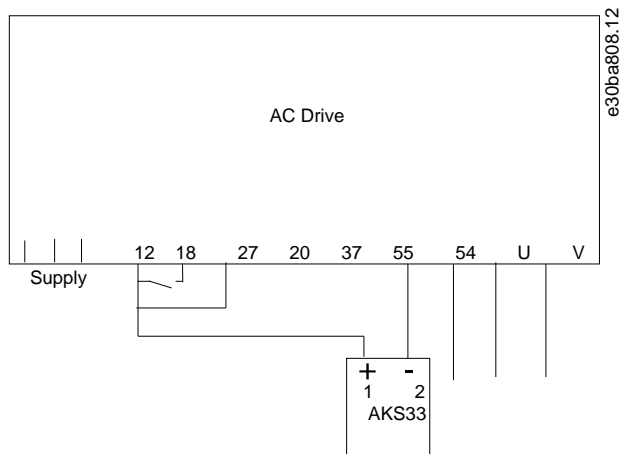


Illustration 65: How to Connect the FC 103 and AKS33 for Closed-Loop Applications

NOTICE

To find out which parameters are relevant, run the SmartStart.

9 Maintenance, Diagnostics, and Troubleshooting

9.1 Status Messages

9.1.1 Status Message Overview

When the drive is in status mode, status messages automatically appear in the bottom line of the LCP display.

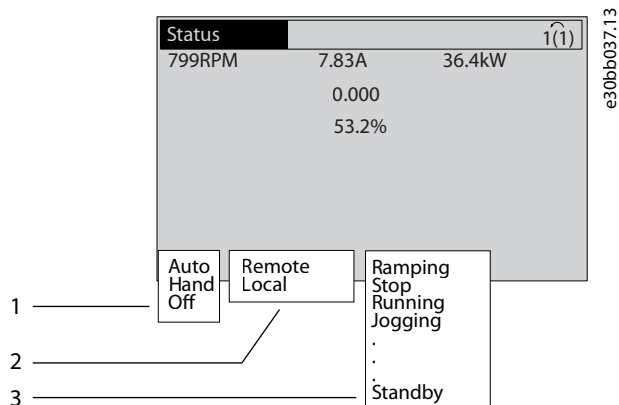


Illustration 66: Status Display

1	See 9.1.2 Status Messages - Operating Mode .	3	See 9.1.4 Status Messages - Operation Status .
2	See 9.1.3 Status Messages - Reference Site .		

9.1.2 Status Messages - Operating Mode

Table 90: Operating Mode

Operating mode	Description
Auto	The drive requires external commands to execute functions. The start/stop commands are sent via the control terminals and/or the serial communication.
Hand	The navigation keys on the LCP can be used to control the drive. Stop commands, reset, reversing, DC brake, and other signals applied to the control terminals override local control.
Off	The drive does not react to any control signal until [Auto On] or [Hand On] is pressed.

9.1.3 Status Messages - Reference Site

Table 91: Reference Site

Reference site	Description
Remote	The speed reference is given from: <ul style="list-style-type: none"> External signals. Serial communication. Internal preset references.
Local	The drive uses reference values from the LCP.

Operating Guide

9.1.4 Status Messages - Operation Status

Table 92: Operation Status

Operation status	Description
AC brake	AC brake was selected in <i>parameter 2-10 Brake Function</i> . The AC brake overmagnetizes the motor to achieve a controlled slow down.
AMA finish OK	Automatic motor adaptation (AMA) was carried out successfully.
AMA ready	AMA is ready to start. To start, press [Hand On].
AMA running	AMA process is in progress.
Braking	The brake chopper is in operation. The brake resistor absorbs the generative energy.
Braking max.	The brake chopper is in operation. The power limit for the brake resistor defined in <i>parameter 2-12 Brake Power Limit (kW)</i> has been reached.
Coast	<ul style="list-style-type: none"> [2] <i>Coast inverse</i> was selected as a function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal is not connected. Coast activated by serial communication. No output from the drive to the motor.
Ctrl. ramp-down	<p>[1] <i>Ctrl. ramp-down</i> was selected in <i>parameter 14-10 Mains Failure</i>.</p> <ul style="list-style-type: none"> The mains voltage is below the value set in <i>parameter 14-11 Mains Voltage at Mains Fault</i>. The drive ramps down the motor in a controlled manner.
Current high	The drive output current is above the limit set in <i>parameter 4-51 Warning Current High</i> .
Current low	The drive output current is below the limit set in <i>parameter 4-52 Warning Speed Low</i> .
DC hold	DC hold is selected in <i>parameter 1-80 Function at Stop</i> and a stop command is active. The motor is held by a DC current set in <i>parameter 2-00 DC Hold Current</i> .
DC stop	<p>The motor is held with a DC current (<i>parameter 2-01 DC Brake Current</i>) for a specified time (<i>parameter 2-02 DC Braking Time</i>).</p> <ul style="list-style-type: none"> DC brake is activated in <i>parameter 2-03 DC Brake Cut In Speed [RPM]</i> and a stop command is active. DC brake (inverse) is selected as a function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal is not active. The DC brake is activated via serial communication.
Feedback high	The sum of all active feedback is above the feedback limit set in <i>parameter 4-57 Warning Feedback High</i> .
Feedback low	The sum of all active feedback is below the feedback limit set in <i>parameter 4-56 Warning Feedback Low</i> .
Freeze output	<p>The remote reference is active, which holds the present speed.</p> <ul style="list-style-type: none"> [20] <i>Freeze Output</i> was selected as a function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal is active. Speed control is only possible via the terminal functions speed up and speed down. Hold ramp is activated via serial communication.

Operating Guide

Operation status	Description
Freeze out-put request	A freeze output command has been given, but the motor remains stopped until a run permissive signal is received.
Freeze ref.	[19] Freeze Reference was selected as a function for a digital input (parameter group 5–1* Digital Inputs). The corresponding terminal is active. The drive saves the actual reference. Changing the reference is now only possible via terminal functions speed up and speed down.
Jog request	A jog command has been given, but the motor is stopped until a run permissive signal is received via a digital input.
Jogging	The motor is running as programmed in parameter 3-19 Jog Speed [RPM]. <ul style="list-style-type: none"> [14] Jog was selected as function for a digital input (parameter group 5–1* Digital Inputs). The corresponding terminal (for example, terminal 29) is active. The jog function is activated via the serial communication. The jog function was selected as a reaction for a monitoring function (for example, No signal). The monitoring function is active.
Motor check	In parameter 1-80 Function at Stop, [2] Motor Check was selected. A stop command is active. To ensure that a motor is connected to the drive, a permanent test current is applied to the motor.
OVC control	Overvoltage control was activated by [2] Enabled in parameter 2-17 Over-voltage Control. The connected motor is supplying the drive with generative energy. The overvoltage control adjusts the V/Hz ratio to run the motor in controlled mode and to prevent the drive from tripping.
Power unit off	(For drives with a 24 V external supply installed only.) Mains supply to the drive is removed, but the control card is supplied by the external 24 V.
Protection md	Protection mode is active. The unit has detected a critical status (an overcurrent or overvoltage). <ul style="list-style-type: none"> To avoid tripping, the switching frequency is reduced to 1.5 kHz if parameter 14-55 Output Filter is set to [2] Sine-Wave Filter Fixed. Otherwise, the switching frequency is reduced to 1.0 kHz. If possible, protection mode ends after approximately 10 s. Protection mode can be restricted in parameter 14-26 Trip Delay at Inverter Fault.
Qstop	The motor is decelerating using parameter 3-81 Quick Stop Ramp Time. <ul style="list-style-type: none"> [4] Quick stop inverse was selected as a function for a digital input (parameter group 5–1* Digital Inputs). The corresponding terminal is not active. The quick stop function was activated via serial communication.
Ramping	The motor is accelerating/decelerating using the active ramp up/down. The reference, a limit value, or a standstill is not yet reached.
Ref. high	The sum of all active references is above the reference limit set in parameter 4-55 Warning Reference High.
Ref. low	The sum of all active references is below the reference limit set in parameter 4-54 Warning Reference Low.
Run on ref.	The drive is running in the reference range. The feedback value matches the setpoint value.
Run request	A start command has been given, but the motor is stopped until a run permissive signal is received via digital input.
Running	The drive is driving the motor.
Sleep mode	The energy-saving function is enabled. This function being enabled means that now the motor has stopped, but that it restarts automatically when required.
Speed high	The motor speed is above the value set in parameter 4-53 Warning Speed High.

Operating Guide

Operation status	Description
Speed low	The motor speed is below the value set in <i>parameter 4-52 Warning Speed Low</i> .
Standby	In auto-on mode, the drive starts the motor with a start signal from a digital input or serial communication.
Start delay	In <i>parameter 1-71 Start Delay</i> , a delay starting time was set. A start command is activated and the motor starts after the start delay time expires.
Start fwd/rev	[12] <i>Enable Start Forward</i> and [13] <i>Enable Start Reverse</i> were selected as functions for 2 different digital inputs (<i>parameter group 5-1* Digital Inputs</i>). The motor starts in forward or reverse depending on which corresponding terminal is activated.
Stop	The drive has received a stop command from 1 of the following: <ul style="list-style-type: none"> • LCP. • Digital input. • Serial communication.
Trip/Trip lock	An alarm occurred and the motor is stopped. Once the cause of the alarm is cleared, reset the drive using 1 of the following: <ul style="list-style-type: none"> • Pressing [Reset]. • Remotely by control terminals. • Via serial communication.

9.2 Maintenance and Service

Under normal operating conditions and load profiles, the drive is maintenance-free throughout its designed lifetime. To prevent breakdown, danger, and damage, examine the drive for loose terminal connections, excessive dust buildup, and so on, at regular intervals. Replace worn or damaged parts with Danfoss authorized parts. For service and support, contact the local Danfoss supplier.

⚠ WARNING ⚠

UNINTENDED START

When the drive is connected to the AC mains, DC supply, or load sharing, the motor may start at any time, causing risk of death, serious injury, and equipment or property damage. The motor may start by activation of an external switch, a fieldbus command, an input reference signal from the LCP or LOP, via remote operation using MCT 10 Set-up software, or after a cleared fault condition.

- Press [Off] on the LCP before programming parameters.
- Disconnect the drive from the mains whenever personal safety considerations make it necessary to avoid unintended motor start.
- Check that the drive, motor, and any driven equipment are in operational readiness.

9.3 Warnings and Alarms

9.3.1 Warning and Alarm Types

Alarm

An alarm indicates a fault that requires immediate attention. The fault always triggers a trip or trip lock. Reset the drive after an alarm using 1 of the following methods:

- Press [Reset]/[Off/Reset].
- Digital reset input command.
- Serial communication reset input command.
- Auto reset.

Operating Guide

Warning

A state entered in fault situations, for example if the drive is subject to an overtemperature or when the drive is protecting the motor, process, or mechanism. The drive prevents a restart until the cause of the fault has disappeared. To cancel the trip state, restart the drive. Do not use the trip state for personal safety.

Trip

When tripping, the drive suspends operation to prevent damage to the drive and other equipment. When a trip occurs, the motor coasts to a stop. The drive logic continues to operate and monitor the drive status. After the fault condition is remedied, the drive is ready for a reset.

Trip lock

The drive enters this state in fault situations to protect itself. The drive requires physical intervention, for example when there is a short circuit on the output. A trip lock can only be canceled by disconnecting mains, removing the cause of the fault, and reconnecting the drive. Restart is prevented until the trip state is canceled by activating reset or, sometimes, by being programmed to reset automatically. Do not use the trip lock state for personal safety.

LCP notification

When a fault is triggered, the LCP indicates the type of fault (alarm, warning, or trip lock) and shows the alarm or warning number in the display.

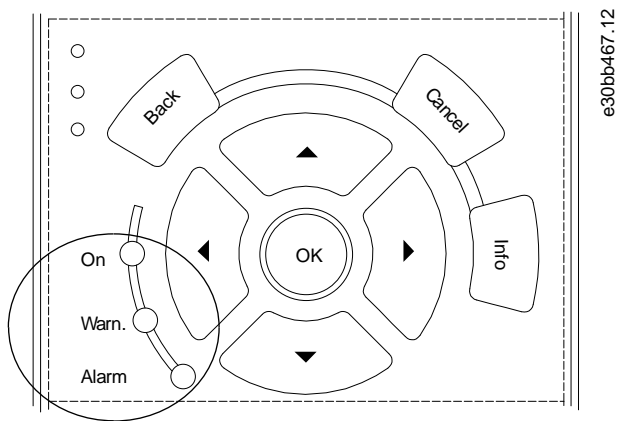


Illustration 67: Status Indicator Lights

Table 93: Fault Types

Type of fault	Warning indicator light	Alarm indicator light
Warning	On	Off
Alarm	Off	On (flashing)
Trip lock	On	On (flashing)

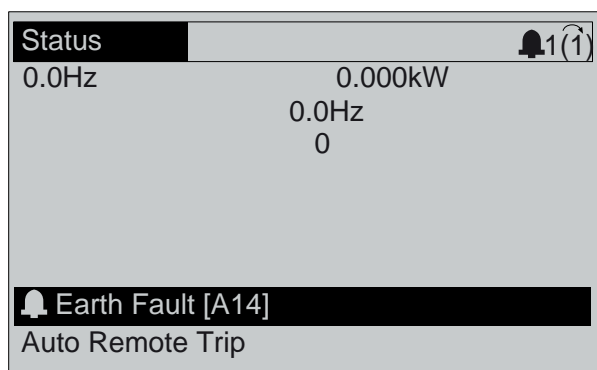


Illustration 68: Alarm Example

Operating Guide

9.3.2 WARNING 1, 10 Volts Low

Cause

The control card voltage is less than 10 V from terminal 50. Remove some of the load from terminal 50, as the 10 V supply is overloaded. Maximum 15 mA or minimum 590 Ω.

A short circuit in a connected potentiometer or incorrect wiring of the potentiometer can cause this condition.

Troubleshooting

- Remove the wiring from terminal 50. If the warning clears, the problem is with the wiring. If the warning does not clear, replace the control card.

9.3.3 WARNING/ALARM 2, Live Zero Error

Cause

This warning or alarm only appears if programmed in *parameter 6-01 Live Zero Timeout Function*. The signal on 1 of the analog inputs is less than 50% of the minimum value programmed for that input. Broken wiring or a faulty device sending the signal can cause this condition.

Troubleshooting

- Check connections on all analog mains terminals.
 - Control card terminals 53 and 54 for signals, terminal 55 common.
 - VLT® General Purpose I/O MCB 101 terminals 11 and 12 for signals, terminal 10 common.
 - VLT® Analog I/O Option MCB 109 terminals 1, 3, and 5 for signals, terminals 2, 4, and 6 common.
- Check that the drive programming and switch settings match the analog signal type.
- Perform an input terminal signal test.

9.3.4 WARNING/ALARM 3, No Motor

Cause

No motor is connected to the output of the drive.

9.3.5 WARNING/ALARM 4, Mains Phase Loss

Cause

A phase is missing on the supply side, or the mains voltage imbalance is too high. This message also appears for a fault in the input rectifier. Options are programmed in *parameter 14-12 Function at Mains Imbalance*.

Troubleshooting

- Check the supply voltage and supply currents to the drive.

9.3.6 WARNING 5, DC Link Voltage High

Cause

The DC-link voltage (DC) is higher than the high-voltage warning limit. The limit depends on the drive voltage rating. The unit is still active.

9.3.7 WARNING 6, DC Link Voltage Low

Cause

The DC-link voltage (DC) is lower than the low voltage warning limit. The limit depends on the drive voltage rating. The unit is still active.

9.3.8 WARNING/ALARM 7, DC Overvoltage

Cause

If the DC-link voltage exceeds the limit, the drive trips after a certain time.

Troubleshooting

- Extend the ramp time.
- Change the ramp type.
- Activate the functions in *parameter 2-10 Brake Function*.
- Increase *parameter 14-26 Trip Delay at Inverter Fault*.
- If the alarm/warning occurs during a power sag, use kinetic back-up (*parameter 14-10 Mains Failure*).
- Connect a brake resistor.

9.3.9 WARNING/ALARM 8, DC Undervoltage

Cause

If the DC-link voltage drops below the undervoltage limit, the drive checks for 24 V DC back-up supply. If no 24 V DC back-up supply is connected, the drive trips after a fixed time delay. The time delay varies with unit size.

Troubleshooting

- Check that the supply voltage matches the drive voltage.
- Perform an input voltage test.
- Perform a soft-charge circuit test.

9.3.10 WARNING/ALARM 9, Inverter Overload

Cause

The drive has run with more than 100% overload for too long and is about to cut out. The counter for electronic thermal inverter protection issues a warning at 98% and trips at 100% with an alarm. The drive cannot be reset until the counter is below 90%.

Troubleshooting

- Compare the output current shown on the LCP with the drive rated current.
- Compare the output current shown on the LCP with the measured motor current.
- Show the thermal drive load on the LCP and monitor the value. When running above the drive continuous current rating, the counter increases. When running below the drive continuous current rating, the counter decreases.

9.3.11 WARNING/ALARM 10, Motor Overload Temperature

Cause

According to the electronic thermal protection (ETR), the motor is too hot.

Select 1 of these options:

- The drive issues a warning or an alarm when the counter is >90% if *parameter 1-90 Motor Thermal Protection* is set to warning options.
- The drive trips when the counter reaches 100% if *parameter 1-90 Motor Thermal Protection* is set to trip options.

The fault occurs when the motor runs with more than 100% overload for too long.

Troubleshooting

- Check for motor overheating.
- Check if the motor is mechanically overloaded.
- Check that the motor current set in *parameter 1-24 Motor Current* is correct.
- Ensure that the motor data in *parameters 1-20 to 1-25* is set correctly.
- If an external fan is in use, check that it is selected in *parameter 1-91 Motor External Fan*.
- Running AMA in *parameter 1-29 Automatic Motor Adaptation (AMA)* tunes the drive to the motor more accurately and reduces thermal loading.

9.3.12 WARNING/ALARM 11, Motor Thermistor Overtemp

The motor thermistor indicates that the motor temperature is too high.

Troubleshooting

- Check for motor overheating.
- Check that the thermistor is securely connected.
- Check if the motor is mechanically overloaded.
- When using terminal 53 or 54, check that the thermistor is connected correctly between either terminal 53 or 54 (analog voltage input) and terminal 50 (+10 V supply). Also check that the terminal switch for 53 and 54 is set for voltage. Check that *parameter 1-93 Thermistor Resource* selects 53 or 54.
- When using terminal 18, 19, 31, 32, or 33 (digital inputs), check that the thermistor is connected correctly between the digital input terminal used (digital input PNP only) and terminal 50. Select the terminal to use in *parameter 1-93 Thermistor Resource*.

Operating Guide

9.3.13 WARNING/ALARM 12, Torque Limit

Cause

The torque has exceeded the value in *parameter 4-16 Torque Limit Motor Mode* or the value in *parameter 4-17 Torque Limit Generator Mode*. *Parameter 14-25 Trip Delay at Torque Limit* can change this warning from a warning-only condition to a warning followed by an alarm.

Troubleshooting

- If the motor torque limit is exceeded during ramp-up, extend the ramp-up time.
- If the generator torque limit is exceeded during ramp-down time, extend the ramp-down time.
- If torque limit occurs while running, increase the torque limit. Make sure that the system can operate safely at a higher torque.
- Check the application for excessive current draw on the motor.

9.3.14 WARNING/ALARM 13, Overcurrent

Cause

The inverter peak current limit (approximately 200% of the rated current) is exceeded. The warning lasts approximately 1.5 s, then the drive trips and issues an alarm. Shock loading or quick acceleration with high-inertia loads can cause this fault. If the acceleration during ramp-up is quick, the fault can also appear after kinetic back-up. If extended mechanical brake control is selected, a trip can be reset externally.

Troubleshooting

- Remove power and check if the motor shaft can be turned.
- Check that the motor size matches the drive.
- Check that the motor data is correct in *parameters 1-20 to 1-25*.

9.3.15 ALARM 14, Earth (Ground) Fault

Cause

There is current from the output phase to ground, either in the cable between the drive and the motor, or in the motor itself. The current transducers detect the ground fault by measuring current going out from the drive and current going into the drive from the motor. Ground fault is issued if the deviation of the 2 currents is too large. The current going out of the drive must be the same as the current going into the drive.

Troubleshooting

- Remove power to the drive and repair the ground fault.
- Check for ground faults in the motor by measuring the resistance to ground of the motor cables and the motor with a megohmmeter.
- Reset any potential individual offset in the 3 current transducers in the drive. Perform a manual initialization or perform a complete AMA. This method is most relevant after changing the power card.

9.3.16 ALARM 15, Hardware Mismatch

Cause

A fitted option is not operational with the present control card hardware or software.

Troubleshooting

Record the value of the following parameters and contact Danfoss.

- *Parameter 15-40 FC Type.*
- *Parameter 15-41 Power Section.*
- *Parameter 15-42 Voltage.*
- *Parameter 15-43 Software Version.*
- *Parameter 15-45 Actual Typecode String.*
- *Parameter 15-49 SW ID Control Card.*
- *Parameter 15-50 SW ID Power Card.*
- *Parameter 15-60 Option Mounted.*
- *Parameter 15-61 Option SW Version* (for each option slot).

Operating Guide

9.3.17 ALARM 16, Short Circuit

Cause

There is short-circuiting in the motor or motor wiring.

Troubleshooting

⚠ W A R N I N G ⚠

HIGH VOLTAGE

AC drives contain high voltage when connected to AC mains input, DC supply, or load sharing. Failure to perform installation, start-up, and maintenance by qualified personnel can result in death or serious injury.

- Only qualified personnel must perform installation, start-up, and maintenance.

- Disconnect power before proceeding.
- Remove the power to the drive and repair the short circuit.

9.3.18 WARNING/ALARM 17, Control Word Timeout

Cause

There is no communication to the drive. The warning is only active when *parameter 8-04 Control Word Timeout Function* is NOT set to [0] Off.

If *parameter 8-04 Control Word Timeout Function* is set to [5] Stop and trip, a warning appears, and the drive ramps down to a stop and shows an alarm.

Troubleshooting

- Check the connections on the serial communication cable.
- Increase *parameter 8-03 Control Word Timeout Time*.
- Check the operation of the communication equipment.
- Verify that proper EMC installation was performed.

9.3.19 WARNING/ALARM 20, Temp. Input Error

Cause

The temperature sensor is not connected.

9.3.20 WARNING/ALARM 21, Parameter Error

Cause

The parameter is out of range. The parameter number is shown in the display.

Troubleshooting

- Set the affected parameter to a valid value.

9.3.21 WARNING 23, Internal Fan Fault

Cause

The fan warning function is a protective function that checks if the fan is running/mounted. The fan warning can be disabled in *parameter 14-53 Fan Monitor ([0] Disabled)*.

For drives with DC fans, a feedback sensor is mounted in the fan. If the fan is commanded to run and there is no feedback from the sensor, this alarm appears. For drives with AC fans, the voltage to the fan is monitored.

Troubleshooting

- Check for proper fan operation.
- Cycle power to the drive and check that the fan operates briefly at start-up.
- Check the sensors on the control card.

9.3.22 WARNING 24, External Fan Fault

Cause

The fan warning function is a protective function that checks if the fan is running/mounted. The fan warning can be disabled in *parameter 14-53 Fan Monitor ([0] Disabled)*.

For drives with DC fans, a feedback sensor is mounted in the fan. If the fan is commanded to run and there is no feedback from the sensor, this warning appears. For drives with AC fans, the voltage to the fan is monitored.

Operating Guide

Troubleshooting

- Check for proper fan operation.
- Cycle power to the drive and check that the fan operates briefly at start-up.
- Check the sensors on the heat sink.

9.3.23 WARNING 25, Brake Resistor Short Circuit

Cause

The brake resistor is monitored during operation. If a short circuit occurs, the brake function is disabled and the warning appears. The drive is still operational, but without the brake function.

Troubleshooting

- Remove the power to the drive and replace the brake resistor (refer to *parameter 2-15 Brake Check*).

9.3.24 WARNING/ALARM 26, Brake Resistor Power Limit

Cause

The power transmitted to the brake resistor is calculated as a mean value over the last 120 s of run time. The calculation is based on the DC-link voltage and the brake resistor value set in *parameter 2-16 AC Brake Max. Current*. The warning is active when the dissipated braking power is higher than 90% of the brake resistor power. If option [2] Trip is selected in *parameter 2-13 Brake Power Monitoring*, the drive trips when the dissipated braking power reaches 100%.

9.3.25 WARNING/ALARM 27, Brake Chopper Fault

Cause

The brake transistor is monitored during operation, and if a short circuit occurs, the brake function is disabled, and a warning is issued. The drive is still operational, but since the brake transistor has short-circuited, substantial power is transmitted to the brake resistor, even if it is inactive.

Troubleshooting

- Remove the power to the drive and remove the brake resistor.

9.3.26 WARNING/ALARM 28, Brake Check Failed

Cause

The brake resistor is not connected or not working.

Troubleshooting

- Check *parameter 2-15 Brake Check*.

9.3.27 ALARM 29, Heat Sink Temp

Cause

The maximum temperature of the heat sink is exceeded. The temperature fault is not reset until the temperature drops below a defined heat sink temperature. The trip and reset points are different based on the drive power size.

Troubleshooting

Check for the following conditions:

- The ambient temperature is too high.
- The motor cables are too long.
- Incorrect airflow clearance above and below the drive.
- Blocked airflow around the drive.
- Damaged heat sink fan.
- Dirty heat sink.

9.3.28 ALARM 30, Motor Phase U Missing

Cause

Motor phase U between the drive and the motor is missing.

Troubleshooting

 W A R N I N G 
HIGH VOLTAGE

AC drives contain high voltage when connected to AC mains input, DC supply, or load sharing. Failure to perform installation, start-up, and maintenance by qualified personnel can result in death or serious injury.

- Only qualified personnel must perform installation, start-up, and maintenance.

- Disconnect power before proceeding.
- Remove the power from the drive and check motor phase U.

9.3.29 ALARM 31, Motor Phase V Missing

Cause

Motor phase V between the drive and the motor is missing.

Troubleshooting

 W A R N I N G 
HIGH VOLTAGE

AC drives contain high voltage when connected to AC mains input, DC supply, or load sharing. Failure to perform installation, start-up, and maintenance by qualified personnel can result in death or serious injury.

- Only qualified personnel must perform installation, start-up, and maintenance.

- Disconnect power before proceeding.
- Remove the power from the drive and check motor phase V.

9.3.30 ALARM 32, Motor Phase W Missing

Cause

Motor phase W between the drive and the motor is missing.

Troubleshooting

 W A R N I N G 
HIGH VOLTAGE

AC drives contain high voltage when connected to AC mains input, DC supply, or load sharing. Failure to perform installation, start-up, and maintenance by qualified personnel can result in death or serious injury.

- Only qualified personnel must perform installation, start-up, and maintenance.

- Disconnect power before proceeding.
- Remove the power from the drive and check motor phase W.

9.3.31 ALARM 33, Inrush Fault

Cause

Too many power-ups have occurred within a short time period.

Troubleshooting

- Let the unit cool to operating temperature.
- Check potential DC-link fault to ground.

9.3.32 WARNING/ALARM 34, Fieldbus Communication Fault

Cause

The fieldbus on the communication option card is not working.

9.3.33 WARNING/ALARM 35, Option Fault

Cause

An option alarm is received. The alarm is option-specific. The most likely cause is a power-up or a communication fault.

Operating Guide

9.3.34 WARNING/ALARM 36, Mains Failure

Cause

This warning/alarm is only active if the supply voltage to the drive is lost and *parameter 14-10 Mains Failure* is not set to [0] No Function.

Troubleshooting

- Check the fuses to the drive and mains supply to the unit.

9.3.35 ALARM 37, Phase Imbalance

Cause

There is a current imbalance between the power units.

9.3.36 ALARM 38, Internal Fault

Cause

When an internal fault occurs, a code number defined in [Table 94](#) is shown.

Troubleshooting

- Cycle power.
- Check that the option is properly installed.
- Check for loose or missing wiring.

It may be necessary to contact the Danfoss supplier or service department. Note the code number for further troubleshooting directions.

Table 94: Internal Fault Codes

Number	Text
0	The serial port cannot be initialized. Contact the Danfoss supplier or Danfoss service department.
256–258	The power EEPROM data is defective or too old. Replace the power card.
512–519	Internal fault. Contact the Danfoss supplier or Danfoss service department.
783	Parameter value outside of minimum/maximum limits.
1024–1284	Internal fault. Contact the Danfoss supplier or Danfoss service department.
1299	The option software in slot A is too old.
1300	The option software in slot B is too old.
1302	The option software in slot C1 is too old.
1315	The option software in slot A is not supported/allowed.
1316	The option software in slot B is not supported/ allowed.
1318	The option software in slot C1 is not supported/ allowed.
1379–2819	Internal fault. Contact the Danfoss supplier or Danfoss service department.
1792	Hardware reset of digital signal processor.
1793	Motor-derived parameters not transferred correctly to the digital signal processor.
1794	Power data not transferred correctly at power-up to the digital signal processor.
1795	The digital signal processor has received too many unknown SPI telegrams. The AC drive also uses this fault code if the MCO does not power up correctly. This situation can occur due to poor EMC protection or improper grounding.
1796	RAM copy error.
2561	Replace the control card.

Operating Guide

Number	Text
2820	LCP stack overflow.
2821	Serial port overflow.
2822	USB port overflow.
3072–5122	Parameter value is outside its limits.
5123	Option in slot A: Hardware incompatible with the control board hardware.
5124	Option in slot B: Hardware incompatible with the control board hardware.
5125	Option in slot C0: Hardware incompatible with the control board hardware.
5126	Option in slot C1: Hardware incompatible with the control board hardware.
5376– 6231	Internal fault. Contact the Danfoss supplier or Danfoss service department.

9.3.37 ALARM 39, Heat Sink Sensor

Cause

No feedback from the heat sink temperature sensor.

The signal from the IGBT thermal sensor is not available on the power card. The problem could be on the power card, on the gate-drive card, or on the ribboncable between the power card and the gatedrive card.

9.3.38 WARNING 40, Overload of Digital Output Terminal 27

Troubleshooting

- Check the load connected to terminal 27 or remove the short-circuit connection.
- Check *parameter 5-00 Digital I/O Mode* and *parameter 5-01 Terminal 27 Mode*.

9.3.39 WARNING 41, Overload of Digital Output Terminal 29

Troubleshooting

- Check the load connected to terminal 29 or remove the short-circuit connection.
- Check *parameter 5-00 Digital I/O Mode* and *parameter 5-02 Terminal 29 Mode*.

9.3.40 WARNING 42, Ovrld X30/6-7

Troubleshooting

For terminal X30/6:

- Check the load connected to the terminal, or remove the short-circuit connection.
- Check *parameter 5-32 Term X30/6 Digi out (MCB 101)* (VLT® General Purpose I/O MCB 101).

For terminal X30/7:

- Check the load connected to the terminal, or remove the short-circuit connection.
- Check *parameter 5-33 Term X30/7 Digi Out (MCB 101)* (VLT® General Purpose I/O MCB 101).

9.3.41 ALARM 43, Ext. Supply

Either connect a 24 V DC external supply or specify that no external supply is used via *parameter 14-80 Option Supplied by External 24VDC, [0] No.* A change in *parameter 14-80 Option Supplied by External 24VDC* requires a power cycle.

Cause

VLT® Extended Relay Option MCB 113 is mounted without 24 V DC.

Troubleshooting

Choose 1 of the following:

- Connect a 24 V DC external supply.
- Specify that no external supply is used via *parameter 14-80 Option Supplied by External 24VDC, [0] No.* A change in *parameter 14-80 Option Supplied by External 24VDC* requires a power cycle.

Operating Guide

9.3.42 ALARM 45, Earth Fault 2

Cause

Ground fault.

Troubleshooting

- Check for proper grounding and loose connections.
- Check for proper wire size.
- Check the motor cables for short circuits or leakage currents.

9.3.43 ALARM 46, Power Card Supply

Cause

The supply on the power card is out of range. Another reason can be a defective heat sink fan.

There are 3 supplies generated by the switch mode supply (SMPS) on the power card:

- 24 V.
- 5 V.
- ± 18 V.

When powered with VLT® 24 V DC Supply MCB 107, only 24 V and 5 V supplies are monitored. When powered with 3-phase mains voltage, all 3 supplies are monitored.

Troubleshooting

- Check for a defective power card.
- Check for a defective control card.
- Check for a defective option card.
- If a 24 V DC supply is used, verify proper supply power.
- Check for a defective heat sink fan.

9.3.44 WARNING 47, 24 V Supply Low

Cause

The supply on the power card is out of range.

There are 3 supplies generated by the switch mode supply (SMPS) on the power card:

- 24 V
- 5 V
- ± 18 V

Troubleshooting

- Check for a defective power card.

9.3.45 WARNING 48, 1.8 V Supply Low

Cause

The 1.8 V DC supply used on the control card is outside of the allowed limits. The supply is measured on the control card.

Troubleshooting

- Check for a defective control card.
- If an option card is present, check for overvoltage.

9.3.46 WARNING 49, Speed Limit

Cause

The warning is shown when the speed is outside of the specified range in *parameter 4-11 Motor Speed Low Limit [RPM]* and *parameter 4-13 Motor Speed High Limit [RPM]*. When the speed is below the specified limit in *parameter 1-86 Trip Speed Low [RPM]* (except when starting or stopping), the drive trips.

9.3.47 ALARM 50, AMA Calibration Failed

Troubleshooting

- Contact the Danfoss supplier or service department.

Operating Guide

9.3.48 ALARM 51, AMA Check Unom and Inom

Cause

The settings for motor voltage, motor current, and motor power are wrong.

Troubleshooting

- Check settings in *parameters 1-20 to 1-25*.

9.3.49 ALARM 52, AMA Low Inom

Cause

The motor current is too low.

Troubleshooting

- Check the settings in *parameter 1-24 Motor Current*.

9.3.50 ALARM 53, AMA Motor Too Big

Cause

The motor is too big for the AMA to operate.

9.3.51 ALARM 54, AMA Motor Too Small

Cause

The motor is too small for the AMA to operate.

9.3.52 ALARM 55, AMA Parameter Out of Range

Cause

The AMA cannot run because the parameter values of the motor are out of the acceptable range.

9.3.53 ALARM 56, AMA Interrupted by User

Cause

The AMA is manually interrupted.

9.3.54 ALARM 57, AMA Internal Fault

Cause

Try to restart the AMA. Repeated restarts can overheat the motor.

9.3.55 ALARM 58, AMA Internal Fault

Troubleshooting

Contact the Danfoss supplier.

9.3.56 WARNING 59, Current Limit

Cause

The current is higher than the value in *parameter 4-18 Current Limit*.

Troubleshooting

- Ensure that the motor data in *parameters 1-20 to 1-25* is set correctly.
- Increase the current limit if necessary. Ensure that the system can operate safely at a higher limit.

9.3.57 ALARM 60, External Interlock

Cause

A digital input signal indicates a fault condition external to the drive. Within the control compartment, the following 3 relay contacts are connected in series to 1 digit input that is used as a thermal overload relay:

- KFJ.1 monitors the heat within the input power options cabinet.
- KFJ.2 monitors the heat within the output filter cabinet.
- KFJ.3 monitors the heat within the input filter cabinet.

When the thermal switches in any of these cabinets open due to overtemperature, the drive trips on External Interlock [A60].

Operating Guide

Troubleshooting

- Open the control compartment and check for any lights in relays KFJ.1, KFJ.2, and KFJ.3. If no lights are present, check for other external interlocks.
- Clear the external fault condition.
- To resume normal operation, apply 24 V DC to the terminal programmed for external interlock.
- Reset the drive.

9.3.58 WARNING/ALARM 61, Feedback Error

Cause

An error between calculated speed and speed measurement from feedback device.

Troubleshooting

- Check the settings for warning/alarm/disabling in *parameter 4-30 Motor Feedback Loss Function*.
- Set the tolerable error in *parameter 4-31 Motor Feedback Speed Error*.
- Set the tolerable feedback loss time in *parameter 4-32 Motor Feedback Loss Timeout*.

9.3.59 WARNING 62, Output Frequency at Maximum Limit

Cause

The output frequency has reached the value set in *parameter 4-19 Max Output Frequency*.

Troubleshooting

- Check the application for possible causes.
- Increase the output frequency limit. Be sure that the system can operate safely at a higher output frequency.

The warning clears when the output drops below the maximum limit.

9.3.60 WARNING 64, Voltage Limit

Cause

The load and speed combination demands a motor voltage higher than the actual DC-link voltage.

9.3.61 WARNING/ALARM 65, Control Card Overtemperature

Cause

The cutout temperature of the control card has exceeded the upper limit.

Troubleshooting

- Check that the ambient operating temperature is within the limits.
- Check for clogged filters.
- Check fan operation.
- Check the control card.

9.3.62 WARNING 66, Heat Sink Temperature Low

Cause

The drive is too cold to operate. This warning is based on the temperature sensor in the IGBT module.

Troubleshooting

- Increase the ambient temperature of the unit.
- Supply a trickle amount of current to the drive whenever the motor is stopped by setting *parameter 2-00 DC Hold/Preheat Current* to 5% and *parameter 1-80 Function at Stop*.

9.3.63 ALARM 67, Option Module Configuration has Changed

Cause

One or more options have either been added or removed since the last power-down.

Troubleshooting

- Check that the configuration change is intentional and reset the unit.

Operating Guide

9.3.64 ALARM 68, Safe Stop Activated

Cause

Safe Torque Off (STO) has been activated.

Troubleshooting

- To resume normal operation, apply 24 V DC to terminal 37, then send a reset signal (via bus, digital, or by pressing [Reset]).

9.3.65 ALARM 69, Power Card Temperature

Cause

The temperature sensor on the power card is either too hot or too cold.

Troubleshooting

- Check that the ambient operating temperature is within the limits.
- Check for clogged filters.
- Check fan operation.
- Check the power card.

9.3.66 ALARM 70, Illegal FC Configuration

Cause

The control card and power card are incompatible.

Troubleshooting

- To check compatibility, contact the Danfoss supplier with the type code from the unit nameplate and the part numbers on the cards.

9.3.67 ALARM 71, PTC 1 Safe Stop

Cause

Because the motor is too warm, the VLT® PTC Thermistor Card MCB 112 activated the Safe Torque Off (STO).

Troubleshooting

- Once the motor temperature reaches an acceptable level and the digital input from MCB 112 is deactivated, perform 1 of the following:
 - Send a reset signal via bus or digital I/O.
 - Press [Reset].

9.3.68 ALARM 72, Dangerous Failure

Cause

Safe Torque Off (STO) with trip lock.

Troubleshooting

An unexpected combination of STO commands has occurred:

- VLT® PTC Thermistor Card MCB 112 enables X44/10, but STO is not enabled.
- MCB 112 is the only device using STO (specified through selection [4] PTC 1 alarm or [5] PTC 12 warning in parameter 5-19 Terminal 37 Safe Stop). STO is activated, but X44/10 is not activated.

9.3.69 WARNING 73, Safe Stop Auto Restart

Cause

STO activated.

Troubleshooting

- With automatic restart enabled, the motor can start when the fault is cleared.

9.3.70 ALARM 74, PTC Thermistor

Cause

The PTC is not working. Alarm is related to VLT® PTC Thermistor Card MCB 112.

9.3.71 ALARM 75, Illegal Profile Sel.

Cause

Do not write the parameter value while the motor is running.

Operating Guide

Troubleshooting

- Stop the motor before writing the MCO profile to *parameter 8-10 Control Word Profile*.

9.3.72 Warning 76, Power Unit Setup

Cause

The required number of power units do not match the detected number of active power units.

Troubleshooting

- When replacing an F-frame module, this will occur if the power specific data in the module power card does not match the rest of the drive. Confirm the spare part and its power card are the correct part number.

9.3.73 WARNING 77, Reduced Power Mode

Cause

The drive is operating in reduced power mode (less than allowed number of inverter sections). The warning is generated on power cycle when the drive is set to run with fewer inverters and remains on.

9.3.74 ALARM 78, Tracking Error

Cause

The difference between setpoint value and actual value exceeds the value in *parameter 4-35 Tracking Error*.

Troubleshooting

- Disable the function or select an alarm/warning in *parameter 4-34 Tracking Error Function*.
- Investigate the mechanics around the load and motor. Check feedback connections from motor encoder to drive.
- Select motor feedback function in *parameter 4-30 Motor Feedback Loss Function*.
- Adjust the tracking error band in *parameter 4-35 Tracking Error* and *parameter 4-37 Tracking Error Ramping*.

9.3.75 ALARM 79, Illegal Power Section Configuration

Cause

The scaling card has an incorrect part number or is not installed. The MK102 connector on the power card could not be installed.

9.3.76 ALARM 80, Drive Initialized to Default Value

Cause

Parameter settings are initialized to default settings after a manual reset. To clear the alarm, reset the unit.

9.3.77 ALARM 81, CSIV Corrupt

Cause

The CSIV file has syntax errors.

9.3.78 ALARM 82, CSIV Parameter Error

Cause

CSIV failed to initialize a parameter.

9.3.79 ALARM 83, Illegal Option Combination

Cause

The mounted options are incompatible.

9.3.80 ALARM 84, No Safety Option

Cause

The safety option was removed without applying a general reset.

Troubleshooting

Reconnect the safety option.

9.3.81 ALARM 85, Dang Fail PB

Cause

PROFIBUS/PROFIsafe error.

9.3.82 ALARM 88, Option Detection

Cause

A change in the option layout is detected. *Parameter 14-89 Option Detection* is set to [0] *Frozen configuration* and the option layout has been changed.

Troubleshooting

- To apply the change, enable option layout changes in *parameter 14-89 Option Detection*.
- Alternatively, restore the correct option configuration.

9.3.83 ALARM 90, Feedback Monitor

Troubleshooting

- Check the connection to the encoder/resolver option and, if necessary, replace the VLT® Encoder Input MCB 102 or VLT® Resolver Input MCB 103.

9.3.84 ALARM 91, Analog Input 54 Wrong Settings

Troubleshooting

- Set switch S202 in position OFF (voltage input) when a KTY sensor is connected to analog input terminal 54.

9.3.85 ALARM 99, Locked Rotor

Cause

The rotor is blocked.

Troubleshooting

- Check if the motor shaft is locked.
- Check if the start current triggers the current limit set in *parameter 4-18 Current Limit*.
- Check if it increases the value in *parameter 30-23 Locked Rotor Detection Time [s]*.

9.3.86 WARNING/ALARM 104, Mixing Fan Fault

Cause

The fan is not operating. The fan monitor checks that the fan is spinning at power-up or whenever the mixing fan is turned on. The mixing fan fault can be configured as a warning or an alarm in *parameter 14-53 Fan Monitor*.

Troubleshooting

- Cycle power to the drive to determine if the warning/alarm returns.

9.3.87 WARNING/ALARM 122, Mot. Rotat. Unexp.

Cause

The drive performs a function that requires the motor to be at standstill, for example DC hold for PM motors.

9.3.88 WARNING 163, ATEX ETR Cur.Lim.Warning

Cause

The drive has run above the characteristic curve for more than 50 s. The warning is activated at 83% and deactivated at 85% of the allowed thermal overload.

9.3.89 ALARM 164, ATEX ETR Cur.Lim.Alarm

Cause

Running above the characteristic curve for more than 60 s within a period of 600 s activates the alarm, and the drive trips.

9.3.90 WARNING 165, ATEX ETR Freq.Lim.Warning

Cause

The drive has run for more than 50 s below the allowed minimum frequency (*parameter 1-98 ATEX ETR Interpol. Points Freq.*).

9.3.91 ALARM 166, ATEX ETR Freq.Lim.Alarm

The drive has run for more than 60 s (in a period of 600 s) below the allowed minimum frequency (*parameter 1-98 ATEX ETR Interpol. Points Freq.*).

Operating Guide

9.3.92 ALARM 244, Heat Sink Temperature

Cause

The maximum temperature of the heat sink has been exceeded. The temperature fault cannot reset until the temperature drops below the defined heat sink temperature. The trip and reset points are different based on the power size. This alarm is equivalent to *Alarm 29, Heat Sink Temp.*

Troubleshooting

Check for the following:

- Ambient temperature too high.
- Motor cables too long.
- Incorrect airflow clearance above or below the AC drive.
- Blocked airflow around the unit.
- Damaged heat sink fan.
- Dirty heat sink.

9.3.93 WARNING 251, New Typecode

Cause

The power card or other components have been replaced, and the typecode has changed.

9.3.94 ALARM 421, Temperature Fault

Cause

A fault caused by the on-board temperature sensor is detected on the fan power card.

Troubleshooting

- Check wiring.
- Check the on-board temperature sensor.
- Replace fan power card.

9.3.95 ALARM 423, FPC Updating

Cause

The alarm is generated when the fan power card reports it has an invalid PUD. The control card attempts to update the PUD. A subsequent alarm can result depending on the update. See *Alarm 424, FPC Update Successful* and *Alarm 425 FPC Update Failure*.

9.3.96 ALARM 424, FPC Update Successful

Cause

This alarm is generated when the control card has successfully updated the fan power card PUD.

Troubleshooting

- Press [Reset] to stop the alarm.

9.3.97 ALARM 425, FPC Update Failure

Cause

This alarm is generated after the control card failed to update the fan power card PUD.

Troubleshooting

- Check the fan power card wiring.
- Replace fan power card.
- Contact supplier.

9.3.98 ALARM 426, FPC Config

Cause

The number of found fan power cards does not match the number of configured fan power cards. See *parameter group 15-6* Option Ident* for the number of configured fan power cards.

Troubleshooting

- Check fan power card wiring.
- Replace fan power card.

Operating Guide

9.3.99 ALARM 427, FPC Supply

Cause

Supply voltage fault (5 V, 24 V, or 48 V) on fan power card is detected.

Troubleshooting

- Check fan power card wiring.
- Replace fan power card.

9.4 Troubleshooting

Table 95: Troubleshooting

Symptom	Possible cause	Test	Solution
Display dark/No function	Missing input power.	Check for loose connections.	Check the input power source.
	Missing or open fuses.	See <i>Open power fuses</i> in this table for possible causes.	Follow the recommendations provided.
	No power to the LCP.	Check the LCP cable for proper connection or damage.	Replace the faulty LCP or connection cable.
	Short circuit on control voltage (terminal 12 or 50) or at control terminals.	Check the 24 V control voltage supply for terminal 12/13 to 20–39, or 10 V supply for terminals 50–55.	Wire the terminals properly.
	Incompatible LCP (LCP from VLT® 2800 or 5000/6000/8000/FCD or FCM).	–	Use only LCP 101 (P/N 130B1124) or LCP 102 (P/N. 130B1107).
	Wrong contrast setting.	–	To adjust the contrast, press [Status] + [▲]/[▼].
	Display (LCP) is defective.	Test using a different LCP.	Replace the faulty LCP or connection cable.
	Internal voltage supply fault or SMPS is defective.	–	Contact supplier.
Intermittent display	Overloaded supply (SMPS) due to improper control wiring or a fault within the AC drive.	To rule out a problem in the control wiring, disconnect all control wiring by removing the terminal blocks.	If the display stays lit, the problem is in the control wiring. Check the wiring for shorts or incorrect connections. If the display continues to cut out, follow the procedure for <i>Display dark\No function</i> .
Motor not running	Service switch open or missing motor connection.	–	Connect the motor and check the service switch.
	No mains power with 24 V DC option card.	–	Apply mains power.
	LCP stop.	–	Depending on the operating mode, press [Auto On] or [Hand On].
	Missing start signal (Standby).	–	Apply a valid start signal.
	Motor coast signal active (Coasting).	–	Apply 24 V on terminal 27 or program this terminal to [0] <i>No operation</i> .
	Wrong reference signal source.	Check reference signal: <ul style="list-style-type: none"> • Local • Remote or bus reference? • Preset reference active? 	Program correct settings. Check <i>parameter 3-13 Reference Site</i> . Set preset reference active in <i>parameter group 3-1* References</i> . Check for correct wiring. Check scaling of terminals. Check reference signal.

Operating Guide

Symptom	Possible cause	Test	Solution
		<ul style="list-style-type: none"> Terminal connection correct? Scaling of terminals correct? Reference signal available? 	
Motor running in wrong direction	Motor rotation limit.	Check that <i>parameter 4-10 Motor Speed Direction</i> is programmed correctly.	Program correct settings.
	Active reversing signal.	Check if a reversing command is programmed for the terminal in <i>parameter group 5-1* Digital inputs</i> .	Deactivate reversing signal.
	Wrong motor phase connection.	–	Correct motor phase connection, or set <i>parameter 1-06 Clockwise Direction</i> to [1] Inverse.
Motor is not reaching maximum speed	Frequency limits set wrong.	Check output limits in <i>parameter 4-13 Motor Speed High Limit [RPM]</i> , <i>parameter 4-14 Motor Speed High Limit [Hz]</i> , and <i>parameter 4-19 Max Output Frequency</i> .	Program correct limits.
	Reference input signal not scaled correctly.	Check reference input signal scaling in <i>parameter group 6-0* Analog I/O mode</i> and <i>parameter group 3-1* References</i> .	Program correct settings.
Motor speed unstable	Possible incorrect parameter settings.	Check the settings of all motor parameters, including all motor compensation settings. For closed-loop operation, check PID settings.	Check settings in <i>parameter group 1-6* Load Depen. Setting</i> . For closed-loop operation, check settings in <i>parameter group 20-0* Feedback</i> .
Motor runs rough	Possible overmagnetization.	Check for incorrect motor settings in all motor parameters.	Check motor settings in <i>parameter groups 1-2* Motor data</i> , <i>1-3* Adv Motor Data</i> , and <i>1-5* Load Indep. Setting</i> .
Motor does not brake	Possible incorrect settings in the brake parameters. Ramp-down times may be too short.	Check brake parameters. Check ramp time settings.	Check <i>parameter groups 2-0* DC Brake</i> and <i>3-0* Reference Limits</i> .
Open power fuses	Phase-to-phase short.	Motor or panel has a short phase-to-phase. Check motor and panel phases for shorts.	Eliminate any shorts detected.
	Motor overload.	Motor is overloaded for the application.	Perform start-up test and verify that motor current is within specifications. If motor current is exceeding the nameplate full load current, the motor can run only with reduced load. Review the specifications for the application.
	Loose connections.	Perform pre-start-up check for loose connections.	Tighten loose connections.
Mains current imbalance greater than 3%	Problem with mains power (see <i>Alarm 4, Mains phase loss</i> description).	Rotate input power leads into the AC drive 1 position: A to B, B to C, C to A.	If imbalanced leg follows the wire, it is a power problem. Check the mains supply.

Operating Guide

Symptom	Possible cause	Test	Solution
	Problem with the AC drive.	Rotate input power leads into the AC drive 1 position: A to B, B to C, C to A.	If the imbalanced leg stays on same input terminal, it is a problem with the AC drive. Contact the supplier.
Motor current imbalance greater than 3%	Problem with motor or motor wiring.	Rotate output motor cables 1 position: U to V, V to W, W to U.	If the imbalanced leg follows the wire, the problem is in the motor or motor wiring. Check motor and motor wiring.
	Problem with AC drive.	Rotate output motor cables 1 position: U to V, V to W, W to U.	If the imbalanced leg stays on same output terminal, it is a problem with the unit. Contact the supplier.
AC drive acceleration problems	Motor data are entered incorrectly.	If warnings or alarms occur, refer to the <i>Warnings and Alarms</i> section. Check that motor data are entered correctly.	Increase the ramp-up time in <i>parameter 3-41 Ramp 1 Ramp Up Time</i> . Increase current limit in <i>parameter 4-18 Current Limit</i> . Increase torque limit in <i>parameter 4-16 Torque Limit Motor Mode</i> .
AC drive deceleration problems	Motor data are entered incorrectly.	If warnings or alarms occur, refer to the <i>Warnings and Alarms</i> section. Check that motor data are entered correctly.	Increase the ramp-down time in <i>parameter 3-42 Ramp 1 Ramp Down Time</i> . Enable overvoltage control in <i>parameter 2-17 Over-voltage Control</i> .

10 Specifications

10.1 Electrical Data

10.1.1 Electrical Data, 380–480 V AC

Table 96: Electrical Data, Mains Supply 3x380–480 V AC

FC 102	N110	N132	N160	N200	N250	N315
Normal overload 110% torque for a duration of 60 s.	NO	NO	NO	NO	NO	NO
Typical shaft output at 400 V [kW]	110	132	160	200	250	315
Typical shaft output at 460 V [hp]	150	200	250	300	350	450
Typical shaft output at 480 V [kW]	132	160	200	250	315	355
Enclosure size	D9h	D9h	D9h	D10h	D10h	D10h
Output current (3-phase)						
Continuous (at 400 V) [A]	212	260	315	395	480	588
Intermittent (60 s overload) (at 400 V) [A]	233	286	347	435	528	647
Continuous (at 460/480 V) [A]	190	240	302	361	443	535
Intermittent (60 s overload) (at 460/480 V) [A]	209	264	332	397	487	589
Continuous kVA (at 400 V) [kVA]	147	180	218	274	333	407
Continuous kVA (at 460 V) [kVA]	151	191	241	288	353	426
Continuous kVA (at 480 V) [kVA]	165	208	262	313	384	463
Maximum input current						
Continuous (at 400 V) [A]	204	251	304	381	463	567
Continuous (at 460/480 V) [A]	183	231	291	348	427	516
Maximum number and size of cables per phase						
- Mains [mm ² (AWG)]	2x95 (2x3/0 mcm)	2x95 (2x3/0 mcm)	2x95 (2x3/0 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)
- Mains with disconnect [mm ² (AWG)]	2x95 (2x3/0 mcm)	2x95 (2x3/0 mcm)	2x95 (2x3/0 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)
- Mains with fusible disconnect [mm ² (AWG)]	2x95 (2x3/0 mcm)	2x95 (2x3/0 mcm)	2x95 (2x3/0 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)
- Mains with contactor [mm ² (AWG)]	2x95 (2x3/0 mcm)	2x95 (2x3/0 mcm)	2x95 (2x3/0 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)
- Motor [mm ² (AWG)]	2x95 (2x3/0 mcm)	2x95 (2x3/0 mcm)	2x95 (2x3/0 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)
Drive module power loss at 400 V [W] ⁽¹⁾⁽²⁾⁽³⁾	2559	2954	3770	4116	5137	6674

FC 102	N110	N132	N160	N200	N250	N315
Drive module power loss at 460 V [W] ⁽¹⁾⁽²⁾⁽³⁾	2261	2724	3628	3569	4566	5714
Drive efficiency ⁽²⁾	0.98	0.98	0.98	0.98	0.98	0.98
Output frequency [Hz] ⁽⁴⁾	0–590	0–590	0–590	0–590	0–590	0–590
Heat sink overtemperature trip [°C (°F)]	110 (230)	110 (230)	110 (230)	110 (230)	110 (230)	110 (230)
Control card overtemperature trip [°C (°F)]	75 (167)	75 (167)	75 (167)	80 (176)	80 (176)	80 (176)
PHF overtemperature trip [°C (°F)]	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)
dU/dt filter overtemperature trip [°C (°F)]	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)
Sine-wave filter overtemperature trip [°C (°F)]	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)

¹ Typical power loss is at normal conditions and expected to be within $\pm 15\%$ (tolerance relates to variety in voltage and cable conditions.) These values are based on a typical motor efficiency (IE/IE3 border line). Lower efficiency motors add to the power loss in the drive. Applies to dimensioning of drive cooling. If the switching frequency is higher than the default setting, the power losses can increase. LCP and typical control card power consumptions are included. For power loss data according to EN 50598-2, refer to drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/. Options and customer load can add up to 30 W to the losses, though usually a fully loaded control card and options for slots A and B each add only 4 W.

² Measured using 5 m (16.4 ft) shielded motor cables at rated load and rated frequency. Efficiency measured at nominal current. For energy efficiency class, see the *Ambient Conditions* section. For part load losses, see drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/.

³ See also *Input Power Option Losses* section.

⁴ If using an output filter, the output frequency is limited further. See the *Motor Output (U, V, W)* section.

Table 97: Electrical Data, Mains Supply 3x380–480 V AC

FC 102	N355	N400	N450	N500	N560
Normal overload 110% torque for a duration of 60 s.	NO	NO	NO	NO	NO
Typical shaft output at 400 V [kW]	355	400	450	500	560
Typical shaft output at 460 V [hp]	500	600	600	650	750
Typical shaft output at 480 V [kW]	400	500	530	560	630
Enclosure size	E5h	E5h	E5h	E6h	E6h
Output current (3-phase)					
Continuous (at 400 V) [A]	658	745	800	880	990
Intermittent (60 s overload) (at 400 V) [A]	724	820	880	968	1089
Continuous (at 460/480 V) [A]	590	678	730	780	890
Intermittent (60 s overload) (at 460/480 V) [A]	649	746	803	858	979
Continuous kVA (at 400 V) [kVA]	456	516	554	610	686
Continuous kVA (at 460 V) [kVA]	470	540	582	621	709

FC 102	N355	N400	N450	N500	N560
Continuous kVA (at 480 V) [kVA]	511	587	632	675	771
Maximum input current					
Continuous (at 400 V) [A]	634	718	771	848	954
Continuous (at 460/480 V) [A]	569	653	704	752	858
Maximum number and size of cables per phase					
- Mains [mm ² (AWG)]	4x127 (4x250 mcm)	4x127 (4x250 mcm)	4x127 (4x250 mcm)	4x185 (4x350 mcm)	4x185 (4x350 mcm)
- Mains with disconnect [mm ² (AWG)]	4x127 (4x250 mcm)	4x127 (4x250 mcm)	4x127 (4x250 mcm)	4x185 (4x350 mcm)	4x185 (4x350 mcm)
- Mains with fusible disconnect [mm ² (AWG)]	4x120 (4x250 mcm)	4x120 (4x250 mcm)	4x120 (4x250 mcm)	4x185 (4x350 mcm)	4x185 (4x350 mcm)
- Mains with contactor [mm ² (AWG)]	4x127 (4x250 mcm)	4x127 (4x250 mcm)	4x127 (4x250 mcm)	4x185 (4x350 mcm)	4x185 (4x350 mcm)
- Motor [mm ² (AWG)]	4x127 (4x250 mcm)	4x127 (4x250 mcm)	4x127 (4x250 mcm)	4x185 (4x350 mcm)	4x185 (4x350 mcm)
Drive module power loss at 400 V [W] ⁽¹⁾⁽²⁾ (3)	6928	8036	8783	9473	11102
Drive module power loss at 460 V [W] ⁽¹⁾⁽²⁾ (3)	5910	6933	7969	7809	9236
Drive efficiency ⁽²⁾	0.98	0.98	0.98	0.98	0.98
Output frequency [Hz] ⁽⁴⁾	0–590	0–590	0–590	0–590	0–590
Heat sink overtemperature trip [°C (°F)]	110 (230)	110 (230)	110 (230)	110 (230)	100 (212)
Control card overtemperature trip [°C (°F)]	80 (176)	80 (176)	80 (176)	80 (176)	80 (176)
PHF overtemperature trip [°C (°F)]	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)
dU/dt filter overtemperature trip [°C (°F)]	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)
Sine-wave filter overtemperature trip [°C (°F)]	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)

¹ Typical power loss is at normal conditions and expected to be within ±15% (tolerance relates to variety in voltage and cable conditions.) These values are based on a typical motor efficiency (IE/IE3 border line). Lower efficiency motors add to the power loss in the drive. Applies to dimensioning of drive cooling. If the switching frequency is higher than the default setting, the power losses can increase. LCP and typical control card power consumptions are included. For power loss data according to EN 50598-2, refer to drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/. Options and customer load can add up to 30 W to the losses, though usually a fully loaded control card and options for slots A and B each add only 4 W.

² Measured using 5 m (16.4 ft) shielded motor cables at rated load and rated frequency. Efficiency measured at nominal current. For energy efficiency class, see the *Ambient Conditions* section. For part load losses, see drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/.

³ See also *Input Power Option Losses* section.

⁴ If using an output filter, the output frequency is limited further. See the *Motor Output (U, V, W)* section.

10.1.2 Electrical Data, 525–690 V AC

Table 98: Electrical Data, Mains Supply 3x525–690 V AC

FC 102	N110	N132	N160	N200	N250	N315	N400	N450
Normal overload 110% torque for a duration of 60 s.	NO	NO	NO	NO	NO	NO	NO	NO
Typical shaft output at 550 V [kW]	90	110	132	160	200	250	315	355
Typical shaft output at 575 V [hp]	125	150	200	250	300	350	400	450
Typical shaft output at 690 V [kW]	110	132	160	200	250	315	400	450
Enclosure size	D9h	D9h	D9h	D10h	D10h	D10h	D10h	E5h
Output current (3-phase)								
Continuous (at 550 V) [A]	137	162	201	253	303	360	418	470
Intermittent (60 s overload) (at 550 V) [A]	151	178	221	278	333	396	460	517
Continuous (at 575/690 V) [A]	131	155	192	242	290	344	400	450
Intermittent (60 s overload) (at 575/690 V) [A]	144	171	211	266	319	378	440	495
Continuous kVA (at 550 V) [kVA]	125	147	183	230	276	327	380	448
Continuous kVA (at 575 V) [kVA]	131	154	191	241	289	343	398	448
Continuous kVA (at 690 V) [kVA]	157	185	230	289	347	411	478	538
Maximum input current								
Continuous (at 525 V) [A]	132	156	193	244	292	347	403	453
Continuous (at 575/690 V) [A]	126	149	185	233	279	332	385	434
Maximum number and size of cables per phase								
- Mains [mm ² (AWG)]	2x95 (2x3/0 mcm)	2x95 (2x3/0 mcm)	2x95 (2x3/0 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)	4x127 (4x250 mcm)
- Mains with disconnect [mm ² (AWG)]	2x95 (2x3/0 mcm)	2x95 (2x3/0 mcm)	2x95 (2x3/0 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)	4x127 (4x250 mcm)
- Mains with fusible disconnect [mm ² (AWG)]	2x95 (2x3/0 mcm)	2x95 (2x3/0 mcm)	2x95 (2x3/0 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)	4x127 (4x250 mcm)

FC 102	N110	N132	N160	N200	N250	N315	N400	N450
- Mains with contactor [mm ² (AWG)]	2x95 (2x3/0 mcm)	2x95 (2x3/0 mcm)	2x95 (2x3/0 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)	4x127 (4x250 mcm)
- Motor [mm ² (AWG)]	2x95 (2x3/0 mcm)	2x95 (2x3/0 mcm)	2x95 (2x3/0 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)	4x127 (4x250 mcm)
Drive module power loss at 600 V [W] ⁽¹⁾⁽²⁾⁽³⁾	1740	2101	2649	3074	3723	4465	5028	6062
Drive module power loss at 690 V [W] ⁽¹⁾⁽²⁾⁽³⁾	1798	2167	2740	3175	3851	4614	5155	5939
Drive efficiency ⁽²⁾	0.98	0.98	0.98	0.98	0.98	0.98	0.98	0.98
Output frequency [Hz] ⁽⁴⁾	0–590	0–590	0–590	0–590	0–590	0–590	0–590	0–500
Heat sink overtemperature trip [°C (°F)]	110 (230)	110 (230)	110 (230)	110 (230)	110 (230)	110 (230)	110 (230)	110 (230)
Control card overtemperature trip [°C (°F)]	75 (167)	75 (167)	75 (167)	75 (167)	80 (176)	80 (176)	80 (176)	80 (176)
PHF overtemperature trip [°C (°F)]	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)
dU/dt filter overtemperature trip [°C (°F)]	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)
Sine-wave filter overtemperature trip [°C (°F)]	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)

¹ Typical power loss is at normal conditions and expected to be within ±15% (tolerance relates to variety in voltage and cable conditions.) These values are based on a typical motor efficiency (IE/IE3 border line). Lower efficiency motors add to the power loss in the drive. Applies to dimensioning of drive cooling. If the switching frequency is higher than the default setting, the power losses can increase. LCP and typical control card power consumptions are included. For power loss data according to EN 50598-2, refer to drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/. Options and customer load can add up to 30 W to the losses, though usually a fully loaded control card and options for slots A and B each add only 4 W.

² Measured using 5 m (16.4 ft) shielded motor cables at rated load and rated frequency. Efficiency measured at nominal current. For energy efficiency class, see the *Ambient Conditions* section. For part load losses, see drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/.

³ See also *Input Power Option Losses* section.

⁴ If using an output filter, the output frequency is limited further. See the *Motor Output (U, V, W)* section.

Table 99: Electrical Data, Mains Supply 3x525–690 V AC

FC 102	N500	N560	N630	N710	N800
Normal overload 110% torque for a duration of 60 s.	NO	NO	NO	NO	NO
Typical shaft output at 550 V [kW]	400	450	500	560	670
Typical shaft output at 575 V [hp]	500	600	650	750	950
Typical shaft output at 690 V [kW]	500	560	630	710	800
Enclosure size	E5h	E5h	E6h	E6h	E6h
Output current (3-phase)					
Continuous (at 550 V) [A]	523	596	630	763	889

FC 102	N500	N560	N630	N710	N800
Intermittent (60 s overload) (at 550 V) [A]	575	656	693	839	978
Continuous (at 575/690 V) [A]	500	570	630	730	850
Intermittent (60 s overload) (at 575/690 V) [A]	550	627	693	803	935
Continuous kVA (at 550 V) [kVA]	498	568	600	727	847
Continuous kVA (at 575 V) [kVA]	498	568	627	727	847
Continuous kVA (at 690 V) [kVA]	598	681	753	872	1016
Maximum input current					
Continuous (at 525 V) [A]	504	574	607	735	857
Continuous (at 575/690 V) [A]	482	549	607	704	819
Maximum number and size of cables per phase					
- Mains [mm ² (AWG)]	4x127 (4x250 mcm)	4x127 (4x250 mcm)	4x185 (4x350 mcm)	4x185 (4x350 mcm)	4x185 (4x350 mcm)
- Mains with disconnect [mm ² (AWG)]	4x127 (4x250 mcm)	4x127 (4x250 mcm)	4x185 (4x350 mcm)	4x185 (4x350 mcm)	4x185 (4x350 mcm)
- Mains with fusible disconnect [mm ² (AWG)]	4x127 (4x250 mcm)	4x127 (4x250 mcm)	4x185 (4x350 mcm)	4x185 (4x350 mcm)	4x185 (4x350 mcm)
- Mains with contactor [mm ² (AWG)]	4x127 (4x250 mcm)	4x127 (4x250 mcm)	4x185 (4x350 mcm)	4x185 (4x350 mcm)	4x185 (4x350 mcm)
- Motor [mm ² (AWG)]	4x127 (4x250 mcm)	4x127 (4x250 mcm)	4x185 (4x350 mcm)	4x185 (4x350 mcm)	4x185 (4x350 mcm)
Drive module power loss at 600 V [W] ⁽¹⁾⁽²⁾⁽³⁾	6879	8076	9208	10346	12723
Drive module power loss at 690 V [W] ⁽¹⁾⁽²⁾⁽³⁾	6715	7852	8921	10066	12321
Drive efficiency ⁽²⁾	0.98	0.98	0.98	0.98	0.98
Output frequency [Hz] ⁽⁴⁾	0–500	0–500	0–500	0–500	0–500
Heat sink overtemperature trip [°C (°F)]	110 (230)	110 (230)	110 (230)	110 (230)	110 (230)
Control card overtemperature trip [°C (°F)]	80 (176)	80 (176)	80 (176)	80 (176)	80 (176)
PHF overtemperature trip [°C (°F)]	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)
dU/dt filter overtemperature trip [°C (°F)]	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)

FC 102	N500	N560	N630	N710	N800
Sine-wave filter overtemperature trip [°C (°F)]	150 (302)	150 (302)	150 (302)	150 (302)	150 (302)

¹ Typical power loss is at normal conditions and expected to be within $\pm 15\%$ (tolerance relates to variety in voltage and cable conditions.) These values are based on a typical motor efficiency (IE/IE3 border line). Lower efficiency motors add to the power loss in the drive. Applies to dimensioning of drive cooling. If the switching frequency is higher than the default setting, the power losses can increase. LCP and typical control card power consumptions are included. For power loss data according to EN 50598-2, refer to drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/. Options and customer load can add up to 30 W to the losses, though usually a fully loaded control card and options for slots A and B each add only 4 W.

² Measured using 5 m (16.4 ft) shielded motor cables at rated load and rated frequency. Efficiency measured at nominal current. For energy efficiency class, see the *Ambient Conditions* section. For part load losses, see drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/.

³ See also *Input Power Option Losses* section.

⁴ If using an output filter, the output frequency is limited further. See the *Motor Output (U, V, W)* section.

10.2 Mains Supply

The unit is suitable for use on a circuit capable of delivering not more than 65 kA short circuit current rating (SCCR) at 480/600 V.

Supply terminals	L1, L2, L3
Supply voltage ⁽¹⁾	380–480/500 V $\pm 10\%$, 525–690 V $\pm 10\%$
Supply frequency	50/60 Hz $\pm 5\%$
Maximum imbalance temporary between mains phases	3.0% of rated supply voltage ⁽²⁾
True power factor (λ)	≥ 0.9 nominal at rated load
Displacement power factor ($\cos \Phi$)	Near unity (> 0.98)
Switching on the input supply L1, L2, and L3 (power-ups)	Maximum 1 time/2 minutes
Environment according to EN 60664-1	Overvoltage category III/pollution degree 2

¹ Mains voltage low/mains drop-out: During low mains voltage or a mains drop-out, the drive continues until the DC-link voltage drops below the minimum stop level, which corresponds typically to 15% below the drive's lowest rated supply voltage. Power-up and full torque cannot be expected at mains voltage lower than 10% below the drive's lowest rated supply voltage.

² Calculations based on UL/IEC 61800-3.

10.3 Motor Output and Motor Data

10.3.1 Motor Output (U, V, W)

Output voltage	0–100% of supply voltage
Output frequency (without sine-wave filter)	0–590 Hz ⁽¹⁾
Output frequency (with sine-wave filter and no derating)	0–60 Hz without derating
Output frequency (with sine-wave filter and derating)	0–100 Hz
Output frequency in flux mode	0–300 Hz
Switching on output	Unlimited
Ramp times	0.01–3600 s

¹ Dependent on voltage and power.

10.3.2 Torque Characteristics

Starting torque (constant torque)	Maximum 150% for 60 s once in 10 minutes ⁽¹⁾
Starting/overload torque (variable torque)	Maximum 110% up to 0.5 s once in 10 minutes ⁽¹⁾
Torque rise time in flux (for 5 kHz f_{sw})	1 ms

Torque rise time in VVC ⁺ (independent of f_{sw})	10 ms
-----------------------------------------------------------------	-------

¹ Percentage relates to the nominal torque.

10.4 Ambient Conditions

Enclosure	IP21/NEMA 1, IP54/NEMA 12
Vibration test	1.0 g
Maximum THDv	10%
Maximum relative humidity	5–93 (IEC 721-3-3); Class 3K3 (non-condensing) during operation
Aggressive environment (IEC 60068-2-43) H ₂ S test	Class Kd
Ambient temperature	Maximum 50° C (122° F) (24-hour average maximum 45° C (113° F)) ⁽¹⁾
Minimum ambient temperature during full-scale operation	0° C (32° F) ⁽¹⁾
Minimum ambient temperature at reduced speed performance	-10° C (14° F) ⁽¹⁾
Temperature during storage/transport	-25 to +65/70° C (-13 to +149/158° F)
Maximum altitude above sea level without derating	1000 m (3280 ft)
EMC standards, Emission	EN 61800-3
EMC standards, Immunity	EN 61800-3
Energy efficiency class ⁽²⁾	IE2

¹ For more information on derating, refer to the product-specific Design Guide.

² Determined according to IEC 61800-9-2 at:

- Rated load.
- 90% rated frequency.
- Switching frequency factory setting.
- Switching pattern factory setting.

10.5 Motor and Control Cables

Maximum motor cable length, shielded	150 m (492 ft)
Maximum motor cable length, unshielded	300 m (984 ft)
Maximum cross-section to control terminals, flexible/rigid wire without cable end sleeves	1.5 mm ² /16 AWG
Maximum cross-section to control terminals, flexible wire with cable end sleeves	1 mm ² /18 AWG
Maximum cross-section to control terminals, flexible wire with cable end sleeves with collar	0.5 mm ² /20 AWG
Minimum cross-section to control terminals	0.25 mm ² /24 AWG

For power cables, see the *Electrical Data* section.

10.6 Control Input/Output and Control Data

10.6.1 Control Card, USB Serial Communication

USB standard	1.1 (full speed)
USB plug ⁽¹⁾	USB type B plug

¹ Connection to the PC is carried out via a standard host/device USB cable.

The USB connection is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals; however, the USB ground connection is not galvanically isolated from ground. Use only an isolated laptop as PC connection to the USB connector on the drive.

10.6.2 STO Terminal XD2.19 (Terminal XD2.19 is Fixed PNP Logic)

STO Terminal XD2.19 ⁽¹⁾⁽²⁾	
Voltage level	0–24 V DC
Voltage level, logic 0 PNP	<4 V DC
Voltage level, logic 1 PNP	>20 V DC
Maximum voltage on input	28 V DC
Typical input current at 24 V	50 mA rms
Typical input current at 20 V	60 mA rms
Input capacitance	400 nF

¹ For more information about Terminal XD2.19 (Terminal 37 on the drive module) and Safe Torque Off, see the VLT® FC Series - Safe Torque Off Operating Guide.

² When using a contactor with a DC coil inside with STO, it is important to make a return way for the current from the coil when turning it off. This can be done by using a freewheel diode (or, alternatively, a 30 V or 50 V MOV for quicker response time) across the coil. Typical contactors can be bought with this diode.

All digital inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

10.6.3 Control Card, 24 V DC Output

Terminal number	XD2.10, XD2.11
Output voltage	24 V +1, -3 V
Maximum load	200 mA

The 24 V DC supply is galvanically isolated from the supply voltage (PELV), but has the same potential as the analog and digital inputs and outputs.

10.6.4 Control Card, 10 V DC Output

Terminal number	XD2.6
Output voltage	10.5 V ±0.5 V
Maximum load	15 mA

The 10 V DC supply is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

10.6.5 Digital Outputs

Programmable digital/pulse outputs	2
Terminal number ⁽¹⁾	XD2.14, XD2.15
Voltage level at digital/frequency output	0–24 V
Maximum output current (sink or source)	40 mA
Maximum load at frequency output	1 kΩ
Maximum capacitive load at frequency output	10 nF
Minimum output frequency at frequency output	0 Hz
Maximum output frequency at frequency output	32 kHz
Accuracy of frequency output	Maximum error: 0.1% of full scale
Resolution of frequency outputs	12 bit

¹ Can also be programmed as input.

The digital output is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

10.6.6 Digital Inputs

Programmable digital inputs	4 (6)
Terminal number ⁽¹⁾	XD2.12, XD2.13, XD2.14, XD2.15, XD2.16, XD2.17
Logic	PNP or NPN
Voltage level	0–24 V DC
Voltage level, logic 0 PNP	<5 V DC
Voltage level, logic 1 PNP	>10 V DC
Voltage level, logic 0 NPN ⁽²⁾	>19 V DC
Voltage level, logic 1 NPN ⁽²⁾	<14 V DC
Maximum voltage on input	28 V DC
Pulse frequency range	0–110 kHz
(Duty cycle) minimum pulse width	4.5 ms
Input resistance, R _i	Approximately 4 kΩ

¹ Terminals XD2.14 and XD2.15 can also be programmed as output.

² Except STO input terminal XD2.19.

All digital inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

10.6.7 Pulse/Encoder Inputs

Programmable pulse/encoder inputs	2/1
Terminal number (pulse inputs)	XD2.17
Terminal number (encoder inputs) ⁽²⁾	XD2.16, XD2.17
Maximum frequency at terminals XD2.15, XD2.16, XD2.17 (push-pull driven)	110 kHz
Maximum frequency at terminals XD2.15, XD2.16, XD2.17 (open collector)	5 kHz
Maximum frequency at terminals XD2.15, XD2.16, XD2.17	4 kHz
Voltage level	See <i>Control Input/Output and Control Data</i> .
Maximum voltage on input	28 V DC
Input resistance, R _i	Approximately 4 kΩ
Pulse input accuracy (0.1–1 kHz)	Maximum error: 0.1% of full scale
Encoder input accuracy (1–11 kHz)	Maximum error: 0.05% of full scale

² Encoder inputs: XD2.16=A, XD2.17=B.

The pulse and encoder inputs (terminals XD2.15, XD2.16, XD2.17) are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

10.6.8 Control Characteristics

Resolution of output frequency at 0–590 Hz	±0.003 Hz
Repeat accuracy of precise start/stop (terminals XD2.12, XD2.13)	≤±0.1 ms
System response time (terminals XD2.12, XD2.13, XD2.14, XD2.15, XD2.16, XD2.17)	≤2 ms
Speed control range (open loop)	1:100 of synchronous speed
Speed control range (closed loop)	1:1000 of synchronous speed
Speed accuracy (open loop)	30–4000 RPM: Error ±8 RPM
Speed accuracy (closed loop), depending on resolution of feedback device	0–6000 RPM: Error ±0.15 RPM
Torque control accuracy (speed feedback)	Maximum error ±5% of rated torque

All control characteristics are based on a 4-pole, asynchronous motor.

10.6.9 Relay Outputs

Programmable relay outputs	2
Relay 01 terminal number ⁽¹⁾	21–23 (break), 21–22 (make)
Maximum terminal load (AC-1) on 21–23 (NC), 21–22 (NO) (resistive load) ⁽²⁾⁽³⁾	240 V AC, 2 A
Maximum terminal load (AC-15) (inductive load @ $\cos\phi$ 0.4)	240 V AC, 0.2 A
Maximum terminal load (DC-1) on 21–22 (NO), 21–23 (NC) (resistive load)	60 V DC, 1 A
Maximum terminal load (DC-13) (inductive load)	24 V DC, 0.1 A
Relay 02 terminal number ⁽¹⁾	24–26 (break), 24–25 (make)
Maximum terminal load (AC-1) on 24–25 (NO) (resistive load) ⁽²⁾⁽³⁾	400 V AC, 2 A
Maximum terminal load (AC-15) on 24–25 (NO) (inductive load @ $\cos\phi$ 0.4)	240 V AC, 0.2 A
Maximum terminal load (DC-1) on 24–25 (NO) (resistive load)	80 V DC, 2 A
Maximum terminal load (DC-13) on 24–25 (NO) (inductive load)	24 V DC, 0.1 A
Maximum terminal load (AC-1) on 24–26 (NC) (resistive load)	240 V AC, 2 A
Maximum terminal load (AC-15) on 24–26 (NC) (inductive load @ $\cos\phi$ 0.4)	240 V AC, 0.2 A
Maximum terminal load (DC-1) on 24–26 (NC) (resistive load)	50 V DC, 2 A
Maximum terminal load (DC-13) on 24–26 (NC) (inductive load)	24 V DC, 0.1 A
Minimum terminal load on 21–23 (NC), 21–22 (NO), 24–26 (NC), 24–25 (NO)	24 V DC 10 mA, 24 V AC 20 mA
Environment according to EN 60664-1	Overvoltage category III/pollution degree 2

¹ IEC 60947 parts 4 and 5. The relay contacts are galvanically isolated from the rest of the circuit by reinforced isolation (PELV).

² Overvoltage category II.

³ UL applications 300 V AC 2 A.

10.6.10 Analog Output

Number of programmable outputs	1
Terminal number	XD2.5
Current range at analog output	0/4 to 20 mA
Maximum load GND - analog output less than	500 Ω
Accuracy on analog output	Maximum error: 0.5% of full scale
Resolution of analog output	12 bit

The analog output is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

10.6.11 Analog Inputs

Number of analog inputs	2
Terminal number	XD2.7, XD2.8
Modes	Voltage or current
Mode select	Switch S201 and switch S202
Voltage mode	Switch S201/switch S202 = OFF (U)
Voltage level	-10 V to +10 V (scaleable)
Input resistance, R_i	Approximately 10 k Ω

Maximum voltage	±20 V
Current mode	Switch S201/S202 = ON (I)
Current level	0/4 to 20 mA (scaleable)
Input resistance, R_i	Approximately 200 Ω
Maximum current	30 mA
Resolution for analog inputs	10 bit (+ sign)
Accuracy of analog inputs	Maximum error 0.5% of full scale
Bandwidth	100 Hz

The analog inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

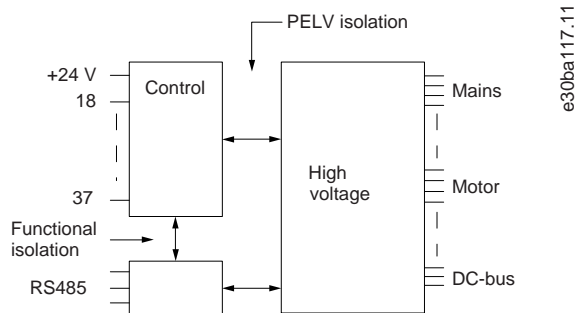


Illustration 69: PELV Isolation

10.6.12 Control Card, RS485 Serial Communication

Terminal number	XD2.2 (P,TX+, RX+), XD2.3 (N,TX-, RX-)
Terminal number XD2.1	Common for terminals XD2.2 and XD2.3

The RS485 serial communication circuit is galvanically isolated from the supply voltage (PELV).

10.6.13 Control Card Performance

Scan interval	1 ms
---------------	------

10.7 Filter Specifications

10.7.1 Passive Harmonic Filter Specifications

Phase imbalance	Maximum of 3%
Voltage variation	+10%–15%
Nominal frequency	-2%, +2% (of 50 Hz or 60 Hz) when PHF is installed
Overload capability	150% for 60 s in a period of 10 minutes
Maximum inrush current, drive side	Maximum $5xI_{nom}$ drive
Maximum inrush current, PHF input side	Maximum $2xI_{nom}$ drive
Power derating	Same as drive

Table 100: Displacement Power Factor (Cos Phi)

Load [%]	Automatic capacitor control [p.u.] ⁽¹⁾⁽²⁾	Capacitor always connected [p.u.] ⁽¹⁾	Capacitor always open [p.u.] ⁽¹⁾
10	1.000	-0.790	1.000
25	-0.830	-0.830	0.990
50	-0.996	-0.996	0.950

Load [%]	Automatic capacitor control [p.u.] ⁽¹⁾⁽²⁾	Capacitor always connected [p.u.] ⁽¹⁾	Capacitor always open [p.u.] ⁽¹⁾
75	0.997	0.997	0.930
100	0.986	0.986	0.920
160	0.980	0.980	0.910

¹ Positive numbers indicate lagging reactive currents. Negative numbers indicate leading currents.

² The capacitor connecting contactor switches at 20% load.

10.7.2 Line Reactor Specifications

All line reactors are equipped with thermal switches and are looped to the enclosed drive for overtemperature protection. For more details, refer to the *Control Compartment* section. The line reactor configuration varies depending on the enclosure and voltage required.

Table 101: Line Reactor Configuration for D9h–D10h and E5h–E6h Enclosures, 380–480 V

Enclosure	Model	Impedance [%]
D9h	N110	2.70
D9h	N132	3.22
D9h	N160	2.87
D10h	N200	3.47
D10h	N250	3.01
D10h	N315	3.65
E5h	N355	3.30
E5h	N400	3.62
E5h	N450	3.83
E6h	N500	2.94
E6h	N560	3.23

Table 102: Line Reactor Configuration for D9h–D10h and E5h–E6h Enclosures, 525–690 V

Enclosure	Model	Impedance [%]
D9h	N110	2.30
D9h	N132	2.78
D9h	N160	3.29
D10h	N200	2.92
D10h	N250	3.67
D10h	N315	3.08
D10h	N355	3.67
E5h	N400	2.89
E5h	N500	3.11

Enclosure	Model	Impedance [%]
E5h	N560	3.55
E5h	N630	4.04
E6h	N710	3.19
E6h	N800	3.70

10.7.3 dU/dt Filter Specifications

Voltage rating	3x380–690 V
Motor frequency derating, 50 Hz	Nominal
Motor frequency derating, 60 Hz	Nominal
Motor frequency derating, 100 Hz	0.75 x nominal
Minimum switching frequency	No limit
Maximum switching frequency	Nominal switching frequency
Overload capacity	150% for 60 s, every 10 minutes

10.7.4 Sine-wave Filter Specifications

Voltage rating	3x380–480 V and 525–690 V AC
Nominal current @ 50 Hz	212 A and 315 A for 380–480 V, 137 A and 222 A for 525–690 V ⁽¹⁾
Motor frequency with derating ⁽¹⁾	Up to 150 Hz
Motor frequency without derating	0–60 Hz
Minimum switching frequency	2 kHz for 380–480 V, 1.5 kHz for 525–690 V
Maximum switching frequency	Nominal switching frequency
Overvoltage category	OVC III as defined in IEC61800-5-1
Overload capacity	150% for 60 s every 10 minutes
Ambient temperature [°C (°F)] ⁽²⁾	-15 (5) to +60 (140)
Storage temperature [°C (°F)]	-40 (-40) to +70 (158)
Transport temperature [°C (°F)]	-40 (-40) to +70 (158)
Altitude during operation	100% current (no derating) up to 1000 m (3280 ft) 1% current derating for each 100 m (328 ft) above 1000 m (3280 ft) Maximum 4000 m (13123 ft) with 500 V AC Maximum 2000 m (6561 ft) with 690 V AC
Noise level	< 80 dB(A)

¹ The current ratings for the E5h and E6h enclosures are achieved by filter paralleling.

² See [Illustration 71](#).

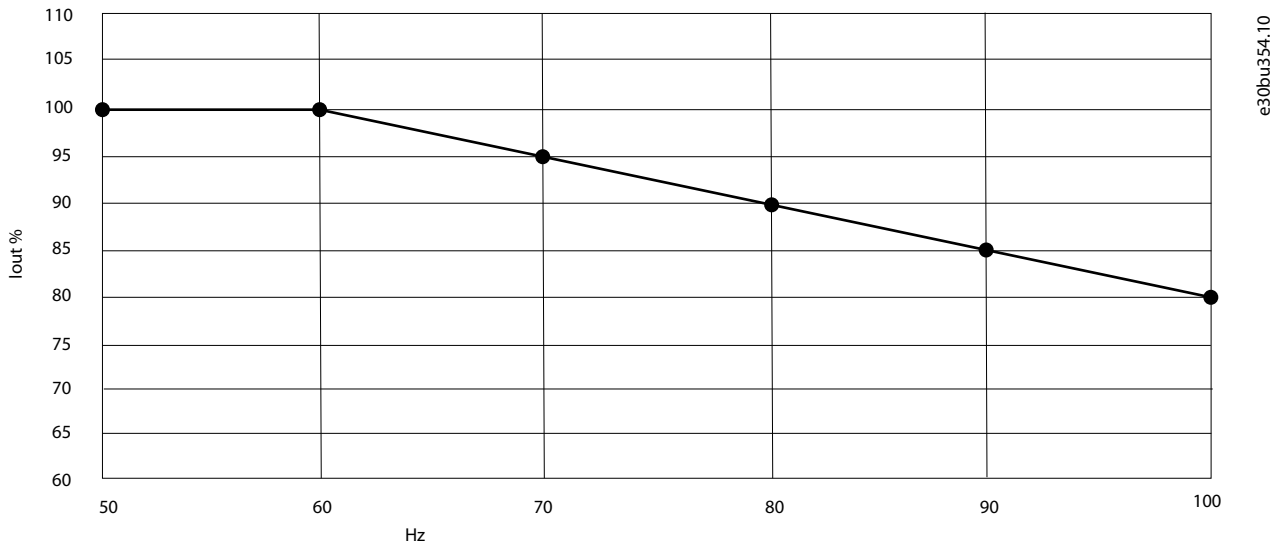


Illustration 70: Derating for Output Frequency While Using a Sine-wave Filter

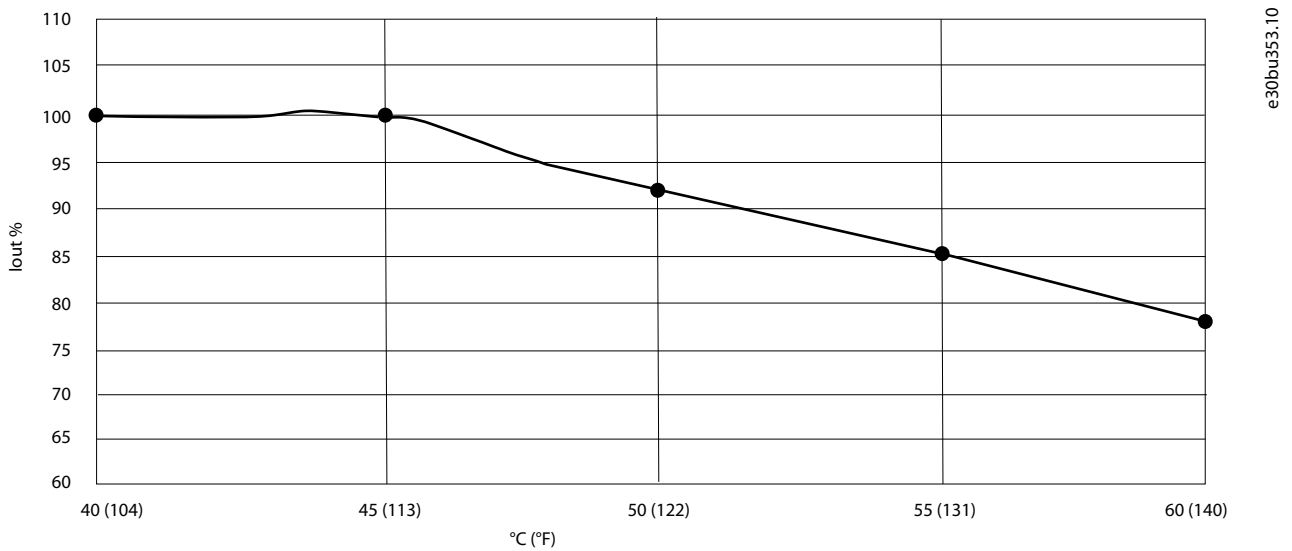


Illustration 71: Derating for Ambient Temperature While Using a Sine-wave Filter

10.8 Fuses, Circuit Breakers, and Switches

Fuses and circuit breakers ensure that possible damage to the drive is limited to inside the unit. Danfoss recommends fuses on the supply side as protection. For further information, see *Application Note Fuses and Circuit Breakers*.

NOTICE

Use of fuses on the supply side is mandatory for IEC 60364 (CE) and NEC 2009 (UL) compliant installations.

Danfoss provides the following mains options for the enclosed drive:

- Panel fuses
- Fusible disconnect
- Non-fusible disconnect

- Contactor
- Molded-case circuit breaker (MCCB)

10.8.1 Panel Fuses

Panel fuses are an option for upstream protection, and can be ordered as either a UL class fuse for UL variant or a gG fuse for IEC variant.

Table 103: Panel Fuses for N110K–N315 Models, 380–480 V

	N110	N132	N160	N200	N250	N315
IEC (Type gG)	250 A/500 V	315 A/500 V	355 A/500 V	425 A/500 V	630 A/500 V	630 A/500 V
Mersen P/N	NH1GG50V250	NH2GG50V315	NH2GG50V355	NH3GG50V425	NH3AGG50V630	NH3AGG50V630
UL (Class J/L/T)	300 A/600 V	350 A/600 V	400 A/600 V	500 A/600 V	600 A/600 V	750 A/600 V
Mersen P/N	A4J300	A4J350	A4J400	A4J500	A4J600	AABY750

Table 104: Panel Fuses for N355–N560 Models, 380–480 V

	N355	N400	N450	N500	N560
IEC (Type gG)	800 A/500 V	1000 A/500 V	1000 A/500 V	1000 A/500 V	1250 A/500 V
Mersen P/N	NH4GG50V800	NH4GG50V1000	NH4GG50V1000	NH4GG50V1000	NH4GG50V1250
UL (Class J/L/T)	800 A/600 V	1000 A/600 V	1000 A/600 V	1100 A/600 V	1200 A/600 V
Mersen P/N	A4BY800	A4BY1000	A4BY1000	A4BY1100	A4BY1200

Table 105: Panel Fuses for N110–N315 Models, 525–690 V

	N110	N132	N160	N200	N250	N315
IEC (Type gG)	250 A/690 V	250 A/690 V	250 A/690 V	315 A/690 V	355 A/690 V	425 A/690 V
Mersen P/N	NH2GG69V250	NH2GG69V250	NH2GG69V250	NH2GG69V315	NH3GG69V355	NH3GG69V425
UL (Class J/L/T)	175 A/600 V	200 A/600 V	250 A/600 V	350 A/600 V	400 A/600 V	500 A/600 V
Mersen P/N	A4J175	A4J200	A4J250	A4J350	A4J400	A4J500

Table 106: Panel Fuses for N400–N630 Models, 525–690 V

	N400	N450	N500	N560	N630
IEC (Type gG)	500 A/690 V	500 A/500 V	630 A/500 V	800 A/500 V	800 A/500 V
Mersen P/N	NH3GG69V500	NH3GG69V500	NH4GG69V630	NH4GG69V800	NH4GG69V800
UL (Class J/L/T)	600 A/600 V	600 A/600 V	650 A/600 V	750 A/600 V	800 A/600 V
Mersen P/N	A4J600	A4J600	A4BY650	A4BY750	A4BY800

Table 107: Panel Fuses for N710–N800 Models, 525–690 V

	N710	N800
IEC (Type gG)	1000 A/690 V	1000 A/690 V
ABB P/N	OFAA4AM1000	OFAA4AM1000
UL (Class J/L/T)	1000 A/600 V	1100 A/600 V

	N710	N800
Mersen P/N	A4BY1000	A4BY1100

10.8.2 Contactor Switches

The mains contactor is an option. All units ordered and supplied with a factory-installed contactor require a Class L/J branch circuit fusing to meet the 65 kA SCCR for the drive system.

This option makes it possible to connect or disconnect the drive from the mains by using a control switch on the control compartment door or an external switch. The external switch must be wired to terminals XD0. See [5.3 Wiring Overview for D9h and D10h Enclosed Drives](#) and [5.4 Wiring Overview for E5h and E6h Enclosed Drives](#). The mains contactor is supplied with 2 sets of auxiliary switches (1 normally open and 1 normally closed). These switches are on the sides of the contactor. By default, the NO auxiliary switch is wired at the factory and used by the system.

Rated operation current @ 230 V	6 A
Rated operation current @ 380 V	4 A
Rated operation current @ 480 V	1.5 A
Conventional thermal current, I _{th}	10 A
Rated voltage	500 V AC
Rated impulse withstand voltage	600 V AC

Table 108: Mains Contactor Switches for N110–N315 Models, 380–480 V

	N110	N132	N160	N200	N250	N315
IEC	185 A/1000 V	185 A/1000 V	185 A/1000 V	400 A/1000 V	580 A/1000 V	500 A/1000 V
Eaton P/N	XTCE400M22A	XTCE400M22A	XTCE400M22A	XTCE400M22A	XTCE400M22A	XTCE500M22A
UL	185 A/1000 V	185 A/1000 V	185 A/1000 V	400 A/1000 V	400 A/1000 V	580 A/1000 V
Eaton P/N	XTCE400M22A	XTCE400M22A	XTCE400M22A	XTCE400M22A	XTCE580N22A	XTCE580N22A

Table 109: Mains Contactor Switches for N355–N560 Models, 380–480 V

	N355	N400	N450	N500	N560
IEC	580 A/1000 V	580 A/1000 V	580 A/1000 V	820 A/1000 V	820 A/1000 V
Eaton P/N	XTCE580N22A	XTCE580N22A	XTCE580N22A	XTCE820N22A	XTCE820N22A
UL	820 A/1000 V	820 A/1000 V	820 A/1000 V	1000 A/1000 V	1000 A/1000 V
Eaton P/N	XTCE820N22A	XTCE820N22A	XTCE820N22A	XTCEC10N22A	XTCEC10N22A

Table 110: Mains Contactor Switches for N110–N315 Models, 525–690 V

	N110	N132	N160	N200	N250	N315
IEC	185 A/1000 V	185 A/1000 V	185 A/1000 V	400 A/1000 V	400 A/1000 V	400 A/1000 V
Eaton P/N	XTCE400M22A	XTCE400M22A	XTCE400M22A	XTCE400M22A	XTCE400M22A	XTCE400M22A
UL	185 A/1000 V	185 A/1000 V	185 A/1000 V	400 A/1000 V	400 A/1000 V	400 A/1000 V
Eaton P/N	XTCE400M22A	XTCE400M22A	XTCE400M22A	XTCE400M22A	XTCE400M22A	XTCE400M22A

Table 111: Mains Contactor Switches for N400–N630 Models, 525–690 V

	N400	N450	N500	N560	N630
IEC	400 A/1000 V	580 A/1000 V	580 A/1000 V	580 A/1000 V	580 A/1000 V

	N400	N450	N500	N560	N630
Eaton P/N	XTCE400M22A	XTCE580N22A	XTCE580N22A	XTCE580N22A	XTCE580N22A
UL	400 A/1000 V	580 A/1000 V	580 A/1000 V	580 A/1000 V	580 A/1000 V
Eaton P/N	XTCE400M22A	XTCE580N22A	XTCE580N22A	XTCE580N22A	XTCE580N22A

Table 112: Mains Contactor Switches for N710–N800 Models, 525–690 V

	N710	N800
IEC	580 A/1000 V	820 A/1000 V
Eaton P/N	XTCE580N22A	XTCE820N22A
UL	820 A/1000 V	1000 A/1000 V
Eaton P/N	XTCE820N22A	XTCEC10N22A

10.8.3 Fusible Disconnect Switches

The fusible disconnect switch is an option that safely isolates the drive from the mains with a fuse switch mounted below the drive module. All units ordered and supplied with a factory-installed fusible disconnect switch have a fuse built in to the switch. The fuse has been sized to meet 65kA SCCR for the system. The input voltage and power rating of the drive determines the specific class or gG fuse. The input voltage and power rating are found on the product nameplate.

Table 113: Fusible Disconnect Switches for N110–N315 Models, 380–480 V

	N110	N132	N160	N200	N250	N315
IEC	400 A/690 V	400 A/690 V	400 A/690 V	630 A/690 V	630 A/690 V	630 A/690 V
ABB P/N	OS400D30P	OS400D30P	OS400D30P	OS630D30P	OS630D30P	OS630D30P
UL	400 A/600 V	400 A/600 V	400 A/600 V	600 A/600 V	600 A/600 V	800 A/600 V
ABB P/N	OS400J30	OS400J30	OS400J30	OS600J30	OS600J30	OS800L30

Table 114: Fusible Disconnect Switches for N355–N560 Models, 380–480 V

	N355	N400	N450	N500	N560
IEC	1250 A/690 V	1250 A/690 V	1250 A/690 V	1250 A/690 V	1250 A/690 V
ABB P/N	OS1250D30P	OS1250D30P	OS1250D30P	OS1250D30P	OS1250D30P
UL	800 A/600 V	1200 A/600 V	1200 A/600 V	1200 A/600 V	1200 A/600 V
ABB P/N	OS800L30	OS1200L30	OS1200L30	OS1200L30	OS1200L30

Table 115: Fusible Disconnect Switches for N110–N315 Models, 525–690 V

	N110	N132	N160	N200	N250	N315
IEC	400 A/690 V	400 A/690 V	400 A/690 V	630 A/690 V	630 A/690 V	630 A/690 V
ABB P/N	OS400D30P	OS400D30P	OS400D30P	OS630D30P	OS630D30P	OS630D30P
UL	400 A/600 V	400 A/600 V	400 A/600 V	400 A/600 V	400 A/600 V	600 A/600 V
ABB P/N	OS400J30	OS400J30	OS400J30	OS400J30	OS400J30	OS600J30

Table 116: Fusible Disconnect Switches for N400–N630 Models, 525–690 V

	N400	N450	N500	N560	N630
IEC	630 A/690 V	630 A/690 V	1250 A/690 V	1250 A/690 V	1250 A/690 V
ABB P/N	OS630D30P	OS630D30P	OS1250D30P	OS1250D30P	OS1250D30P
UL	600 A/600 V	600 A/600 V	800 A/600 V	800 A/600 V	800 A/600 V
ABB P/N	OS600J30	OS600J30	OS800L30	OS800L30	OS800L30

Table 117: Fusible Disconnect Switches for N710–N800 Models, 525–690 V

	N710	N800
IEC	1250 A/690 V	1250 A/690 V
ABB P/N	OS1250D30P	OS1250D30P
UL	1200 A/600 V	1200 A/600 V
ABB P/N	OS1200L30	OS1200L30

10.8.4 Non-fusible Disconnect Switches

The non-fusible disconnect switch is an option. All units ordered and supplied with a factory-installed, non-fusible disconnect switch require a UL Class fuse to meet 65kA SCCR for the drive system.

Table 118: Non-fusible Disconnect Switches for N110–N315 Models, 380–480 V

	N110	N132	N160	N200	N250	N315
IEC	400 A/600 V	400 A/600 V	400 A/600 V	630 A/600 V	630 A/600 V	630 A/600 V
ABB P/N	OT400E30	OT400E30	OT400E30	OT630E30	OT630E30	OT630E30
UL	400 A/690 V	400 A/690 V	400 A/690 V	600 A/690 V	600 A/690 V	800 A/690 V
ABB P/N	OT400U30	OT400U30	OT400U30	OT600U30	OT600U30	OT800U30

Table 119: Non-fusible Disconnect Switches for N355–N560 Models, 380–480 V

	N355	N400	N450	N500	N560
IEC	1000 A/600 V	1000 A/600 V	1250 A/600 V	1250 A/600 V	1250 A/600 V
ABB P/N	OT1000E30	OT1000E30	OT1250E30	OT1250E30	OT1250E30
UL	800 A/690 V	1200 A/690 V	1200 A/690 V	1200 A/690 V	1200 A/690 V
ABB P/N	OT800U30	OT1200U30	OT1200U30	OT1200U30	OT1200U30

Table 120: Non-fusible Disconnect Switches for N110–N315 Models, 525–690 V

	N110	N132	N160	N200	N250	N315
IEC	400 A/600 V	400 A/600 V	400 A/600 V	630 A/600 V	630 A/600 V	630 A/600 V
ABB P/N	OT400E30	OT400E30	OT400E30	OT630E30	OT630E30	OT630E30
UL	400 A/690 V	400 A/690 V	400 A/690 V	600 A/690 V	600 A/690 V	600 A/690 V
ABB P/N	OT400U30	OT400U30	OT400U30	OT600U30	OT600U30	OT600U30

Table 121: Non-fusible Disconnect Switches for N400–N630 Models, 525–690 V

	N400	N450	N500	N560	N630
IEC	630 A/600 V	630 A/600 V	630 A/600 V	1000 A/600 V	1000 A/600 V
ABB P/N	OT630E30	OT630E30	OT630E30	OT1000E30	OT1000E30
UL	600 A/690 V	600 A/690 V	600 A/690 V	800 A/690 V	800 A/690 V
ABB P/N	OT600U30	OT600U30	OT600U30	OT800U30	OT800U30

Table 122: Non-fusible Disconnect Switches for N710–N800 Models, 525–690 V

	N710	N800
IEC	1250 A/600 V	1250 A/600 V
ABB P/N	OT1250E30	OT1250E30
UL	1200 A/690 V	1200 A/690 V
ABB P/N	OT1200U30	OT1200U30

10.8.5 Molded-case Circuit Breakers

The molded-case circuit breaker (MCCB) is an option that combines a temperature-sensitive device with a current sensitive-electro-magnetic device to protect the drive.

Table 123: MCCB Part Numbers for N110–N315 Models, 380–480 V

	N110	N132	N160	N200	N250	N315
IEC	400 A/600 V	400 A/600 V	400 A/600 V	800 A/600 V	800 A/600 V	800 A/600 V
ABB P/N	T5L400	T5L400	T5L400	T6L800	T6L800	T6L800
UL	400 A/690 V	400 A/690 V	400 A/690 V	600 A/690 V	600 A/690 V	800 A/690 V
ABB P/N	T5L400BW	T5L400BW	T5L400BW	T6L600BW	T6L600BW	T6L800BW

Table 124: MCCB Part Numbers for N355K–N560 Models, 380–480 V

	N355	N400	N450	N500	N560
IEC	1000 A/690 V	1250 A/690 V	1250 A/690 V	1250 A/690 V	1600 A/690 V
ABB P/N	T71000LSPR231 DS-LS	T71250LSPR231 DS-LS	T71250LSPR231 DS-LS	T71250LSPR231 DS-LS	T71600LSPR231 DS-LS
UL	1200 A/600 V	1200 A/600 V	1200 A/600 V	1600 A/600 V	1600 A/600 V
ABB P/N	T7L1200PR231/P	T7L1200PR231/P	T7LQ1200PR231/P	T8V1600PR231/P	T8V1600PR231/P

Table 125: MCCB Part Numbers for N110–N315 Models, 525–690 V

	N110	N132	N160	N200	N250	N315
IEC	400 A/690 V	400 A/690 V	400 A/690 V	630 A/690 V	630 A/690 V	630 A/690 V
ABB P/N	T5L400T	T5L400T	T5L400T	T6L630T	T6L630T	T6L630T
UL	400 A/600 V	400 A/600 V	400 A/600 V	600 A/600 V	600 A/600 V	600 A/600 V
ABB P/N	T5L400TW	T5L400TW	T5L400TW	T6L600TW	T6L600TW	T6L600TW

Table 126: MCCB Part Numbers for N400–N630 Models, 525–690 V

	N400	N450	N500	N560	N630
IEC	600 A/690 V	1000 A/690 V	1000 A/690 V	1000 A/690 V	1000 A/690 V
ABB P/N	T6L630T	T7L1000LSPR23 1 DS-LS	T7L1000LSPR23 1 DS-LS	T7L1000LSPR23 1 DS-LS	T7L1000LSPR23 1 DS-LS
UL	600 A/600 V	1000 A/600 V	1000 A/600 V	1200 A/600 V	1200 A/600 V
ABB P/N	T6LQ600TW	T7L1000PR231/P	T7L1000PR231/P	T7LQ1200PR231/P	T7LQ1200PR231/P

Table 127: MCCB Part Numbers for N710–N800 Models, 525–690 V

	N710	N800
IEC	1250 A/690 V	1250 A/690 V
ABB P/N	T7L1250LSPR23 1 DS-LS	T7L1250LSPR23 1 DS-LS
UL	1200 A/600 V	1200 A/600 V
ABB P/N	T7L1200PR231/ P	T7L1200PR231/ P

10.9 Enclosure Dimensions

10.9.1 Pedestal Dimensions

The pedestal, on which the enclosure sits, is available in 3 different heights:

- 100 mm (3.9 in)
- 200 mm (7.9 in)
- 400 mm (15.8 in)

10.9.2 D9h Enclosed Drive Exterior Dimensions

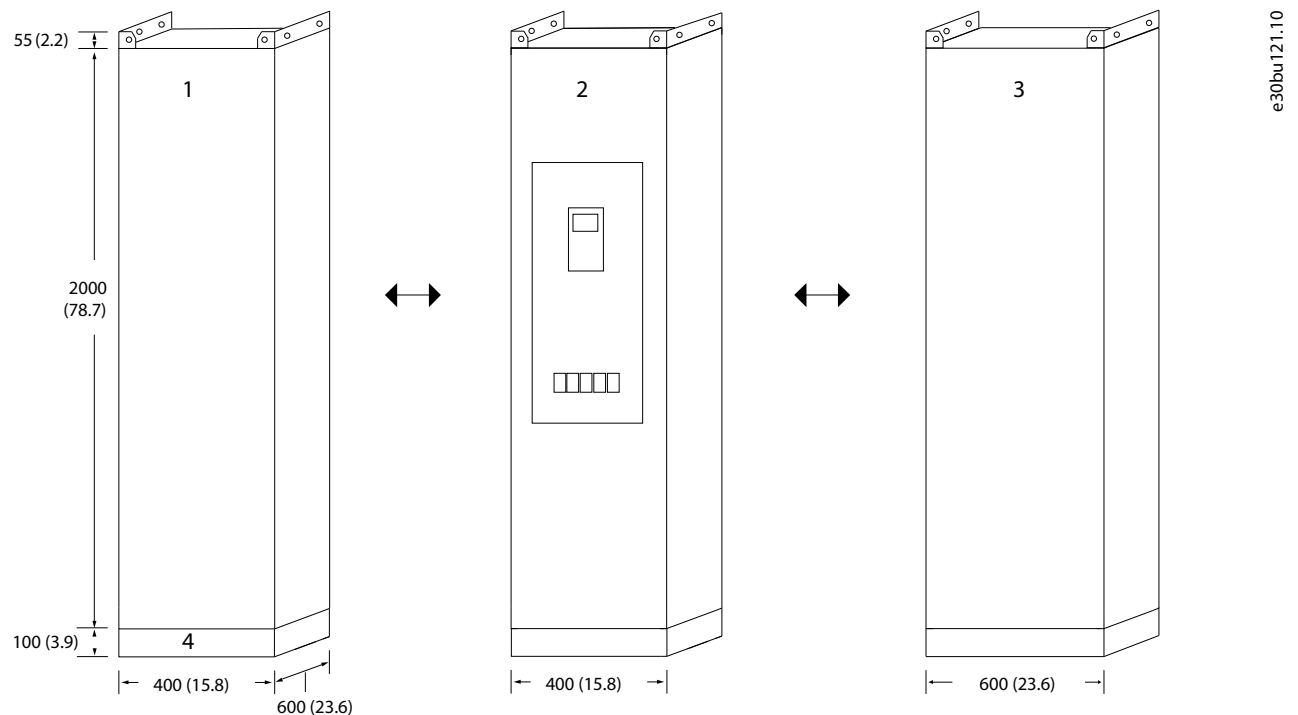


Illustration 72: Dimensions for D9h Enclosure with Standard Pedestal

1	Passive harmonic filter/line reactor cabinet	3	Sine-wave cabinet
2	D9h drive cabinet	4	Standard pedestal

10.9.3 D10h Enclosed Drive Exterior Dimensions


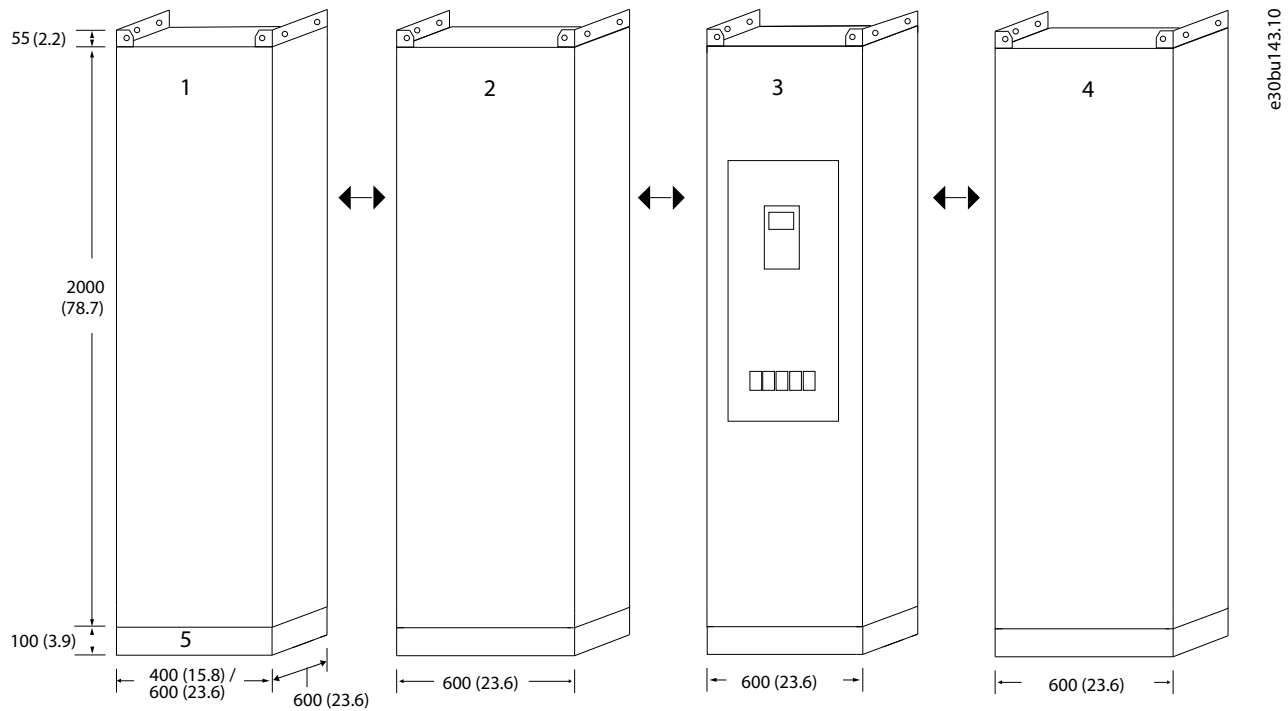


Illustration 73: Dimensions for D10h Enclosure with Standard Pedestal

1	Passive harmonic filter/line reactor cabinet	4	Sine-wave cabinet
2	Options cabinet (provided when more than 1 input option is ordered)	5	Standard pedestal
3	D10h drive cabinet		

10.9.4 E5h Enclosed Drive Exterior Dimensions

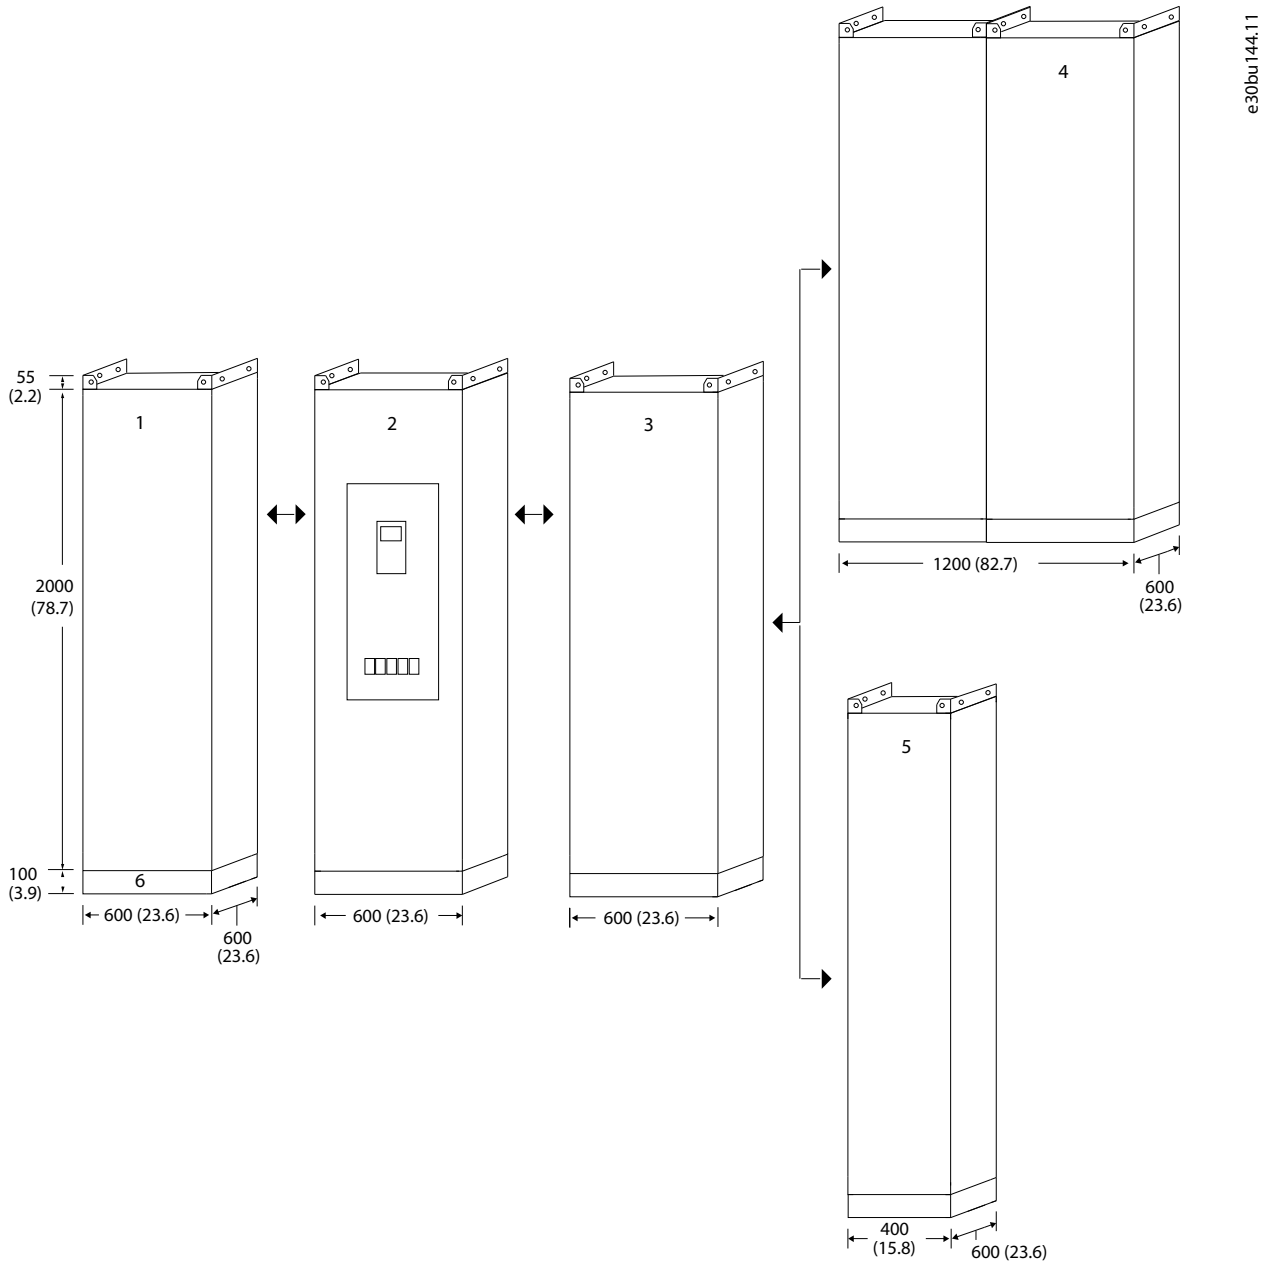

e30bu144.11

Illustration 74: Dimensions for E5h Enclosure with Standard Pedestal

1	Passive harmonic filter/line reactor cabinet	4	Sine-wave cabinet
2	Options cabinet	5	dU/dt cabinet
3	E5h drive cabinet	6	Standard pedestal

10.9.5 E6h Enclosed Drive Exterior Dimensions

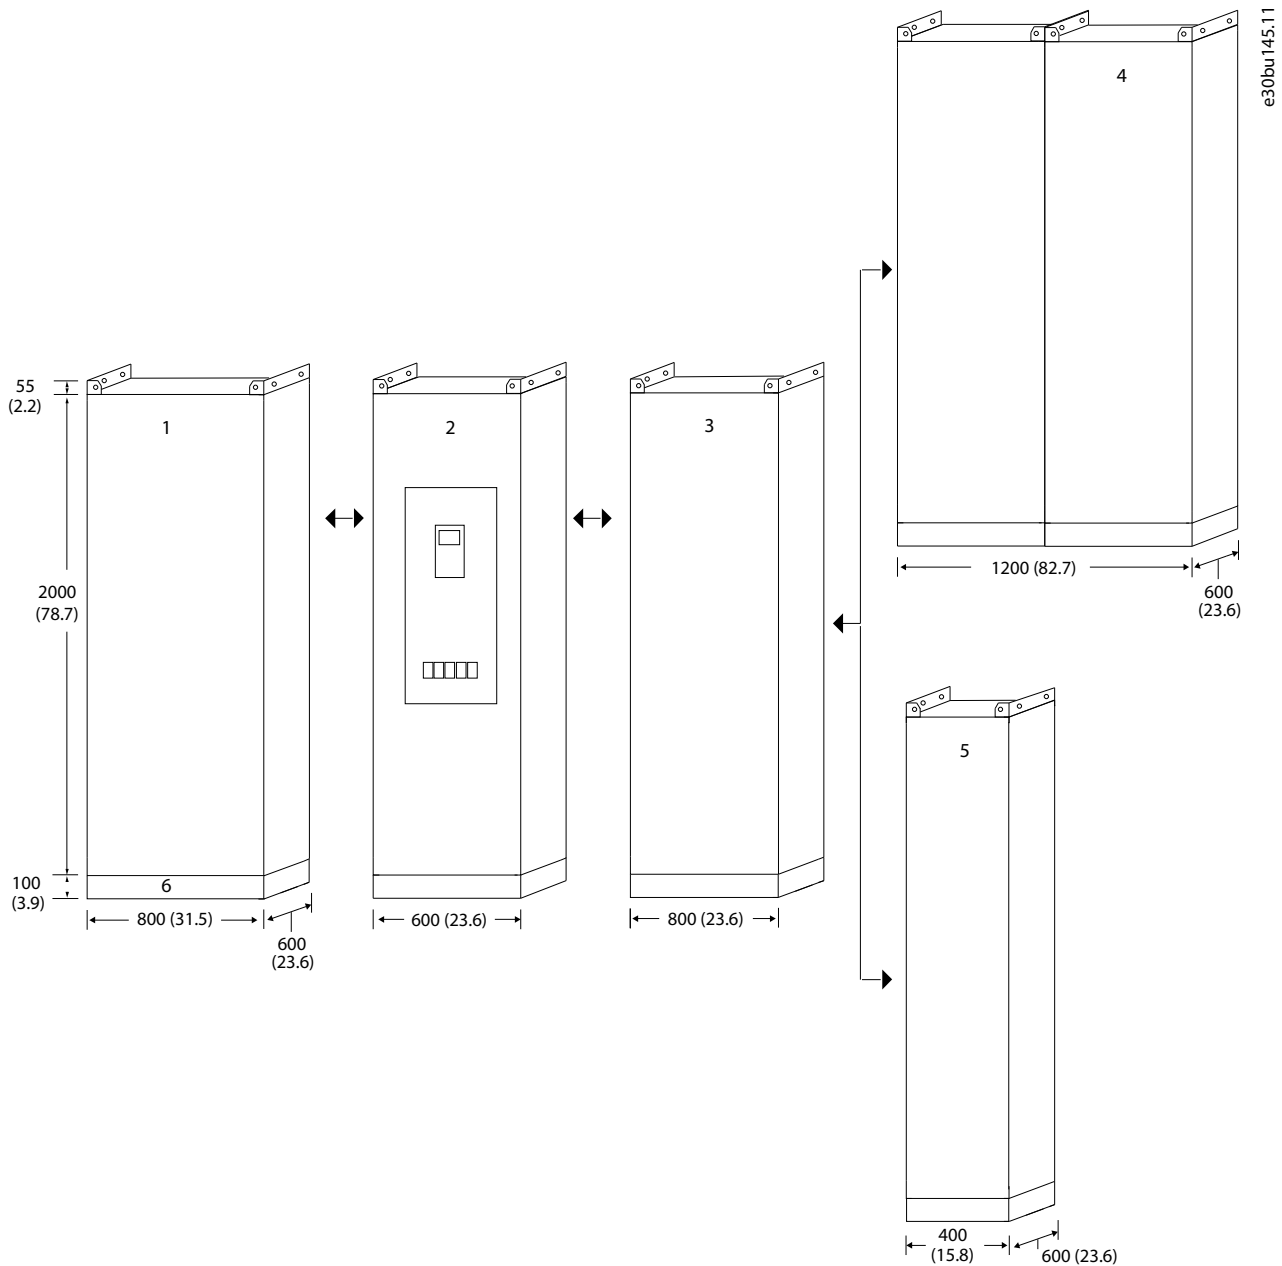


Illustration 75: Dimensions for E6h Enclosure with Standard Pedestal

1	Passive harmonic filter/line reactor cabinet	4	Sine-wave cabinet
2	Options cabinet	5	dU/dt cabinet
3	E6h drive cabinet	6	Standard pedestal

10.10 Enclosure Airflow

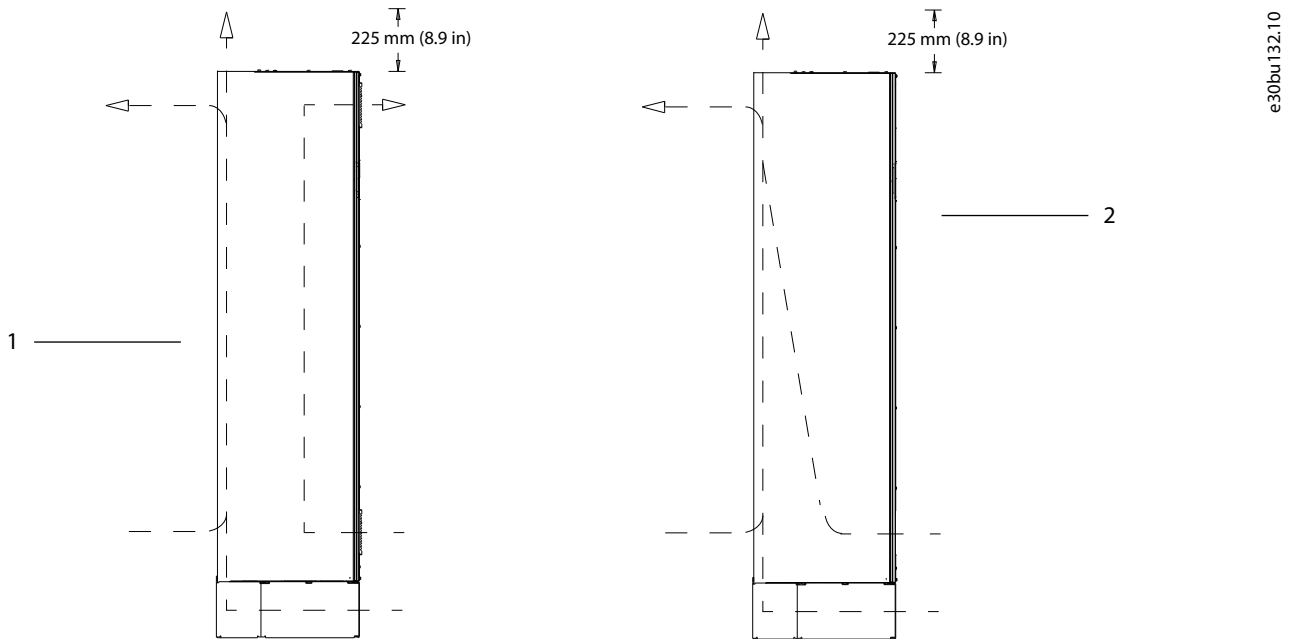


Illustration 76: Enclosure Airflow in Sine-wave Filter, Passive Harmonic Filter, and Drive Cabinets (Side View)

1	Drive module cabinet
2	PHF and sine-wave cabinets

10.11 Fastener Torque Ratings

Apply the correct torque when tightening fasteners in the locations that are listed in the table. Too low or too high torque when fastening an electrical connection results in a bad electrical connection. To ensure correct torque, use a torque wrench.

Table 128: Fastener Torque Ratings

Location	Bolt size	Torque [Nm (in-lb)]
Mains terminals	M10/M12	19 (168)/37 (335)
Motor terminals	M10/M12	19 (168)/37 (335)
Ground terminals	M8/M10	9.6 (84)/19.1 (169)
Brake terminals	M8	9.6 (84)
Relay terminals	–	0.5 (4)
Door/panel cover	M5	2.3 (20)
Cable entry plate	M5	2.3 (20)
Serial communication cover	M5	2.3 (20)

11 Appendix

11.1 Conventions

- Numbered lists indicate procedures.
- Bullet lists indicate other information and description of illustrations.
- Italicized text indicates:
 - Cross reference.
 - Link.
 - Footnote.
 - Parameter name.
 - Parameter group name.
 - Parameter option.
- All dimensions are in mm (inch).

11.2 Abbreviations

Table 129: Abbreviations, Acronyms, and Symbols

Term	Definition
°C	Degrees Celsius
°F	Degrees Fahrenheit
Ω	Ohm
AC	Alternating current
AEO	Automatic energy optimization
ACP	Application control processor
AMA	Automatic motor adaptation
AWG	American wire gauge
CPU	Central processing unit
CSIV	Customer-specific initialization values
CT	Current transformer
DC	Direct current
DVM	Digital voltmeter
EEPROM	Electrically erasable programmable read-only memory
EMC	Electromagnetic compatibility
EMI	Electromagnetic interference
ESD	Electrostatic discharge
ETR	Electronic thermal relay
$f_{M,N}$	Nominal motor frequency
FPC	Fan power card
HF	High frequency

Term	Definition
HVAC	Heating, ventilation, and air conditioning
Hz	Hertz
I_{LIM}	Current limit
I_{INV}	Rated inverter output current
$I_{M,N}$	Nominal motor current
$I_{VLT,MAX}$	Maximum output current
$I_{VLT,N}$	Rated output current supplied by the drive
IEC	International Electrotechnical Commission
IGBT	Insulated-gate bipolar transistor
I/O	Input/output
IP	Ingress protection
kHz	Kilohertz
kW	Kilowatt
L_d	Motor d-axis inductance
L_q	Motor q-axis inductance
LC	Inductor-capacitor
LCP	Local control panel
LED	Light-emitting diode
LOP	Local operation pad
mA	Milliamp
MCB	Miniature circuit breakers
MCCB	Molded-case circuit breaker
MCO	Motion control option
MCP	Motor control processor
MCT	Motion control tool
MDCIC	Multi-drive control interface card
mV	Millivolts
NEMA	National Electrical Manufacturers Association
NTC	Negative temperature coefficient
$P_{M,N}$	Nominal motor power
PCB	Printed circuit board
PE	Protective earth

Term	Definition
PELV	Protective extra low voltage
PHF	Passive harmonic filter
PID	Proportional integral derivative
PLC	Programmable logic controller
P/N	Part number
PROM	Programmable read-only memory
PS	Power section
PTC	Positive temperature coefficient
PWM	Pulse width modulation
R_s	Stator resistance
RAM	Random-access memory
RCD	Residual current device
Regen	Regenerative terminals
RFI	Radio frequency interference
RMS	Root means square (cyclically alternating electric current)
RPM	Revolutions per minute
SCR	Silicon-controlled rectifier
SMPS	Switch mode power supply
S/N	Serial number
STO	Safe Torque Off
T_{LIM}	Torque limit
$U_{M,N}$	Nominal motor voltage
V	Volt
VVC	Voltage vector control
X_h	Motor main reactance

11.3 International/North American Default Parameter Settings

Setting *parameter 0-03 Regional Settings* to [0] International or [1] North America changes the default settings for some parameters.

Table 130: VLT® FC Series International/North American Default Parameter Settings

Parameter	International default value	North American default value
<i>Parameter 0-03 Regional Settings</i>	International	North America
<i>Parameter 0-71 Date Format</i>	DD-MM-YYYY	MM/DD/YYYY
<i>Parameter 0-72 Time Format</i>	24 h	12 h

Parameter	International default value	North American default value
<i>Parameter 1-23 Motor Frequency</i>	50 Hz	60 Hz
<i>Parameter 1-25 Motor Nominal Speed</i>	1400 RPM	1680 RPM
<i>Parameter 1-53 Model Shift Frequency</i>	16.7	20.0
<i>Parameter 1-56 U/f Characteristic</i>	50 Hz	60 Hz
<i>Parameter 6-15 Terminal 53 High Ref./Feedb. Value</i>	1500 RPM	1800 RPM
<i>Parameter 14-37 Fieldweakening Speed</i>	1400 RPM	1680 RPM

11.4 Required Parameter Settings for Drive Options

On performing a factory reset on the drive, all drive parameters revert to their factory default value. Several drive options have parameter settings that must be configured differently from the factory default values in order for the options to perform properly.

Table 131: Parameter Settings for the Passive Filter Option (Typecode Character 7 = P/H/L/U)

Parameter	Change value to
<i>Parameter 5-02 Terminal 29 Mode</i>	[1] Output
<i>Parameter 5-10 Terminal 18 Digital Input</i>	[7] External Interlock
<i>Parameter 5-31 Terminal 29 Digital Output</i>	[188] AHF Capacitor Connect
<i>Parameter 14-51 DC-link Compensation</i>	[0] Off

Table 132: Parameter Settings for the dU/dt Filter Option (Typecode Character 18 = D/1)

Parameter	Change value to
<i>Parameter 5-10 Terminal 18 Digital Input</i>	[7] External Interlock
<i>Parameter 14-52 Fan Control</i>	[3] On 100% ⁽¹⁾

¹ This fan setting applies only to D9h and D10h models.


Table 133: Parameter Settings for the Sine-wave Filter Option (Typecode Character 18 = S/2)

Parameter	Change value to
<i>Parameter 5-10 Terminal 18 Digital Input</i>	[7] External Interlock
<i>Parameter 14-55 Output Filter</i>	[2] Sine-Wave Filter Fixed

Table 134: Parameter Settings for the Indicator Light + Reset Button Option (Typecode Character 28–29 = D1/DA/DB/DC/DD/DE)

Parameter	Change value to
<i>Parameter 5-40 Function Relay [1]</i>	[5] Running
<i>Parameter 5-40 Function Relay [2]</i>	[9] Alarm
<i>Parameter 5-11 Terminal 19 Digital Input</i>	[1] Reset

11.5 Block Diagrams

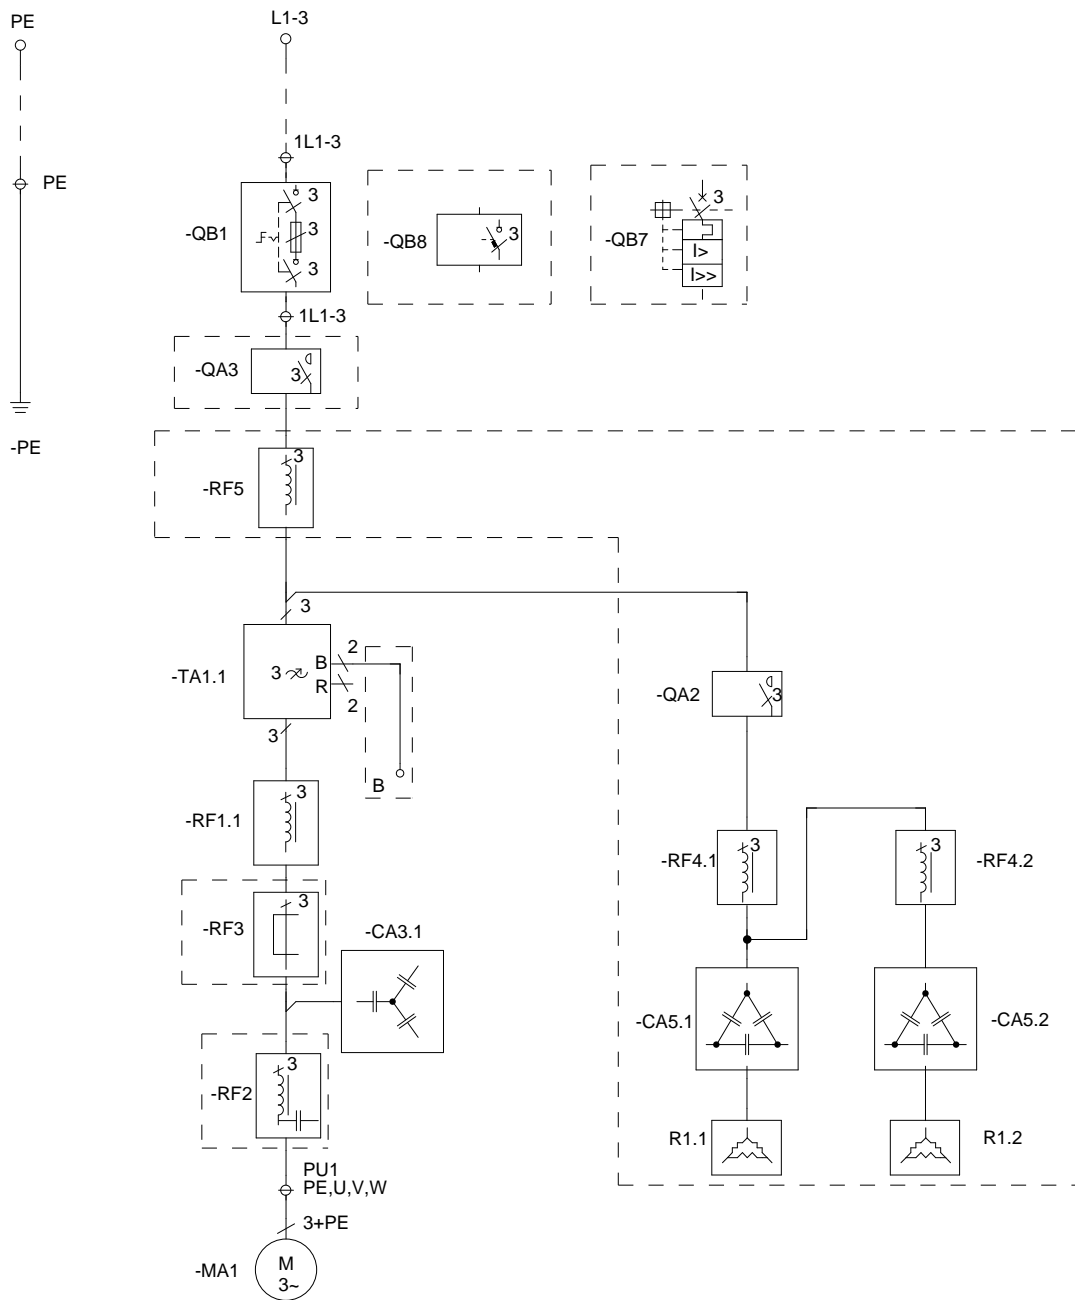

e30bu196.10

Illustration 77: Electrical Power Flow for D9h/D10h Enclosures

-RF1	Radio frequency interference (RFI) filter	-QB8	Mains disconnect
R1	Resistor	-MA7	dU/dt and sine-wave filter fans
-RF5	Passive harmonic filter (PHF) L0	-MA8	PHF fans
-RF4	PHF inductors	-RF2	Sine-wave filter inductor
-CA5	PHF capacitors	-CA4	Sine-wave filter capacitor
-QA2	PHF contactor	-RF1	dU/dt filter inductor
-RFL	Line reactor	-CA3	dU/dt filter capacitor
-QAF	PHF relay	-RF3	Common-mode filter
-QB7	Molded-case circuit breaker (MCCB)	-MA1	Motor (customer side)
-QA3	Mains contactor	-TA1	Drive module
-QB2	Mains fused disconnect	LCP	Local control panel

e30bu197.10

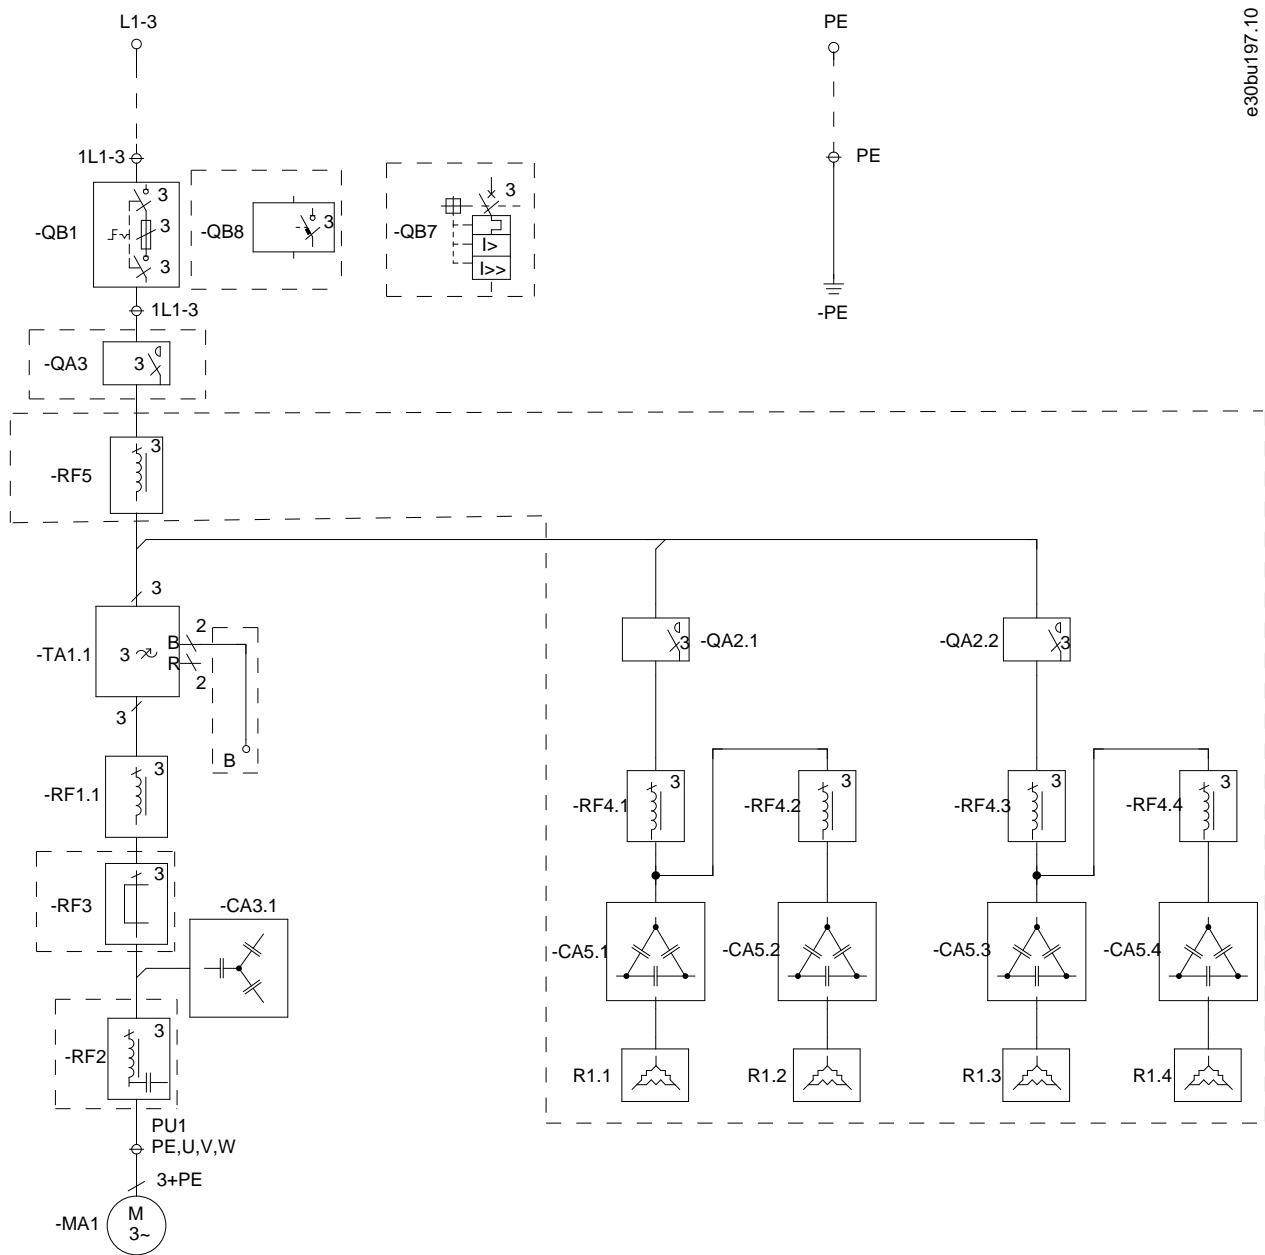


Illustration 78: Electrical Power Flow for E5h/E6h Enclosures

-RFI	Radio frequency interference (RFI) filter	-QB8	Mains disconnect
R1	Resistor	-MA7	dU/dt and sine-wave filter fans
-RF5	Passive harmonic filter (PHF) L0	-MA8	PHF fans
-RF4	PHF inductors	-RF2	Sine-wave filter inductor
-CA5	PHF capacitors	-CA4	Sine-wave filter capacitor
-QA2	PHF contactor	-RF1	dU/dt filter inductor
-RFL	Line reactor	-CA3	dU/dt filter capacitor
-QAF	PHF relay	-RF3	Common-mode filter
-QB7	Molded-case circuit breaker (MCCB)	-MA1	Motor (customer side)
-QA3	Mains contactor	-TA1	Drive module
-QB2	Mains fused disconnect	LCP	Local control panel

11.6 Input Power Option Losses

11.6.1 Contactor Losses

Table 135: Power Losses for Contactor Option, 380–480 V (Losses Shown in Watts)

Model	380–440 V		441–480 V	
	NO	HO	NO	HO
–				
N110	16	11	13	9
N132	25	16	21	13
N160	36	25	33	21
N200	57	36	47	33
N250	42	28	36	24
N315	63	42	52	36
N355	62	51	50	42
N400	79	62	66	50
N450	91	69	76	66
N500	74	61	58	51
N560	94	74	76	58

Table 136: Power Losses for Contactor Option, 525–690 V (Losses Shown in Watts)

Model	525–550 V		551–690 V	
	NO	HO	NO	HO
–				
N110	7	5	6	4
N132	10	7	9	6
N160	15	10	13	9

Model	525–550 V		551–690 V	
N200	23	15	21	13
N250	33	23	30	21
N315	47	33	43	30
N355	63	47	58	43
N400	40	28	37	26
N500	50	33	45	30
N560	64	50	59	45
N630	72	64	72	59
N710	83	62	76	57
N800	76	56	69	51

11.6.2 Fusible Disconnect Losses

Table 137: Power Losses for Fusible Disconnect Option, 380–480 V (Losses Shown in Watts)

Model	380–440 V		441–480 V	
–	NO	HO	NO	HO
N110	71	49	57	40
N132	89	59	76	48
N160	131	90	121	76
N200	142	91	119	83
N250	155	105	132	88
N315	233	155	193	132
N355	188	156	151	127
N400	202	158	168	127
N450	233	176	194	168
N500	282	233	222	194
N560	305	241	246	189

Table 138: Power Losses for Fusible Disconnect Option, 525–690 V (Losses Shown in Watts)

Model	525–550 V		551–690 V	
–	NO	HO	NO	HO
N110	29	20	27	18
N132	41	29	37	27
N160	63	41	57	37
N200	71	45	65	41

Model	525–550 V		551–690 V	
	NO	HO	NO	HO
N250	101	70	92	64
N315	118	84	108	77
N355	151	112	138	102
N400	191	135	175	125
N500	134	90	123	83
N560	154	119	141	109
N630	173	154	173	141
N710	208	155	190	142
N800	282	208	258	190

11.6.3 Non-fusible Disconnect Losses

Table 139: Power Losses for Non-fusible Disconnect Option, 380–480 V (Losses Shown in Watts)

Model	380–440 V		441–480 V	
	NO	HO	NO	HO
–				
N110	8	6	7	5
N132	13	8	11	7
N160	19	13	17	11
N200	29	19	25	17
N250	44	29	37	25
N315	65	44	54	37
N355	25	21	20	17
N400	32	25	26	20
N450	36	27	30	26
N500	43	36	34	30
N560	55	43	44	34

Table 140: Power Losses for Non-fusible Disconnect Option, 525–690 V (Losses Shown in Watts)

Model	525–550 V		551–690 V	
	NO	HO	NO	HO
–				
N110	4	2	3	2
N132	5	4	5	3
N160	8	5	7	5
N200	12	8	11	7
N250	17	12	16	11

Model	525–550 V		551–690 V	
	NO	HO	NO	HO
N315	24	17	22	16
N355	33	24	30	22
N400	42	29	38	27
N500	52	35	47	32
N560	20	16	19	14
N630	23	20	23	19
N710	32	24	30	22
N800	44	32	40	30

11.6.4 Molded-case Circuit Breaker (MCCB) Losses

Table 141: Power Losses for MCCB Option, 380–480 V (Losses Shown in Watts)

Model	380–440 V		441–480 V	
	NO	HO	NO	HO
–				
N110	25	18	20	14
N132	38	25	32	20
N160	56	38	51	32
N200	54	35	45	32
N250	80	54	68	45
N315	120	80	100	68
N355	62	52	50	42
N400	80	62	66	50
N450	92	70	77	66
N500	112	92	88	77
N560	92	73	74	57

Table 142: Power Losses for MCCB Option, 525–690 V (Losses Shown in Watts)

Model	525–550 V		551–690 V	
	NO	HO	NO	HO
–				
N110	11	7	10	7
N132	15	11	14	10
N160	23	15	21	14
N200	22	14	20	13
N250	32	22	29	20
N315	45	32	41	29

Model	525–550 V		551–690 V	
N355	61	45	56	41
N400	43	30	39	28
N500	53	36	49	33
N560	69	53	63	49
N630	77	69	77	63
N710	84	63	77	57
N800	114	84	104	77

11.6.5 Passive Harmonic Filter Losses

Table 143: Power Losses for Passive Harmonic Filter Option, 380–480 V (Losses Shown in Watts)

Model	380–440 V		441–480 V	
–	NO	HO	NO	HO
N110	1083	841	1083	841
N132	1284	1083	1284	1083
N160	1511	1284	1511	1284
N200	1704	1511	1704	1511
N250	1814	1704	1814	1704
N315	2242	1814	1980	1814
N355	2302	2242	2242	1980
N400	2498	2302	2302	2242
N450	2613	2498	2498	2302
N500	2838	2613	2613	2498
N560	3160	2838	2838	2613

Table 144: Power Losses for Passive Harmonic Filter Option, 525–690 V (Losses Shown in Watts)

Model	525–550 V		551–690 V	
–	NO	HO	NO	HO
N110	1194	1050	1194	1050
N132	1288	1194	1288	1194
N160	1406	1288	1406	1288
N200	1510	1406	1510	1406
N250	1852	1510	1852	1510
N315	2121	1852	2121	1852
N355	2800	2121	2800	2121

Model	525–550 V		551–690 V	
N400	3075	2800	3075	2800
N500	3380	3075	3380	3075
N560	3720	3380	3720	3380
N630	4242	3720	4242	3720
N710	4600	4242	4600	4242
N800	5700	4600	5700	4600

11.6.6 dU/dt Filter Losses

Table 145: Power Losses for dU/dt Filter Option, 380–480 V (Losses Shown in Watts)

Model	380–440 V		441–480 V	
–	NO	HO	NO	HO
N110	350	244	281	199
N132	526	350	448	281
N160	327	223	300	190
N200	514	327	429	300
N250	834	565	710	472
N315	1251	834	1036	710
N355	713	593	573	480
N400	914	713	757	573
N450	1054	795	878	757
N500	1402	1158	1101	964
N560	1774	1402	1434	1101

Table 146: Power Losses for dU/dt Filter Option, 525–690 V (Losses Shown in Watts)

Model	525–550 V		551–690 V	
–	NO	HO	NO	HO
N110	453	308	414	281
N132	204	146	187	134
N160	314	204	287	187
N200	498	314	456	287
N250	302	211	277	193
N315	427	302	390	277
N355	575	427	527	390
N400	800	565	733	523

Model	525–550 V		551–690 V	
N500	989	666	905	608
N560	585	450	535	412
N630	654	585	654	535
N710	959	715	878	654
N800	1430	1054	1308	964

11.6.7 Sine-wave Filter Losses

Table 147: Power Losses for Sine-wave Filter Option, 380–480 V (Losses Shown in Watts)

Model	380–440 V		441–480 V	
	NO	HO	NO	HO
–				
N110	1320	920	1060	752
N132	1363	906	1161	728
N160	2000	1363	1838	1161
N200	2291	1457	1914	1339
N250	2322	1572	1978	1313
N315	3484	2322	2885	1978
N355	3179	2643	2556	2141
N400	4075	3179	3375	2556
N450	4699	3547	3913	3375
N500	3902	3225	3066	2685
N560	4939	3902	3991	3066

Table 148: Power Losses for Sine-wave Filter Option, 525–690 V (Losses Shown in Watts)

Model	525–550 V		551–690 V	
	NO	HO	NO	HO
–				
N110	1100	748	1006	684
N132	1065	762	975	696
N160	1640	1065	1496	975
N200	1876	1184	1716	1080
N250	1863	1299	1706	1188
N315	2630	1863	2401	1706
N355	3545	2630	3246	2401
N400	3237	2286	2967	2116
N500	4004	2697	3663	2463

Model	525–550 V		551–690 V	
	3603	2772	3296	2536
N560	3603	2772	3296	2536
N630	4027	3603	4027	3296
N710	5909	4406	5406	4027
N800	8018	5906	7330	5406

ENGINEERING
TOMORROW



Danfoss A/S
Ulsnaes 1
DK-6300 Graasten
vlt-drives.danfoss.com

.....
Danfoss can accept no responsibility for possible errors in catalogs, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.
.....

