

ENGINEERING
TOMORROW



Operating Guide

VLT® AQUA Drive FC 202

355-800 kW, Enclosure Sizes E1h-E4h





Danfoss A/S

6430 Nordborg
Denmark
CVR nr.: 20 16 57 15
Telephone: +45 7488 2222
Fax: +45 7449 0949

EU DECLARATION OF CONFORMITY

Danfoss A/S
Danfoss Drives A/S

declares under our sole responsibility that the

Product category: Frequency Converter

Type designation(s): FC-202XYYYYZ*****

Character X: N or P

Character YYY: K25, K37, K55, K75, 1K1, 1K5, 2K2, 3K0, 3K7, 4K0, 5K5, 7K5, 11K, 15K, 18K, 22K, 30K, 37K, 45K, 55K, 75K, 90K, 110, 132, 150, 160, 200, 250, 315, 355, 400, 450, 500, 560, 630, 710, 800, 900, 1M0, 1M2, 1M4

Character ZZ: S2, S4, T2, T4, T6, T7

* may be any number or letter indicating drive options which do not impact this DoC.

The meaning of the 39 characters in the type code string can be found in appendix 00729776.

Covered by this declaration is in conformity with the following directive(s), standard(s) or other normative document(s), provided that the product is used in accordance with our instructions.

Low Voltage Directive 2014/35/EU

EN61800-5-1:2007 + A1:2017 Adjustable speed electrical power drive systems – Part 5-1: Safety requirements – Electrical, thermal and energy.

EMC Directive 2014/30/EU

EN61800-3:2004 + A1:2012 Adjustable speed electrical power drive systems – Part 3: EMC requirements and specific test methods.

RoHS Directive 2011/65/EU including amendment 2015/863.

EN63000:2018 Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances

| | | | |
|---|--|---|---|
| Date: 2020.09.15 Place of issue: Graasten, DK | Issued by Signature: Name: Gert Kjær Title: Senior Director, GDE | Date: 2020.09.15 Place of issue: Graasten, DK | Approved by Signature: Name: Michael Termansen Title: VP, PD Center Denmark |
|---|--|---|---|

Danfoss only vouches for the correctness of the English version of this declaration. In the event of the declaration being translated into any other language, the translator concerned shall be liable for the correctness of the translation

For products including available Safe Torque Off (STO) function according to unit typecode on the nameplate: **T or U at character 18 of the typecode.**

Machine Directive 2006/42/EC

EN/IEC 61800-5-2:2007
(Safe Stop function conforms with STO – Safe Torque Off, SIL 2 Capability)

Adjustable speed electrical power drive systems – Part 5-2: Safety requirements – Functional

Other standards considered:

EN ISO 13849-1:2015
(Safe Stop function, PL d
(MTTFd=14000 years, DC=90%, Category 3)
EN/IEC 61508-1:2011, EN/IEC 61508-2:2011
(Safe Stop function, SIL 2 (PFH = 1E-10/h, 1E-8/h for specific variants, PFD = 1E-10, 1E-4 for specific variants, SFF>99%, HFT=0))

Safety of machinery - Safety-related parts of control systems - Part 1: General principles for design

Functional safety of electrical/electronic/ programmable electronic safety-related systems
Part 1: General requirements

Part 2: Requirements for electrical/ electronic / programmable electronic safety-related systems
Safety of machinery - Functional safety of safety-related electrical, electronic and programmable electronic control systems

EN/IEC 62061:2005 + A1:2013
(Safe Stop function, SILCL 2)

Safety of machinery - Electrical equipment of machines - Part 1: General requirements


EN/IEC 60204-1:2006 + A1:2009
(Stop Category 0)

For products including ATEX option, it requires STO function in the products. The products can have the VLT PTC Thermistor Card MCB112 installed from factory (**2 at character 32 in the typecode**), or it can be separately installed as an additional part.

2014/34/EU - Equipment for explosive atmospheres (ATEX)

Based on EU harmonized standard:
EN 50495: 2010

Safety devices required for safe functioning of equipment with respect to explosion risks.

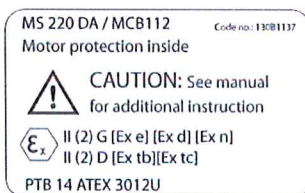

Notified Body:

PTB Physikalisch-Technische Bundesanstalt, Bundesallee 100, 38116 Braunschweig, has assessed the conformity of the "ATEX certified motor thermal protection systems" of Danfoss FC VLT Drives with Safe Torque Off function and has issued the certificate PTB 14 ATEX 3009.

Contents

| | | |
|----------|---|-----------|
| 1 | Introduction | 7 |
| 1.1 | Purpose of this Operating Guide | 7 |
| 1.2 | Manual and Software Version | 7 |
| 1.3 | Trademarks | 7 |
| 1.4 | Approvals and Certifications | 7 |
| 1.5 | Disposal | 8 |
| 2 | Safety | 9 |
| 2.1 | Safety Symbols | 9 |
| 2.2 | Qualified Personnel | 9 |
| 2.3 | Safety Precautions | 9 |
| 3 | Product Overview | 12 |
| 3.1 | Intended Use | 12 |
| 3.2 | Power Ratings, Weights, and Dimensions for E1h–E4h Enclosures | 12 |
| 3.3 | Interior View of Enclosure E1h/E2h | 13 |
| 3.4 | Interior View of Enclosure E3h/E4h | 15 |
| 3.5 | Control Shelf | 16 |
| 3.6 | Local Control Panel (LCP) | 17 |
| 3.7 | LCP Menu | 19 |
| 4 | Mechanical Installation | 22 |
| 4.1 | Items Supplied | 22 |
| 4.2 | Tools Needed | 22 |
| 4.3 | Storing the Drive | 23 |
| 4.4 | Operating Environment | 23 |
| 4.4.1 | Overview | 23 |
| 4.4.2 | Gases | 23 |
| 4.4.3 | Dust | 24 |
| 4.4.4 | Potentially Explosive Atmospheres | 24 |
| 4.5 | Installation Requirements | 25 |
| 4.6 | Cooling Requirements | 25 |
| 4.7 | E1h–E4h Airflow Rates | 26 |
| 4.8 | Lifting the Drive | 26 |
| 4.9 | E1h/E2h Mechanical Installation | 27 |
| 4.9.1 | Securing the Pedestal to the Floor | 27 |
| 4.9.2 | Attaching an E1h/E2h to the Pedestal | 28 |
| 4.9.3 | Creating Cable Openings for an E1h/E2h | 30 |
| 4.10 | E3h/E4h Mechanical Installation | 30 |
| 4.10.1 | Attaching the E3h/E4h to a Mounting Plate or Wall | 31 |

| | | |
|----------|--|-----------|
| 4.10.2 | Creating Cable Openings for an E3h/E4h | 31 |
| 4.10.3 | Installing Load share/Regen Terminals to an E3h/E4h | 34 |
| 5 | Electrical Installation | 35 |
| 5.1 | Safety Instructions | 35 |
| 5.2 | EMC-compliant Installation | 36 |
| 5.3 | Wiring Schematic | 40 |
| 5.4 | Connecting the Motor | 41 |
| 5.5 | Connecting the AC Mains | 42 |
| 5.6 | Connecting to Ground | 45 |
| 5.7 | E1h Terminal Dimensions | 47 |
| 5.8 | E2h Terminal Dimensions | 49 |
| 5.9 | E3h Terminal Dimensions | 51 |
| 5.10 | E4h Terminal Dimensions | 54 |
| 5.11 | Control Wiring | 56 |
| 5.11.1 | Control Cable Access | 56 |
| 5.11.2 | Routing Control Cables | 57 |
| 5.11.3 | Control Terminal Types | 58 |
| 5.11.4 | Relay Terminals | 59 |
| 5.11.5 | Connecting the Control Cable to the Control Terminals | 60 |
| 5.11.6 | Disconnecting the Control Cable from the Control Terminals | 61 |
| 5.11.7 | Enabling Motor Operation | 61 |
| 5.11.8 | Configuring RS485 Serial Communication | 62 |
| 5.11.9 | Safe Torque Off (STO) Wiring | 63 |
| 5.11.10 | Space Heater Wiring | 63 |
| 5.11.11 | Auxiliary Contact Wiring for Disconnects | 63 |
| 5.11.12 | Wiring the Brake Resistor Temperature Switch | 64 |
| 5.11.13 | Selecting the Voltage/Current Input Signal | 64 |
| 6 | Starting the Drive | 66 |
| 6.1 | Pre-start Check List | 66 |
| 6.2 | Applying Power to the Drive | 67 |
| 6.3 | Programming the Drive | 68 |
| 6.3.1 | Parameter Overview | 68 |
| 6.3.2 | Parameter Navigation | 68 |
| 6.3.3 | Entering System Information | 68 |
| 6.3.4 | Configuring Automatic Energy Optimization | 69 |
| 6.3.5 | Configuring Automatic Motor Adaptation | 70 |
| 6.4 | Testing Before System Start Up | 70 |
| 6.4.1 | Testing Motor Rotation | 70 |
| 6.4.2 | Testing Encoder Rotation | 71 |
| 6.5 | Starting Up the Drive for the First Time | 71 |

| | | |
|----------|---|------------|
| 6.6 | Parameter Settings | 72 |
| 6.6.1 | Parameter Setting Overview | 72 |
| 6.6.2 | Uploading and Downloading Parameter Settings | 72 |
| 6.6.3 | Restoring Factory Default Settings Using the Recommended Initialization | 73 |
| 6.6.4 | Restoring Factory Default Settings Using Manual Initialization | 73 |
| 7 | Wiring Configuration Examples | 74 |
| 7.1 | Application Examples | 74 |
| 7.1.1 | Wiring Configuration for Automatic Motor Adaptation (AMA) | 74 |
| 7.1.2 | Wiring Configuration for Automatic Motor Adaptation without T27 | 75 |
| 7.1.3 | Wiring Configuration: Speed | 75 |
| 7.1.4 | Wiring Configuration: Feedback | 78 |
| 7.1.5 | Wiring Configuration: Run/Stop | 81 |
| 7.1.6 | Wiring Configuration: Start/Stop | 84 |
| 7.1.7 | Wiring Configuration: External Alarm Reset | 87 |
| 7.1.8 | Wiring Configuration: RS485 | 88 |
| 7.1.9 | Wiring Configuration: Motor Thermistor | 88 |
| 7.1.10 | Wiring for Regen | 90 |
| 7.1.11 | Wiring Configuration for a Relay Setup with Smart Logic Control | 91 |
| 7.1.12 | Wiring Configuration for a Submersible Pump | 91 |
| 7.1.13 | Wiring Configuration for a Cascade Controller | 94 |
| 7.1.14 | Wiring Configuration for a Fixed Variable Speed Pump | 96 |
| 7.1.15 | Wiring Configuration for Lead Pump Alternation | 97 |
| 8 | Maintenance, Diagnostics, and Troubleshooting | 98 |
| 8.1 | Maintenance and Service | 98 |
| 8.2 | Heat Sink Service | 98 |
| 8.2.1 | Heat Sink Access Panel | 98 |
| 8.2.2 | Removing Dust Buildup from the Heat Sink | 98 |
| 8.3 | Status Messages | 99 |
| 8.3.1 | Status Message Overview | 99 |
| 8.3.2 | Status Messages - Operating Mode | 100 |
| 8.3.3 | Status Messages - Reference Site | 100 |
| 8.3.4 | Status Messages - Operation Status | 101 |
| 8.4 | Warnings and Alarms | 103 |
| 8.5 | Troubleshooting | 127 |
| 9 | Specifications | 130 |
| 9.1 | Electrical Data | 130 |
| 9.1.1 | Electrical Data, 380–480 V AC | 130 |
| 9.1.2 | Electrical Data, 525–690 V AC | 132 |
| 9.2 | Mains Supply | 135 |
| 9.3 | Motor Output and Torque Characteristics | 135 |

| | | |
|-----------|---|------------|
| 9.3.1 | Motor Output (U, V, W) | 135 |
| 9.3.2 | Torque Characteristics | 135 |
| 9.4 | Ambient Conditions | 136 |
| 9.5 | Cable Specifications | 137 |
| 9.6 | Control Input/Output and Control Data | 137 |
| 9.6.1 | Digital Inputs | 137 |
| 9.6.2 | STO Terminal 37 | 137 |
| 9.6.3 | Analog Inputs | 138 |
| 9.6.4 | Pulse/encoder Inputs | 138 |
| 9.6.5 | Analog Output | 139 |
| 9.6.6 | Control Card, RS485 Serial Communication | 139 |
| 9.6.7 | Digital Outputs | 139 |
| 9.6.8 | Control Card, 24 V DC Output | 140 |
| 9.6.9 | Relay Outputs | 140 |
| 9.6.10 | Control Card, +10 V DC Output | 141 |
| 9.6.11 | Control Characteristics | 141 |
| 9.6.12 | Control Card Performance | 141 |
| 9.6.13 | Control Card, USB Serial Communication | 141 |
| 9.7 | Fuses | 141 |
| 9.8 | Enclosure Dimensions | 143 |
| 9.8.1 | E1h Exterior Dimensions | 143 |
| 9.8.2 | E2h Exterior Dimensions | 147 |
| 9.8.3 | E3h Exterior Dimensions | 151 |
| 9.8.4 | E4h Exterior Dimensions | 155 |
| 9.9 | Enclosure Airflow | 159 |
| 9.10 | Fastener Torque Ratings | 159 |
| 10 | Appendix | 161 |
| 10.1 | Conventions | 161 |
| 10.2 | Abbreviations | 161 |
| 10.3 | International/North American Default Parameter Settings | 163 |

1 Introduction

1.1 Purpose of this Operating Guide

This operating guide provides information for safe installation and commissioning of the AC drive. It is intended for use by qualified personnel. Read and follow the instructions to use the drive safely and professionally. Pay particular attention to the safety instructions and general warnings. Always keep this operating guide available with the drive.

1.2 Manual and Software Version

This manual is regularly reviewed and updated. All suggestions for improvement are welcome.

Table 1: Manual and Software Version

| Manual version | Remarks | Software version |
|--------------------------|--|------------------|
| AQ275652274277xx-xx01-01 | Updated power losses in Electrical Data table. Created <i>Starting the Drive</i> chapter by combining <i>Commissioning</i> and <i>Pre-start Check List</i> chapters. | 3.40 |
| MG22A2xx | Previous version. | 2.70 |

1.3 Trademarks

VLT® is a registered trademark for Danfoss A/S.

1.4 Approvals and Certifications



Illustration 1: Approvals and Certifications

More approvals and certifications are available. Contact the local Danfoss office or partner. Drives of voltage T7 (525–690 V) are UL certified for only 525–600 V.

Thermal memory retention requirement

The drive complies with UL 61800-5-1 thermal memory retention requirements. For more information, refer to the *Motor Thermal Protection* section in the product-specific design guide.

NOTICE

OUTPUT FREQUENCY LIMIT

From software version 1.99, the output frequency of the drive is limited to 590 Hz due to export control regulations.

ADN-compliance

For more information on compliance with the European Agreement concerning International Carriage of Dangerous Goods by Inland Waterways (ADN), refer to the *ADN-compliant Installation* section in the product-specific design guide.

1.5 Disposal

Do not dispose of equipment containing electrical components together with domestic waste. Collect it separately in accordance with applicable local regulations.

2 Safety

2.1 Safety Symbols

The following symbols are used in this manual:

⚠ DANGER ⚠

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

⚠ WARNING ⚠

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION ⚠

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

Indicates information considered important, but not hazard-related (for example, messages relating to property damage).

2.2 Qualified Personnel

To allow trouble-free and safe operation of the unit, only qualified personnel with proven skills are allowed to transport, store, assemble, install, program, commission, maintain, and decommission this equipment.

Persons with proven skills:

- Are qualified electrical engineers, or persons who have received training from qualified electrical engineers and are suitably experienced to operate devices, systems, plant, and machinery in accordance with pertinent laws and regulations.
- Are familiar with the basic regulations concerning health and safety/accident prevention.
- Have read and understood the safety guidelines given in all manuals provided with the unit, especially the instructions given in the Operating Guide.
- Have good knowledge of the generic and specialist standards applicable to the specific application.

2.3 Safety Precautions

The following safety precautions must be followed when performing installation, start up, and maintenance/service of the drive.

⚠ WARNING ⚠

HIGH VOLTAGE

AC drives contain high voltage when connected to AC mains input, DC supply, or load sharing. Failure to perform installation, start-up, and maintenance by qualified personnel can result in death or serious injury.

- Only qualified personnel must perform installation, start-up, and maintenance.

⚠ CAUTION ⚠**HOT SURFACES**

The drive contains metal components that are still hot even after the drive has been powered off. Failure to observe the high temperature symbol (yellow triangle) on the drive can result in serious burns.

- Be aware that internal components, such as busbars, may be extremely hot even after the drive has been powered off.
- Do not touch exterior areas that are marked by the high temperature symbol (yellow triangle). These areas are hot while the drive is in use and immediately after being powered off.

⚠ WARNING ⚠**DISCHARGE TIME (40 MINUTES)**

The drive contains DC-link capacitors, which can remain charged even when the drive is not powered. High voltage can be present even when the warning indicator lights are off.

Failure to wait 40 minutes after power has been removed before performing service or repair work can result in death or serious injury.

- Stop the motor.
- Disconnect AC mains, permanent magnet type motors, and remote DC-link supplies, including battery back-ups, UPS, and DC-link connections to other drives.
- Wait 40 minutes for the capacitors to discharge fully before performing any service or repair work.
- Measure the voltage level to verify full discharge.

⚠ WARNING ⚠**UNINTENDED START**

When the drive is connected to the AC mains, DC supply, or load sharing, the motor may start at any time, causing risk of death, serious injury, and equipment or property damage. The motor may start by activation of an external switch, a fieldbus command, an input reference signal from the LCP or LOP, via remote operation using MCT 10 Set-up software, or after a cleared fault condition.

- Press [Off] on the LCP before programming parameters.
- Disconnect the drive from the mains whenever personal safety considerations make it necessary to avoid unintended motor start.
- Check that the drive, motor, and any driven equipment are in operational readiness.

⚠ WARNING ⚠**ROTATING SHAFTS**

Contact with rotating shafts and electrical equipment can result in death or serious injury.

- Ensure that only trained and qualified personnel perform installation, start-up, and maintenance.
- Ensure that electrical work conforms to national and local electrical codes.
- Follow the procedures in this guide.

⚠ WARNING ⚠**LEAKAGE CURRENT HAZARD**

Leakage currents exceed 3.5 mA. Failure to ground the drive properly can result in death or serious injury.

- Ensure the correct grounding of the equipment by a certified electrical installer.

⚠ CAUTION ⚠**INTERNAL FAILURE HAZARD**

An internal failure in the drive can result in serious injury when the drive is not properly closed.

- Ensure that all safety covers are in place and securely fastened before applying power.

NOTICE**MAINS SHIELD SAFETY OPTION**

A mains shield option is available for enclosures with a protection rating of IP21/IP 54 (Type 1/Type 12). The mains shield is a Lexan cover installed inside the enclosure to protect against the accidental touch of the power terminals, according to BGV A2, VBG 4.

3 Product Overview

3.1 Intended Use

NOTICE

OUTPUT FREQUENCY LIMIT

Due to export control regulations, the output frequency of the drive is limited to 590 Hz. For demands exceeding 590 Hz, contact Danfoss.

The drive is an electronic motor controller that converts AC mains input into a variable AC waveform output. The frequency and voltage of the output are regulated to control the motor speed or torque. The drive is designed to:

- Regulate motor speed in response to system feedback or remote commands from external controllers.
- Monitor system and motor status.
- Provide motor overload protection.

Depending on the configuration, the drive can be used in standalone applications or form part of a larger system or installation.

The drive is allowed for use in industrial and commercial environments in accordance with local laws and standards. Do not use the drive in applications which are non-compliant with specified operating conditions and environments.


3.2 Power Ratings, Weights, and Dimensions for E1h–E4h Enclosures

Table 2: Power Ratings, Weights, and Dimensions for E1h–E4h Enclosures (Standard Configurations)

| Enclosure size | E1h | E2h | E3h | E4h |
|---|------------------------------|------------------------------|-------------------|-------------------|
| Rated power at 380–480 V [kW (hp)] | 355–450 (500–600) | 500–560 (650–750) | 355–450 (500–600) | 500–560 (650–750) |
| Rated power at 525–690 V [kW (hp)] | 450–6300 (450–650) | 710–800 (750–950) | 450–630 (450–650) | 710–800 (750–950) |
| Enclosure protection rating ⁽¹⁾ | IP21/Type 1 IP54/ Type 12 | IP21/Type 1 IP54/ Type 12 | IP20/Chassis | IP20/Chassis |
| Unit dimensions | | | | |
| Height [mm (in)] | 2043 (80.4) | 2043 (80.4) | 1578 (62.1) | 1578 (62.1) |
| Width [mm (in)] | 602 (23.7) | 698 (27.5) | 506 (19.9) | 604 (23.89) |
| Depth [mm (in)] | 513 (20.2) | 513 (20.2) | 482 (19.0) | 482 (19.0) |
| Weight [kg (lb)] | 295 (650) | 318 (700) | 272 (600) | 295 (650) |
| Shipping dimensions | | | | |
| Height [mm (in)] | 2191 (86.3) | 2191 (86.3) | 1759 (69.3) | 1759 (69.3) |
| Width [mm (in)] | 768 (30.2) | 768 (30.2) | 746 (29.4) | 746 (29.4) |
| Depth [mm (in)] | 870 (34.3) | 870 (34.3) | 794 (31.3) | 794 (31.3) |
| Weight [kg (lb)] | – | – | – | – |

¹ Type 1 and Type 12 are UL designations.

3.3 Interior View of Enclosure E1h/E2h

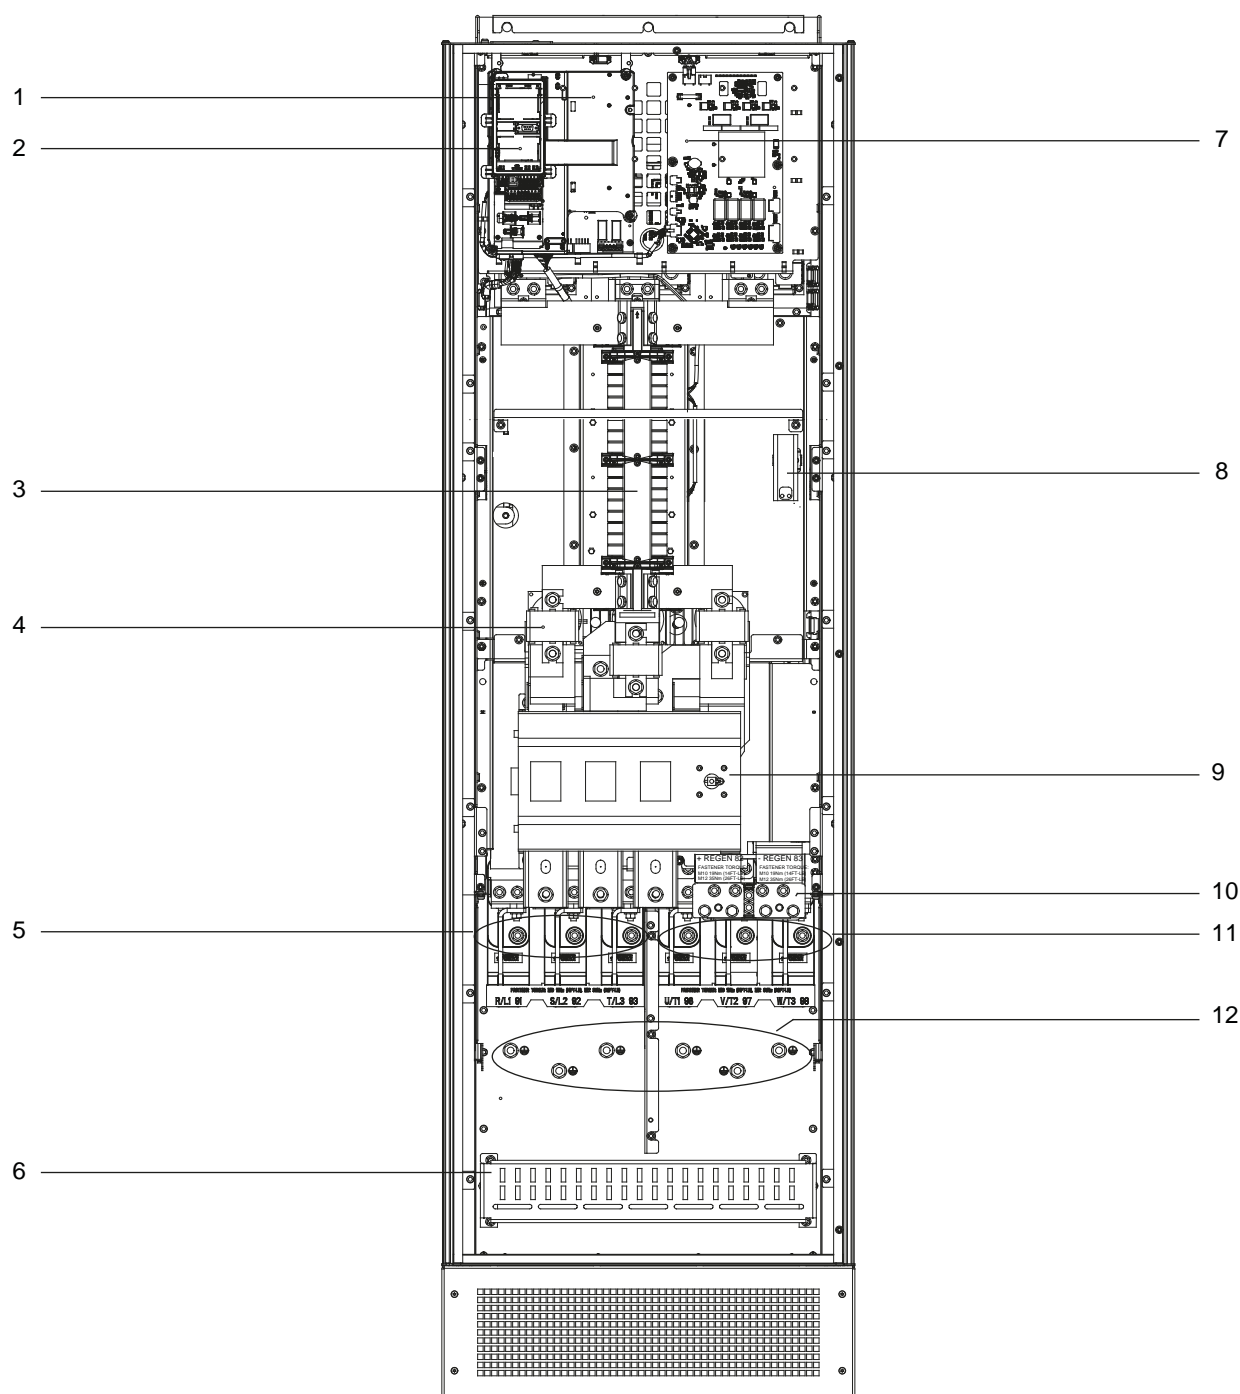


e30br206.11

| | | | |
|---|---|---|--|
| 1 | Control shelf (see illustration 4) | 2 | Local control panel (LCP) cradle |
| 3 | RFI filter (optional) | 4 | Mains fuses (required for UL Compliance, but otherwise optional) |
| 5 | Mains terminals | 6 | RFI shield termination |
| 7 | Fan power card | | |

| | |
|---|--|
| <p>9 Mains disconnect (optional)</p> | <p>8 Space heater (optional)</p> |
| <p>11 Motor terminals</p> | <p>10 Brake/regeneration terminals (optional)</p> |
| | <p>12 Ground terminals</p> |

Illustration 2: Interior View of Enclosure E1h (Enclosure E2h is Similar)

3.4 Interior View of Enclosure E3h/E4h

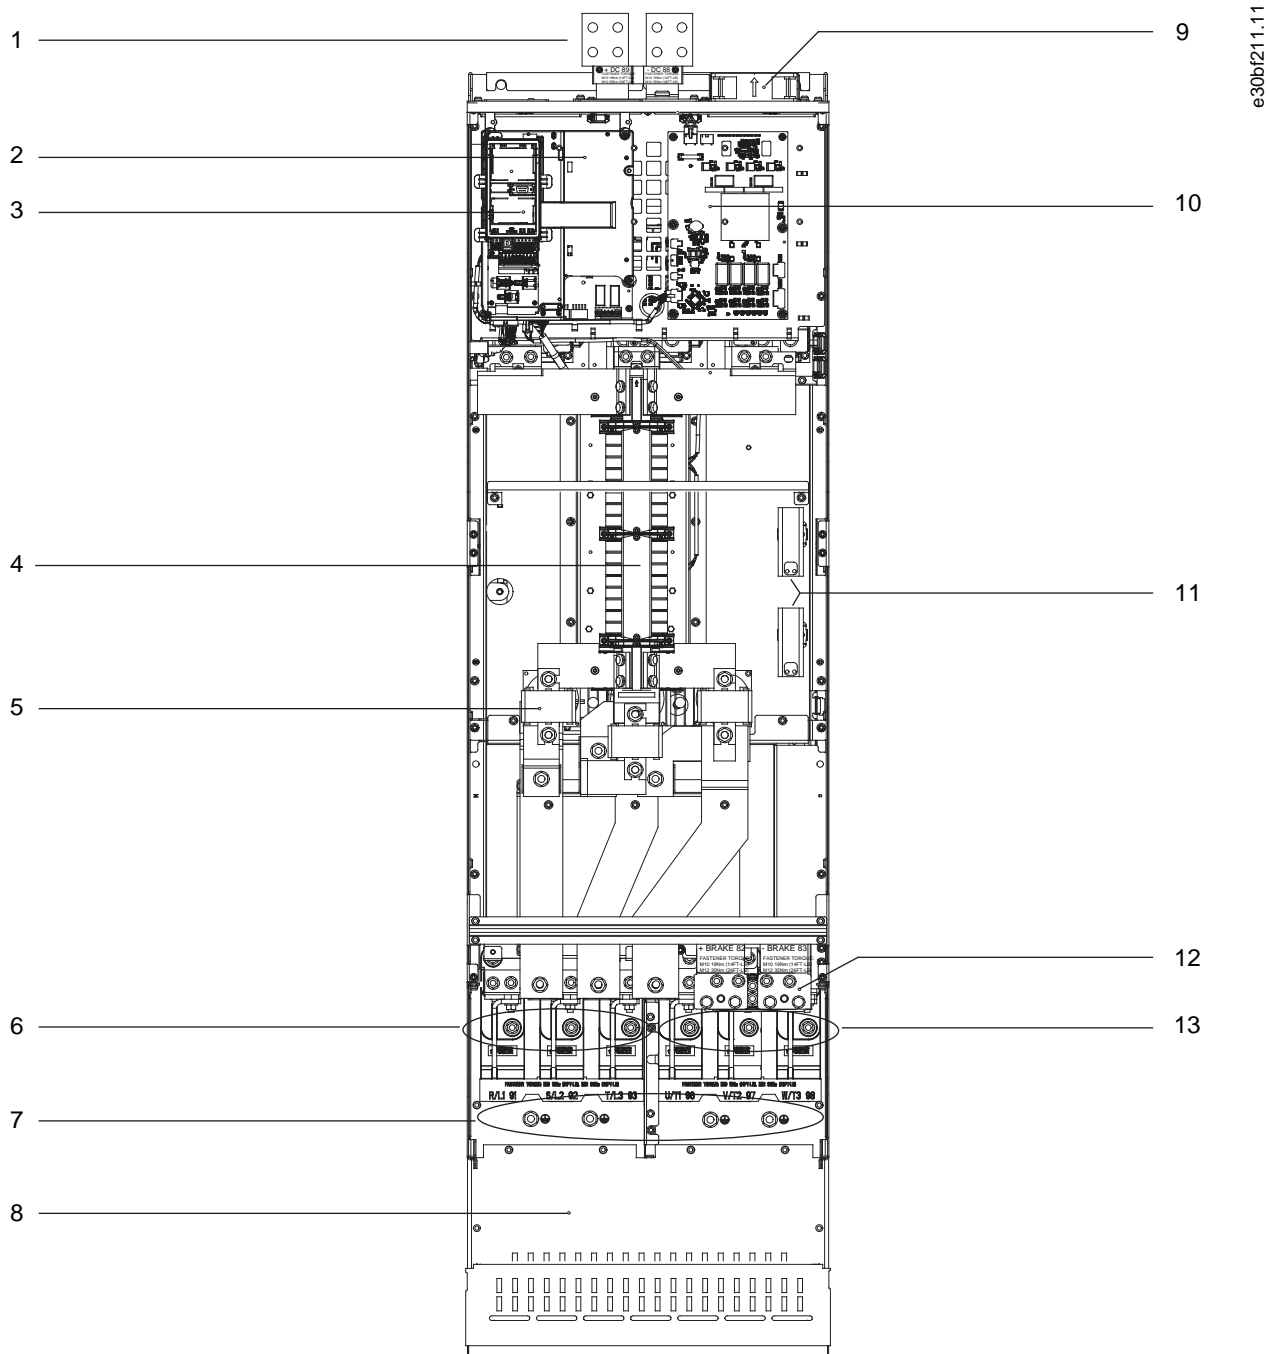


| | | | |
|---|--|---|---|
| 1 | Load share/regeneration terminals (optional) | 2 | Control shelf (see illustration 4) |
| 3 | Local control panel (LCP) cradle | 4 | RFI filter (optional) |
| 5 | Mains fuses (optional) | 6 | Mains terminals |
| 7 | Ground terminals | | |

| | |
|---|--|
| 9 Fans (used to cool the front section of enclosure) | 8 RFI shield termination (optional, but is standard when RFI filter is ordered) |
| 11 Space heater (optional) | 10 Fan power card |
| 13 Motor terminals | 12 Brake terminals (optional) |

Illustration 3: Interior View of Enclosure E3h (Enclosure E4h is Similar)

3.5 Control Shelf

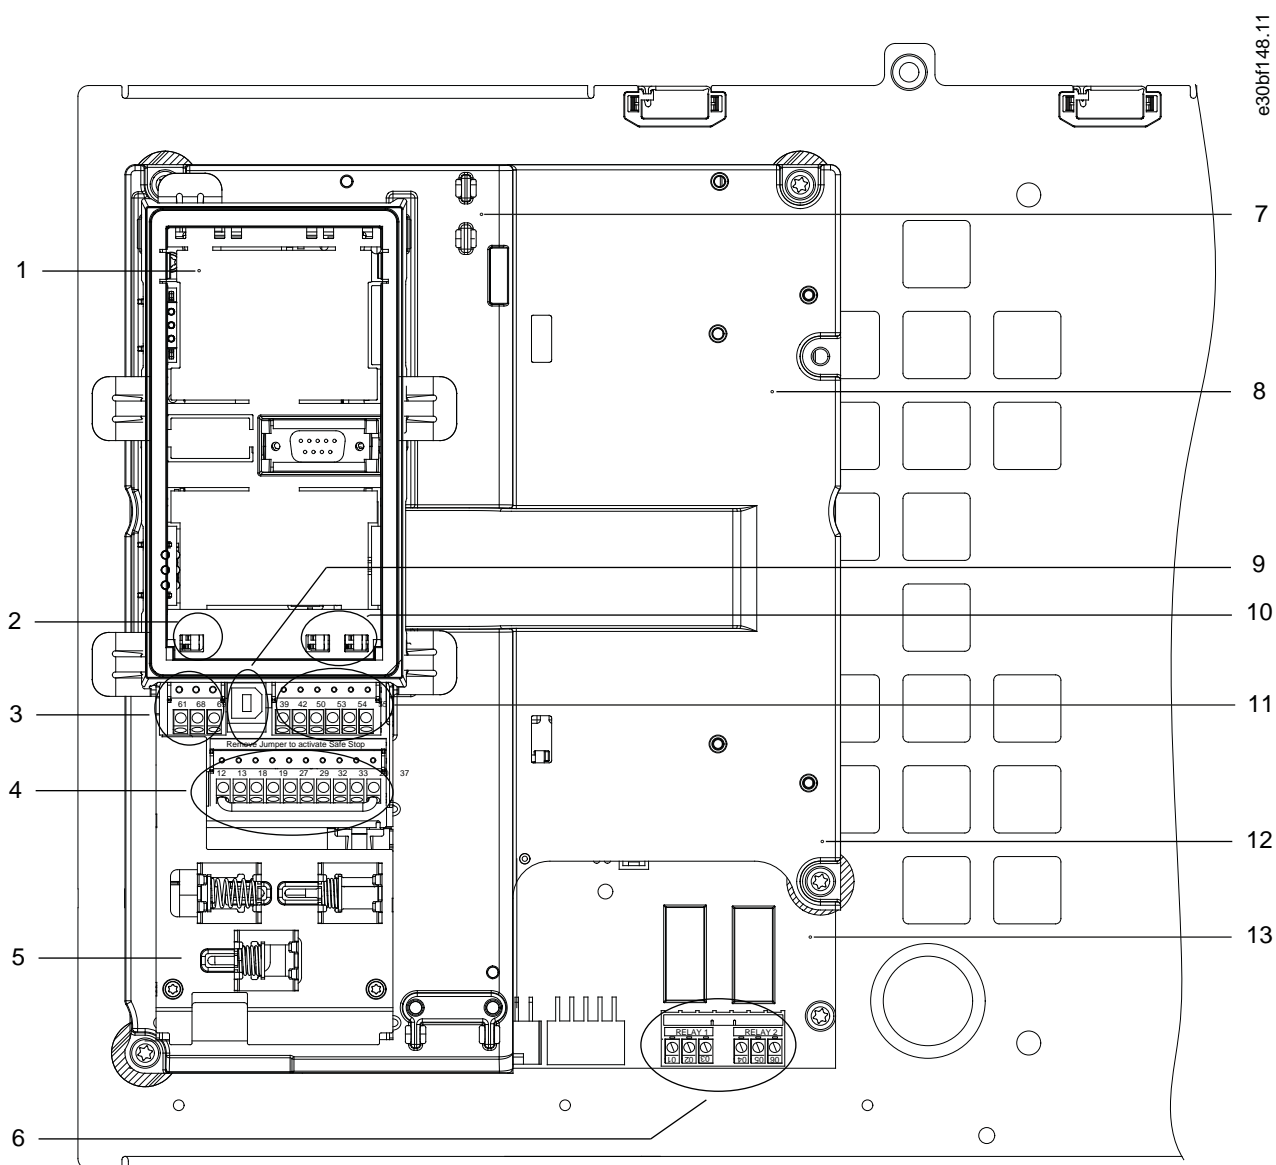

| | |
|---|---|
| 1 LCP cradle (LCP not shown) | 2 Bus terminal switch (see 5.11.8.2 Configuring RS485 Serial Communication) |
| 3 Serial communication terminals (see table 10) | 4 Digital input/output terminals (see table 11) |

| | |
|--|--|
| 5 Cable/EMC clamps | 6 Relay 1 and relay 2 (see 5.11.4 Relay Terminals) |
| 7 Control card (underneath LCP and control terminals) | 8 Control shelf |
| 9 USB port | 10 Analog input switches A53/A54 (see 5.11.13 Selecting the Voltage/Current Input Signal) |
| 11 Analog input/output terminals (see table 12) | 12 Brake resistor terminals, 104–106 (on power card underneath control shelf) |
| 13 Power card (underneath the control shelf) | |

Illustration 4: View of Control Shelf

3.6 Local Control Panel (LCP)

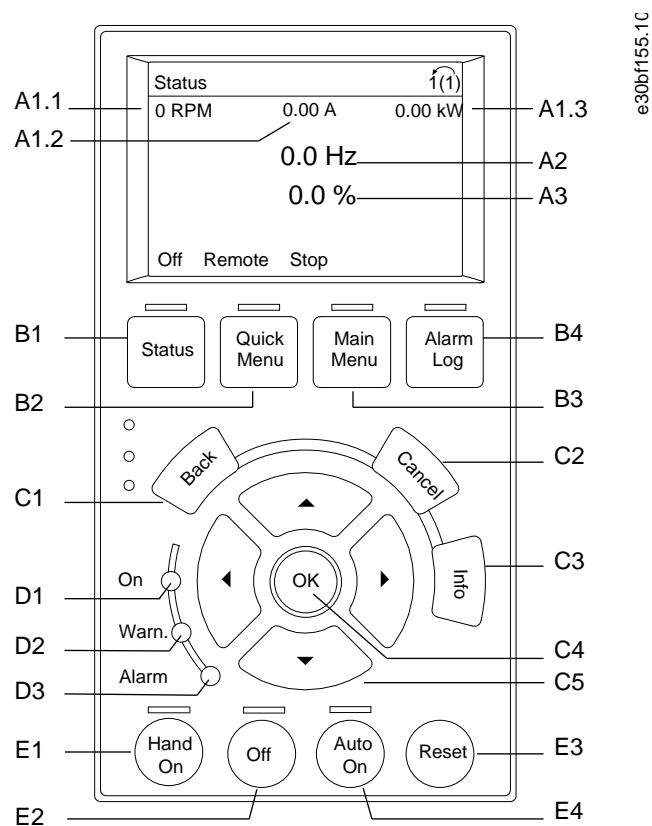


Illustration 5: Graphical Local Control Panel (LCP)

The local control panel (LCP) is the combined display and keypad on the front of the drive. The LCP is used to:

- Control the drive and motor.
- Access drive parameters and program the drive.
- Display operational data, drive status, and warnings.

A numeric local control panel (NLCP) is available as an option. The NLCP operates in a manner similar to the LCP, but there are differences. For details on how to use the NLCP, see the product-specific programming guide.

A. Display area

Each display readout has a parameter associated with it. See [table 3](#). The information shown on the LCP can be customized for specific applications. Refer to *My Personal Menu* in the *LCP Menu* section.

Table 3: LCP Display Area

| Callout | Parameter | Default setting |
|---------|--|---------------------|
| A1.1 | <i>Parameter 0-20 Display Line 1.1 Small</i> | Reference [Unit] |
| A1.2 | <i>Parameter 0-21 Display Line 1.2 Small</i> | Analog input 53 [V] |
| A1.3 | <i>Parameter 0-22 Display Line 1.3 Small</i> | Motor current [A] |
| A2 | <i>Parameter 0-23 Display Line 2 Large</i> | Frequency [Hz] |
| A3 | <i>Parameter 0-24 Display Line 3 Large</i> | Feedback [Unit] |

B. Menu keys

Menu keys are used to access the menu for setting up parameters, toggling through status display modes during normal operation, and viewing fault log data.

Table 4: LCP Menu Keys

| Callout | Key | Function |
|---------|------------|--|
| B1 | Status | Shows operational information. |
| B2 | Quick Menu | Allows access to parameters for initial set-up instructions. Also provides detailed application steps. Refer to <i>Quick Menu mode</i> in the <i>LCP Menu</i> section. |
| B3 | Main Menu | Allows access to all parameters. Refer to <i>Main Menu mode</i> in the <i>LCP Menu</i> section. |
| B4 | Alarm Log | Shows a list of current warnings and the last 10 alarms. |

C. Navigation keys

Navigation keys are used for programming functions and moving the display cursor. The navigation keys also provide speed control in local (hand) operation. The display brightness can be adjusted by pressing [Status] and [Δ]/[∇] keys.

Table 5: LCP Navigation Keys

| Callout | Key | Function |
|---------|--|---|
| C1 | Back | Reverts to the previous step or list in the menu structure. |
| C2 | Cancel | Cancels the last change or command as long as the display mode has not changed. |
| C3 | Info | Shows a definition of the function being shown. |
| C4 | OK | Accesses parameter groups or enables an option. |
| C5 | [Δ]/[∇] [\rightarrow] [\leftarrow] | Moves between items in the menu. |

D. Indicator lights

Indicator lights identify the drive status and provide a visual notification of warning or fault conditions.

Table 6: LCP Indicator Lights

| Callout | Indicator | LED | Function |
|---------|-----------|--------|---|
| D1 | On | Green | Activates when the drive receives power from the mains voltage or a 24 V external supply. |
| D2 | Warn. | Yellow | Activates when warning conditions are active. Text appears in the display area identifying the problem. |
| D3 | Alarm | Red | Activates during a fault condition. Text appears in the display area identifying the problem. |

E. Operation keys and reset

The operation keys are found toward the bottom of the local control panel.

Table 7: LCP Operation Keys and Reset

| Callout | Key | Function |
|---------|-----------|---|
| E1 | [Hand On] | Starts the drive in local control. An external stop signal by control input or serial communication overrides the local [Hand On]. |
| E2 | Off | Stops the motor but does not remove power to the drive. |
| E3 | Reset | Resets the drive manually after a fault has been cleared. |
| E4 | Auto On | Puts the system in remote operational mode so it can respond to an external start command by control terminals or serial communication. |

3.7 LCP Menu

Quick Menus

The *Quick Menus* mode provides a list of menus used to configure and operate the drive. Select the *Quick Menus* mode by pressing the [Quick Menu] key. The resulting readout appears on the LCP display.

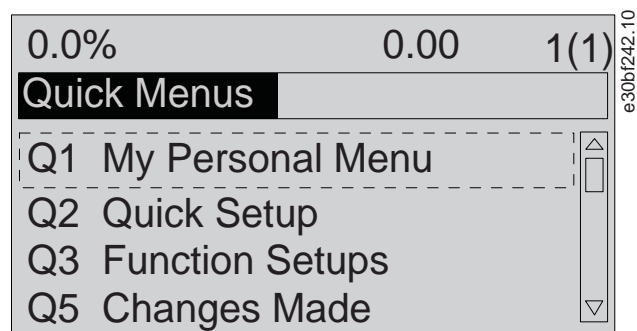


Illustration 6: Quick Menu View

Q1 My Personal Menu

The Personal Menu is used to determine what is shown in the display area. Refer to [3.6 Local Control Panel \(LCP\)](#). This menu can also show up to 50 pre-programmed parameters. These 50 parameters are manually entered using *parameter 0-25 My Personal Menu*.

Q2 Quick Setup

The parameters found in the Q2 Quick Setup contain basic system and motor data that are always necessary for configuring the drive. See [6.3.3 Entering System Information](#) for the set-up procedures.

Q3 Function Setups

The parameters found in the Q3 Function Setups contain data for fan, compressor, and pump functions. This menu also includes parameters for LCP display, digital preset speeds, scaling of analog references, closed-loop single zone, and multizone applications.

Q4 Smart Setup

Q4 Smart Setup guides the user through typical parameter settings used to configure 1 of the following 4 applications:

- Single pump/motor.
- Motor alternation.
- Master/follower.
- Basic cascade.

The [Info] key can be used to see help information for various selections, settings, and messages.

Q5 Changes Made

Select Q5 Changes Made for information about:

- The 10 most recent changes.
- Changes made from default setting.

Q6 Loggings

Use Q6 Loggings for fault finding. To get information about the display line readout, select Loggings. The information is shown as graphs. Only parameters selected in *parameter 0-20 Display Line 1.1 Small* through *parameter 0-24 Display Line 3 Large* can be viewed. It is possible to store up to 120 samples in the memory for later reference.

Table 8: Logging Parameter Examples

| Q6 Loggings | |
|--|---------------------|
| <i>Parameter 0-20 Display Line 1.1 Small</i> | Reference [Unit] |
| <i>Parameter 0-21 Display Line 1.2 Small</i> | Analog input 53 [V] |
| <i>Parameter 0-22 Display Line 1.3 Small</i> | Motor current [A] |
| <i>Parameter 0-23 Display Line 2 Large</i> | Frequency [Hz] |
| <i>Parameter 0-24 Display Line 3 Large</i> | Feedback [Unit] |

Q7 Water and Pumps

The parameters found in the Q7 Water and Pumps contain basic data that is necessary for configuring water pump applications.

Main Menu

The *Main Menu* mode is used to:

- List the parameter groups available to the drive and drive options.
- Change parameter values.

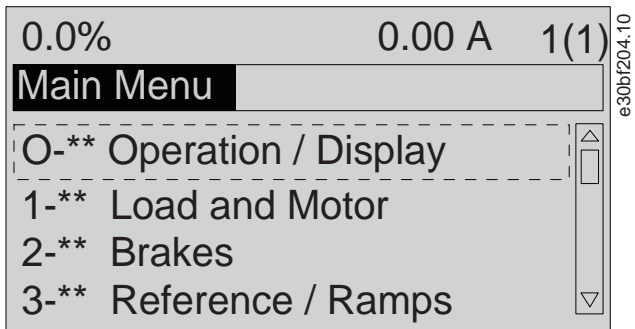



Illustration 7: Main Menu View

4 Mechanical Installation

4.1 Items Supplied

Items supplied can vary according to product configuration.

- Make sure that the items supplied and the information on the nameplate correspond to the order confirmation.
- Visually check the packaging and the drive for damage caused by inappropriate handling during shipment. File any claim for damage with the carrier. Retain damaged parts for clarification.

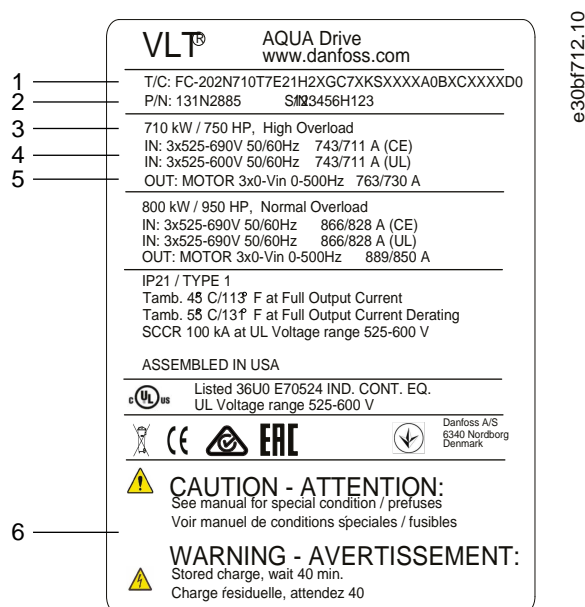

| | |
|--|---|
| 1 Type code | 2 Part number and serial number |
| 3 Power rating | 4 Input voltage, frequency, and current (at low/high voltages) |
| 5 Output voltage, frequency, and current (at low/high voltages) | 6 Discharge time |

Illustration 8: Product Nameplate for E2h Enclosure (Example)

NOTICE

WARRANTY
 Removing the nameplate from the drive can result in the loss of warranty.

4.2 Tools Needed

- I-beam and hooks rated to lift the weight of the drive. Refer to the *Power Ratings, Weights, and Dimensions* section.
- Crane or other lifting aid to place the unit into position.

- Drill with 10 mm or 12-mm drill bits.
- Tape measurer.
- Various sizes of Phillips and flat bladed screwdrivers.
- Wrench with relevant metric sockets (7–17 mm).
- Wrench extensions.
- Torx drives (T25 and T50).
- Sheet metal punch for cable entry plate.

4.3 Storing the Drive

Store the drive in a dry location. Keep the equipment sealed in its packaging until installation. Refer to the *Ambient Conditions* section for recommended ambient temperature.

Periodic forming (capacitor charging) is not necessary during storage unless storage exceeds 12 months.

4.4 Operating Environment

4.4.1 Overview

In environments with airborne liquids, particles, or corrosive gases, ensure that the IP/NEMA protection rating of the equipment matches the installation environment. Refer to the *Ambient Conditions* section.

NOTICE

CONDENSATION

Moisture can condense on the electronic components and cause short circuits.

- Avoid installation in areas subject to frost.
- Install an optional space heater when the unit is colder than the ambient air.
- Operating in standby mode reduces the risk of condensation as long as the power dissipation keeps the circuitry free of moisture.

NOTICE

EXTREME AMBIENT CONDITIONS

Hot or cold temperatures compromise unit performance and longevity.

- Do not operate in environments where the ambient temperature exceeds 55 °C (131 °F).
- The unit can operate at temperatures down to -10 °C (14 °F). However, proper operation at rated load is only guaranteed at 0 °C (32 °F) or higher. Also, temperature feedback is not shown when temperatures are below 0 °C (32 °F).
- Provide extra air conditioning for the cabinet or installation site when the temperature exceeds ambient temperature limits.

4.4.2 Gases

Aggressive gases, such as hydrogen sulphide, chlorine, or ammonia can damage the electrical and mechanical components. The unit uses conformal-coated circuit boards to reduce the effects of aggressive gases.

For conformal coating class specifications and ratings, see the *Ambient Conditions* section.

4.4.3 Dust

When installing the unit in a dusty environment, keep the following free from dust buildup:

- Electronic components.
- Heat sink.
- Fans.

Keep the heat sink and fans free from dust buildup. When dust accumulates on electronic components, it acts as a layer of insulation. This layer reduces the cooling capacity of the components, and the components become warmer. The hotter environment decreases the life of the electronic components. Dust can also accumulate on fan blades, causing an imbalance which prevents the fan from properly cooling the unit. Dust buildup can also damage fan bearings and cause premature fan failure.

For more information, refer to the *Maintenance and Service* section.

4.4.4 Potentially Explosive Atmospheres

⚠ WARNING ⚠

EXPLOSIVE ATMOSPHERE

Installing the drive in a potentially explosive atmosphere can lead to death, personal injury, or property damage.

- Install the unit in a cabinet outside of the potentially explosive area.
- Use a motor with an appropriate ATEX protection class.
- Install a PTC temperature sensor to monitor the motor temperature.
- Install short motor cables.
- Use sine-wave output filters when shielded motor cables are not used.

As required by the EU Directive 2014/34/EU, any electrical or electronic device intended for use in an environment with a potentially explosive mixture of air, flammable gas, or dust must be ATEX-certified. Systems operated in this environment must fulfill the following special conditions to comply with the ATEX protection class:

- Class d specifies that if a spark occurs, it is contained in a protected area.
- Class e prohibits any occurrence of a spark.

Motors with class d protection

Does not require approval. Special wiring and containment are required.

Motors with class e or class n protection

When combined with an ATEX-approved PTC monitoring device like the VLT® PTC Thermistor Card MCB 112, installation does not need an individual approval from an approbated organization.

Motors with class d/e protection

The motor itself has an e ignition protection class, while the motor cabling and connection environment are in compliance with the d classification. To attenuate the high peak voltage, use a sine-wave filter at the drive output.

NOTICE

MOTOR THERMISTOR SENSOR MONITORING

Units with the VLT® PTC Thermistor Card MCB 112 option are PTB-certified for potentially explosive atmospheres.

4.5 Installation Requirements

NOTICE

OVERHEATING

Improper mounting can result in overheating and reduced performance.

- Install the drive according to the installation and cooling requirements.

- Locate the unit as near to the motor as possible. See [9.5 Cable Specifications](#) for the maximum motor cable length.
- Ensure unit stability by mounting the unit to a solid surface.
- Enclosures E3h and E4h can be mounted:
 - Vertically on the back plate of the panel (the typical installation).
 - Vertically upside down on the back plate of the panel. Consult the factory.
 - Horizontally on its back, mounted on the back plate of the panel. Consult the factory.
 - Horizontally on its side, mounted on floor of the panel. Consult the factory.
- Ensure that the strength of the mounting location supports the unit weight.
- Ensure that there is enough space around the unit for proper cooling. Refer to [9.9 Enclosure Airflow](#).
- Ensure enough access to open the door.
- Ensure cable entry from the bottom.

4.6 Cooling Requirements

NOTICE

OVERHEATING

Improper mounting can result in overheating and reduced performance.

- Install the drive following the installation and cooling requirements.

- Ensure that top and bottom clearance for air cooling is provided. Clearance requirement: 225 mm (9 in).
- Provide sufficient airflow flow rate. See [4.7 E1h-E4h Airflow Rates](#).
- Consider derating for temperatures starting between 45 °C (113 °F) and 55 °C (131 °F) and elevation 1000 m (3300 ft) above sea level. For more information, see the product-specific design guide.

The drive utilizes a back-channel cooling concept that removes heat sink cooling air. The heat sink cooling air carries approximately 90% of the heat out of the back channel of the drive. Redirect the back-channel air from the panel or the room by using either:

- Duct cooling.
- Back-wall cooling.

Duct cooling

Back-channel cooling kits are available to direct the heat sink cooling air out of the panel when IP20/Chassis drives are installed in Rittal enclosures. Use of these kits reduce the heat in the panel and smaller door fans can be specified.

Back-wall cooling

Installing top and bottom covers to the unit allows the back-channel cooling air to be ventilated out of the room.

4.7 E1h-E4h Airflow Rates

For E3h and E4h enclosures (IP20/Chassis), at least 1 door fan is required on the enclosure to remove the heat not contained in the back-channel of the drive. It also removes any additional losses generated by other components inside the drive. To select the appropriate fan size, calculate the total required airflow as shown in [table 9](#).

Table 9: Airflow Rates

| Drive | Door fan/top fan [m ³ /hr (cfm)] | Heat sink fan [m ³ /hr (cfm)] |
|-------|---|--|
| E1h | 510 (300) | 994 (585) |
| E2h | 552 (325) | 1053–1206 (620–710) |
| E3h | 595 (350) | 994 (585) |
| E4h | 629 (370) | 1053–1206 (620–710) |

4.8 Lifting the Drive

⚠ WARNING ⚠

LIFTING HEAVY LOAD

The weight of the drive is heavy and failure to follow local safety regulations for lifting heavy weights may cause death, personal injury, or property damage.

- Ensure that the lifting equipment is in proper working condition.
- Check the weight of the drive and verify that the lifting equipment can safely lift the weight.
- Maximum diameter for the lifting bar: 20 mm (0.8 in).
- The angle from the top of the drive to the lifting cable: 60° or greater.
- Test lift the drive approximately 610 mm (24 in) to verify the proper center of gravity lift point. Reposition the lifting point if the unit is not level.

Always lift the drive using a lifting bar inserted into the lifting eyes. See [illustration 9](#).

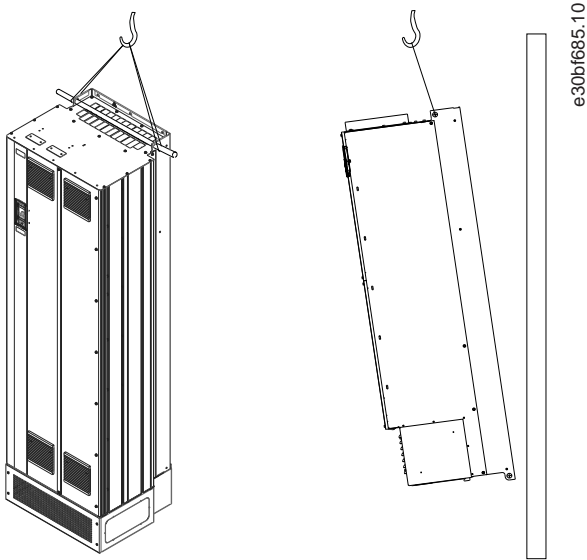


Illustration 9: Recommended Lifting Method

4.9 E1h/E2h Mechanical Installation

The E1h and E2h enclosure size is intended only for floor installation, and is shipped with a pedestal and a cable entry plate. The pedestal and cable entry plate must be installed for proper installation.


The pedestal is 200 mm (7.9 in) and has an opening in the front to allow airflow necessary to cool the power components of the drive.

The cable entry plate is necessary to provide cooling air to the control components of the drive via the door fan, and to maintain the IP21/Type 1 or IP54/Type 12 protection rating.

4.9.1 Securing the Pedestal to the Floor

Procedure

1. Determine proper placement of the unit, concerning operating conditions and cable access.
2. Access the mounting holes by removing the front panel of the pedestal.
3. Set the pedestal on the floor and secure using 6 bolts through the mounting holes.

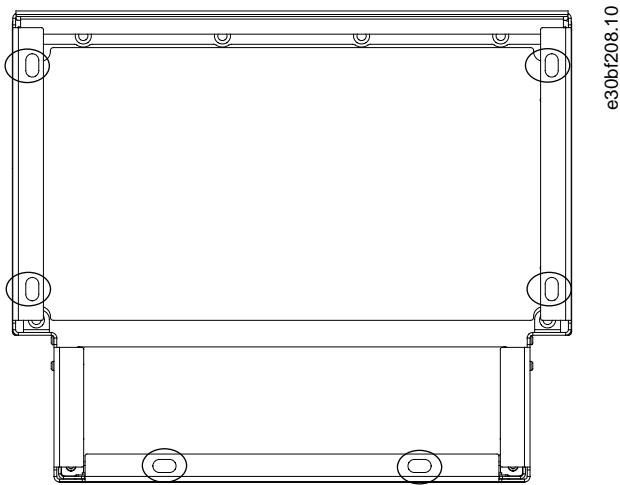Example:**Illustration 10: Pedestal to Floor Mounting Points (Circled)**

4.9.2 Attaching an E1h/E2h to the Pedestal


Prerequisites:

The pedestal must be secured to the floor using 6 bolts before installing the enclosure.

Procedure


1. Lift the drive and position it on the pedestal. There are 2 bolts in the rear of the pedestal that slide into the 2 slotted holes in the rear of the enclosure. Position the drive by adjusting the bolts up or down. Loosely secure with 2 M10 nuts and locking brackets. See [illustration 11](#).
2. Verify that there is 225 mm (9 in) top clearance for air exhaust.
3. Verify that the air intake at the bottom front of the unit is not obstructed.
4. Around the top of the pedestal, secure the enclosure using 6 M10x30 fasteners. Refer to [illustration 12](#). Loosely tighten each bolt until all bolts are installed.
5. Fasten each bolt securely and torque to 19 Nm (169 in-lb).
6. Torque the 2 M10 nuts at the rear of the enclosure to 19 Nm (169 in-lb).

Example:

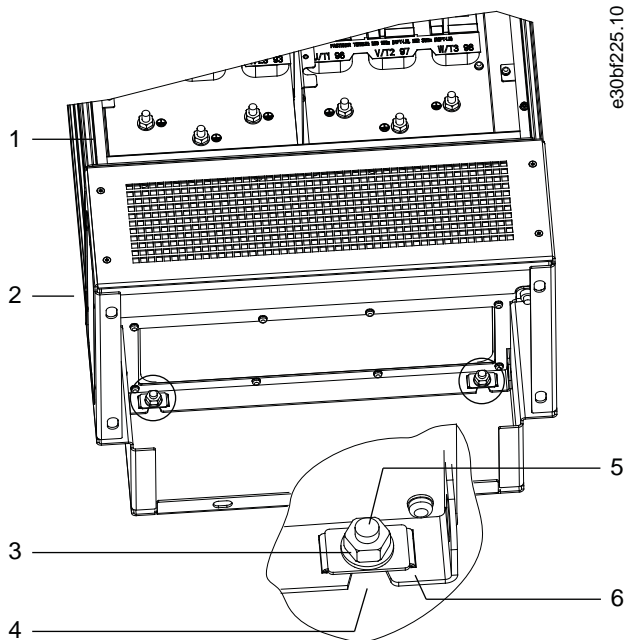

| | |
|----------------------------|-----------------------------|
| 1 Enclosure | 2 Pedestal |
| 3 M10 nut | 4 Slotted hole in enclosure |
| 5 Bolt at rear of pedestal | 6 Locking bracket |

Illustration 11: Pedestal to Enclosure Back Mounting Points

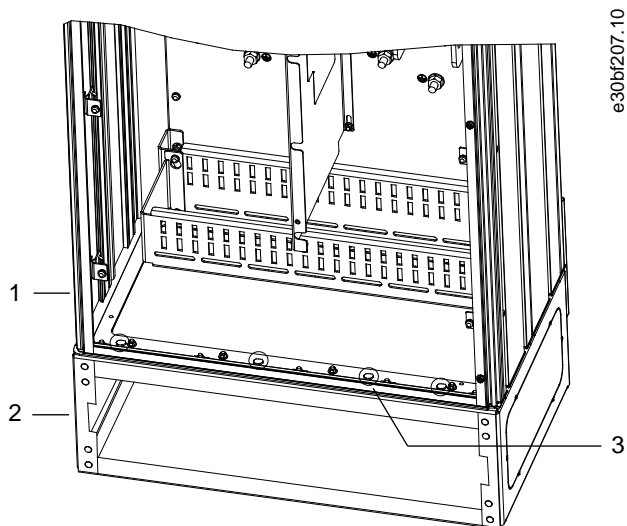

| | |
|--|------------|
| 1 Enclosure | 2 Pedestal |
| 3 M10x30 fasteners (rear corner bolts not shown) | |

Illustration 12: Pedestal to Enclosure Mounting Points

4.9.3 Creating Cable Openings for an E1h/E2h


Context:

The cable entry plate is a sheet of metal with studs along the outer edge. The cable entry plate provides cable entry and cable termination points, and must be installed to maintain the IP21/IP54 (Type 1/Type 12) protection rating. The plate is placed between the drive enclosure and the pedestal. Depending on stud orientation, the plate can be installed from inside the enclosure or inside the pedestal. For cable entry plate dimensions, see [9.8.1 E1h Exterior Dimensions](#) and [9.8.2 E2h Exterior Dimensions](#).

Procedure

1. Create cable entry holes in the cable entry plate using a sheet metal punch.
2. Insert the cable entry plate using 1 of the following methods:
 To insert the cable entry plate through the pedestal, slide the cable entry plate through the slot (4) in the front of the pedestal.
 To insert the cable entry plate through the enclosure, angle the cable entry plate until it can be slid under the slotted brackets.
3. Align the studs on the cable entry plate to the holes in the pedestal and secure with 10 M5 nuts (2).
4. Torque each nut to 2.3 Nm (20 in-lb).

Example:

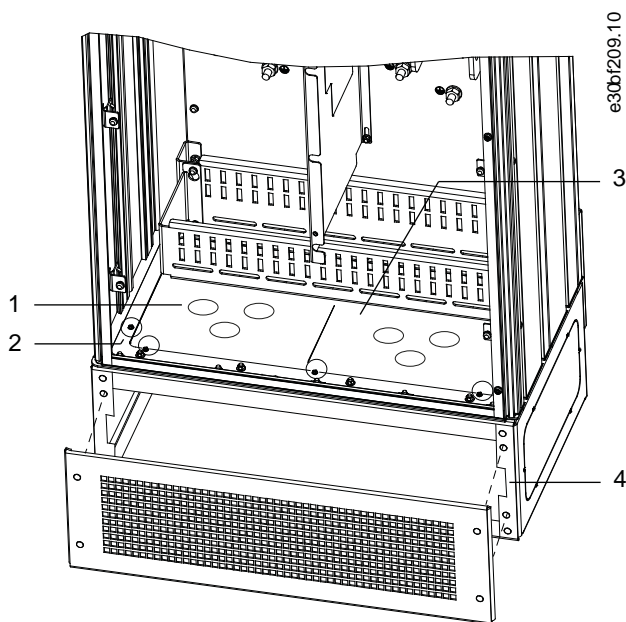

| | |
|---------------------|-------------------------|
| 1 Cable entry hole | 2 M5 nut |
| 3 Cable entry plate | 4 Slot in pedestal base |
| 5 Front cover/grill | |

Illustration 13: Installing the Cable Entry Plate

4.10 E3h/E4h Mechanical Installation

The E3h and E4h enclosure sizes are intended to be mounted on a wall or on a mounting panel within an enclosure. A plastic cable entry plate is installed on the enclosure. It is designed to prevent unintentional access to the terminals in an IP20/protected chassis unit.

NOTICE

Regeneration/Load share Option

Due to the exposed terminals at the top of the enclosure, units with the regeneration/load share option have an IP00 protection rating.

4.10.1 Attaching the E3h/E4h to a Mounting Plate or Wall

Procedure

1. Drill the mounting holes according to the enclosure size. Refer to [9.8.3 E3h Exterior Dimensions](#) and [9.8.4 E4h Exterior Dimensions](#).
2. Secure the top of the drive enclosure to the mounting plate or wall.
3. Secure the base of the drive enclosure to the mounting plate or wall.

4.10.2 Creating Cable Openings for an E3h/E4h


Context:

The cable entry plate covers the bottom part of the drive enclosure and must be installed to maintain the IP20/ Chassis protection rating. The cable entry plate consists of plastic squares that can be cut out to provide cable access to the terminals. See [illustration 14](#).

Procedure

1. Remove the bottom panel and terminal cover. See [illustration 15](#).
 - A Detach the bottom panel by removing 4 T25 screws.
 - B Remove 5 T20 screws that secure the bottom of the drive to the top of the terminal cover, and then pull the terminal cover straight out.
2. Determine the size and position of the motor, mains, and ground cables. Note their position and measurements.
3. Based on the measurement and positions of the cables, create openings in the plastic cable entry plate by cutting out the necessary squares.
4. Slide the plastic cable entry plate (7) onto the bottom rails of the terminal cover.
5. Tilt the front of the terminal cover downward until the fastener points (8) rest on the slotted drive brackets (6).
6. Make sure that the side panels of the terminal cover are on the outside track guide (5).
7. Push the terminal cover until it is up against the slotted drive bracket.
8. Tilt the front of the terminal cover upward until the fastener hole in the bottom of the drive aligns with the keyhole opening (9) in the terminal. Secure with 2 T25 screws and torque to 2.3 Nm (20 in-lb).
9. Secure the bottom panel with 3 T25 screws and torque to 2.3 Nm (20 in-lb).


Example:

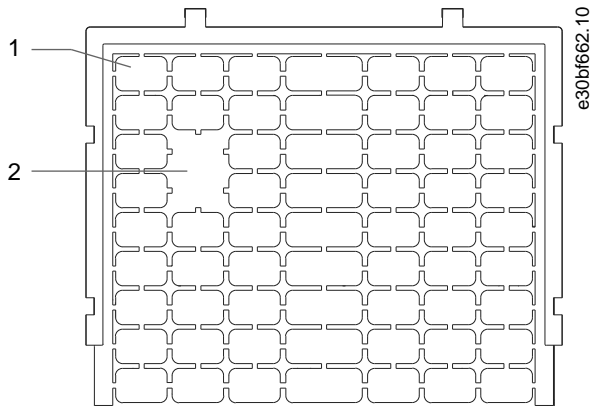

| | |
|--------------------------------|--|
| <p>1 Plastic square</p> | <p>2 Squares removed for cable access</p> |
|--------------------------------|--|

Illustration 14: Plastic Cable Entry Plate

e30bf688.10

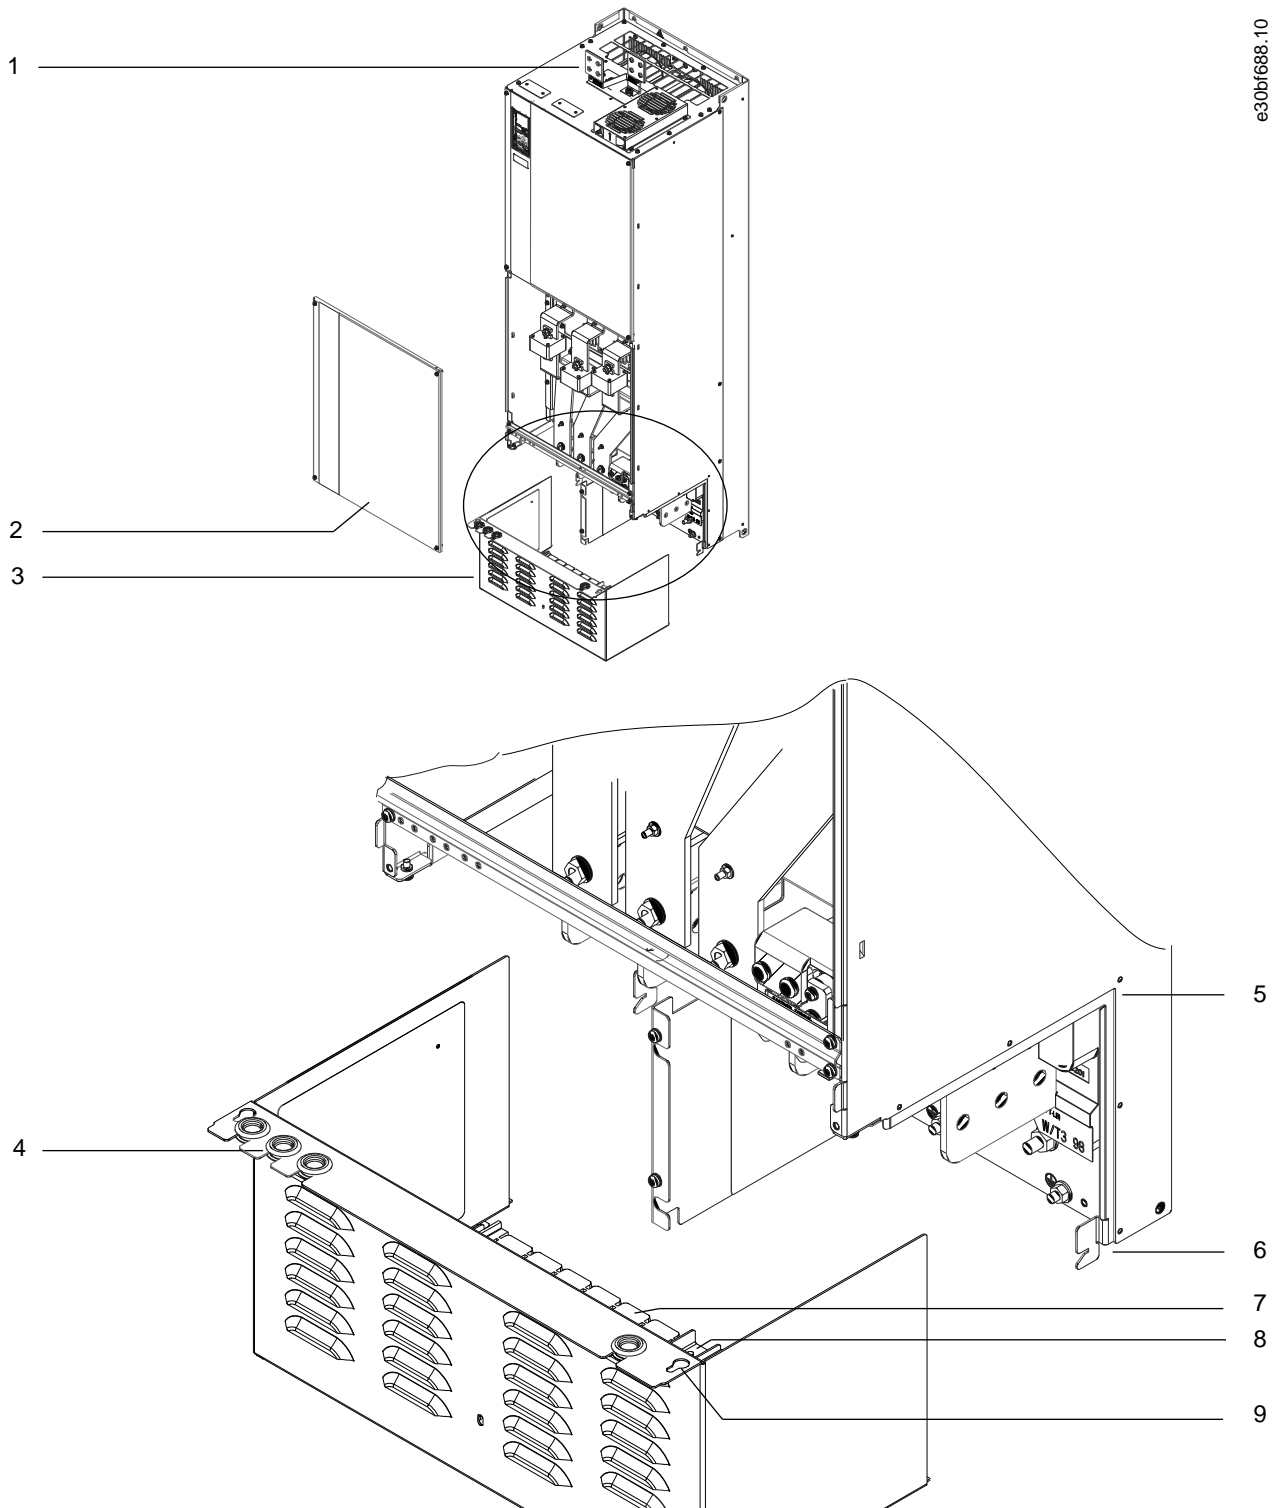

| | |
|---|--|
| 1 Load share/regen terminals (optional) | 2 Bottom panel |
| 3 Terminal cover | 4 Grommet access hole for control wiring |
| 5 Track guide | 6 Slotted drive bracket |

| | |
|---|------------------|
| 7 Plastic cable entry plate (installed) | 8 Fastener point |
| 9 Keyhole opening | |

Illustration 15: Assembling the Cable Entry Plate and Terminal Cover

4.10.3 Installing Load share/Regen Terminals to an E3h/E4h


Context:

The load share/regen terminals, on the top of the drive, are not installed from the factory to prevent damage during shipping.

Procedure

1. Remove the terminal plate, 2 terminals, label, and fasteners from the accessory bag included with the drive.
2. Remove the cover from the load share/ regen opening on the top of the drive. Put aside the 2 M5 fasteners for reuse later.
3. Remove the plastic backing and install the terminal plate over the load share/regen opening. Secure with the 2 M5 fasteners and torque to 2.3 Nm (20 in-lb).
4. Install both the terminals to the terminal plate using 1 M10 fastener per terminal. Torque to 19 Nm (169 in-lb).
5. Install the label on the front of the terminals as shown in [illustration 16](#). Secure with 2 M4 screws and torque to 1.2 Nm (10 in-lb).

Example:

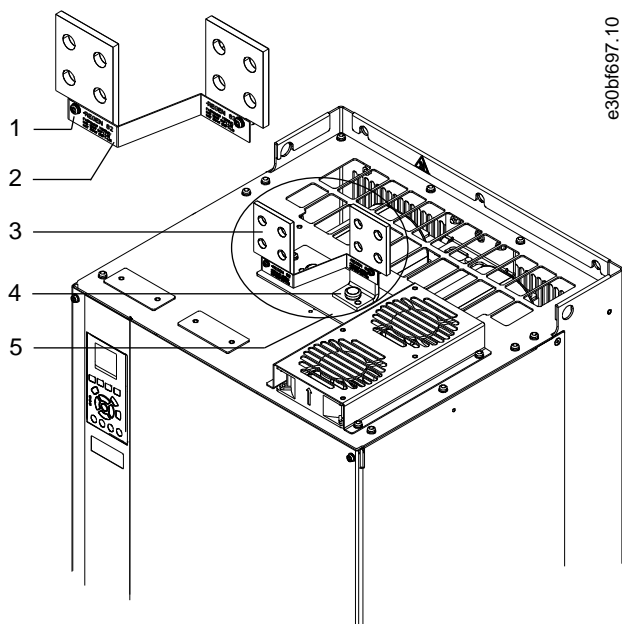

| | |
|----------------------------------|--------------------------|
| 1 Label fastener, M4 | 2 Label |
| 3 Load share/regen terminal | 4 Terminal fastener, M10 |
| 5 Terminal plate with 2 openings | |

Illustration 16: Load share/Regen Terminals

5 Electrical Installation

5.1 Safety Instructions

See the *Safety Precautions* section for general safety warnings.

NOTICE

EXCESSIVE HEAT AND PROPERTY DAMAGE

Overcurrent can generate excessive heat within the drive. Failure to provide overcurrent protection can result in risk of fire and property damage.

- Additional protective equipment such as shortcircuit protection or motor thermal protection between drive and motor is required for applications with multiple motors.
- Input fusing is required to provide short circuit and overcurrent protection. If fuses are not factory-supplied, the installer must provide them. See maximum fuse ratings in the *Specifications* chapter.

NOTICE

WIRE TYPE AND RATINGS

All wiring must comply with local and national regulations regarding cross-section and ambient temperature requirements. For power connections, minimum 75 °C (167 °F) rated copper wire is recommended. Refer to the *Specifications* chapter.

⚠ WARNING ⚠

INDUCED VOLTAGE

Induced voltage from output motor cables from different drives that are run together can charge equipment capacitors even with the equipment turned off and locked out. Failure to run output motor cables separately or use shielded cables could result in death or serious injury.

- Run output motor cables separately or use shielded cables.
- Simultaneously lock out all the drives.

⚠ WARNING ⚠

SHOCK HAZARD

The drive can cause a DC current in the PE conductor. Failure to use a Type B residual current-operated protective device (RCD) may lead to the RCD not providing the intended protection and therefore may result in death or serious injury.

- When an RCD is used for protection against electrical shock, only a Type B device is allowed on the supply side.

NOTICE

PROPERTY DAMAGE

Protection against motor overload is not included in the default setting. For the North American market, the ETR function provides class 20 motor overload protection in accordance with NEC. Failure to set the ETR function means that motor overload protection is not provided and property damage can occur if the motor overheats.

- Enable the ETR function by setting *parameter 1-90 Motor Thermal Protection* to [ETR trip] or [ETR warning].

5.2 EMC-compliant Installation

To obtain an EMC-compliant installation, refer to the wiring schematics and follow the instructions provided for:

- Connecting the motor.
- Connecting the AC mains.
- Connecting to ground.
- Control wiring.

Also, remember to practice the following:

- When using relays, control cables, a signal interface, fieldbus, or brake, connect the shield to the enclosure at both ends. If the ground path has high impedance, is noisy, or is carrying current, break the shield connection on 1 end to avoid ground current loops.
- Convey the currents back to the unit using a metal mounting plate. Ensure good electrical contact from the mounting plate through the mounting screws to the drive chassis.
- Use shielded cables for motor output cables. An alternative is unshielded motor cables within metal conduit.
- Ensure that motor and brake cables are as short as possible to reduce the interference level from the entire system.
- Avoid placing cables with a sensitive signal level alongside motor and brake cables.
- For communication and command/control lines, follow the particular communication protocol standards. For example, USB must use shielded cables, but RS485/ethernet can use shielded UTP or unshielded UTP cables.
- Ensure that all control terminal connections are PELV.

NOTICE

TWISTED SHIELD ENDS (PIGTAILS)

Twisted shield ends increase the shield impedance at higher frequencies, which reduces the shield effect and increases the leakage current.

- Use integrated shield clamps instead of twisted shield ends.

NOTICE

SHIELDED CABLES

If shielded cables or metal conduits are not used, the unit and the installation do not meet regulatory limits on radio frequency (RF) emission levels.

NOTICE

EMC INTERFERENCE

Failure to isolate power, motor, and control cables can result in unintended behavior or reduced performance.

- Use shielded cables for motor and control wiring.
- Use separate cables for mains input, motor, and control wiring.
- Provide a minimum 200 mm (7.9 in) separation between mains input cables, motor cables, and control cables.


NOTICE**INSTALLATION AT HIGH ALTITUDE**

There is a risk for overvoltage. Isolation between components and critical parts could be insufficient, and may not comply with PELV requirements.

- Use external protective devices or galvanic isolation. For installations above 2000 m (6500 ft) altitude, contact Danfoss regarding PELV compliance.

NOTICE**PELV COMPLIANCE**

Prevent electric shock by using protective extra low voltage (PELV) electrical supply and complying with local and national PELV regulations.

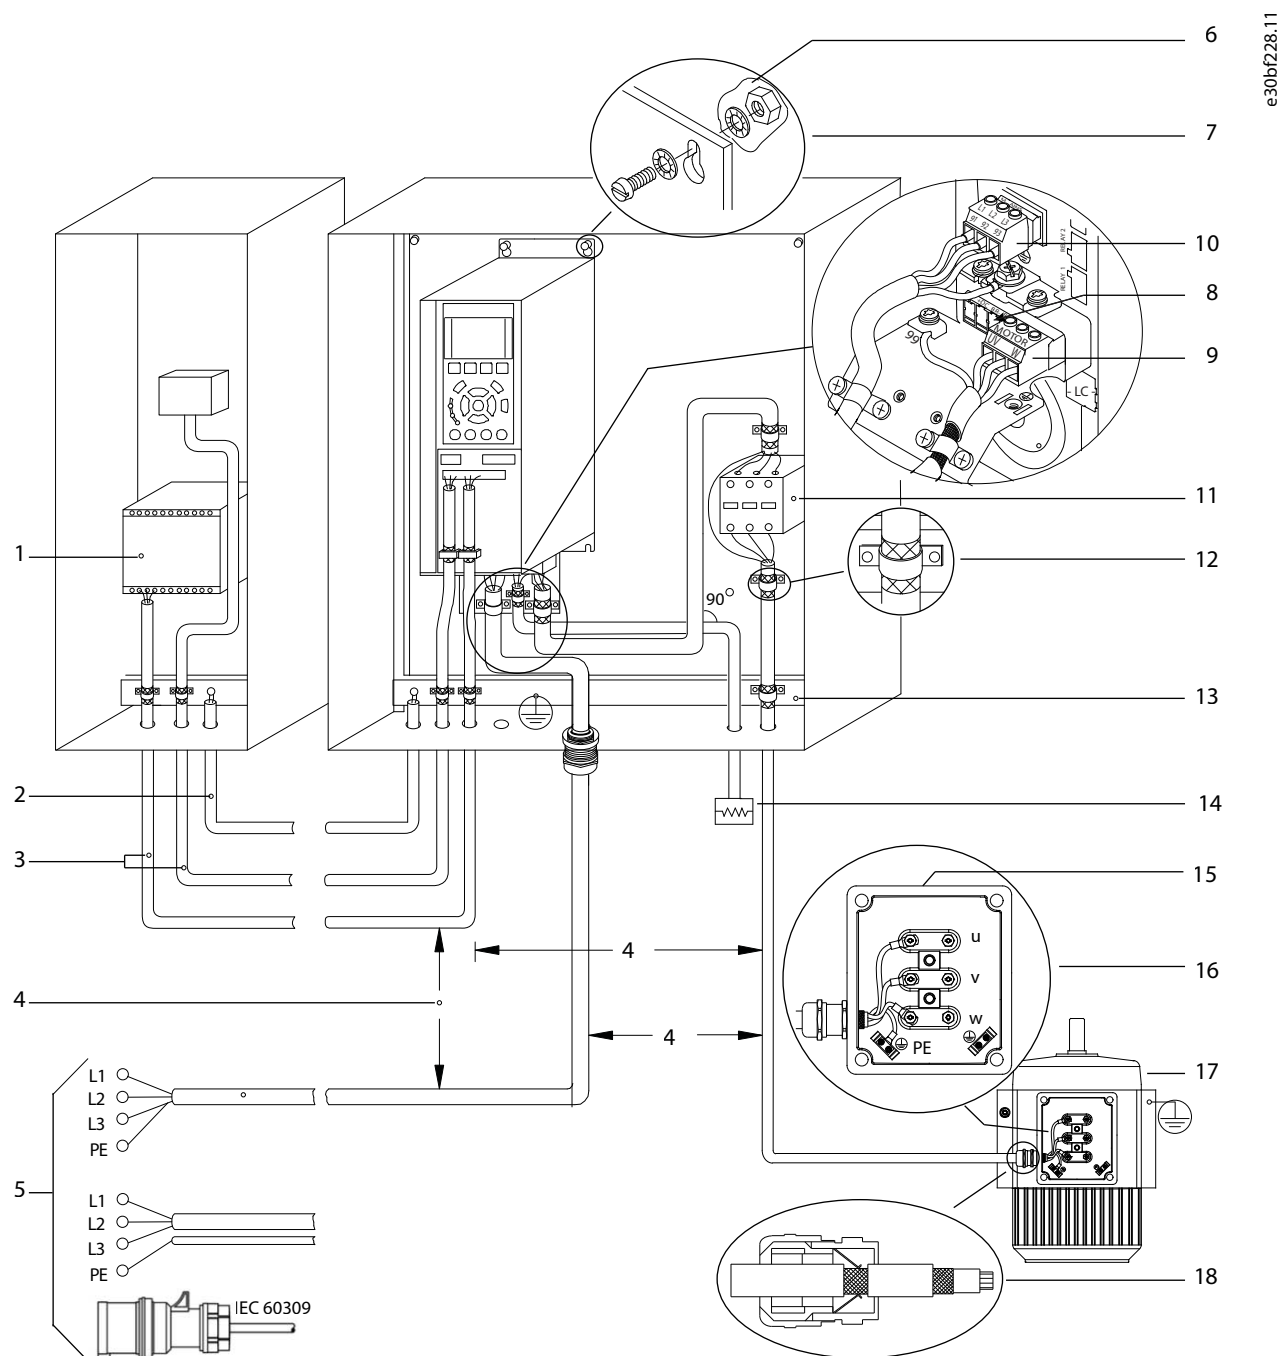


e30bf228.11

| | |
|--------------------------|---|
| 1 PLC | 2 Minimum 16 mm ² (6 AWG) equalizing cable |
| 3 Control cables | 4 Minimum 200 mm (7.9 in) between control cables, motor cables, and mains cables. |
| 5 Mains supply | 6 Bare (unpainted) surface |
| 7 Star washers | 8 Brake cable (shielded) |
| 9 Motor cable (shielded) | 10 Mains cable (unshielded) |

| | |
|---|-------------------------------------|
| 11 Output contactor, and so on | 12 Cable insulation stripped |
| 13 Common ground busbar. Follow local and national requirements for cabinet grounding. | 14 Brake resistor |
| 15 Metal box | 16 Connection to motor |
| 17 Motor | 18 EMC cable gland |

Illustration 17: Example of Proper EMC Installation

5.3 Wiring Schematic

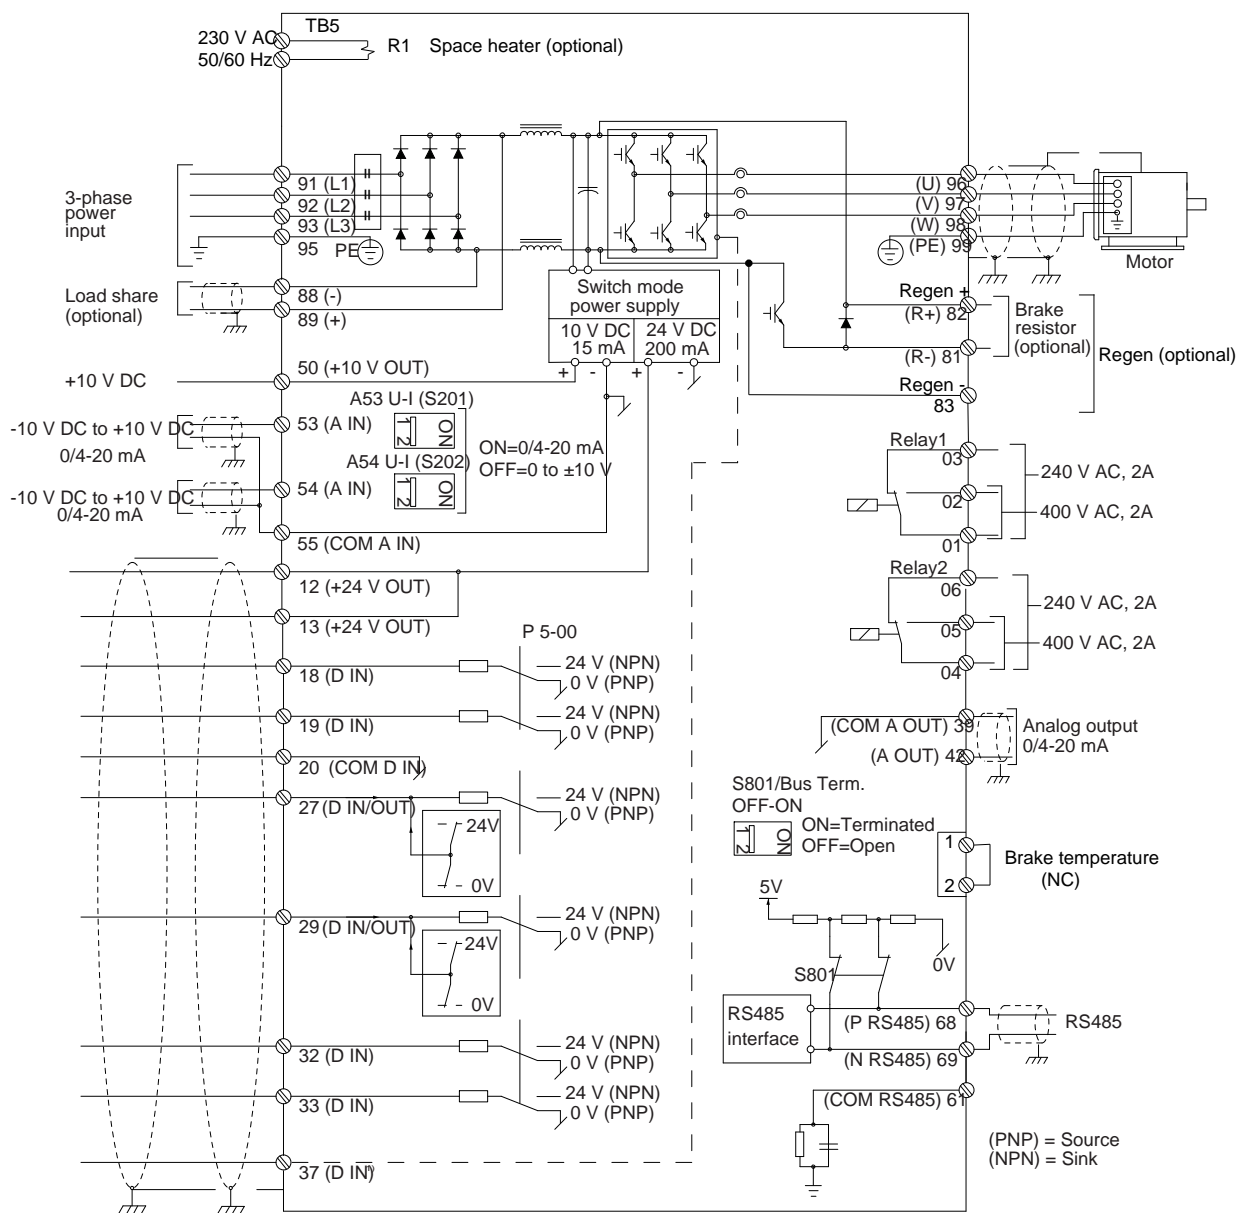

e30bg483.10

1 Terminal 37 (optional) is used for Safe Torque Off. Refer to the *VLT® FC Series - Safe Torque Off Operating Guide* for installation instructions.

Illustration 18: Basic Wiring Schematic

5.4 Connecting the Motor

Context:

⚠ WARNING ⚠

INDUCED VOLTAGE

Induced voltage from output motor cables that run together can charge equipment capacitors, even with the equipment turned off and locked out. Failure to run output motor cables separately or to use shielded cables could result in death or serious injury.

- Run output motor cables separately or use shielded cables.
- Simultaneously lock out all the drives.

- Comply with local and national electrical codes for cable sizes. For maximum wire sizes, see the *Electrical Data* section.
- Follow motor manufacturer wiring requirements.
- Motor wiring knockouts or access panels are provided on the pedestal of IP21/IP54 (Type 1/Type 12) units.
- Do not wire a starting or pole-changing device (for example, Dahlander motor or slip ring induction motor) between the drive and the motor.

Procedure

1. Strip a section of the outer cable insulation.
2. Establish mechanical fixation and electrical contact between the cable shield and ground by positioning the stripped wire under the cable clamp.
3. Connect the ground wire to the nearest grounding terminal in accordance with the grounding instructions provided in [5.6 Connecting to Ground](#).
4. Connect the 3-phase motor wiring to terminals 96 (U), 97 (V), and 98 (W). See [illustration 19](#).
5. Tighten the terminals in accordance with the specifications shown in [9.10 Fastener Torque Ratings](#).

Example:

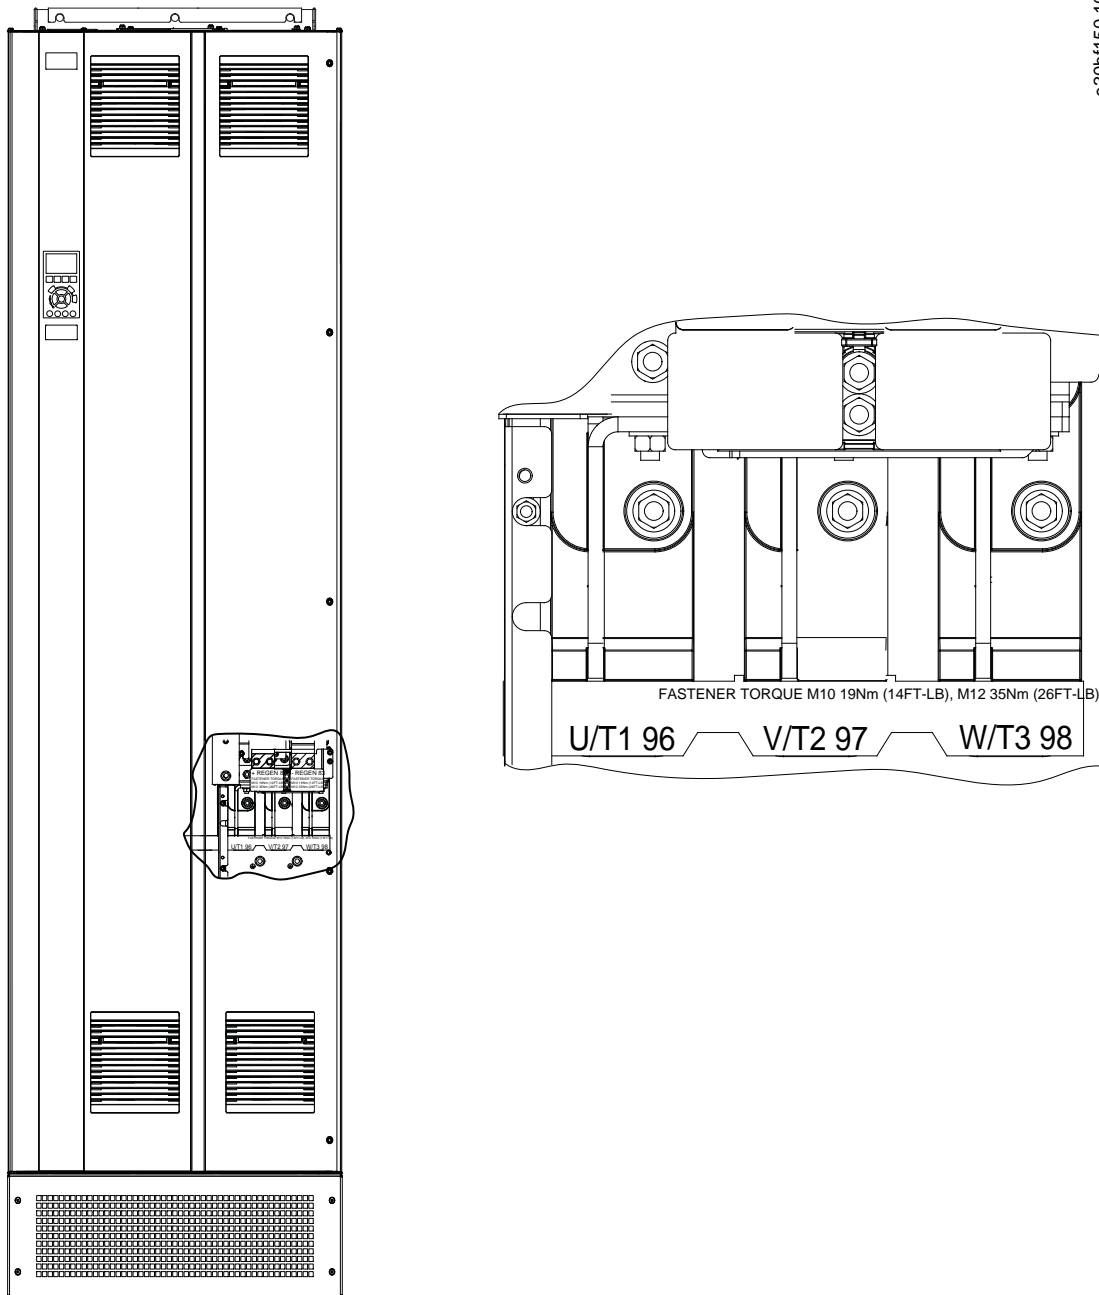


Illustration 19: AC Motor Terminals (E1h shown).

5.5 Connecting the AC Mains

Context:

- Size the wiring according to the input current of the drive. For maximum wire sizes, see the *Electrical Data* section.
- Comply with local and national electrical codes for cable sizes.

NOTICE


OUTPUT CONTACTOR

Danfoss does not recommend using an output contactor on 525-690 V drives that are connected to an IT mains network.

Procedure

1. Strip a section of the outer cable insulation.
2. Establish mechanical fixation and electrical contact between the cable shield and ground by positioning the stripped wire under the cable clamp.
3. Connect the ground wire to the nearest grounding terminal in accordance with the grounding instructions provided in [5.6 Connecting to Ground](#).
4. Connect the 3-phase AC input power wiring to terminals R, S, and T. See [illustration 20](#).
5. Tighten the terminals in accordance with the specifications shown in [9.10 Fastener Torque Ratings](#).
6. When supplied from an isolated mains source (IT mains or floating delta) or TT/TN-S mains with a grounded leg (grounded delta), ensure that *parameter 14-50 RFI Filter* is set to [0] Off to avoid damage to the DC link and to reduce ground capacity currents.

Example:

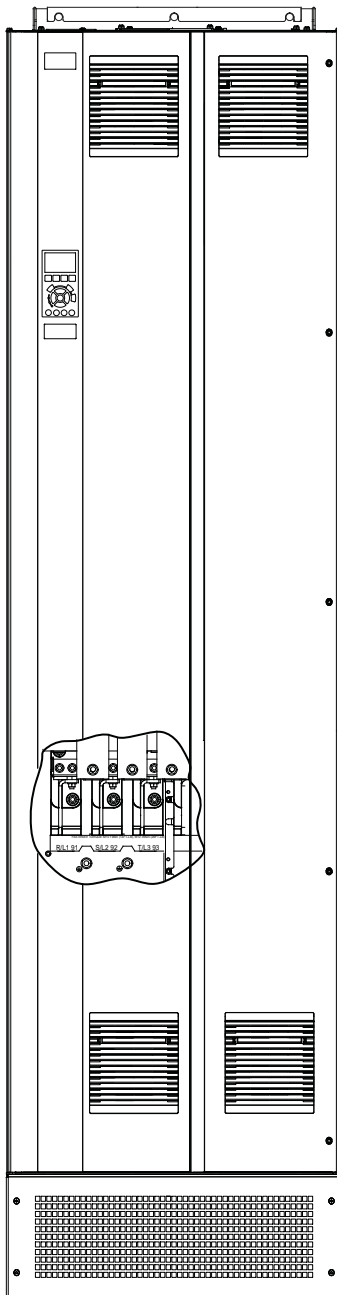

e30bf151.1C

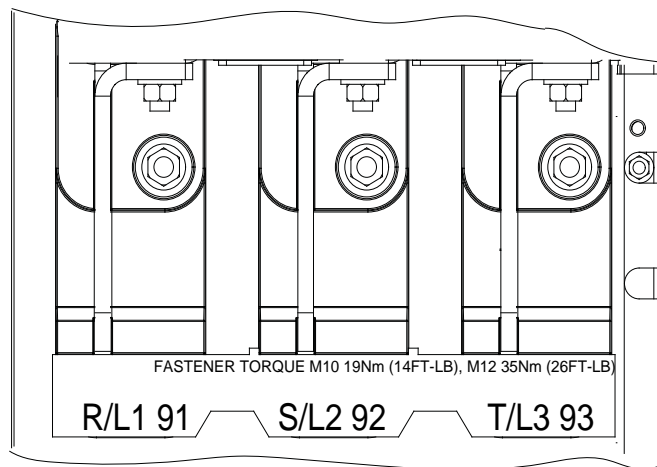


Illustration 20: AC Mains Terminals (E1h shown).

5.6 Connecting to Ground

Context:

⚠ WARNING ⚠

LEAKAGE CURRENT HAZARD

Leakage currents exceed 3.5 mA. Failure to ground the drive properly can result in death or serious injury.

- Ensure the correct grounding of the equipment by a certified electrical installer.

For electrical safety:

- Ground the drive in accordance with applicable standards and directives.
- Use a dedicated ground wire for input power, motor power, and control wiring.
- Do not ground 1 drive to another in a daisy chain fashion.
- Keep the ground wire connections as short as possible.
- Follow motor manufacturer wiring requirements.
- Minimum cable cross-section: 10 mm² (6 AWG) (or 2 rated ground wires terminated separately).
- Tighten the terminals in accordance with the information provided in [9.10 Fastener Torque Ratings](#).

For EMC-compliant installation:

- Establish electrical contact between the cable shield and the drive enclosure by using metal cable glands or by using the clamps provided on the equipment.
- Reduce burst transient by using high-strand wire.
- Do not use twisted shield ends (pigtailed).



NOTICE

POTENTIAL EQUALIZATION

There is a risk of burst transient when the ground potential between the drive and the control system is different.

- Install equalizing cables between the system components. Recommended cable cross-section: 16 mm² (5 AWG).


Example:

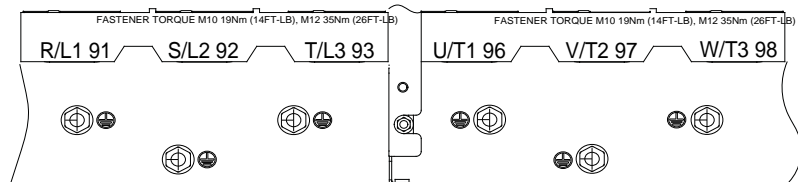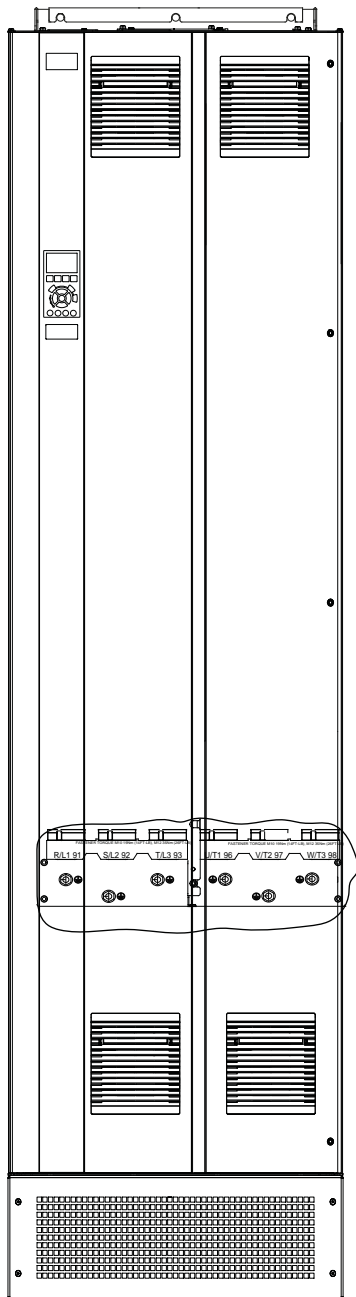

e30bf152.10

Illustration 21: Ground Terminals (E1h shown).

5.7 E1h Terminal Dimensions

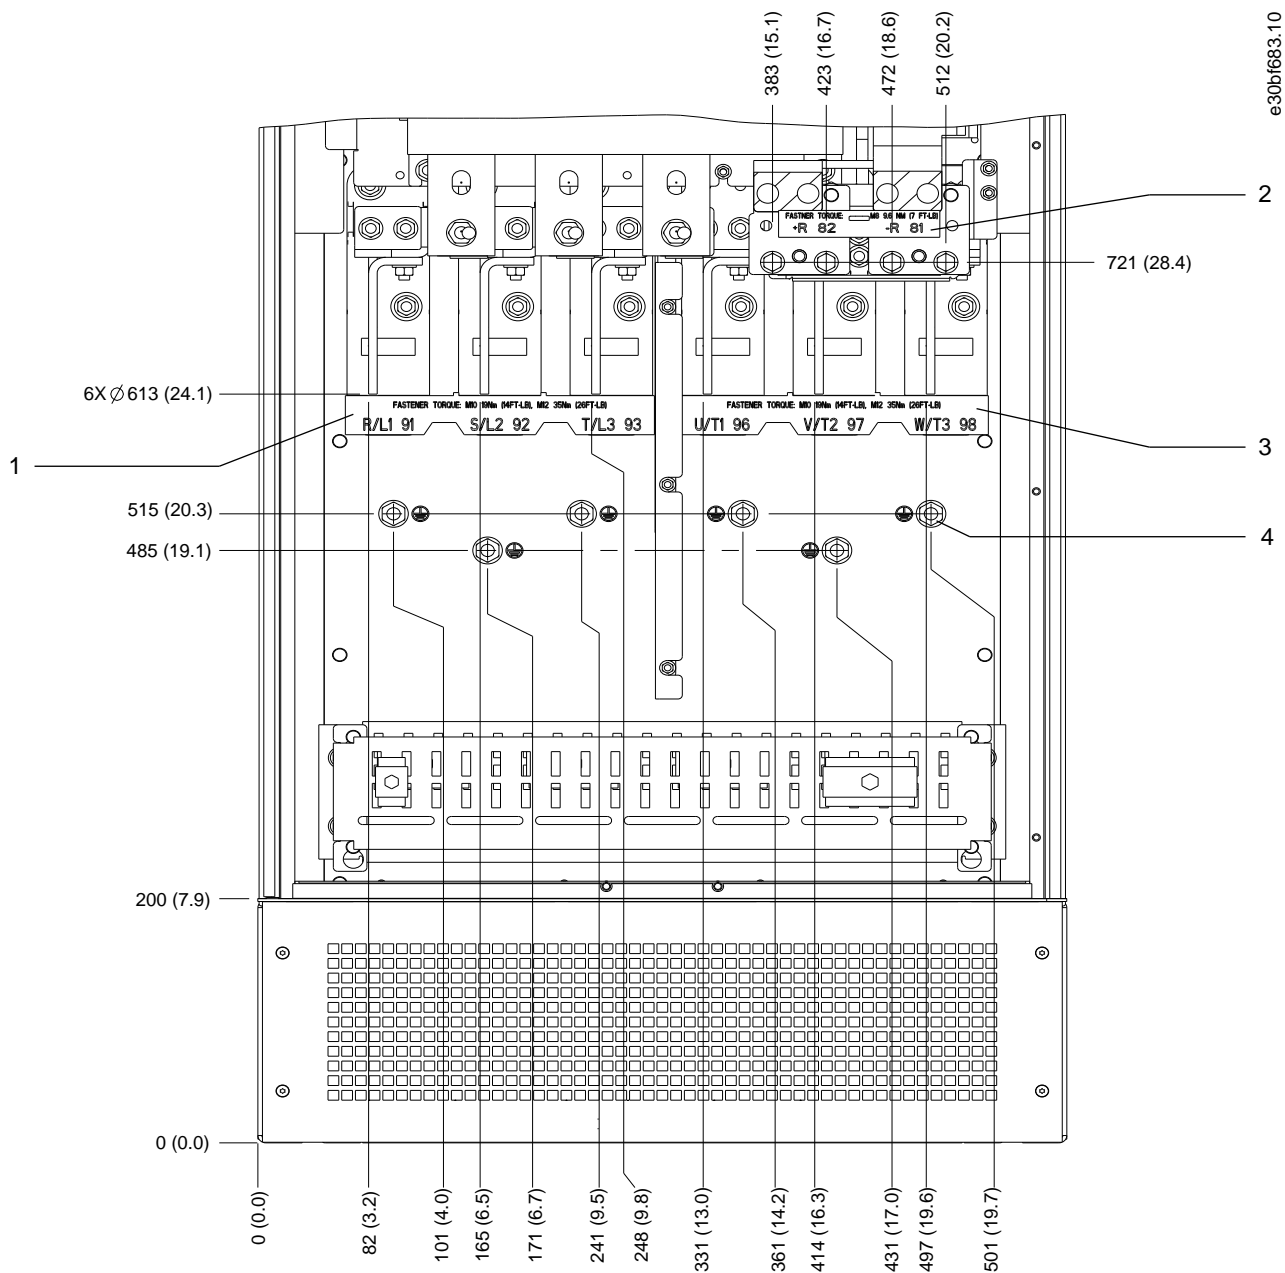

| | |
|--------------------------|---|
| 1 Mains terminals | 2 Brake or regen terminals |
| 3 Motor terminals | 4 Ground terminals, M10 nut Terminal dimensions |

Illustration 22: E1h Terminal Dimensions (Front View)


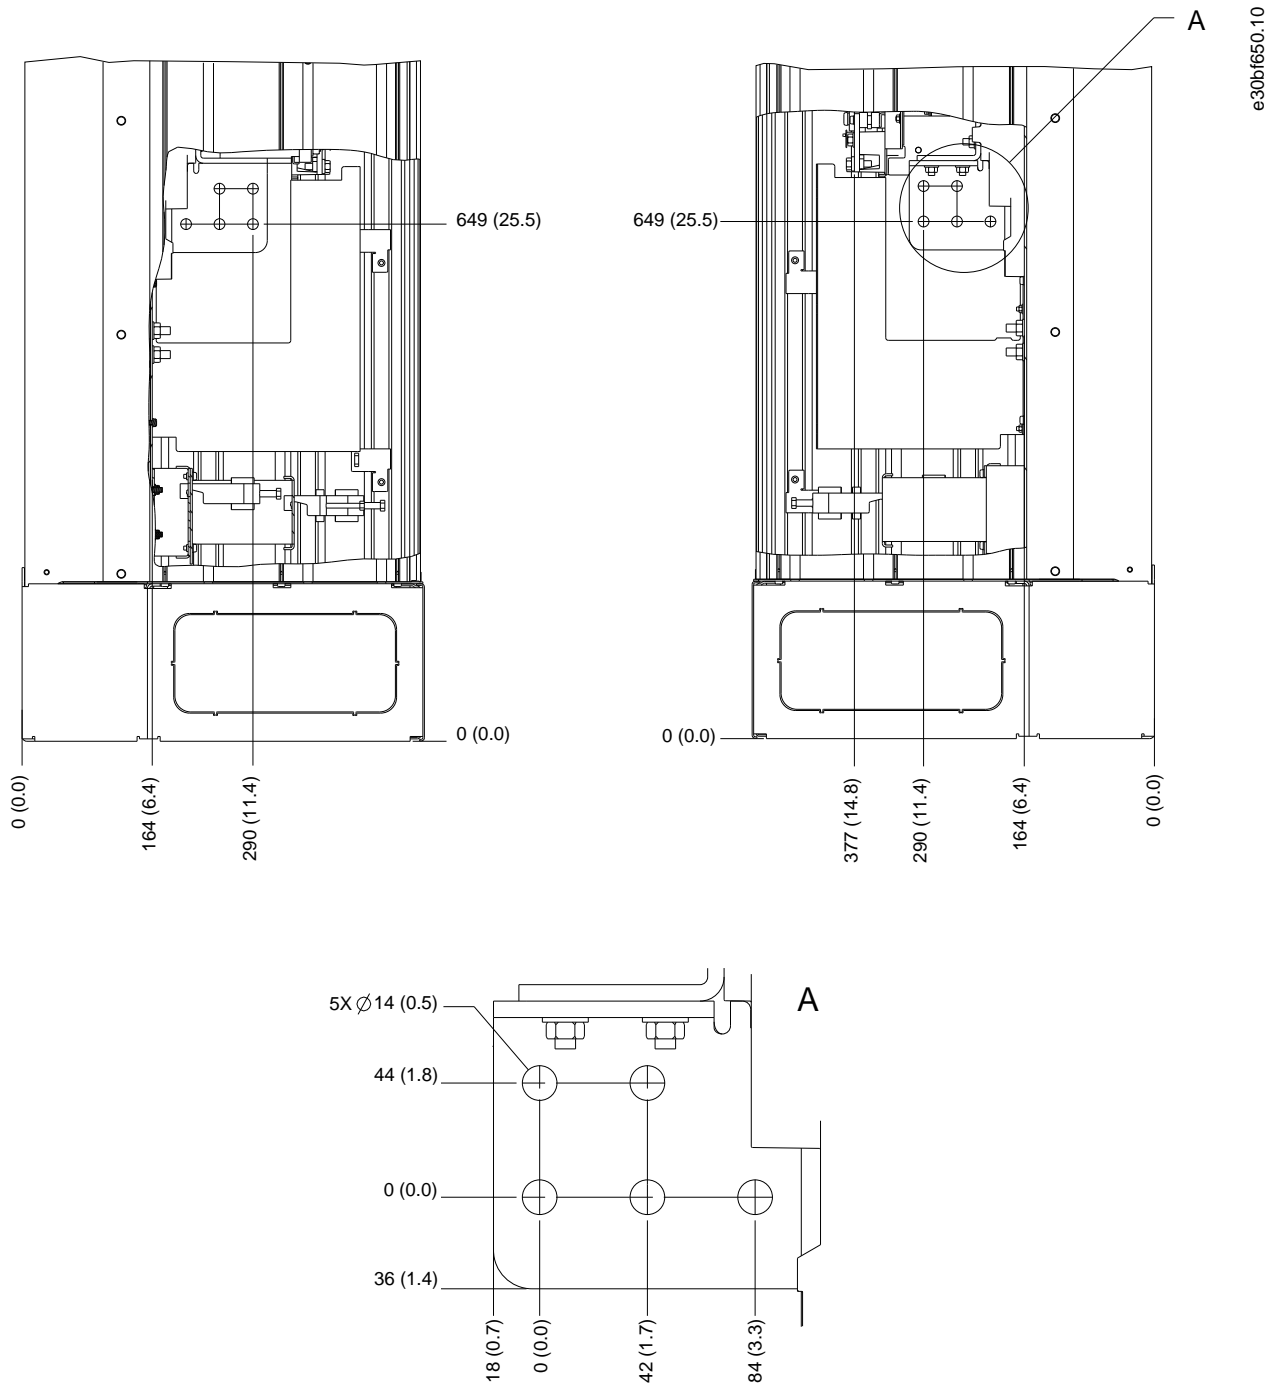


Illustration 23: E1h Terminal Dimensions (Side Views)

5.8 E2h Terminal Dimensions

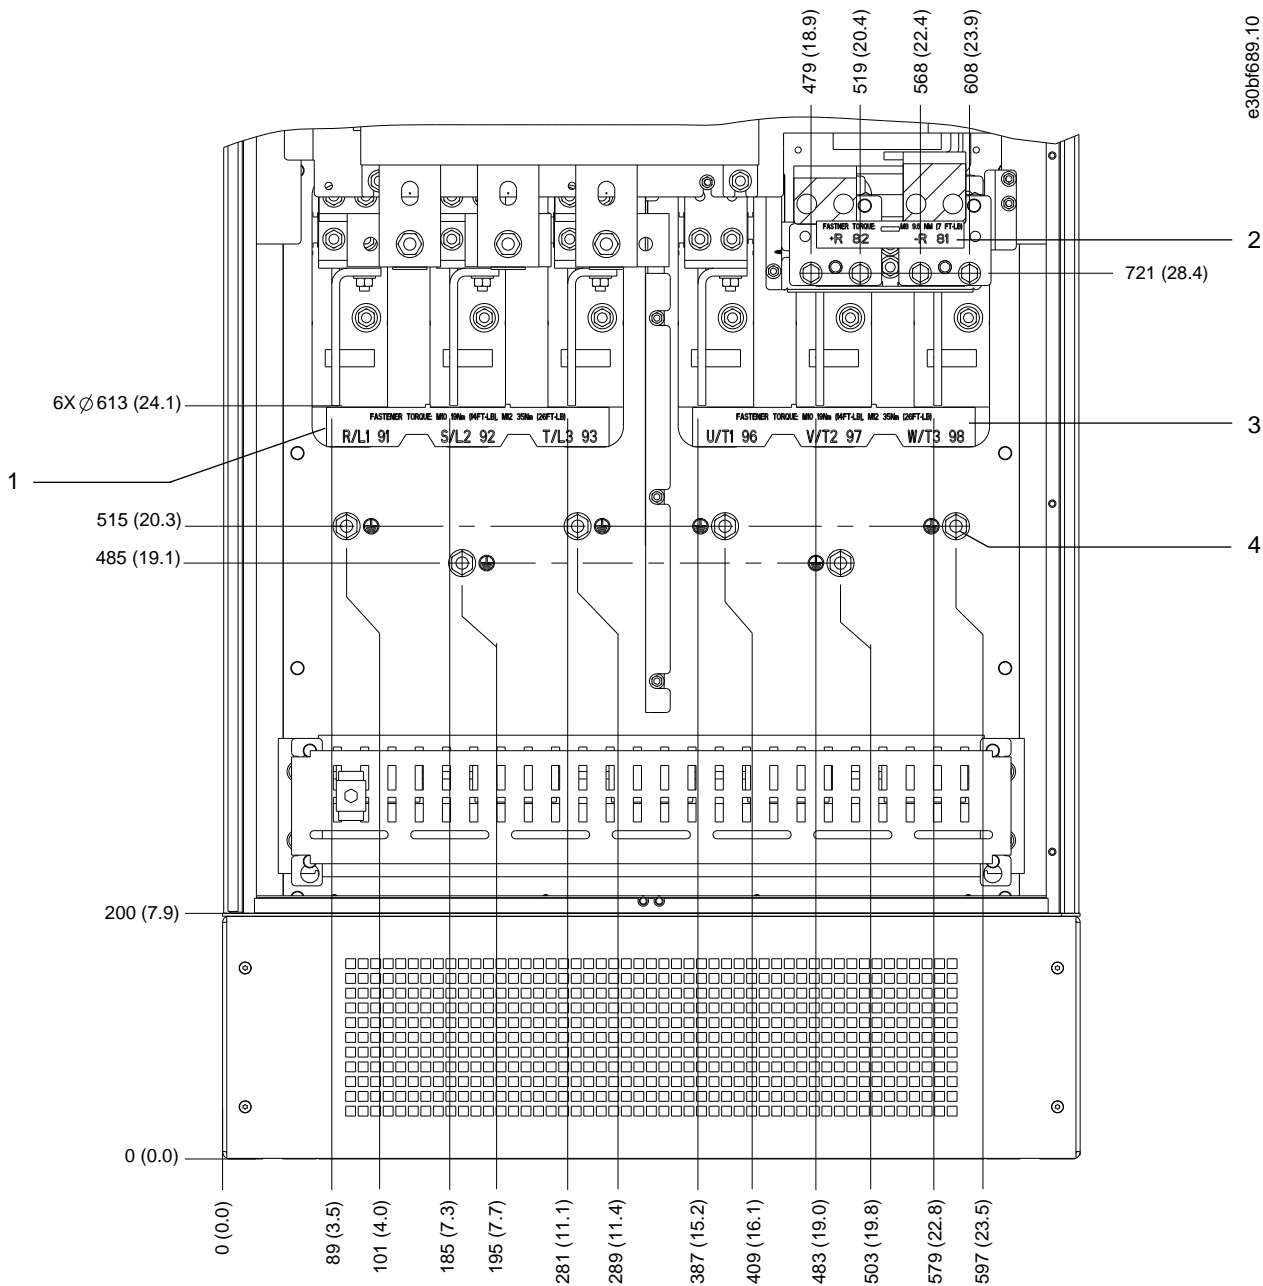

| | |
|-------------------|-----------------------------|
| 1 Mains terminals | 2 Brake or regen terminals |
| 3 Motor terminals | 4 Ground terminals, M10 nut |

Illustration 24: E2h Terminal Dimensions (Front View)


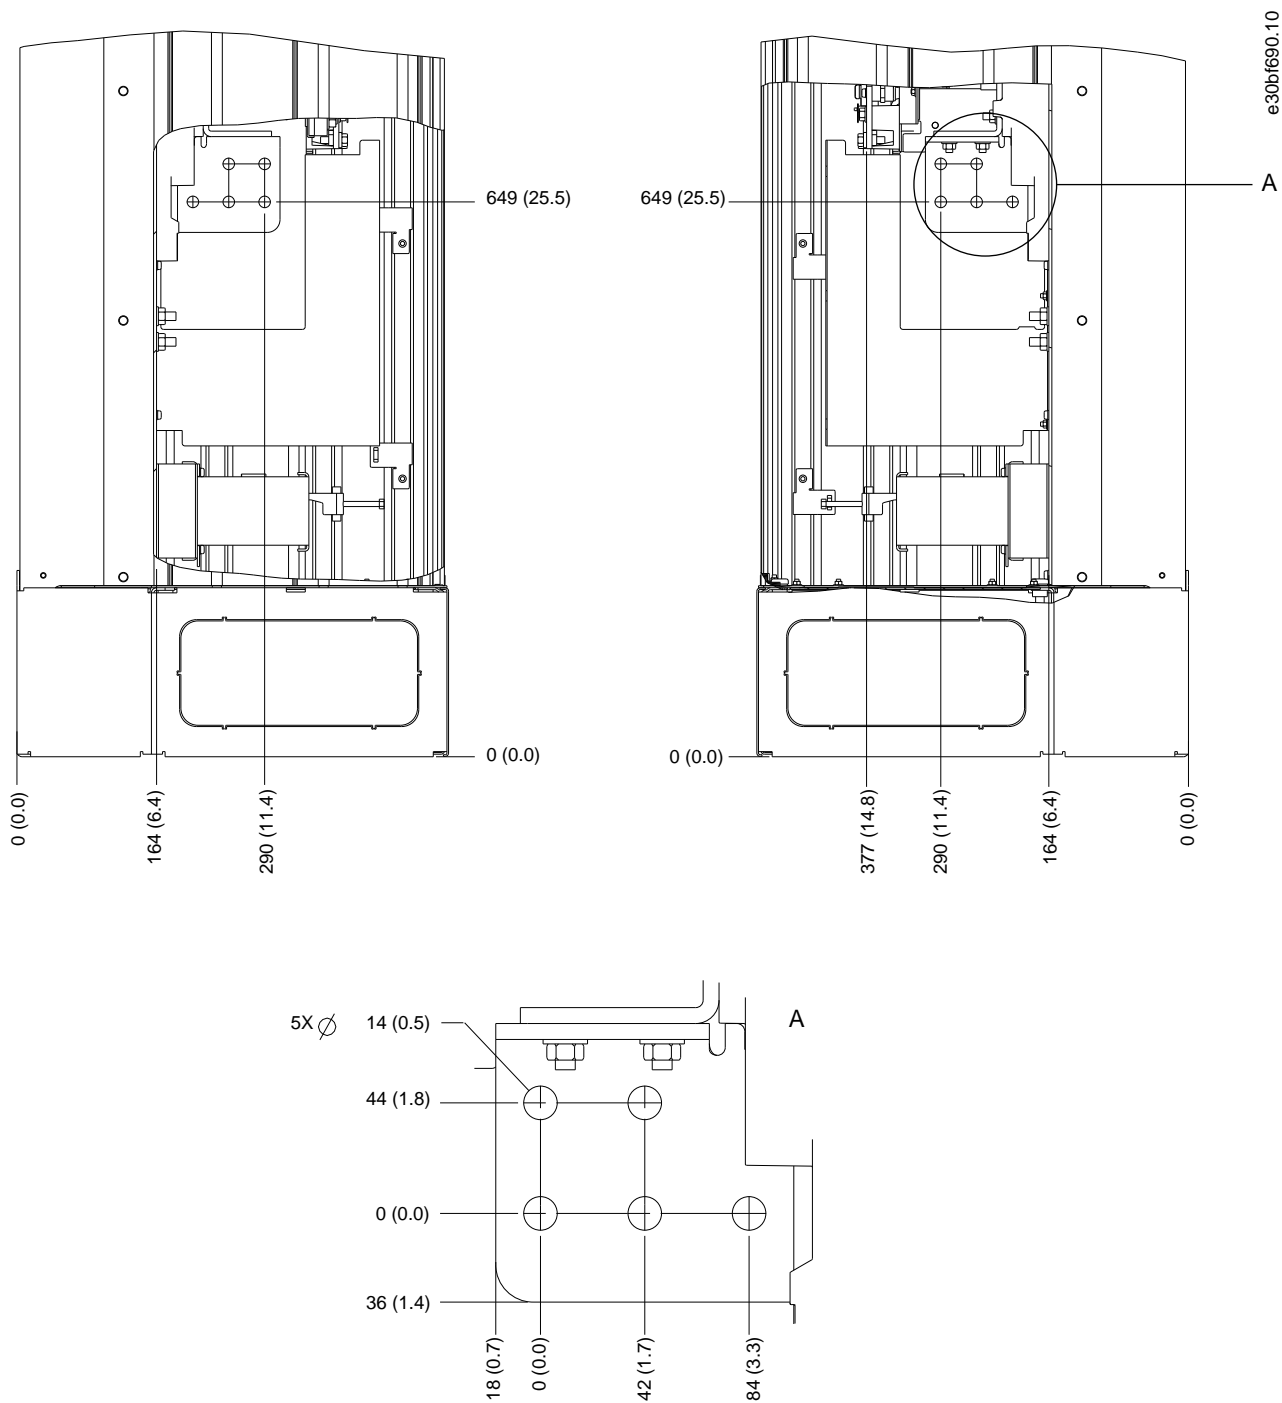


Illustration 25: E2h Terminal Dimensions (Side Views)

5.9 E3h Terminal Dimensions

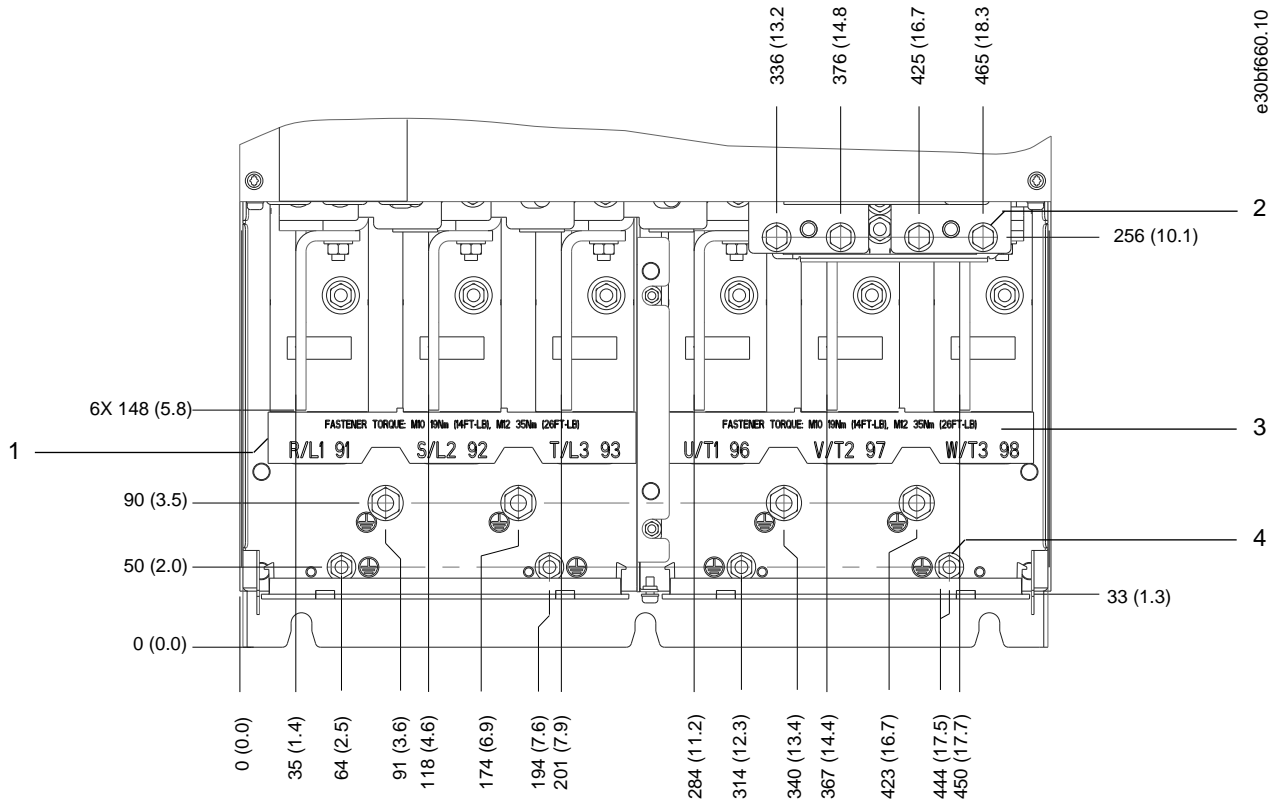

| | |
|--------------------------|--|
| 1 Mains terminals | 2 Brake or regen terminals |
| 3 Motor terminals | 4 Ground terminals, M8 and M10 nuts |

Illustration 26: E3h Terminal Dimensions (Front View)


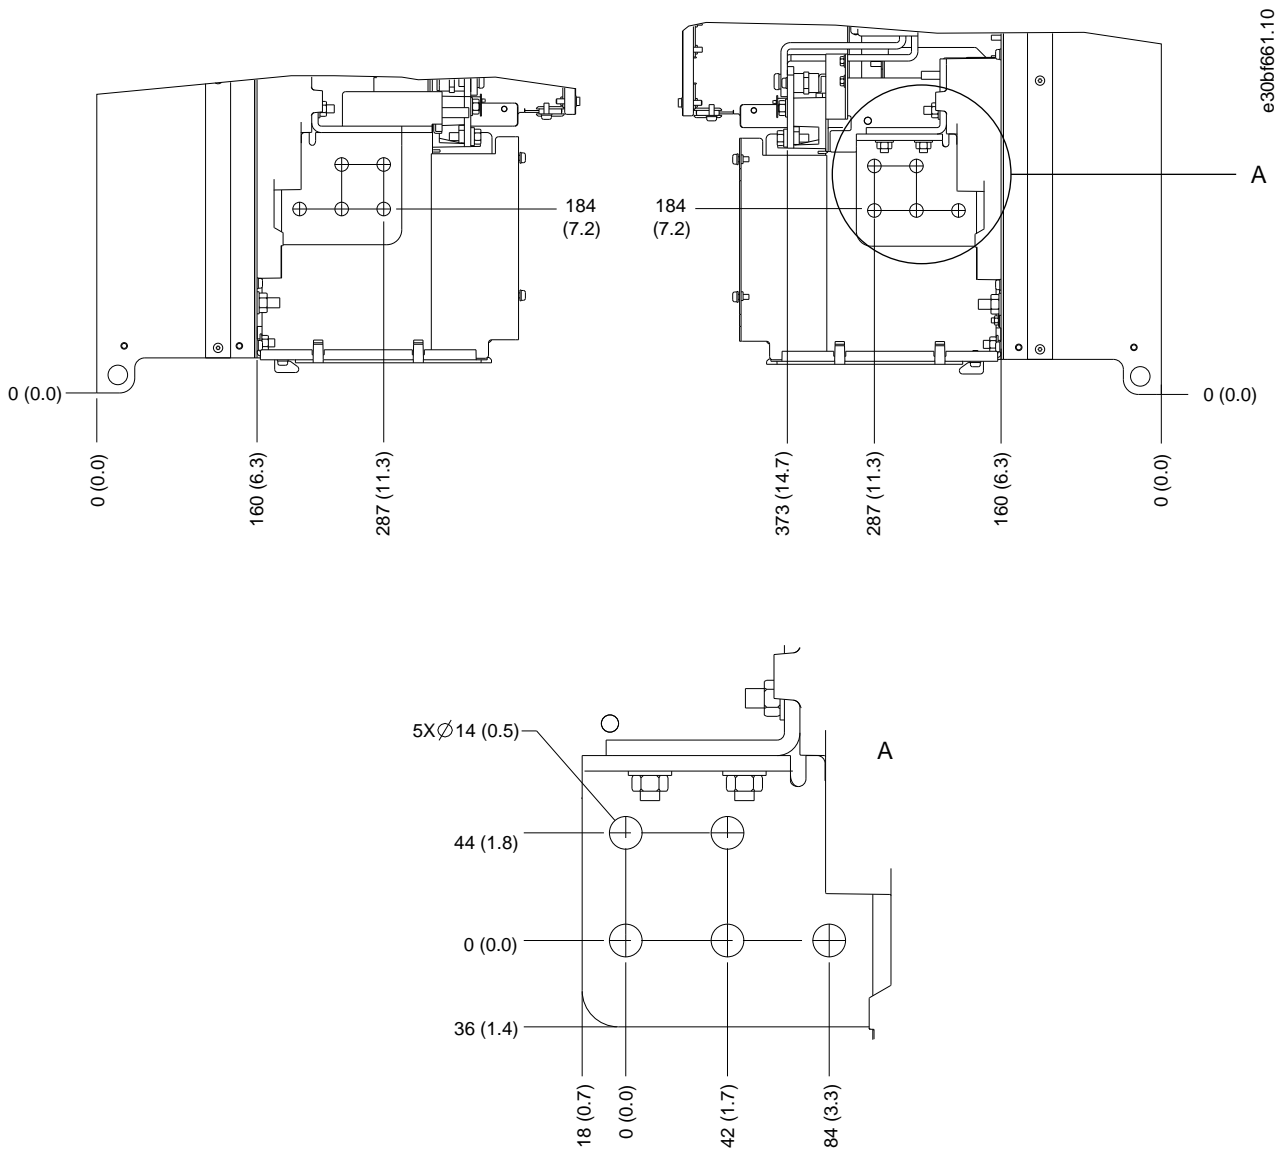



Illustration 27: E3h Mains, Motor, and Ground Terminal Dimensions (Side Views)

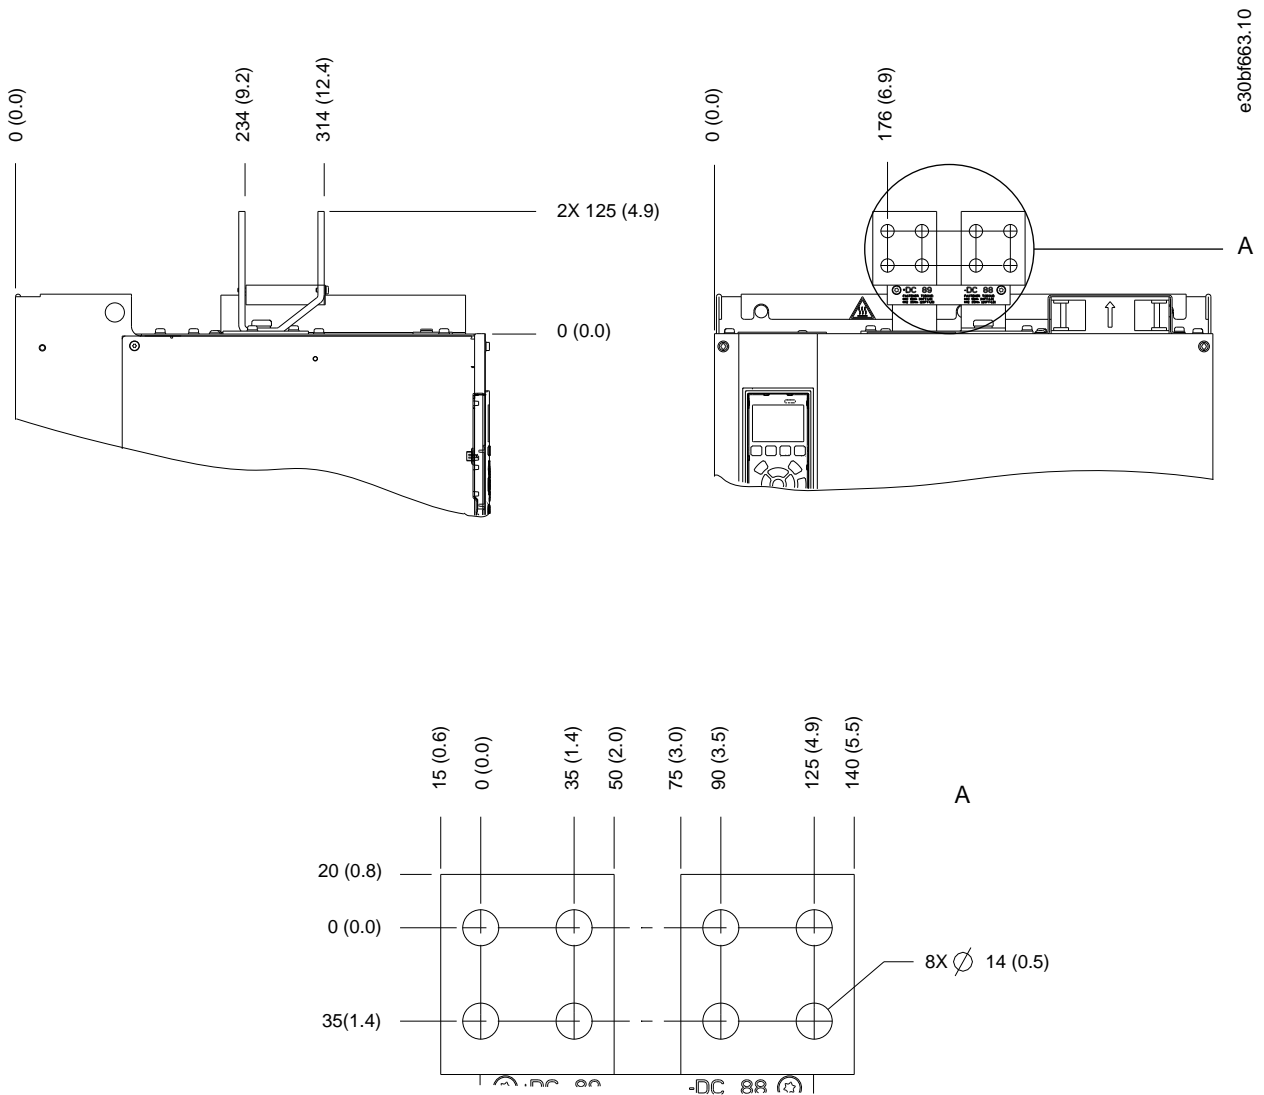

e30bf663.10

Illustration 28: E3h Load Share/Regen Terminal Dimensions (Side Views)

5.10 E4h Terminal Dimensions

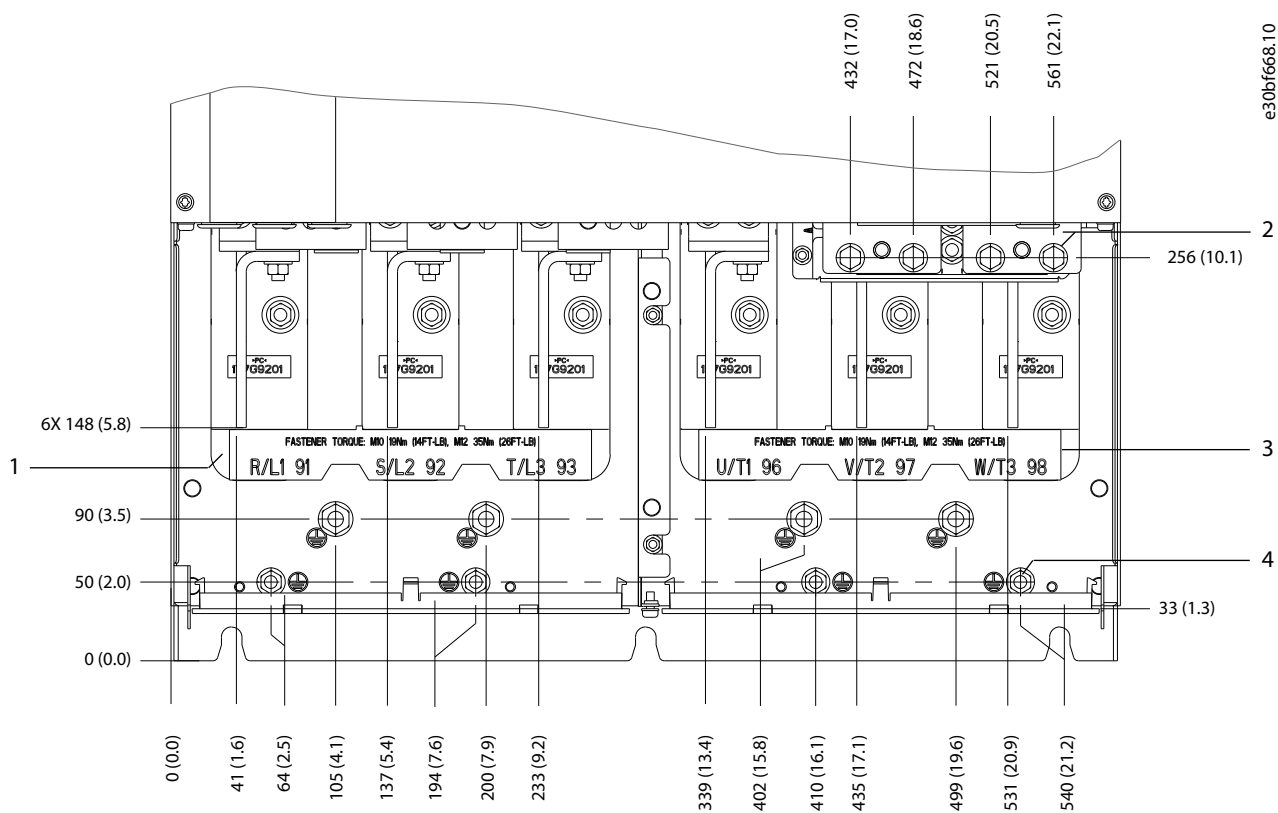

| | |
|--------------------------|--|
| 1 Mains terminals | 2 Brake or regen terminals |
| 3 Motor terminals | 4 Ground terminals, M8 and M10 nuts |

Illustration 29: E4h Terminal Dimensions (Front View)

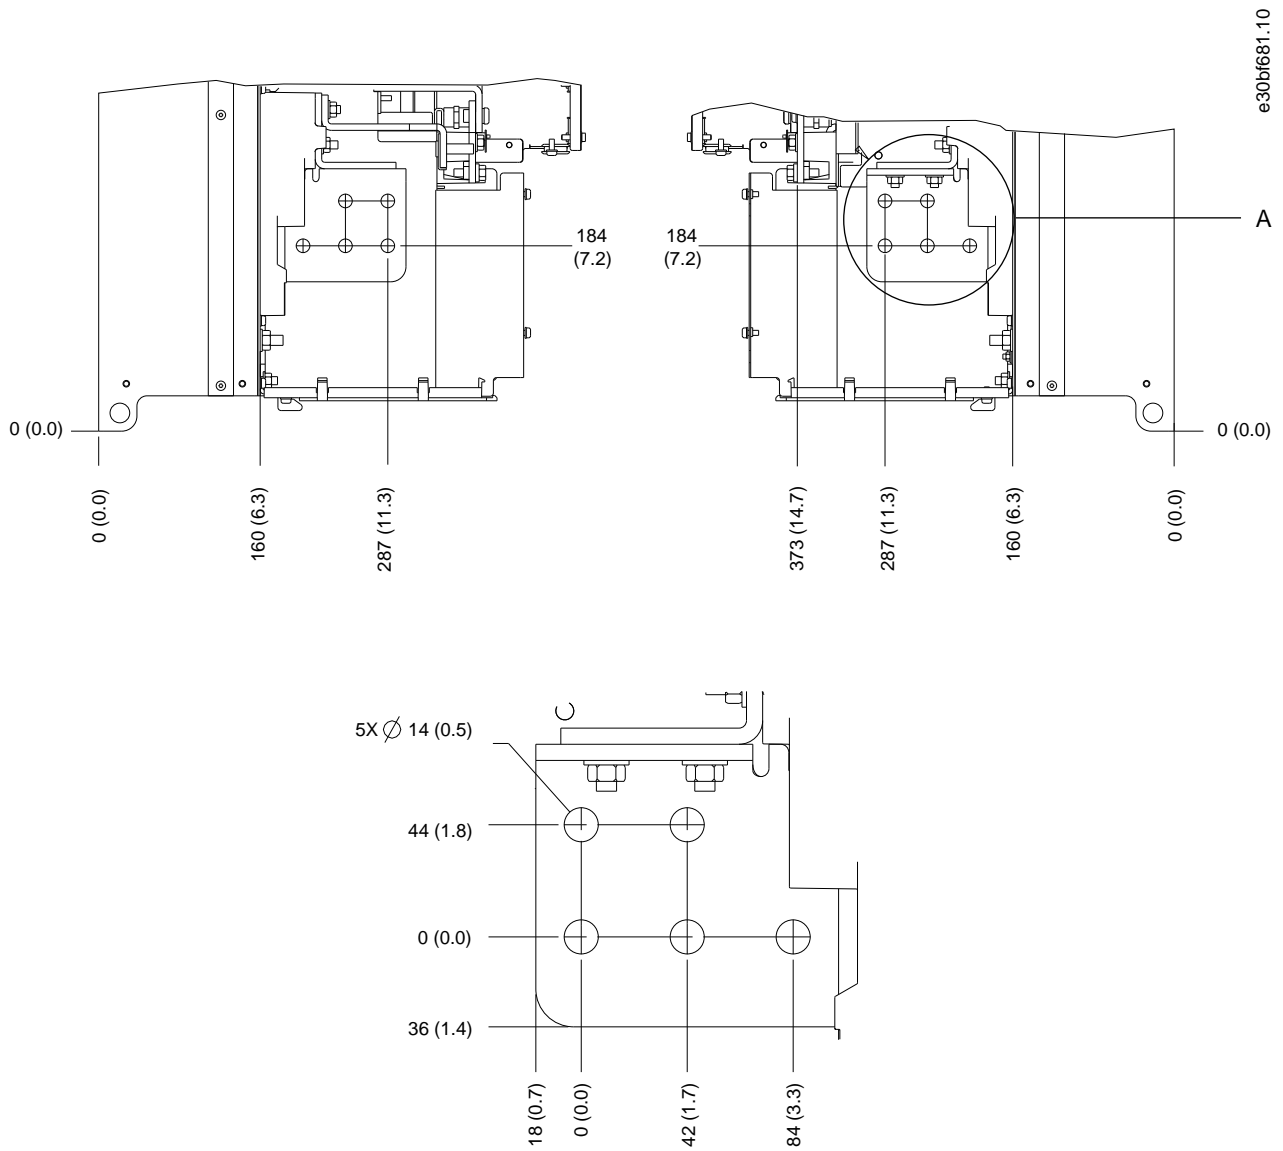


Illustration 30: E4h Mains, Motor, and Ground Terminal Dimensions (Side Views)

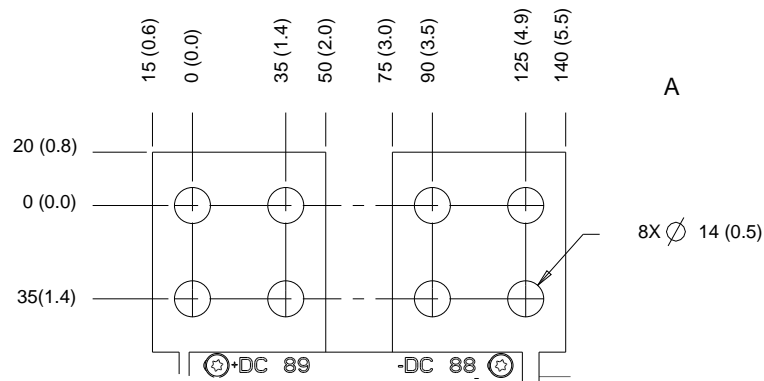
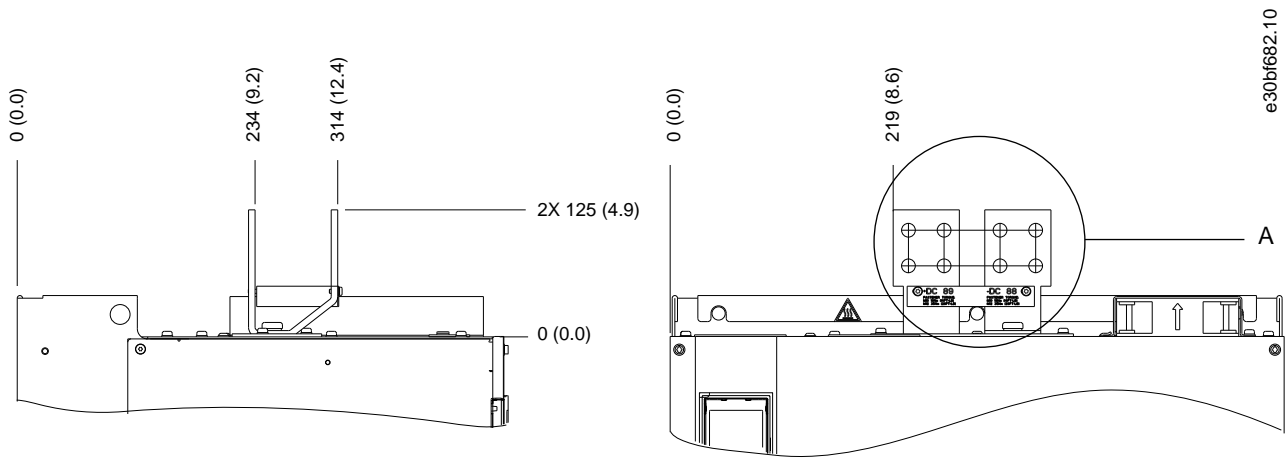


Illustration 31: E4h Load Share/Regen Terminal Dimensions (Side Views)

5.11 Control Wiring

5.11.1 Control Cable Access


All terminals to the control cables are inside the drive below the LCP. To access, either open the door or remove the front panel.

5.11.2 Routing Control Cables

Procedure

1. Tie down and route all control cables down the left side of the enclosure. See [illustration 32](#).
2. Isolate control cables from high-power cables in the drive.
3. Connect the shields in a proper way to ensure optimum electrical immunity.
4. When the drive is connected to a thermistor, ensure that the thermistor control cable is shielded and reinforced/double insulated. A 24 V DC supply is recommended.
5. Connect the control cables to the relevant options on the control card. For more detail, see the relevant fieldbus instructions. The fieldbus cable must be tied down and routed along with the other control cables inside the unit

Example:

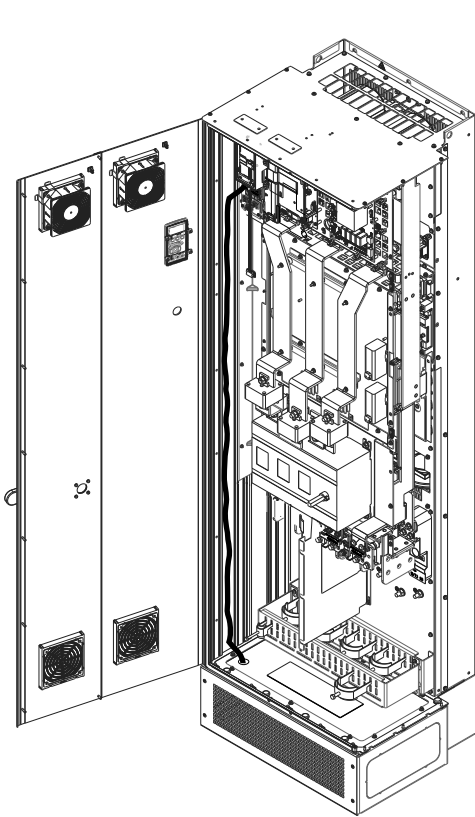

e30bf715.10

Illustration 32: Control Card Cable Routing

5.11.3 Control Terminal Types


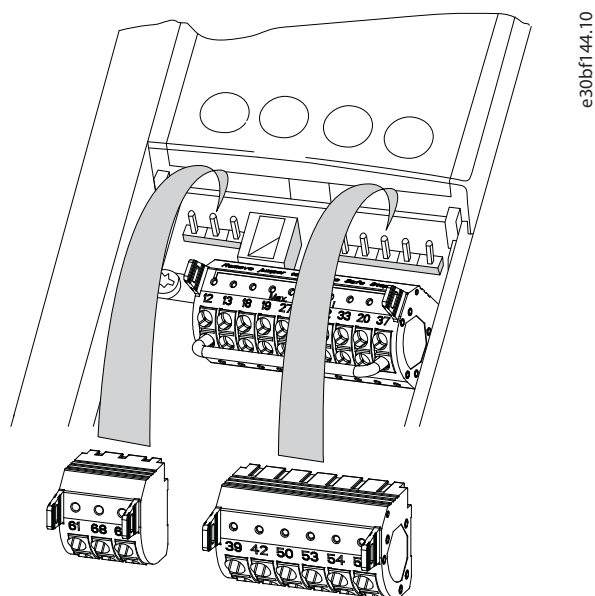


Illustration 33: Control Terminal Locations

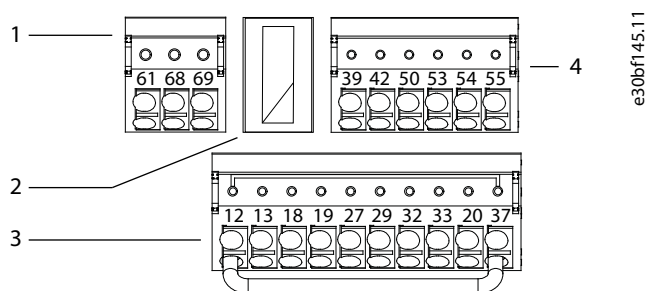

| | | | |
|---|--------------------------------|---|--------------------------------|
| 1 | Serial communication terminals | 2 | Digital input/output terminals |
| 3 | Analog input/output terminals | | |

Illustration 34: Terminal Numbers Located on the Connectors

Table 10: Serial Communication Terminals

| Terminal | Parameter | Default Setting | Description |
|----------|---------------------------------------|-----------------|--|
| 61 | – | – | Integrated RC-filter for cable shield. ONLY for connecting the shield if EMC problems exist. |
| 68 | Parameter group 8-3* FC Port Settings | – | RS485 interface. A switch (BUS TER.) is provided on the control card for bus termination resistance. See illustration 39 . |
| 69 | Parameter group 8-3* FC Port Settings | – | |

Table 11: Digital Input/Output Terminal Descriptions

| Terminal | Parameter | Default setting | Description |
|----------|---|--------------------------|--|
| 12, 13 | – | +24 V DC | 24 V DC supply voltage for digital inputs and external transducers. Maximum output current 200 mA for all 24 V loads. |
| 18 | <i>Parameter 5-10 Terminal 18 Digital Input</i> | <i>[8] Start</i> | Digital inputs. |
| 19 | <i>Parameter 5-11 Terminal 19 Digital Input</i> | <i>[10] Reversing</i> | |
| 32 | <i>Parameter 5-14 Terminal 32 Digital Input</i> | <i>[0] No operation</i> | |
| 33 | <i>Parameter 5-15 Terminal 33 Digital Input</i> | <i>[0] No operation</i> | |
| 27 | <i>Parameter 5-12 Terminal 27 Digital Input</i> | <i>[2] Coast inverse</i> | For digital input or output. Default setting is input. |
| 29 | <i>Parameter 5-13 Terminal 29 Digital Input</i> | <i>[14] JOG</i> | |
| 20 | – | – | Common for digital inputs and 0 V potential for 24 V supply. |
| 37 | – | STO | When not using the optional STO feature, a jumper wire is required between terminal 12 (or 13) and terminal 37. This set-up allows the drive to operate with factory default programming values. |

Table 12: Analog Input/Output Terminal Descriptions

| Terminal | Parameter | Default setting | Description |
|----------|--|-------------------------|---|
| 39 | – | – | Common for analog output. |
| 42 | <i>Parameter 6-50 Terminal 42 Output</i> | <i>[0] No operation</i> | Programmable analog output. 0–20 mA or 4–20 mA at a maximum of 500 Ω. |
| 50 | – | +10 V DC | 10 V DC analog supply voltage for potentiometer or thermistor. 15 mA maximum. |
| 53 | <i>Parameter group 6-1* Analog Input 1</i> | Reference | Analog input. For voltage (V) or current (mA). |
| 54 | <i>Parameter group 6-2* Analog Input 2</i> | Feedback | |
| 55 | – | – | Common for analog input. |

5.11.4 Relay Terminals

- Relays 1 and 2 are standard relay terminals included on all drives. The location of the outputs depends on the drive configuration. See the *Control Shelf* section.
- If a drive is configured with built-in optional equipment, more terminals may be included. Refer to the manual provided with the optional equipment.

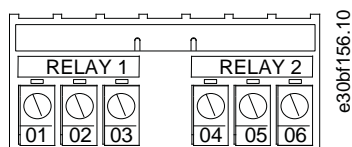


Illustration 35: Relay 1 and Relay 2 Terminals

Table 13: Relay Terminal Descriptions

| Terminal | Parameter | Default setting | Description |
|------------|-----------------------------------|------------------|---|
| 01, 02, 03 | Parameter 5-40 Function Relay [0] | [0] No operation | Form C relay output. For AC or DC voltage and resistive or inductive loads. |
| 04, 05, 06 | Parameter 5-40 Function Relay [1] | [0] No operation | |

5.11.5 Connecting the Control Cable to the Control Terminals

Context:

The control terminals are located near the LCP. The control terminal connectors can be unplugged from the drive for convenience when wiring, as shown in [illustration 33](#). Either solid or flexible wire can be connected to the control terminals. For minimum and maximum control cable cross-section, refer to [9.5 Cable Specifications](#).

NOTICE



ELECTRICAL INTERFERENCE

Minimize interference by keeping control wires as short as possible and separate from high-power cables.

Procedure

1. Strip 10 mm (0.4 in) of the outer plastic layer from the end of the wire.
2. Insert the control wire into the terminal.
 For a solid wire, push the bare wire into the contact.
 For a flexible wire, open the contact by inserting a small screwdriver into the slot between the terminal holes and push the screwdriver inward. Then insert the stripped wire into the contact, and remove the screwdriver.
3. Pull gently on the wire to ensure that the contact is firmly established.

Loose control cable can cause equipment faults or reduced performance.

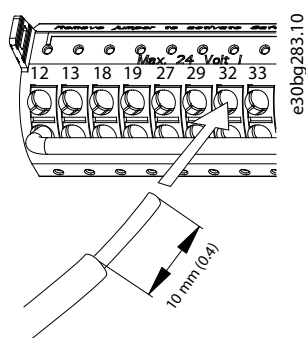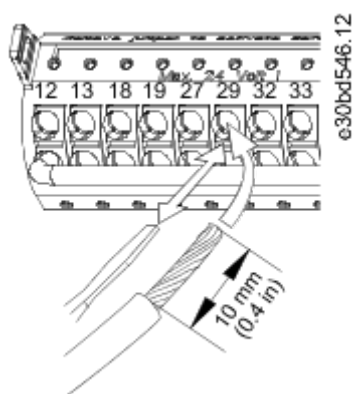Example:**Illustration 36: Connecting a Solid Control Cable to the Terminal Box****Illustration 37: Connecting a Flexible Control Cable to the Terminal Box**

5.11.6 Disconnecting the Control Cable from the Control Terminals

Procedure

1. To open the contact, insert a small screwdriver into the slot between the terminal holes and push the screwdriver inward.
2. Pull gently on the wire to free it from the control terminal contact.

5.11.7 Enabling Motor Operation

Context:

If the status line at the bottom of the LCP reads AUTO REMOTE COAST, the unit is ready to operate, but is missing an input signal on terminal 27. Digital input terminal 27 is designed to receive a 24 V DC external interlock command that allows the drive to operate when using factory default programming values.

NOTICE

FACTORY-INSTALLED OPTIONAL EQUIPMENT

Do not remove factory-installed wiring to terminal 27. If the drive does not run, refer to the documentation for the optional equipment that is wired into terminal 27.

Procedure

1. When no interlock device is used, wire a jumper between control terminal 12 (recommended) or 13 to terminal 27.

This wire provides an internal 24 V signal on terminal 27. The drive is ready for operation.

5.11.8 Configuring RS485 Serial Communication

5.11.8.1 RS485 Features

RS485 is a 2-wire bus interface compatible with multi-drop network topology. This interface contains the following features:

- Either Danfoss FC or Modbus RTU communication protocol can be used.
- Functions can be programmed remotely using the protocol software and RS485 connection or in *parameter group 8-** Communications and Options*.
- Selecting a specific communication protocol changes various default parameter settings to match the specifications of the protocol, making more protocol-specific parameters available.
- Option cards for the drive are available to provide more communication protocols. See the option card documentation for installation and operation instructions.
- A switch (BUS TER) is provided on the control card for bus termination resistance.

5.11.8.2 Configuring RS485 Serial Communication

Procedure

1. Connect RS485 serial communication wiring to terminals (+)68 and (-)69.
 - A Use shielded serial communication cable (recommended).
 - B See the *Connecting to Ground* section for proper grounding.
2. Select the following parameter settings:
 - A Protocol type in *parameter 8-30 Protocol*.
 - B Drive address in *parameter 8-31 Address*.
 - C Baud rate in *parameter 8-32 Baud Rate*.

Example:

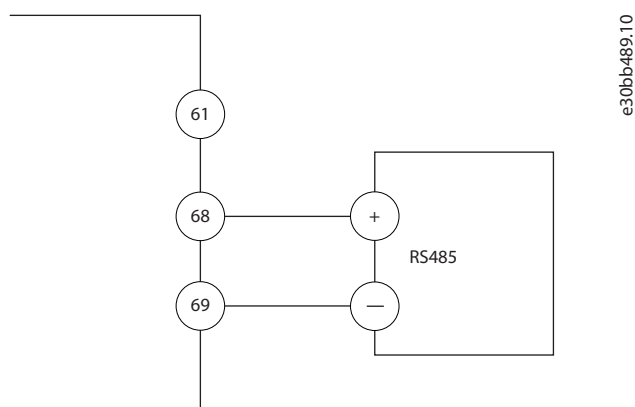


Illustration 38: Serial Communication Wiring Diagram

5.11.9 Safe Torque Off (STO) Wiring

The Safe Torque Off (STO) function is a component in a safety control system. STO prevents the unit from generating the voltage required to rotate the motor. To run the STO function, more wiring for the drive is required. Refer to the *VLT® FC Series - Safe Torque Off Operating Guide*.

5.11.10 Space Heater Wiring

The space heater is an option used to prevent condensation from forming inside the enclosure when the unit is turned off. It is field wired and controlled by an HVAC management system.

Specifications:

- Nominal voltage: 100–240
- Wire size: 12–24 AWG (4–0.25 mm²)

5.11.11 Auxiliary Contact Wiring for Disconnects

The disconnect is an option that is installed at the factory. The auxiliary contacts, which are signal accessories used with the disconnect, are not installed at the factory to allow more flexibility during installation. The contacts snap into place without the need for tools.

Contacts must be installed in specific locations on the disconnect depending on their functions. Refer to the datasheet included in the accessory bag that comes with the drive.

Specifications:

- U_i /[V]: 690
- U_{imp} /[kV]: 4
- Pollution degree: 3
- I_{th} /[A]: 16
- Cable size: 1...2x18...14 AWG (0.75...2.5 mm²)
- Maximum fuse: 16 A/gG
- NEMA: A600, R300, wire size: 18–14 AWG (0.75–2.5 mm²), 1(2)

5.11.12 Wiring the Brake Resistor Temperature Switch

Context:

The brake resistor terminal block is on the power card and allows for the connection of an external brake resistor temperature switch. The switch can be configured as normally closed or normally open. If the input changes, a signal trips the drive and shows *alarm 27, Brake chopper fault* on the LCP display. At the same time, the drive stops braking and the motor coasts.

1. Locate the brake resistor terminal block (terminals 104–106) on the power card. See the *Wiring Schematic* section.
2. Remove the M3 screws that hold the jumper to the power card.
3. Remove the jumper and wire the brake resistor temperature switch in 1 of the following configurations:
 - Normally closed. Connect to terminals 104 and 106.
 - Normally open. Connect to terminals 104 and 105.
4. Secure the switch wires with the M3 screws. Torque to 0.5–0.6 Nm (5 in-lb).

5.11.13 Selecting the Voltage/Current Input Signal

Context:

The analog input terminals 53 and 54 allow setting of input signal to voltage (0–10 V) or current (0/4–20 mA).

- Terminal 53: Speed reference signal in open loop (see *parameter 16-61 Terminal 53 Switch Setting*).
- Terminal 54: Feedback signal in closed loop (see *parameter 16-63 Terminal 54 Switch Setting*).

Procedure

1. Disconnect power to the drive.
2. Remove the LCP (local control panel). See the *Local Control Panel (LCP)* section.
3. Remove any optional equipment covering the switches.
4. Set switches A53 and A54 to select the signal type (U = voltage, I = current). See [illustration 39](#).

Example:

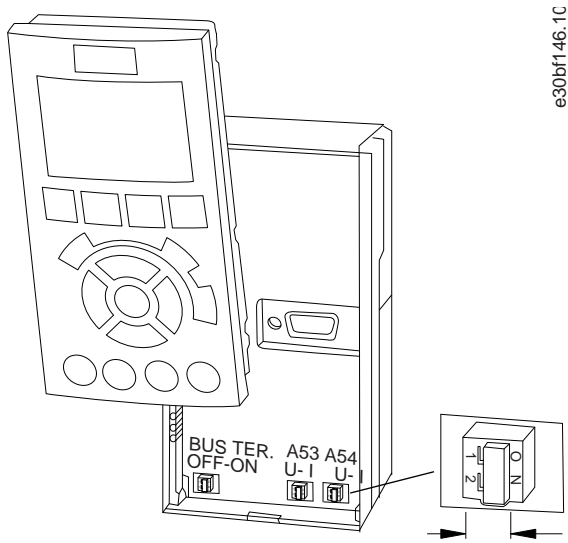


Illustration 39: Location of Switches A53 and A54

6 Starting the Drive

6.1 Pre-start Check List

Table 14: Pre-start Check List

| Inspect | ✓ | Check for |
|----------------------------|---|---|
| Motor | | Confirm continuity of the motor by measuring ohm values on U–V (96–97), V–W (97–98), and W–U (98–96). |
| | | Confirm that the supply voltage matches the voltage of the drive and the motor. |
| Switches | | Ensure that all switch and disconnect settings are in the proper positions. |
| Auxiliary equipment | | Look for auxiliary equipment, switches, disconnects, or input fuses/circuit breakers that reside on the input power side of the drive or output side to the motor. Ensure that they are ready for full-speed operation. |
| | | Check function and installation of any sensors used for feedback to the drive. |
| | | Remove any power factor correction caps on motor. |
| | | Adjust any power factor correction caps on the mains side and ensure that they are dampened. |
| Cable routing | | Check that all cable glands are firmly tightened. |
| | | Ensure that motor wiring, brake wiring (if equipped), and control wiring are separated or shielded, or in 3 separate metallic conduits for high-frequency interference isolation. |
| Control cables | | Check for broken or damaged wires and loose connections. |
| | | Check that control wiring is isolated from high-power wiring for noise immunity. |
| | | Check the voltage source of the signals, if necessary. |
| | | Use shielded cable or twisted pair and ensure that the shield is terminated correctly. |
| Input/output cables | | Check for loose connections. |
| | | Check that motor and mains are in separate conduit or separated shielded cables. |
| Grounding | | Check for good ground connections that are tight and free of oxidation. |
| | | Grounding to conduit, or mounting the back panel to a metal surface, is not a suitable grounding. |
| Fuses and circuit breakers | | Check for proper fusing or circuit breakers |
| | | Check that all fuses are inserted firmly and are in operational condition and that all circuit breakers (if used) are in the open position. |
| Cooling | | Look for any obstructions in the airflow path. |
| | | Measure top and bottom clearance of the drive to verify adequate airflow for cooling, see the <i>Cooling Requirements</i> section. |
| Ambient conditions | | Check that requirements for ambient conditions are met. See the <i>Ambient Conditions</i> section. |
| Interior of the drive | | Inspect that the unit interior is free of dirt, metal chips, moisture, and corrosion. |
| | | Verify that all installation tools have been removed from unit interior. |
| | | For E3h and E4h enclosures, ensure that the unit is mounted on an unpainted, metal surface. |
| Vibration | | Check that the unit is mounted solidly, or that shock mounts are used, if necessary. |
| | | Check for an unusual amount of vibration. |

6.2 Applying Power to the Drive

Context:

⚠ WARNING ⚠

HIGH VOLTAGE

AC drives contain high voltage when connected to AC mains input, DC supply, or load sharing. Failure to perform installation, start-up, and maintenance by qualified personnel can result in death or serious injury.

- Only qualified personnel must perform installation, start-up, and maintenance.

⚠ WARNING ⚠

UNINTENDED START

When the drive is connected to the AC mains, DC supply, or load sharing, the motor may start at any time, causing risk of death, serious injury, and equipment or property damage. The motor may start by activation of an external switch, a fieldbus command, an input reference signal from the LCP or LOP, via remote operation using MCT 10 Set-up software, or after a cleared fault condition.

- Press [Off] on the LCP before programming parameters.
- Disconnect the drive from the mains whenever personal safety considerations make it necessary to avoid unintended motor start.
- Check that the drive, motor, and any driven equipment are in operational readiness.

NOTICE

MISSING SIGNAL

If the status line at the bottom of the LCP reads AUTO REMOTE COASTING, or *alarm 60, External interlock* is shown, it indicates that the unit is ready to operate but is missing an input signal on, for example, terminal 27.

- See [5.11.7 Enabling Motor Operation](#) for details.

Procedure

1. Before applying power to the drive, verify that the drive and any associated equipment is ready for operation. Refer to the *Pre-start Check List*.
2. Ensure that all operated devices are in the OFF position.
3. Ensure that input power to the unit is OFF and locked out. Do not rely on the drive disconnect switches for input power isolation.
4. Verify that there is no voltage on input terminals L1 (91), L2 (92), and L3 (93), phase-to-phase, and phase-to-ground.
5. Verify that there is no voltage on output terminals 96 (U), 97 (V), and 98 (W), phase-to phase, and phase-to-ground.
6. Ensure that any optional equipment wiring matches the installation requirements.
7. Close and securely fasten all covers and doors on the drive.
8. Confirm that the input voltage is balanced within 3%. If not balanced, correct the input voltage imbalance before proceeding. Repeat this procedure after the voltage correction.
9. Apply power to the unit, but do not start the drive. For units with a disconnect switch, turn the switch to the ON position to apply power to the drive.

6.3 Programming the Drive

6.3.1 Parameter Overview

Parameters contain various settings that are used to configure and operate the drive and motor. These parameter settings are programmed into the local control panel (LCP) through the different LCP menus. For more detail on parameters, see the programming guide.

Parameter settings are assigned a default value at the factory, but can be configured for their unique application. Each parameter has a name and number that remain the same regardless of the programming mode.

In the *Main Menu* mode, the parameters are divided into groups. The 1st digit of the parameter number (from the left) indicates the parameter group number. The parameter group is then broken down into subgroups, if necessary. For example:

Table 15: Example of Parameter Group Hierarchy

| Example | Description |
|---|--------------------|
| <i>0-** Operation/Display</i> | Parameter group |
| <i>0-0* Basic Settings</i> | Parameter subgroup |
| <i>Parameter 0-01 Language</i> | Parameter |
| <i>Parameter 0-02 Motor Speed Unit</i> | Parameter |
| <i>Parameter 0-03 Regional Settings</i> | Parameter |

6.3.2 Parameter Navigation

Use the following LCP keys to navigate through the parameters.

- Press [▲] [▼] to scroll up or down.
- Press [◀] [▶] to shift a space to the left or right of a decimal point while editing a decimal parameter value.
- Press [OK] to accept the change.
- Press [Cancel] to disregard the change and exit edit mode.
- Press [Back] twice to show the status view.
- Press [Main Menu] once to go back to the main menu.

6.3.3 Entering System Information

Context:

The following steps are used to enter basic system information into the drive. Recommended parameter settings are intended for start-up and checkout purposes. Application settings vary.

Although these steps assume that an induction motor is used, a permanent magnet motor can also be used. For more information on specific motor types, see the product-specific programming guide.

NOTICE

SOFTWARE DOWNLOAD

For commissioning via a PC, install VLT® Motion Control Tool MCT 10 set-up software. A basic version, which is sufficient for most applications, is available for download. An advanced version, which can commission multiple drives at once, can be ordered.

- See https://www.danfoss.com/en/service-and-support/downloads/?sort=title_asc&filter=download-type%3Dtools.

Procedure

1. Press [Main Menu] on the LCP.
2. Select *0-** Operation/Display* and press [OK].
3. Select *0-0* Basic Settings* and press [OK].
4. Select *parameter 0-03 Regional Settings* and press [OK].
5. Select *[0] International* or *[1] North America* as appropriate and press [OK]. (This action changes the default settings for some basic parameters).
6. Press [Quick Menus] on the LCP and then select *02 Quick Setup*.
7. If needed, change the following parameter settings. Motor data is found on the motor nameplate.
 - A *Parameter 0-01 Language* (English)
 - B *Parameter 1-20 Motor Power [kW]* (4.00 kW)
 - C *Parameter 1-22 Motor Voltage* (400 V)
 - D *Parameter 1-23 Motor Frequency* (50 Hz)
 - E *Parameter 1-24 Motor Current* (9.00 A)
 - F *Parameter 1-25 Motor Nominal Speed* (1420 RPM)
 - G *Parameter 5-12 Terminal 27 Digital Input* (Coast Inverse)
 - H *Parameter 3-02 Minimum Reference* (0.000 RPM)
 - I *Parameter 3-03 Maximum Reference* (1500.000 RPM)
 - J *Parameter 3-41 Ramp 1 Ramp up Time* (3.00 s)
 - K *Parameter 3-42 Ramp 1 Ramp Down Time* (3.00 s)
 - L *Parameter 3-13 Reference Site* (Linked to Hand/Auto)
 - M *Parameter 1-29 Automatic Motor Adaptation (AMA)* (Off)

6.3.4 Configuring Automatic Energy Optimization

Context:

Automatic energy optimization (AEO) is a procedure that minimizes voltage to the motor, reducing energy consumption, heat, and noise.

Procedure

1. Press [Main Menu].
2. Select *1-** Load and Motor* and press [OK].
3. Select *1-0* General Settings* and press [OK].
4. Select *parameter 1-03 Torque Characteristics* and press [OK].
5. Select either *[2] Auto Energy Optim CT* or *[3] Auto Energy Optim VT* and press [OK].

6.3.5 Configuring Automatic Motor Adaptation

Context:

Automatic motor adaptation (AMA) is a procedure that optimizes compatibility between the drive and the motor.

The drive builds a mathematical model of the motor for regulating output motor current. The procedure also tests the input phase balance of electrical power. It compares the motor characteristics with the data entered in *parameters 1–20 to 1–25*.

NOTICE

Some motors are unable to run the complete version of the test and will trigger an alarm.

- In that case, or if an output filter is connected to the motor, select [2] *Enable reduced AMA*.

Procedure

1. Press [Main Menu].
2. Select *1–** Load and Motor* and press [OK].
3. Select *1–2* Motor Data* and press [OK].
4. Select *parameter 1-29 Automatic Motor Adaptation (AMA)* and press [OK].
5. Select [1] *Enable complete AMA* and press [OK].
6. Press [Hand On] and then [OK].

The test runs automatically and indicates when it is complete.

6.4 Testing Before System Start Up

Context:

⚠ WARNING ⚠

MOTOR START

Failure to ensure that the motor, system, and any attached equipment are ready for start can result in personal injury or equipment damage. Before start,

- Ensure that equipment is safe to operate under any condition.
- Ensure that the motor, system, and any attached equipment are ready for start.

6.4.1 Testing Motor Rotation

Context:

NOTICE

INCORRECT MOTOR ROTATION

If the motor runs in the wrong direction, it can damage equipment.

- Before running the unit, check the motor rotation by briefly running the motor.

Procedure

1. Press [Hand On].
2. Move the left cursor to the left of the decimal point by using the left arrow key.
3. Enter an RPM that slowly rotates the motor and press [OK].

The motor runs briefly at either 5 Hz or the minimum frequency set in *parameter 4-12 Motor Speed Low Limit [Hz]*.

4. If the motor rotation is wrong, set *parameter 1-06 Clockwise Direction* to [1] Inverse.

6.4.2 Testing Encoder Rotation

Context:

Use this procedure if encoder feedback is used. For more information on the encoder option, refer to the option manual.

Procedure

1. Select [0] Open Loop in *parameter 1-00 Configuration Mode*.
2. Select [1] 24 V encoder in *parameter 7-00 Speed PID Feedback Source*.
3. Press [Hand On].
4. Press [▶] for positive speed reference (*parameter 1-06 Clockwise Direction* at [0] Normal).
5. Check feedback in *parameter 16-57 Feedback [RPM]*.
 - If feedback is positive, the test was successful.
 - If feedback is negative, the encoder connection is wrong. Use either *parameter 5-71 Term 32/33 Encoder Direction* or *parameter 17-60 Feedback Direction* to inverse the direction, or reverse the encoder cables. *Parameter 17-60 Feedback Direction* is only available with the VLT® Encoder Input MCB 102 option.

6.5 Starting Up the Drive for the First Time

Context:

The procedure in this section requires user-wiring and application programming to be completed. The following procedure is recommended after application setup is completed.

⚠ WARNING ⚠**MOTOR START**

Starting the drive can cause the motor to start. Failure to ensure that the motor, system, and any attached equipment are ready for start can result in personal injury or equipment damage.

- Ensure that equipment is safe to operate under any condition.
- Ensure that the motor, system, and any attached equipment are ready for start.

1. Press [Auto On].

If warnings or alarms occur, see the *Warnings and Alarms* section.

2. Apply an external run command. Examples of external run commands are a switch, button, or programmable logic controller (PLC).
3. Adjust the speed reference throughout the speed range.
4. Ensure that the system is working as intended by checking the sound and vibration levels of the motor.
5. Remove the external run command.

6.6 Parameter Settings

6.6.1 Parameter Setting Overview

Parameters are operational settings accessed through the LCP that are used to configure and operate the drive and motor for specific applications.

Some parameters have different default settings for international or North America. For a list of the different default values, see the *International/North American Default Parameter Settings* section.

Parameter settings are stored internally in the drive, allowing the following advantages:

- Parameter settings can be uploaded into the LCP memory and stored as a back-up.
- Multiple units can be programmed quickly by connecting the LCP to the unit and downloading the stored parameter settings.
- Settings that are stored in the LCP are not changed when restoring factory default settings.
- Changes made to default settings and parameter variables are stored and available for viewing in the quick menu. See the *LCP Menu* section.

6.6.2 Uploading and Downloading Parameter Settings

Context:

The drive operates using parameters stored on the control card, which is located within the drive. The upload and download functions move the parameters between the control card and the LCP.

Procedure

1. Press [Off].
2. Go to *parameter 0-50 LCP Copy* and press [OK].
3. Select 1 of the following:
 - To upload data from the control card to the LCP, select [1] *All to LCP*.
 - To download data from the LCP to the control card, select [2] *All from LCP*.

4. Press [OK].

A progress bar shows the uploading or downloading process.

5. Press [Hand On] or [Auto On].

6.6.3 Restoring Factory Default Settings Using the Recommended Initialization

Context:

NOTICE

LOSS OF DATA

Restoring default settings results in a loss of programming, motor data, localization, and monitoring records.

- To create a back-up, upload data to the LCP before initialization. See [6.6.2 Uploading and Downloading Parameter Settings](#).

1. Press [Main Menu] twice to access parameters.
2. Go to *parameter 14-22 Operation Mode* and press [OK].

Parameter 14-22 Operation Mode does not reset the following settings:

- Running hours.
- Serial communication options.
- Personal menu settings.
- Fault log, alarm log, and other monitoring functions.

3. Scroll to Initialization and press [OK].
4. Remove power to the unit and wait for the display to turn off.
5. Apply power to the unit. Default parameter settings are restored during start-up. Start-up takes slightly longer than normal.
6. After *alarm 80, Drive initialized* appears, press [Reset].

6.6.4 Restoring Factory Default Settings Using Manual Initialization

Context:

NOTICE

LOSS OF DATA

Restoring default settings results in a loss of programming, motor data, localization, and monitoring records.

- To create a back-up, upload data to the LCP before initialization. See [6.6.2 Uploading and Downloading Parameter Settings](#).

Procedure

1. Remove power to the unit and wait for the display to turn off.
2. Press and hold [Status], [Main Menu], and [OK] simultaneously while applying power to the unit (approximately 5 s or until an audible click sounds and the fan starts).

Manually initializing does not reset the following parameter settings:

- *Parameter 15-00 Operating Hours*
- *Parameter 15-03 Power Up's*
- *Parameter 15-04 Over Temp's*
- *Parameter 15-05 Over Volt's*

Start-up takes slightly longer than normal.

7 Wiring Configuration Examples

7.1 Application Examples

The examples in this section are intended as a quick reference for common applications.

- Parameter settings are the regional default values unless otherwise indicated (selected in *parameter 0-03 Regional Settings*).
- Parameters associated with the terminals and their settings are shown next to the drawings.
- Required switch settings for analog terminals A53 or A54 are also shown.

7.1.1 Wiring Configuration for Automatic Motor Adaptation (AMA)

Table 16: Wiring Configuration for AMA with T27 Connected

| Drive | | Parameters | |
|-------|----|--|--------------------------------|
| | | Function | Setting |
| +24 V | 12 | <i>Parameter 1-29 Automatic Motor Adaptation (AMA)</i> | <i>[1] Enable complete AMA</i> |
| +24 V | 13 | | |
| D IN | 18 | <i>Parameter 5-12 Terminal 27 Digital Input</i> | <i>[2]* Coast inverse</i> |
| D IN | 19 | * = Default value | |
| COM | 20 | Notes/comments: Set <i>parameter group 1-2* Motor Data</i> according to motor nameplate. | |
| D IN | 27 | | |
| D IN | 29 | | |
| D IN | 32 | | |
| D IN | 33 | | |
| D IN | 37 | | |
| +10 V | 50 | | |
| A IN | 53 | | |
| A IN | 54 | | |
| COM | 55 | | |
| A OUT | 42 | | |
| COM | 39 | | |

7.1.2 Wiring Configuration for Automatic Motor Adaptation without T27

Table 17: AMA without T27 Connected

| Drive | | Parameters | |
|-------|----|--|-------------------------|
| | | Function | Setting |
| +24 V | 12 | Parameter 1-29 Automatic Motor Adaptation (AMA) | [1] Enable complete AMA |
| +24 V | 13 | | |
| D IN | 18 | Parameter 5-12 Terminal 27 Digital Input | [0] No operation |
| D IN | 19 | | |
| COM | 20 | *=Default value | |
| D IN | 27 | Notes/comments: Parameter group 1-2* Motor Data must be set according to motor. | |
| D IN | 29 | | |
| D IN | 32 | | |
| D IN | 33 | | |
| D IN | 37 | | |
| +10 V | 50 | | |
| A IN | 53 | | |
| A IN | 54 | | |
| COM | 55 | | |
| A OUT | 42 | | |
| COM | 39 | | |

7.1.3 Wiring Configuration: Speed

Table 18: Analog Speed Reference (Voltage)

| Drive | | Parameters | |
|-------|----|---|---------|
| | | Function | Setting |
| +10 V | 50 | Parameter 6-10 Terminal 53 Low Voltage | 0.07 V* |
| A IN | 53 | Parameter 6-11 Terminal 53 High Voltage | 10 V* |
| A IN | 54 | Parameter 6-14 Terminal 53 Low Ref./Feedb. value | 0 Hz |
| COM | 55 | Parameter 6-15 Terminal 53 High Ref./Feedb. Value | 50 Hz |
| A OUT | 42 | *=Default value | |
| COM | 39 | Notes/comments: D IN 37 is an option. | |
| U - I | | | |

Table 19: Analog Speed Reference (Current)

| | | Parameters | | |
|------------------------|---|----------------|--------|--|
| | Function | Setting | | |
| | Parameter 6-12 Terminal 53 Low Current | | 4 mA* | |
| | Parameter 6-13 Terminal 53 High Current | | 20 mA* | |
| | Parameter 6-14 Terminal 53 Low Ref./Feedb. value | | 0 Hz | |
| | Parameter 6-15 Terminal 53 High Ref./Feedb. Value | | 50 Hz | |
| | *=Default value | | | |
| Notes/comments: | | | | |
| D IN 37 is an option. | | | | |

Table 20: Speed Reference (Using a Manual Potentiometer)

| | | Parameters | | |
|------------------------|---|----------------|---------|--|
| | Function | Setting | | |
| | Parameter 6-10 Terminal 53 Low Voltage | | 0.07 V* | |
| | Parameter 6-11 Terminal 53 High Voltage | | 10 V* | |
| | Parameter 6-14 Terminal 53 Low Ref./Feedb. value | | 0 Hz | |
| | Parameter 6-15 Terminal 53 High Ref./Feedb. Value | | 50 Hz | |
| | *=Default value | | | |
| Notes/comments: | | | | |
| D IN 37 is an option. | | | | |

7.1.4 Wiring Configuration: Feedback

Table 22: Analog Current Feedback Transducer (2-wire)

| | | Parameters | |
|--|---|---|---------|
| | | Function | Setting |
| | | Parameter 6-22 Terminal 54 Low Current | 4 mA* |
| | | Parameter 6-23 Terminal 54 High Current | 20 mA* |
| | | Parameter 6-24 Terminal 54 Low Ref./Feedb. value | 0* |
| | | Parameter 6-25 Terminal 54 High Ref./Feedb. Value | 50* |
| | | *=Default value | |
| | Notes/comments: D IN 37 is an option. | | |

Table 23: Analog Voltage Feedback Transducer (3-wire)

| | | Parameters | |
|--|--|---|----------------|
| | | Function | Setting |
| | | Parameter 6-20 Terminal 54 Low Voltage | 0.07 V* |
| | | Parameter 6-21 Terminal 54 High Voltage | 10 V* |
| | | Parameter 6-24 Terminal 54 Low Ref./Feedb. value | 0* |
| | | Parameter 6-25 Terminal 54 High Ref./Feedb. Value | 50* |
| | | *=Default value | |
| | | Notes/comments: | |
| | | D IN 37 is an option. | |

Table 24: Analog Voltage Feedback Transducer (4-wire)

| | | Parameters | |
|--|---|------------------------|--|
| | Function | Setting | |
| | Parameter 6-20 Terminal 54 Low Voltage | 0.07 V* | |
| | Parameter 6-21 Terminal 54 High Voltage | 10 V* | |
| | Parameter 6-24 Terminal 54 Low Ref./Feedb. value | 0* | |
| | Parameter 6-25 Terminal 54 High Ref./Feedb. Value | 50* | |
| | | *=Default value | |
| | | Notes/comments: | |
| | | D IN 37 is an option. | |

7.1.5 Wiring Configuration: Run/Stop

Table 25: Run/Stop Command with External Interlock

| | | Parameter | |
|--|--|--|--------------------------------------|
| | | Function | |
| | | Parameter 5-10 Terminal 18 Digital Input | Setting |
| | | Parameter 5-12 Terminal 27 Digital Input | [8] Start* [7] External interlock |
| | | *=Default value | |
| | | Notes/comments: | |
| | | D IN 37 is an option. | |

Table 26: Run/Stop Command without External Interlock

| | Parameter | |
|--|---|------------------------|
| | Function | Setting |
| | Parameter 5-10 Terminal 18 Digital Input | [8] Start* |
| | Parameter 5-12 Terminal 27 Digital Input | [7] External interlock |
| | * = Default value | |
| | Notes/comments: If parameter 5-12 Terminal 27 Digital Inputs is set to [0] No operation, a jumper wire to terminal 27 is not needed. D IN 37 is an option. | |

Table 27: Run Permissive

| | | Parameter | |
|--|--|---|--------------------------|
| | | Function | Setting |
| | | Parameter 5-10 Terminal 18 Digital Input | [8] Start* |
| | | Parameter 5-11 Terminal 19 Digital Input | [52] Run permissive |
| | | Parameter 5-12 Terminal 27 Digital Input | [7] External interlock |
| | | Parameter 5-40 Function Relay | [167] Start command act. |
| | | *=Default value | |
| | | Notes/comments: D IN 37 is an option. | |

7.1.6 Wiring Configuration: Start/Stop

Table 28: Start/Stop Command with Safe Torque Off Option

| | | Parameter | |
|--|--|--|---------------------|
| | | Function | Setting |
| | | Parameter 5-10 Terminal 18 Digital Input | [Start]* |
| | | Parameter 5-12 Terminal 27 Digital Input | [0] No operation |
| | | Parameter 5-19 Terminal 37 Safe Stop | [1] Safe Stop Alarm |
| | | * = Default value | |
| | | Notes/comments: | |
| | | If parameter 5-12 Terminal 27 Digital Input is set [0] No operation, a jumper wire to terminal 27 is not needed. | |
| | | D IN 37 is an option. | |


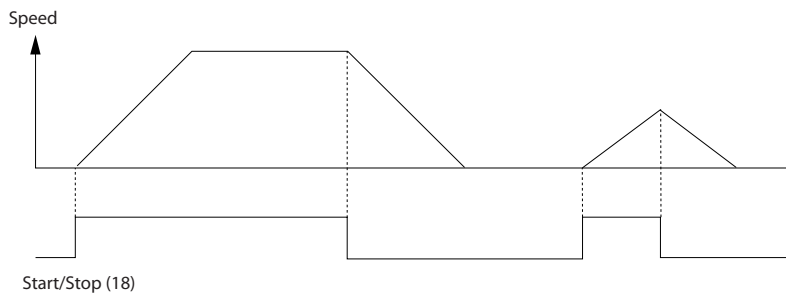


Illustration 41: Start/Stop Command with Safe Torque Off

Table 29: Pulse Start/Stop

| | | Parameter | |
|--|-------------|--|-------------------|
| | e30bb803.10 | Function | Setting |
| | | Parameter 5-10 Terminal 18 Digital Input | [9] Latched Start |
| | | Parameter 5-12 Terminal 27 Digital Input | [6] Stop Inverse |
| | | *=Default value | |
| | | Notes/comments: | |
| | | If parameter 5-12 Terminal 27 Digital Input is set [0] No operation, a jumper wire to terminal 27 is not needed. | |
| | | D IN 37 is an option. | |

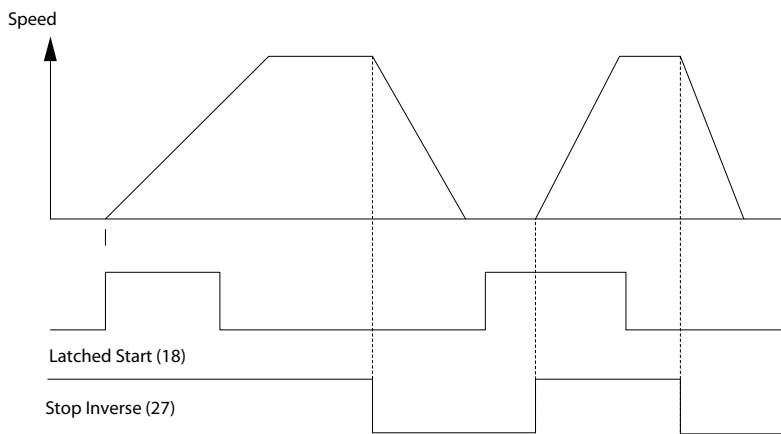

e130bb806.11

Illustration 42: Latched Start/Stop Inverse

Table 30: Start/Stop with Reversing and 4 Preset Speeds

| | | Parameters | |
|--|--|------------------------|---------|
| | | Function | Setting |
| | Parameter 5-10 Terminal 18 Digital Input | [8] Start | |
| | Parameter 5-11 Terminal 19 Digital Input | [10] Reversing* | |
| | Parameter 5-12 Terminal 27 Digital Input | [0] No operation | |
| | Parameter 5-14 Terminal 32 Digital Input | [16] Preset ref bit 0 | |
| | Parameter 5-15 Terminal 33 Digital Input | [17] Preset ref bit 1 | |
| | Parameter 3-10 Preset Reference | | |
| | Preset ref. 0 | 25% | |
| | Preset ref. 1 | 50% | |
| | Preset ref. 2 | 75% | |
| | Preset ref. 3 | 100% | |
| | | *=Default value | |
| | | Notes/comments: | |
| | | D IN 37 is an option. | |

7.1.7 Wiring Configuration: External Alarm Reset

Table 31: External Alarm Reset

| | | Parameter | |
|--|--|---|----------------|
| | | Function | Setting |
| | | Parameter 5-11 Terminal 19 Digital Input | [1] Reset |
| | | *=Default value | |
| | | Notes/comments: D IN 37 is an option. | |

7.1.8 Wiring Configuration: RS485

Table 32: RS485 Network Connection

| | | Parameter | |
|--|--|--|---------|
| | | Function | Setting |
| | | Parameter 8-30 Protocol | FC* |
| | | Parameter 8-31 Address | 1* |
| | | Parameter 8-32 Baud Rate | 9600* |
| | | * = Default value | |
| | | Notes/comments: | |
| | | Select protocol, address, and baud rate in the above-mentioned parameters. | |
| | | D IN 37 is an option. | |

7.1.9 Wiring Configuration: Motor Thermistor

⚠ CAUTION ⚠

THERMISTOR INSULATION

Risk of personal injury or equipment damage.

- To meet PELV insulation requirements, use only thermistors with reinforced or double insulation.

Table 33: Motor Thermistor

| | | Parameters | |
|--|-------------|---|---------------------|
| | | Function | Setting |
| | e30bb686.13 | Parameter 1-90 Motor Thermal Protection | [2] Thermistor trip |
| | | Parameter 1-93 Thermistor Source | [1] Analog input 53 |
| | | * = Default value | |
| | | If only a warning is required, set parameter 1-90 Motor Thermal Protection to [1] Thermistor warning. | |
| | | D IN 37 is an option. | |

7.1.10 Wiring for Regen

Table 34: Regen

| | | Parameters | | |
|--|-------------|--|---------|--|
| | | Function | Setting | |
| | e30bd667.11 | Parameter 1-90 Motor Thermal Protection | 100%* | |
| | | * = Default value | | |
| | | To disable regen, decrease <i>parameter 1-90 Motor Thermal Protection</i> to 0%. If the application uses motor brake power and regen is not enabled, the unit trips. | | |
| | | | | |

7.1.11 Wiring Configuration for a Relay Setup with Smart Logic Control

Table 35: Wiring Configuration for a Relay Setup with Smart Logic Control

| | | Parameters | | |
|--|--|---|---|----------------------------|
| | | Function | Setting | |
| | | Parameter 4-30 Motor Feedback Loss Function | [1] Warning | |
| | | | Parameter 4-31 Motor Feedback Speed Error | 100 RPM |
| | | | Parameter 4-32 Motor Feedback Loss Timeout | 5 s |
| | | | Parameter 7-00 Speed PID Feedback Source | [2] MCB 102 |
| | | | Parameter 17-11 Resolution (PPR) | 1024* |
| | | | Parameter 13-00 SL Controller Mode | [1] On |
| | | | Parameter 13-01 Start Event | [19] Warning |
| | | | Parameter 13-02 Stop Event | [44] Reset key |
| | | | Parameter 13-10 Comparator Operand | [21] Warning no. |
| | | | Parameter 13-11 Comparator Operator | [1] ≈ (equal)* |
| | | | Parameter 13-12 Comparator Value | 90 |
| | | | Parameter 13-51 SL Controller Event | [22] Comparator 0 |
| | | | Parameter 13-52 SL Controller Action | [32] Set digital out A low |
| | | | Parameter 5-40 Function Relay | [80] SL digital output A |
| | | | <p>*=Default value</p> <p>Notes/comments:</p> <p>If the limit in the feedback monitor is exceeded, <i>warning 90, Feedback Mon.</i> is issued. The SLC monitors <i>warning 90, Feedback Mon.</i> and if the warning becomes true, relay 1 is triggered. External equipment may require service. If the feedback error goes below the limit again within 5 s, the drive continues and the warning disappears. Reset relay 1 by pressing [Reset] on the LCP.</p> | |

7.1.12 Wiring Configuration for a Submersible Pump


The system consists of a submersible pump controlled by a Danfoss VLT® AQUA Drive and a pressure transmitter. The transmitter gives a 4–20 mA feedback signal to the drive, which keeps a constant pressure by controlling the speed of the pump. To design a drive for a submersible pump application, there are a few important issues to consider. Select the drive according to motor current.

- The CAN motor has a stainless steel can between the rotor and stator that contains a larger and a more magnetic resistant air-gap than on a normal motor. This weaker field results in the motor being designed with a higher rated current than a normal motor with similar rated power. The special CAN motor is used because of the wet installation conditions. Design the system according to output current to be able to run the motor at nominal power.
- The pump contains thrust bearings that are damaged when running below minimum speed, which is normally 30 Hz.
- The motor reactance is nonlinear in submersible pump motors and, therefore, automatic motor adaption (AMA) may not be possible. Normally, submersible pumps are operated with long motor cables that help eliminate the nonlinear motor reactance and enable the drive to perform AMA. If AMA fails, the motor data can be set from *parameter group 1-3* Adv. Motor Data* (see the motor datasheet). If AMA has succeeded, the drive compensates for the voltage drop in the long motor cables. If the advanced motor data are set manually, the length of the motor cable must be considered to optimize system performance.
- It is important that the system is operated with a minimum of wear and tear on the pump and motor. A Danfoss sine-wave filter can lower the motor insulation stress and increase lifetime (check actual motor insulation and the drive dU/dt specification). Most manufacturers of submersible pumps require the use of output filters.
- EMC performance can be difficult to achieve because the special pump cable, which is able to withstand the wet conditions in the well, is normally unshielded. A solution could be to use a shielded cable above the well, and to attach the shield to the steel well pipe. A sine-wave filter also reduces the EMI from unshielded motor cables.

To prevent damage to the thrust bearings of the pump, and to ensure sufficient motor cooling as quickly as possible, it is important to ramp the pump from stop to minimum speed as quick as possible. Most submersible pump manufacturers recommend that the pump ramps to minimum speed (30 Hz) in maximum 2–3 s. The VLT® AQUA Drive FC 202 is designed with initial and final ramp for these applications. The initial and final ramps are 2 individual ramps, where initial ramp, if enabled, ramps the motor from stop to minimum speed and automatically switches to normal ramp, when minimum speed is reached. Final ramp does the opposite from minimum speed to stop in a stop situation. Consider also enabling advanced minimum speed monitoring.

To achieve extra pump protection, use the dry-run detection function. For more information, see the programming guide.

Pipe-fill mode can be enabled to prevent water hammering. The VLT® drive can fill the vertical pipes using the PID controller to ramp up the pressure slowly with a user-specified rate (units/second). If enabled, the drive enters pipe-fill mode when it reaches minimum speed after start-up. The pressure is slowly ramped up until it reaches a user-specified filled setpoint, where the drive automatically disables pipe fill mode and continues in normal closed-loop operation.

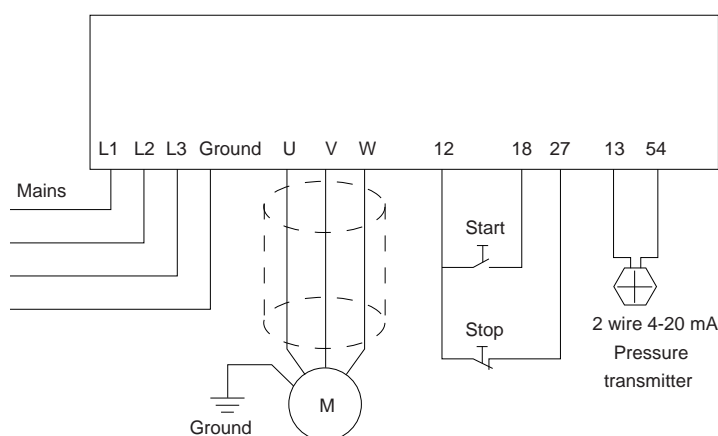

e30ba727.10

Illustration 43: Wiring for Submersible Pump Application

NOTICE

Set the analog input 2, (terminal 54) format to mA (switch 202).

Parameter settings

Table 36: Relevant Parameters for Submersible Pump Application

| Parameter |
|--|
| Parameter 1-20 Motor Power [kW]/parameter 1-21 Motor Power [HP] |
| Parameter 1-22 Motor Voltage |
| Parameter 1-24 Motor Current |
| Parameter 1-28 Motor Rotation Check |
| Parameter 1-29 Automatic Motor Adaptation (AMA) = [2] Enable Reduced AMA |


Table 37: Example of Settings for Submersible Pump

| Parameter | Setting |
|--|--|
| Parameter 3-02 Minimum Reference | The minimum reference unit matches the unit in <i>parameter 20-12 Reference/ Feedback Unit</i> |
| Parameter 3-03 Maximum Reference | The maximum reference unit matches the unit in <i>parameter 20-12 Reference/ Feedback Unit</i> |
| Parameter 3-84 Initial Ramp Time | (2 s) |
| Parameter 3-88 Final Ramp Time | (2 s) |
| Parameter 3-41 Ramp 1 Ramp Up Time | (8 s depending on size) |
| Parameter 3-42 Ramp 1 Ramp Down Time | (8 s depending on size) |
| Parameter 4-11 Motor Speed Low Limit [RPM] | (30 Hz) |
| Parameter 4-13 Motor Speed High Limit [RPM] | (50/60 Hz) |
| To set up the feedback settings in the PID controller, use the Closed-loop wizard under Quick Menu, Function Set-up. | |

Table 38: Example of Settings for Pipe-Fill Mode

| Parameter | Setting |
|----------------------------------|------------------|
| Parameter 29-00 Pipe Fill Enable | Disabled |
| Parameter 29-04 Pipe Fill Rate | (Feedback units) |
| Parameter 29-05 Filled Setpoint | (Feedback units) |

Performance

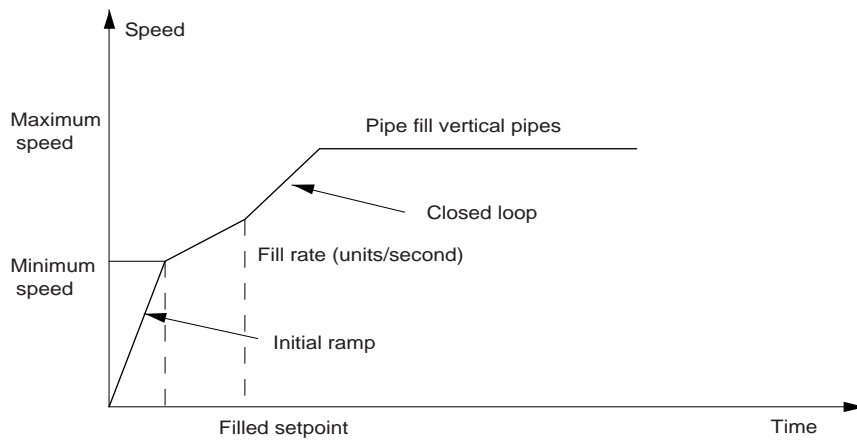

e30ba728:10

Illustration 44: Performance Curve for Pipe-Fill Mode

7.1.13 Wiring Configuration for a Cascade Controller

Refer to [illustration 45](#) for an example with the built-in basic cascade controller with 1 variable-speed pump (lead) and 2 fixed-speed pumps, a 4–20 mA transmitter, and system safety interlock.


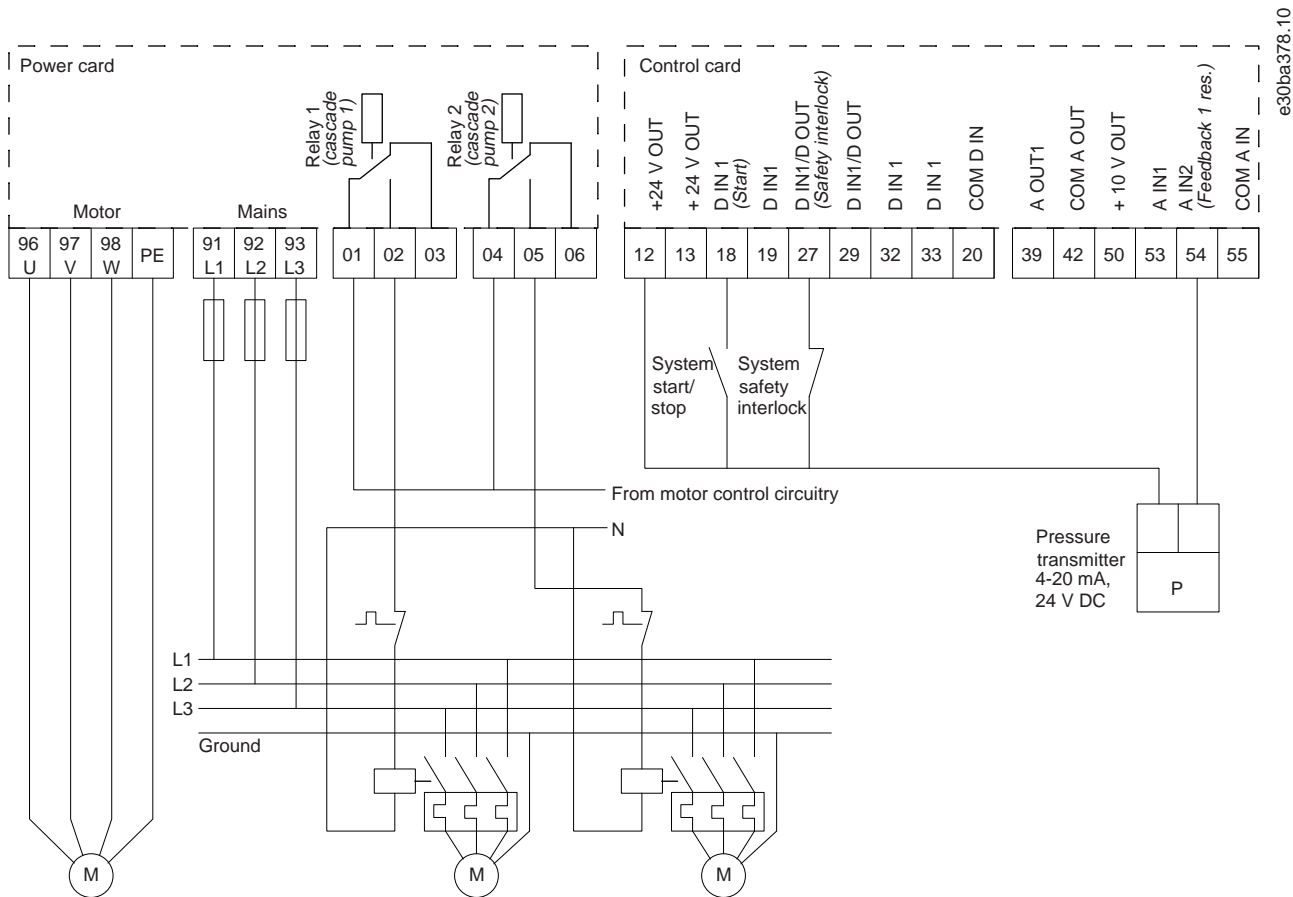


Illustration 45: Cascade Controller Wiring Diagram


7.1.14 Wiring Configuration for a Fixed Variable Speed Pump

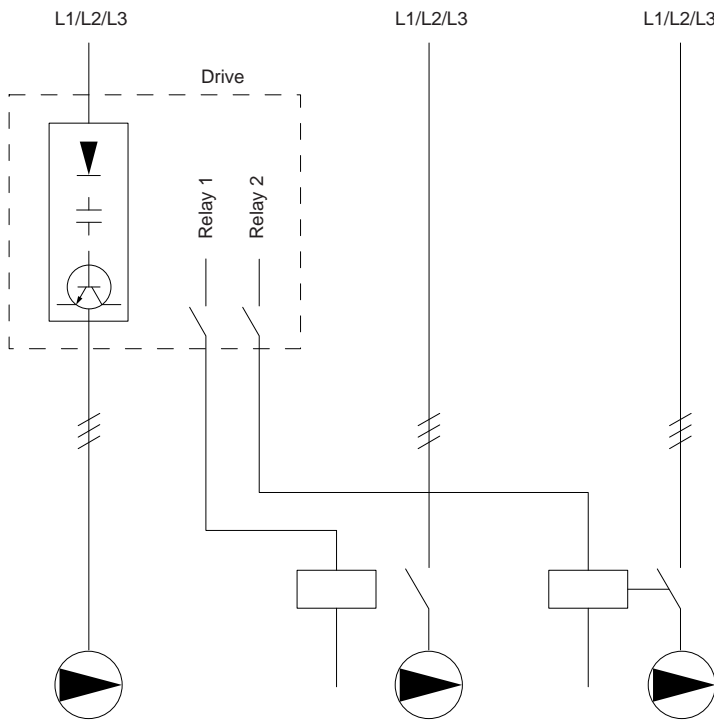

e30ba376.10

Illustration 46: Fixed Variable Speed Pump Wiring Diagram

7.1.15 Wiring Configuration for Lead Pump Alternation

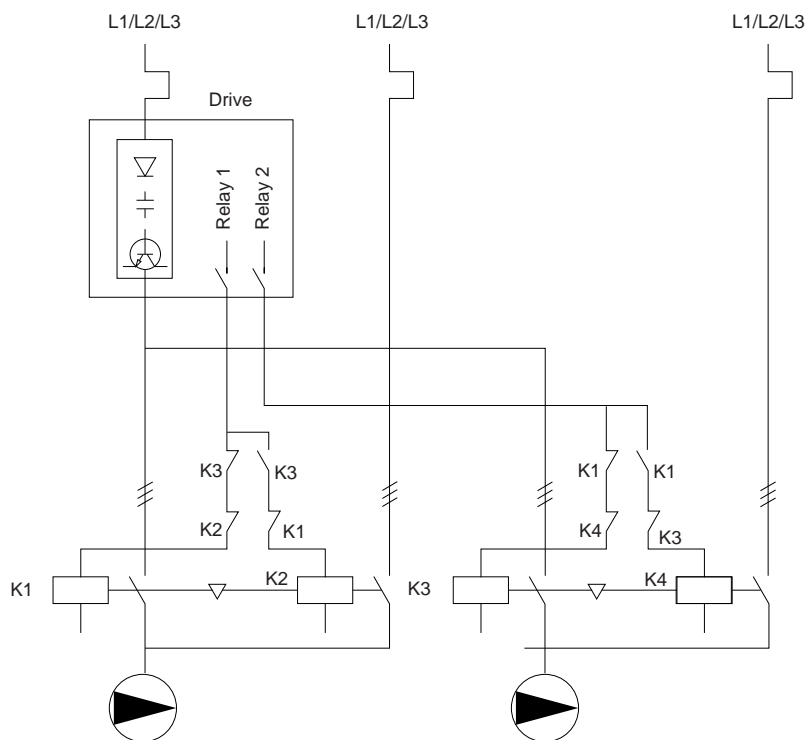

130BA377-13

Illustration 47: Lead Pump Alternation Wiring Diagram

Every pump must be connected to 2 contactors (K1/K2 and K3/K4) with a mechanical interlock. Apply thermal relays or other motor overload protection devices according to local regulation and/or individual demands.

- Relay 1 (R1) and relay 2 (R2) are the built-in relays in the drive.
- When all relays are de-energized, the 1st built-in relay that is energized cuts in the contactor corresponding to the pump controlled by the relay. For example, relay 1 cuts in contactor K1, which becomes the lead pump.
- K1 blocks for K2 via the mechanical interlock, preventing mains from being connected to the output of the drive (via K1).
- Auxiliary break contact on K1 prevents K3 from cutting in.
- Relay 2 controls contactor K4 for on/off control of the fixed-speed pump.
- At alternation, both relays de-energize and now relay 2 is energized as the 1st relay.

For a detailed description of commissioning for mixed pump and master/slave applications, refer to VLT® Cascade Controller Options MCO 101/102 Operating Instructions.

8 Maintenance, Diagnostics, and Troubleshooting

8.1 Maintenance and Service

Under normal operating conditions and load profiles, the drive is maintenance-free throughout its designed lifetime. To prevent breakdown, danger, and damage, examine the drive for loose terminal connections, excessive dust buildup, and so on, at regular intervals. Replace worn or damaged parts with Danfoss authorized parts. For service and support, contact the local Danfoss supplier.

⚠ WARNING ⚠

UNINTENDED START

When the drive is connected to the AC mains, DC supply, or load sharing, the motor may start at any time, causing risk of death, serious injury, and equipment or property damage. The motor may start by activation of an external switch, a fieldbus command, an input reference signal from the LCP or LOP, via remote operation using MCT 10 Set-up software, or after a cleared fault condition.

- Press [Off] on the LCP before programming parameters.
- Disconnect the drive from the mains whenever personal safety considerations make it necessary to avoid unintended motor start.
- Check that the drive, motor, and any driven equipment are in operational readiness.

8.2 Heat Sink Service

8.2.1 Heat Sink Access Panel

The drive can be ordered with an optional access panel in the back of the unit. This access panel provides access to the heat sink and allows the heat sink to be cleaned of any dust buildup.

8.2.2 Removing Dust Buildup from the Heat Sink

Context:

NOTICE

DAMAGE TO HEAT SINK

Using fasteners that are longer than the fasteners originally supplied with the heat sink panel can damage the heat sink cooling fins.

Procedure

1. Remove power from the drive and wait 40 minutes for the capacitors to discharge completely. Refer to [2.3 Safety Precautions](#).
2. Position the drive so that the back of the drive is fully accessible.
3. Remove the 8 M5 fasteners securing the access panel to the back of the enclosure using a 3 mm hex bit.
4. Inspect the leading edge of the heat sink for damage or debris.
5. Remove material or debris with a vacuum.
6. Reinstall the panel and secure it to the back of the enclosure with the 8 fasteners. Tighten the fasteners according to [9.10 Fastener Torque Ratings](#).

Example:


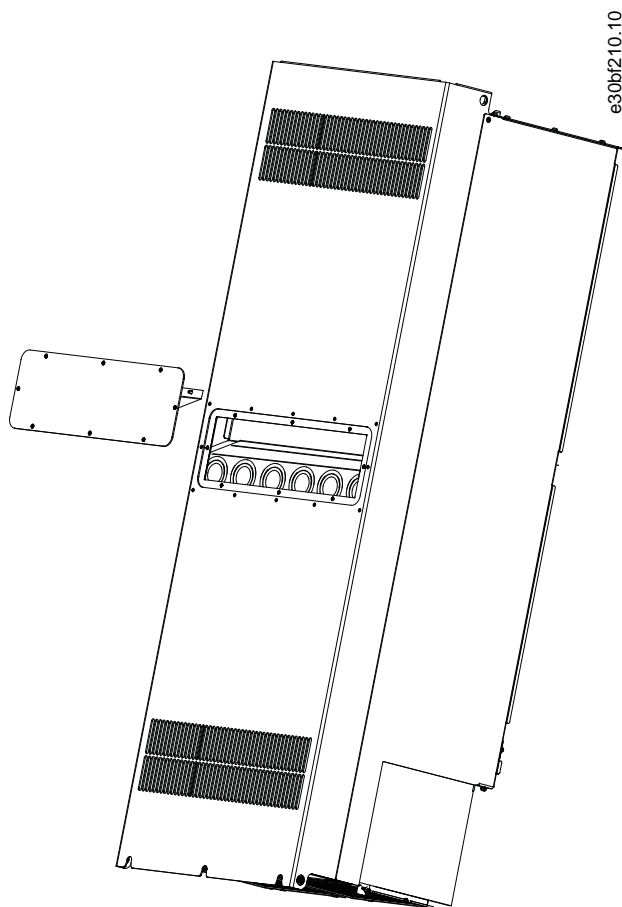


Illustration 48: Heat Sink Access Panel Removed from the Rear of the Drive

8.3 Status Messages

8.3.1 Status Message Overview

When the drive is in status mode, status messages automatically appear in the bottom line of the LCP display. See [illustration 49](#).

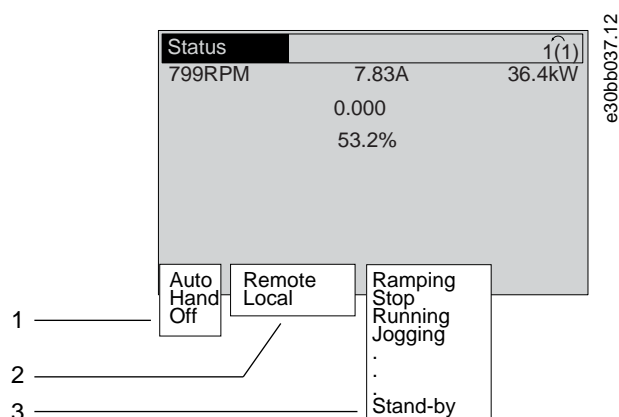

| | |
|--|--|
| 1 Operating mode. Refer to 8.3.2 Status Messages - Operating Mode . | 2 Reference site. Refer to 8.3.3 Status Messages - Reference Site . |
| 3 Operation status. Refer to 8.3.4 Status Messages - Operation Status . | |

Illustration 49: Status Display

8.3.2 Status Messages - Operating Mode

Table 39: Operating Mode

| Operating mode | Description |
|----------------|--|
| Off | The drive does not react to any control signal until [Auto On] or [Hand On] is pressed. |
| Auto | The drive requires external commands to execute functions. The start/stop commands are sent via the control terminals and/or the serial communication. |
| Hand | The navigation keys on the LCP can be used to control the drive. Stop commands, reset, reversing, DC brake, and other signals applied to the control terminals override local control. |

8.3.3 Status Messages - Reference Site

Table 40: Reference Site

| Reference site | Description |
|----------------|--|
| Remote | The speed reference is given from: <ul style="list-style-type: none"> External signals. Serial communication. Internal preset references. |
| Local | The drive uses reference values from the LCP. |

8.3.4 Status Messages - Operation Status

Table 41: Operation Status

| Operation status | Description |
|-----------------------|---|
| AC brake | AC brake was selected in <i>parameter 2-10 Brake Function</i> . The AC brake overmagnetizes the motor to achieve a controlled slow down. |
| AMA finish OK | Automatic motor adaptation (AMA) was carried out successfully. |
| AMA ready | AMA is ready to start. To start, press [Hand On]. |
| AMA running | AMA process is in progress. |
| Braking | The brake chopper is in operation. The brake resistor absorbs the generative energy. |
| Braking max. | The brake chopper is in operation. The power limit for the brake resistor defined in <i>parameter 2-12 Brake Power Limit (kW)</i> has been reached. |
| Coast | <ul style="list-style-type: none"> [2] <i>Coast inverse</i> was selected as a function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal is not connected. Coast activated by serial communication. |
| Ctrl. ramp-down | <p>[1] <i>Ctrl. ramp-down</i> was selected in <i>parameter 14-10 Mains Failure</i>.</p> <ul style="list-style-type: none"> The mains voltage is below the value set in <i>parameter 14-11 Mains Voltage at Mains Fault</i>. The drive ramps down the motor in a controlled manner. |
| Current high | The drive output current is above the limit set in <i>parameter 4-51 Warning Current High</i> . |
| Current low | The drive output current is below the limit set in <i>parameter 4-52 Warning Speed Low</i> . |
| DC hold | DC hold is selected in <i>parameter 1-80 Function at Stop</i> and a stop command is active. The motor is held by a DC current set in <i>parameter 2-00 DC Hold Current</i> . |
| DC stop | <p>The motor is held with a DC current (<i>parameter 2-01 DC Brake Current</i>) for a specified time (<i>parameter 2-02 DC Braking Time</i>).</p> <ul style="list-style-type: none"> DC brake is activated in <i>parameter 2-03 DC Brake Cut In Speed [RPM]</i> and a stop command is active. DC brake (inverse) is selected as a function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal is not active. The DC brake is activated via serial communication. |
| Feedback high | The sum of all active feedback is above the feedback limit set in <i>parameter 4-57 Warning Feedback High</i> . |
| Feedback low | The sum of all active feedback is below the feedback limit set in <i>parameter 4-56 Warning Feedback Low</i> . |
| Freeze output | <p>The remote reference is active, which holds the present speed.</p> <ul style="list-style-type: none"> [20] <i>Freeze Output</i> was selected as a function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal is active. Speed control is only possible via the terminal functions speed up and speed down. Hold ramp is activated via serial communication. |
| Freeze output request | A freeze output command has been given, but the motor remains stopped until a run permissive signal is received. |
| Freeze ref. | [19] <i>Freeze Reference</i> was selected as a function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal is active. The drive saves the actual reference. Changing the reference is now only possible via terminal functions speed up and speed down. |

| Operation status | Description |
|------------------|---|
| Jog request | A jog command has been given, but the motor is stopped until a run permissive signal is received via a digital input. |
| Jogging | <p>The motor is running as programmed in <i>parameter 3-19 Jog Speed [RPM]</i>.</p> <ul style="list-style-type: none"> • [14] Jog was selected as function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal (for example, terminal 29) is active. • The jog function is activated via the serial communication. • The jog function was selected as a reaction for a monitoring function (for example, No signal). The monitoring function is active. |
| Motor check | In <i>parameter 1-80 Function at Stop, [2] Motor Check</i> was selected. A stop command is active. To ensure that a motor is connected to the drive, a permanent test current is applied to the motor. |
| OVC control | Overvoltage control was activated by [2] Enabled in <i>parameter 2-17 Over-voltage Control</i> . The connected motor is supplying the drive with generative energy. The overvoltage control adjusts the V/Hz ratio to run the motor in controlled mode and to prevent the drive from tripping. |
| Power unit off | (For drives with a 24 V external supply installed only.) Mains supply to the drive is removed, but the control card is supplied by the external 24 V. |
| Protection md | <p>Protection mode is active. The unit has detected a critical status (an overcurrent or overvoltage).</p> <ul style="list-style-type: none"> • To avoid tripping, the switching frequency is reduced to 1.5 kHz if <i>parameter 14-55 Output Filter</i> is set to [2] Sine-Wave Filter Fixed. Otherwise, the switching frequency is reduced to 1.0 kHz. • If possible, protection mode ends after approximately 10 s. • Protection mode can be restricted in <i>parameter 14-26 Trip Delay at Inverter Fault</i>. |
| Qstop | <p>The motor is decelerating using <i>parameter 3-81 Quick Stop Ramp Time</i>.</p> <ul style="list-style-type: none"> • [4] Quick stop inverse was selected as a function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal is not active. • The quick stop function was activated via serial communication. |
| Ramping | The motor is accelerating/decelerating using the active ramp up/down. The reference, a limit value, or a standstill is not yet reached. |
| Ref. high | The sum of all active references is above the reference limit set in <i>parameter 4-55 Warning Reference High</i> . |
| Ref. low | The sum of all active references is below the reference limit set in <i>parameter 4-54 Warning Reference Low</i> . |
| Run on ref. | The drive is running in the reference range. The feedback value matches the setpoint value. |
| Run request | A start command has been given, but the motor is stopped until a run permissive signal is received via digital input. |
| Running | The drive is driving the motor. |
| Sleep mode | The energy-saving function is enabled. This function being enabled means that now the motor has stopped, but that it restarts automatically when required. |
| Speed high | The motor speed is above the value set in <i>parameter 4-53 Warning Speed High</i> . |
| Speed low | The motor speed is below the value set in <i>parameter 4-52 Warning Speed Low</i> . |
| Standby | In auto-on mode, the drive starts the motor with a start signal from a digital input or serial communication. |
| Start delay | In <i>parameter 1-71 Start Delay</i> , a delay starting time was set. A start command is activated and the motor starts after the start delay time expires. |
| Start fwd/rev | [12] Enable Start Forward and [13] Enable Start Reverse were selected as functions for 2 different digital inputs (<i>parameter group 5-1* Digital Inputs</i>). The motor starts in forward or reverse depending on which corresponding terminal is activated. |

| Operation status | Description |
|------------------|--|
| Stop | The drive has received a stop command from 1 of the following: <ul style="list-style-type: none"> • LCP. • Digital input. • Serial communication. |
| Trip | An alarm occurred and the motor is stopped. Once the cause of the alarm is cleared, reset the drive using 1 of the following: <ul style="list-style-type: none"> • Pressing [Reset]. • Remotely by control terminals. • Via serial communication. |
| Trip lock | An alarm occurred and the motor is stopped. Once the cause of the alarm is cleared, cycle power to the drive. Reset the drive manually by 1 of the following: <ul style="list-style-type: none"> • Pressing [Reset]. • Remotely by control terminals. • Via serial communication. |

8.4 Warnings and Alarms

8.4.1 Warning and Alarm Types

Alarm

An alarm indicates a fault that requires immediate attention. The fault always triggers a trip or trip lock. Reset the drive after an alarm using 1 of the following methods:

- Press [Reset]/[Off/Reset].
- Digital reset input command.
- Serial communication reset input command.
- Auto reset.

Warning

A state entered in fault situations, for example if the drive is subject to an overtemperature or when the drive is protecting the motor, process, or mechanism. The drive prevents a restart until the cause of the fault has disappeared. To cancel the trip state, restart the drive. Do not use the trip state for personal safety.

Trip

When tripping, the drive suspends operation to prevent damage to the drive and other equipment. When a trip occurs, the motor coasts to a stop. The drive logic continues to operate and monitor the drive status. After the fault condition is remedied, the drive is ready for a reset.

Trip lock

The drive enters this state in fault situations to protect itself. The drive requires physical intervention, for example when there is a short circuit on the output. A trip lock can only be canceled by disconnecting mains, removing the cause of the fault, and reconnecting the drive. Restart is prevented until the trip state is canceled by activating reset or, sometimes, by being programmed to reset automatically. Do not use the trip lock state for personal safety.

LCP notification

When a fault is triggered, the LCP indicates the type of fault (alarm, warning, or trip lock) and shows the alarm or warning number in the display.

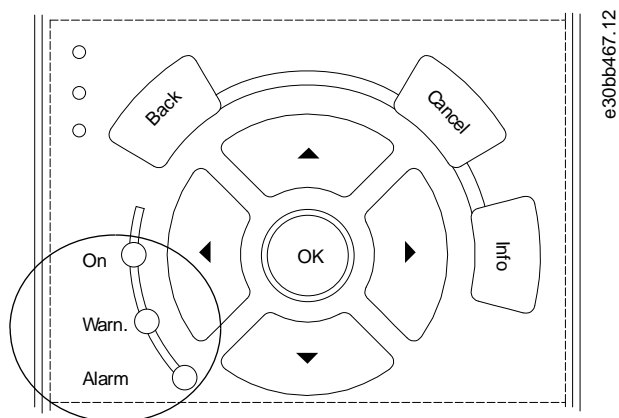


Illustration 50: Status Indicator Lights

Table 42: Fault Types

| Type of fault | Warning indicator light | Alarm indicator light |
|---------------|-------------------------|-----------------------|
| Warning | On | Off |
| Alarm | Off | On (flashing) |
| Trip lock | On | On (flashing) |

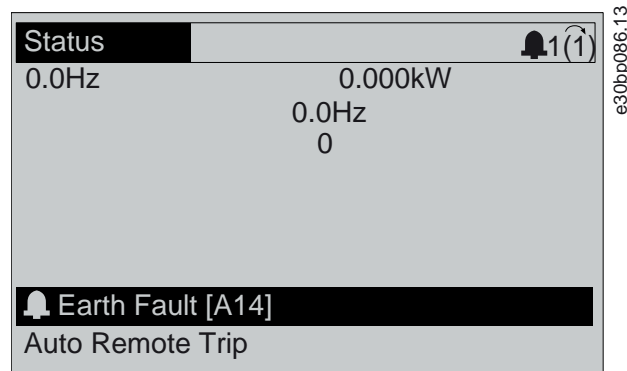


Illustration 51: Alarm Example

8.4.2 WARNING 1, 10 Volts Low

Cause

The control card voltage is less than 10 V from terminal 50. Remove some of the load from terminal 50, as the 10 V supply is overloaded. Maximum 15 mA or minimum 590 Ω.

A short circuit in a connected potentiometer or incorrect wiring of the potentiometer can cause this condition.

Troubleshooting

- Remove the wiring from terminal 50. If the warning clears, the problem is with the wiring. If the warning does not clear, replace the control card.

8.4.3 WARNING/ALARM 2, Live Zero Error

Cause

This warning or alarm only appears if programmed in *parameter 6-01 Live Zero Timeout Function*. The signal on 1 of the analog inputs is less than 50% of the minimum value programmed for that input. Broken wiring or a faulty device sending the signal can cause this condition.

Troubleshooting

- Check connections on all analog mains terminals.
 - Control card terminals 53 and 54 for signals, terminal 55 common.
 - VLT® General Purpose I/O MCB 101 terminals 11 and 12 for signals, terminal 10 common.
 - VLT® Analog I/O Option MCB 109 terminals 1, 3, and 5 for signals, terminals 2, 4, and 6 common.
- Check that the drive programming and switch settings match the analog signal type.
- Perform an input terminal signal test.

8.4.4 WARNING/ALARM 3, No Motor

Cause

No motor is connected to the output of the drive.

8.4.5 WARNING/ALARM 4, Mains Phase Loss

Cause

A phase is missing on the supply side, or the mains voltage imbalance is too high. This message also appears for a fault in the input rectifier. Options are programmed in *parameter 14-12 Function at Mains Imbalance*.

Troubleshooting

- Check the supply voltage and supply currents to the drive.

8.4.6 WARNING 5, DC Link Voltage High

Cause

The DC-link voltage (DC) is higher than the high-voltage warning limit. The limit depends on the drive voltage rating. The unit is still active.

8.4.7 WARNING 6, DC Link Voltage Low

Cause

The DC-link voltage (DC) is lower than the low voltage warning limit. The limit depends on the drive voltage rating. The unit is still active.

8.4.8 WARNING/ALARM 8, DC Undervoltage

Cause

If the DC-link voltage drops below the undervoltage limit, the drive checks for 24 V DC back-up supply. If no 24 V DC back-up supply is connected, the drive trips after a fixed time delay. The time delay varies with unit size.

Troubleshooting

- Check that the supply voltage matches the drive voltage.
- Perform an input voltage test.
- Perform a soft-charge circuit test.

8.4.9 WARNING/ALARM 9, Inverter Overload

Cause

The drive has run with more than 100% overload for too long and is about to cut out. The counter for electronic thermal inverter protection issues a warning at 98% and trips at 100% with an alarm. The drive cannot be reset until the counter is below 90%.

Troubleshooting

- Compare the output current shown on the LCP with the drive rated current.
- Compare the output current shown on the LCP with the measured motor current.
- Show the thermal drive load on the LCP and monitor the value. When running above the drive continuous current rating, the counter increases. When running below the drive continuous current rating, the counter decreases.

8.4.10 WARNING/ALARM 10, Motor Overload Temperature

Cause

According to the electronic thermal protection (ETR), the motor is too hot.

Select 1 of these options:

- The drive issues a warning or an alarm when the counter is >90% if *parameter 1-90 Motor Thermal Protection* is set to warning options.
- The drive trips when the counter reaches 100% if *parameter 1-90 Motor Thermal Protection* is set to trip options.

The fault occurs when the motor runs with more than 100% overload for too long.

Troubleshooting

- Check for motor overheating.
- Check if the motor is mechanically overloaded.
- Check that the motor current set in *parameter 1-24 Motor Current* is correct.
- Ensure that the motor data in *parameters 1-20 to 1-25* is set correctly.
- If an external fan is in use, check that it is selected in *parameter 1-91 Motor External Fan*.
- Running AMA in *parameter 1-29 Automatic Motor Adaptation (AMA)* tunes the drive to the motor more accurately and reduces thermal loading.

8.4.11 WARNING/ALARM 11, Motor Thermistor Overtemp

The motor thermistor indicates that the motor temperature is too high.

Troubleshooting

- Check for motor overheating.
- Check that the thermistor is securely connected.
- Check if the motor is mechanically overloaded.
- When using terminal 53 or 54, check that the thermistor is connected correctly between either terminal 53 or 54 (analog voltage input) and terminal 50 (+10 V supply). Also check that the terminal switch for 53 and 54 is set for voltage. Check that *parameter 1-93 Thermistor Resource* selects 53 or 54.
- When using terminal 18, 19, 31, 32, or 33 (digital inputs), check that the thermistor is connected correctly between the digital input terminal used (digital input PNP only) and terminal 50. Select the terminal to use in *parameter 1-93 Thermistor Resource*.

8.4.12 WARNING/ALARM 12, Torque Limit

Cause

The torque has exceeded the value in *parameter 4-16 Torque Limit Motor Mode* or the value in *parameter 4-17 Torque Limit Generator Mode*. *Parameter 14-25 Trip Delay at Torque Limit* can change this warning from a warning-only condition to a warning followed by an alarm.

Troubleshooting

- If the motor torque limit is exceeded during ramp-up, extend the ramp-up time.
- If the generator torque limit is exceeded during ramp-down time, extend the ramp-down time.
- If torque limit occurs while running, increase the torque limit. Make sure that the system can operate safely at a higher torque.
- Check the application for excessive current draw on the motor.

8.4.13 ALARM 14, Earth (Ground) Fault

Cause

There is current from the output phase to ground, either in the cable between the drive and the motor, or in the motor itself. The current transducers detect the ground fault by measuring current going out from the drive and current going into the drive from the motor. Ground fault is issued if the deviation of the 2 currents is too large. The current going out of the drive must be the same as the current going into the drive.

Troubleshooting

- Remove power to the drive and repair the ground fault.
- Check for ground faults in the motor by measuring the resistance to ground of the motor cables and the motor with a megohmmeter.
- Reset any potential individual offset in the 3 current transducers in the drive. Perform a manual initialization or perform a complete AMA. This method is most relevant after changing the power card.

8.4.14 ALARM 15, Hardware Mismatch

Cause

A fitted option is not operational with the present control card hardware or software.

Troubleshooting

Record the value of the following parameters and contact Danfoss.

- *Parameter 15-40 FC Type.*
- *Parameter 15-41 Power Section.*
- *Parameter 15-42 Voltage.*
- *Parameter 15-43 Software Version.*
- *Parameter 15-45 Actual Typecode String.*
- *Parameter 15-49 SW ID Control Card.*
- *Parameter 15-50 SW ID Power Card.*
- *Parameter 15-60 Option Mounted.*
- *Parameter 15-61 Option SW Version* (for each option slot).

8.4.15 ALARM 16, Short Circuit

Cause

There is short-circuiting in the motor or motor wiring.

Troubleshooting

WARNING

HIGH VOLTAGE

AC drives contain high voltage when connected to AC mains input, DC supply, or load sharing. Failure to perform installation, start-up, and maintenance by qualified personnel can result in death or serious injury.

- Only qualified personnel must perform installation, start-up, and maintenance.

- Disconnect power before proceeding.
- Remove the power to the drive and repair the short circuit.

8.4.16 WARNING/ALARM 17, Control Word Timeout

Cause

There is no communication to the drive. The warning is only active when *parameter 8-04 Control Word Timeout Function* is NOT set to [0] Off.

If *parameter 8-04 Control Word Timeout Function* is set to [5] Stop and trip, a warning appears, and the drive ramps down to a stop and shows an alarm.

Troubleshooting

- Check the connections on the serial communication cable.
- Increase *parameter 8-03 Control Word Timeout Time*.
- Check the operation of the communication equipment.
- Verify that proper EMC installation was performed.

8.4.17 WARNING/ALARM 20, Temp. Input Error

Cause

The temperature sensor is not connected.

8.4.18 WARNING/ALARM 21, Parameter Error

Cause

The parameter is out of range. The parameter number is shown in the display.

Troubleshooting

- Set the affected parameter to a valid value.

8.4.19 WARNING/ALARM 22, Hoist Mechanical Brake

Cause

The value of this warning/alarm shows the type of warning/alarm.

0 = The torque reference was not reached before timeout (*parameter 2-27 Torque Ramp Up Time*).

1 = Expected brake feedback was not received before timeout (*parameter 2-23 Activate Brake Delay, parameter 2-25 Brake Release Time*).

8.4.20 WARNING 23, Internal Fan Fault

Cause

The fan warning function is a protective function that checks if the fan is running/mounted. The fan warning can be disabled in *parameter 14-53 Fan Monitor* ([0] Disabled).

For drives with DC fans, a feedback sensor is mounted in the fan. If the fan is commanded to run and there is no feedback from the sensor, this alarm appears. For drives with AC fans, the voltage to the fan is monitored.

Troubleshooting

- Check for proper fan operation.
- Cycle power to the drive and check that the fan operates briefly at start-up.
- Check the sensors on the control card.

8.4.21 WARNING 24, External Fan Fault**Cause**

The fan warning function is a protective function that checks if the fan is running/mounted. The fan warning can be disabled in *parameter 14-53 Fan Monitor ([0] Disabled)*.

For drives with DC fans, a feedback sensor is mounted in the fan. If the fan is commanded to run and there is no feedback from the sensor, this warning appears. For drives with AC fans, the voltage to the fan is monitored.

Troubleshooting

- Check for proper fan operation.
- Cycle power to the drive and check that the fan operates briefly at start-up.
- Check the sensors on the heat sink.

8.4.22 WARNING 25, Brake Resistor Short Circuit**Cause**

The brake resistor is monitored during operation. If a short circuit occurs, the brake function is disabled and the warning appears. The drive is still operational, but without the brake function.

Troubleshooting

- Remove the power to the drive and replace the brake resistor (refer to *parameter 2-15 Brake Check*).

8.4.23 WARNING/ALARM 26, Brake Resistor Power Limit**Cause**

The power transmitted to the brake resistor is calculated as a mean value over the last 120 s of run time. The calculation is based on the DC-link voltage and the brake resistor value set in *parameter 2-16 AC Brake Max. Current*. The warning is active when the dissipated braking power is higher than 90% of the brake resistor power. If option [2] Trip is selected in *parameter 2-13 Brake Power Monitoring*, the drive trips when the dissipated braking power reaches 100%.

8.4.24 WARNING/ALARM 27, Brake Chopper Fault**Cause**

The brake transistor is monitored during operation, and if a short circuit occurs, the brake function is disabled, and a warning is issued. The drive is still operational, but since the brake transistor has short-circuited, substantial power is transmitted to the brake resistor, even if it is inactive.

Troubleshooting

- Remove the power to the drive and remove the brake resistor.

8.4.25 WARNING/ALARM 28, Brake Check Failed**Cause**

The brake resistor is not connected or not working.

Troubleshooting

- Check *parameter 2-15 Brake Check*.

8.4.26 ALARM 29, Heat Sink Temp**Cause**

The maximum temperature of the heat sink is exceeded. The temperature fault is not reset until the temperature drops below a defined heat sink temperature. The trip and reset points are different based on the drive power size.

Troubleshooting

- The ambient temperature is too high.
- The motor cables are too long.
- Incorrect airflow clearance above and below the drive.
- Blocked airflow around the drive.
- Damaged heat sink fan.
- Dirty heat sink.

8.4.27 ALARM 30, Motor Phase U Missing**Cause**

Motor phase U between the drive and the motor is missing.

Troubleshooting**⚠ WARNING ⚠****HIGH VOLTAGE**

AC drives contain high voltage when connected to AC mains input, DC supply, or load sharing. Failure to perform installation, start-up, and maintenance by qualified personnel can result in death or serious injury.

- Only qualified personnel must perform installation, start-up, and maintenance.

- Disconnect power before proceeding.
- Remove the power from the drive and check motor phase U.

8.4.28 ALARM 31, Motor Phase V Missing

Cause

Motor phase V between the drive and the motor is missing.

Troubleshooting

⚠ WARNING ⚠

HIGH VOLTAGE

AC drives contain high voltage when connected to AC mains input, DC supply, or load sharing. Failure to perform installation, start-up, and maintenance by qualified personnel can result in death or serious injury.

- Only qualified personnel must perform installation, start-up, and maintenance.

- Disconnect power before proceeding.
- Remove the power from the drive and check motor phase V.

8.4.29 ALARM 32, Motor Phase W Missing

Cause

Motor phase W between the drive and the motor is missing.

Troubleshooting

⚠ WARNING ⚠

HIGH VOLTAGE

AC drives contain high voltage when connected to AC mains input, DC supply, or load sharing. Failure to perform installation, start-up, and maintenance by qualified personnel can result in death or serious injury.

- Only qualified personnel must perform installation, start-up, and maintenance.

- Disconnect power before proceeding.
- Remove the power from the drive and check motor phase W.

8.4.30 ALARM 33, Inrush Fault

Cause

Too many power-ups have occurred within a short time period.

Troubleshooting

- Let the unit cool to operating temperature.
- Check potential DC-link fault to ground.

8.4.31 WARNING/ALARM 34, Fieldbus Communication Fault

Cause

The fieldbus on the communication option card is not working.

8.4.32 WARNING/ALARM 35, Option Fault

Cause

An option alarm is received. The alarm is option-specific. The most likely cause is a power-up or a communication fault.

8.4.33 WARNING/ALARM 36, Mains Failure

Cause

This warning/alarm is only active if the supply voltage to the drive is lost and *parameter 14-10 Mains Failure* is not set to [0] No Function.

Troubleshooting

- Check the fuses to the drive and mains supply to the unit.

8.4.34 ALARM 37, Phase Imbalance

Cause

There is a current imbalance between the power units.

8.4.35 ALARM 38, Internal Fault

Cause

When an internal fault occurs, a code number defined in [table 43](#) is shown.

Troubleshooting

- Cycle power.
- Check that the option is properly installed.
- Check for loose or missing wiring.

It may be necessary to contact the Danfoss supplier or service department. Note the code number for further troubleshooting directions.

Table 43: Internal Fault Codes

| Number | Text |
|---------|--|
| 0 | The serial port cannot be initialized. Contact the Danfoss supplier or Danfoss service department. |
| 256-258 | The power EEPROM data is defective or too old. Replace the power card. |
| 512-519 | Internal fault. Contact the Danfoss supplier or Danfoss service department. |
| 783 | Parameter value outside of minimum/maximum limits. |

| Number | Text |
|-----------|---|
| 1024-1284 | Internal fault. Contact the Danfoss supplier or Danfoss service department. |
| 1299 | The option software in slot A is too old. |
| 1300 | The option software in slot B is too old. |
| 1302 | The option software in slot C1 is too old. |
| 1315 | The option software in slot A is not supported/allowed. |
| 1316 | The option software in slot B is not supported/ allowed. |
| 1318 | The option software in slot C1 is not supported/ allowed. |
| 1379-2819 | Internal fault. Contact the Danfoss supplier or Danfoss service department. |
| 1792 | Hardware reset of digital signal processor. |
| 1793 | Motor-derived parameters not transferred correctly to the digital signal processor. |
| 1794 | Power data not transferred correctly at power-up to the digital signal processor. |
| 1795 | The digital signal processor has received too many unknown SPI telegrams. The AC drive also uses this fault code if the MCO does not power up correctly. This situation can occur due to poor EMC protection or improper grounding. |
| 1796 | RAM copy error. |
| 2561 | Replace the control card. |
| 2820 | LCP stack overflow. |
| 2821 | Serial port overflow. |
| 2822 | USB port overflow. |
| 3072-5122 | Parameter value is outside its limits. |
| 5123 | Option in slot A: Hardware incompatible with the control board hardware. |
| 5124 | Option in slot B: Hardware incompatible with the control board hardware. |
| 5125 | Option in slot C0: Hardware incompatible with the control board hardware. |
| 5126 | Option in slot C1: Hardware incompatible with the control board hardware. |
| 5376-6231 | Internal fault. Contact the Danfoss supplier or Danfoss service department. |

8.4.36 ALARM 39, Heat Sink Sensor

Cause

No feedback from the heat sink temperature sensor.

The signal from the IGBT thermal sensor is not available on the power card. The problem could be on the power card, on the gatedrive card, or on the ribboncable between the power card and the gatedrive card.

8.4.37 WARNING 40, Overload of Digital Output Terminal 27

Troubleshooting

- Check the load connected to terminal 27 or remove the short-circuit connection.
- Check *parameter 5-00 Digital I/O Mode* and *parameter 5-01 Terminal 27 Mode*.

8.4.38 WARNING 41, Overload of Digital Output Terminal 29

Troubleshooting

- Check the load connected to terminal 29 or remove the short-circuit connection.
- Check *parameter 5-00 Digital I/O Mode* and *parameter 5-02 Terminal 29 Mode*.

8.4.39 WARNING 42, Ovrlid X30/6-7

Troubleshooting

For terminal X30/6:

- Check the load connected to the terminal, or remove the short-circuit connection.
- Check *parameter 5-32 Term X30/6 Digi out (MCB 101)* (VLT® General Purpose I/O MCB 101).

For terminal X30/7:

- Check the load connected to the terminal, or remove the short-circuit connection.
- Check *parameter 5-33 Term X30/7 Digi Out (MCB 101)* (VLT® General Purpose I/O MCB 101).

8.4.40 ALARM 43, Ext. Supply

Either connect a 24 V DC external supply or specify that no external supply is used via *parameter 14-80 Option Supplied by External 24VDC, [0] No*. A change in *parameter 14-80 Option Supplied by External 24VDC* requires a power cycle.

Cause

VLT® Extended Relay Option MCB 113 is mounted without 24 V DC.

Troubleshooting

Choose 1 of the following:

- Connect a 24 V DC external supply.
- Specify that no external supply is used via *parameter 14-80 Option Supplied by External 24VDC, [0] No*. A change in *parameter 14-80 Option Supplied by External 24VDC* requires a power cycle.

8.4.41 ALARM 45, Earth Fault 2

Cause

Ground fault.

Troubleshooting

- Check for proper grounding and loose connections.
- Check for proper wire size.
- Check the motor cables for short circuits or leakage currents.

8.4.42 ALARM 46, Power Card Supply

Cause

The supply on the power card is out of range. Another reason can be a defective heat sink fan.

There are 3 supplies generated by the switch mode supply (SMPS) on the power card:

- 24 V.
- 5 V.
- ± 18 V.

When powered with VLT® 24 V DC Supply MCB 107, only 24 V and 5 V supplies are monitored. When powered with 3-phase mains voltage, all 3 supplies are monitored.

Troubleshooting

- Check for a defective power card.
- Check for a defective control card.
- Check for a defective option card.
- If a 24 V DC supply is used, verify proper supply power.
- Check for a defective heat sink fan.

8.4.43 WARNING 47, 24 V Supply Low

Cause

The supply on the power card is out of range.

There are 3 supplies generated by the switch mode supply (SMPS) on the power card:

- 24 V
- 5 V
- ± 18 V

Troubleshooting

- Check for a defective power card.

8.4.44 WARNING 48, 1.8 V Supply Low

Cause

The 1.8 V DC supply used on the control card is outside of the allowed limits. The supply is measured on the control card.

Troubleshooting

- Check for a defective control card.
- If an option card is present, check for overvoltage.

8.4.45 WARNING 49, Speed Limit

Cause

The warning is shown when the speed outside of the specified range in *parameter 4-11 Motor Speed Low Limit [RPM]* and *parameter 4-13 Motor Speed High Limit [RPM]*. When the speed is below the specified limit in *parameter 1-86 Trip Speed Low [RPM]* (except when starting or stopping), the drive trips.

8.4.46 ALARM 50, AMA Calibration Failed

Troubleshooting

- Contact the Danfoss supplier or service department.

8.4.47 ALARM 51, AMA Check Unom and Inom

Cause

The settings for motor voltage, motor current, and motor power are wrong.

Troubleshooting

- Check settings in *parameters 1-20 to 1-25*.

8.4.48 ALARM 52, AMA Low Inom

Cause

The motor current is too low.

Troubleshooting

- Check the settings in *parameter 1-24 Motor Current*.

8.4.49 ALARM 53, AMA Motor Too Big

Cause

The motor is too big for the AMA to operate.

8.4.50 ALARM 54, AMA Motor Too Small

Cause

The motor is too small for the AMA to operate.

8.4.51 ALARM 55, AMA Parameter Out of Range

Cause

The AMA cannot run because the parameter values of the motor are out of the acceptable range.

8.4.52 ALARM 56, AMA Interrupted by User

Cause

The AMA is manually interrupted.

8.4.53 ALARM 57, AMA Internal Fault

Cause

Try to restart the AMA. Repeated restarts can overheat the motor.

8.4.54 ALARM 58, AMA Internal Fault

Troubleshooting

Contact the Danfoss supplier.

8.4.55 WARNING 59, Current Limit

Cause

The current is higher than the value in *parameter 4-18 Current Limit*.

Troubleshooting

- Ensure that the motor data in *parameters 1-20 to 1-25* is set correctly.
- Increase the current limit if necessary. Ensure that the system can operate safely at a higher limit.

8.4.56 WARNING 60, External Interlock

Cause

A digital input signal indicates a fault condition external to the drive. An external interlock has commanded the drive to trip.

Troubleshooting

- Clear the external fault condition.
- To resume normal operation, apply 24 V DC to the terminal programmed for external interlock.
- Reset the drive.

8.4.57 WARNING/ALARM 61, Feedback Error

Cause

An error between calculated speed and speed measurement from feedback device.

Troubleshooting

- Check the settings for warning/alarm/disabling in *parameter 4-30 Motor Feedback Loss Function*.
- Set the tolerable error in *parameter 4-31 Motor Feedback Speed Error*.
- Set the tolerable feedback loss time in *parameter 4-32 Motor Feedback Loss Timeout*.

8.4.58 WARNING 62, Output Frequency at Maximum Limit**Cause**

The output frequency has reached the value set in *parameter 4-19 Max Output Frequency*.

Troubleshooting

- Check the application for possible causes.
- Increase the output frequency limit. Be sure that the system can operate safely at a higher output frequency.

The warning clears when the output drops below the maximum limit.

8.4.59 ALARM 63, Mechanical Brake Low**Cause**

The actual motor current has not exceeded the release brake current within the start delay time window.

8.4.60 WARNING 64, Voltage Limit**Cause**

The load and speed combination demands a motor voltage higher than the actual DC-link voltage.

8.4.61 WARNING/ALARM 65, Control Card Overtemperature**Cause**

The cutout temperature of the control card has exceeded the upper limit.

Troubleshooting

- Check that the ambient operating temperature is within the limits.
- Check for clogged filters.
- Check the fan operation.
- Check the control card.

8.4.62 WARNING 66, Heat Sink Temperature Low**Cause**

The drive is too cold to operate. This warning is based on the temperature sensor in the IGBT module.

Troubleshooting

- Increase the ambient temperature of the unit.
- Supply a trickle amount of current to the drive whenever the motor is stopped by setting *parameter 2-00 DC Hold/Preheat Current* to 5% and *parameter 1-80 Function at Stop*.

8.4.63 ALARM 67, Option Module Configuration has Changed

Cause

One or more options have either been added or removed since the last power-down.

Troubleshooting

- Check that the configuration change is intentional and reset the unit.

8.4.64 ALARM 68, Safe Stop Activated

Cause

Safe Torque Off (STO) has been activated.

Troubleshooting

- To resume normal operation, apply 24 V DC to terminal 37, then send a reset signal (via bus, digital, or by pressing [Reset]).

8.4.65 ALARM 69, Power Card Temperature

Cause

The temperature sensor on the power card is either too hot or too cold.

Troubleshooting

- Check that the ambient operating temperature is within the limits.
- Check for clogged filters.
- Check fan operation.
- Check the power card.

8.4.66 ALARM 70, Illegal FC Configuration

Cause

The control card and power card are incompatible.

Troubleshooting

- To check compatibility, contact the Danfoss supplier with the type code from the unit nameplate and the part numbers on the cards.

8.4.67 ALARM 71, PTC 1 Safe Stop

Cause

Because the motor is too warm, the VLT® PTC Thermistor Card MCB 112 activated the Safe Torque Off (STO).

Troubleshooting

- Once the motor temperature reaches an acceptable level and the digital input from MCB 112 is deactivated, perform 1 of the following:
 - Send a reset signal via bus or digital I/O.
 - Press [Reset].

8.4.68 ALARM 72, Dangerous Failure

Cause

Safe Torque Off (STO) with trip lock.

Troubleshooting

An unexpected combination of STO commands has occurred:

- VLT® PTC Thermistor Card MCB 112 enables X44/10, but STO is not enabled.
- MCB 112 is the only device using STO (specified through selection [4] PTC 1 alarm or [5] PTC 12 warning in parameter 5-19 Terminal 37 Safe Stop). STO is activated, but X44/10 is not activated.

8.4.69 WARNING 73, Safe Stop Auto Restart

Cause

STO activated.

Troubleshooting

- With automatic restart enabled, the motor can start when the fault is cleared.

8.4.70 ALARM 74, PTC Thermistor

Cause

The PTC is not working. Alarm is related to VLT® PTC Thermistor Card MCB 112.

8.4.71 ALARM 75, Illegal Profile Sel.

Cause

Do not write the parameter value while the motor is running.

Troubleshooting

- Stop the motor before writing the MCO profile to *parameter 8-10 Control Word Profile*.

8.4.72 Warning 76, Power Unit Setup

Cause

The required number of power units do not match the detected number of active power units.

Troubleshooting

- When replacing an F-frame module, this will occur if the power specific data in the module power card does not match the rest of the drive. Confirm the spare part and its power card are the correct part number.

8.4.73 WARNING 77, Reduced Power Mode

Cause

The drive is operating in reduced power mode (less than allowed number of inverter sections). The warning is generated on power cycle when the drive is set to run with fewer inverters and remains on.

8.4.74 ALARM 78, Tracking Error

Cause

The difference between setpoint value and actual value exceeds the value in *parameter 4-35 Tracking Error*.

Troubleshooting

- Disable the function or select an alarm/warning in *parameter 4-34 Tracking Error Function*.
- Investigate the mechanics around the load and motor. Check feedback connections from motor encoder to drive.
- Select motor feedback function in *parameter 4-30 Motor Feedback Loss Function*.
- Adjust the tracking error band in *parameter 4-35 Tracking Error* and *parameter 4-37 Tracking Error Ramping*.

8.4.75 ALARM 79, Illegal Power Section Configuration

Cause

The scaling card has an incorrect part number or is not installed. The MK102 connector on the power card could not be installed.

8.4.76 ALARM 80, Drive Initialized to Default Value

Cause

Parameter settings are initialized to default settings after a manual reset. To clear the alarm, reset the unit.

8.4.77 ALARM 81, CSIV Corrupt

Cause

The CSIV file has syntax errors.

8.4.78 ALARM 82, CSIV Parameter Error

Cause

CSIV failed to initialize a parameter.

8.4.79 ALARM 83, Illegal Option Combination

Cause

The mounted options are incompatible.

8.4.80 ALARM 84, No Safety Option

Cause

The safety option was removed without applying a general reset.

Troubleshooting

Reconnect the safety option.

8.4.81 ALARM 85, Dang Fail PB

Cause

PROFIBUS/PROFIsafe error.

8.4.82 ALARM 88, Option Detection

Cause

A change in the option layout is detected. *Parameter 14-89 Option Detection* is set to [0] Frozen configuration and the option layout has been changed.

Troubleshooting

- To apply the change, enable option layout changes in *parameter 14-89 Option Detection*.
- Alternatively, restore the correct option configuration.

8.4.83 WARNING 89, Mechanical Brake Sliding

Cause

The hoist brake monitor detects a motor speed exceeding 10 RPM.

8.4.84 ALARM 90, Feedback Monitor

Troubleshooting

- Check the connection to the encoder/resolver option and, if necessary, replace the VLT® Encoder Input MCB 102 or VLT® Resolver Input MCB 103.

8.4.85 ALARM 91, Analog Input 54 Wrong Settings

Troubleshooting

- Set switch S202 in position OFF (voltage input) when a KTY sensor is connected to analog input terminal 54.

8.4.86 ALARM 99, Locked Rotor

Cause

The rotor is blocked.

Troubleshooting

- Check if the motor shaft is locked.
- Check if the start current triggers the current limit set in *parameter 4-18 Current Limit*.
- Check if it increases the value in *parameter 30-23 Locked Rotor Detection Time [s]*.

8.4.87 WARNING/ALARM 104, Mixing Fan Fault

Cause

The fan is not operating. The fan monitor checks that the fan is spinning at power-up or whenever the mixing fan is turned on. The mixing fan fault can be configured as a warning or an alarm in *parameter 14-53 Fan Monitor*.

Troubleshooting

- Cycle power to the drive to determine if the warning/alarm returns.

8.4.88 WARNING/ALARM 122, Mot. Rotat. Unexp.

Cause

The drive performs a function that requires the motor to be at standstill, for example DC hold for PM motors.

8.4.89 WARNING 163, ATEX ETR Cur.Lim.Warning

Cause

The drive has run above the characteristic curve for more than 50 s. The warning is activated at 83% and deactivated at 85% of the allowed thermal overload.

8.4.90 ALARM 164, ATEX ETR Cur.Lim.Alarm

Cause

Running above the characteristic curve for more than 60 s within a period of 600 s activates the alarm, and the drive trips.

8.4.91 WARNING 165, ATEX ETR Freq.Lim.Warning

Cause

The drive has run for more than 50 s below the allowed minimum frequency (*parameter 1-98 ATEX ETR Interpol. Points Freq.*).

8.4.92 ALARM 166, ATEX ETR Freq.Lim.Alarm

The drive has run for more than 60 s (in a period of 600 s) below the allowed minimum frequency (*parameter 1-98 ATEX ETR Interpol. Points Freq.*).

8.4.93 ALARM 244, Heat Sink Temperature

Cause

The maximum temperature of the heat sink has been exceeded. The temperature fault cannot reset until the temperature drops below the defined heat sink temperature. The trip and reset points are different based on the power size. This alarm is equivalent to *Alarm 29, Heat Sink Temp.*

Troubleshooting

Check for the following:

- Ambient temperature too high.
- Motor cables too long.
- Incorrect airflow clearance above or below the AC drive.
- Blocked airflow around the unit.
- Damaged heat sink fan.
- Dirty heat sink.

8.4.94 WARNING 251, New Typecode

Cause

The power card or other components have been replaced, and the typecode has changed.

8.4.95 ALARM 421, Temperature Fault

Cause

A fault caused by the on-board temperature sensor is detected on the fan power card.

Troubleshooting

- Check wiring.
- Check the on-board temperature sensor.
- Replace fan power card.

8.4.96 ALARM 423, FPC Updating**Cause**

The alarm is generated when the fan power card reports it has an invalid PUD. The control card attempts to update the PUD. A subsequent alarm can result depending on the update. See *Alarm 424, FPC Update Successful* and *Alarm 425 FPC Update Failure*.

8.4.97 ALARM 424, FPC Update Successful**Cause**

This alarm is generated when the control card has successfully updated the fan power card PUD.

Troubleshooting

- Press [Reset] to stop the alarm.

8.4.98 ALARM 425, FPC Update Failure**Cause**

This alarm is generated after the control card failed to update the fan power card PUD.

Troubleshooting

- Check the fan power card wiring.
- Replace fan power card.
- Contact supplier.

8.4.99 ALARM 426, FPC Config**Cause**

The number of found fan power cards does not match the number of configured fan power cards. See *parameter group 15-6* Option Ident* for the number of configured fan power cards.

Troubleshooting

- Check fan power card wiring.
- Replace fan power card.

8.4.100 ALARM 427, FPC Supply

Cause

Supply voltage fault (5 V, 24 V, or 48 V) on fan power card is detected.

Troubleshooting

- Check fan power card wiring.
- Replace fan power card.

8.5 Troubleshooting

Table 44: Troubleshooting

| Symptom | Possible cause | Test | Solution |
|--------------------------|---|---|---|
| Display dark/No function | Missing input power. | Check for loose connections. | Check the input power source. |
| | Missing or open fuses. | See <i>Open power fuses</i> in this table for possible causes. | Follow the recommendations provided. |
| | No power to the LCP. | Check the LCP cable for proper connection or damage. | Replace the faulty LCP or connection cable. |
| | Short circuit on control voltage (terminal 12 or 50) or at control terminals. | Check the 24 V control voltage supply for terminal 12/13 to 20–39, or 10 V supply for terminals 50–55. | Wire the terminals properly. |
| | Incompatible LCP (LCP from VLT® 2800 or 5000/6000/8000/FCD or FCM). | – | Use only LCP 101 (P/N 130B1124) or LCP 102 (P/N. 130B1107). |
| | Wrong contrast setting. | – | To adjust the contrast, press [Status] + [▲]/[▼]. |
| | Display (LCP) is defective. | Test using a different LCP. | Replace the faulty LCP or connection cable. |
| | Internal voltage supply fault or SMPS is defective. | – | Contact supplier. |
| Intermittent display | Overloaded supply (SMPS) due to improper control wiring or a fault within the AC drive. | To rule out a problem in the control wiring, disconnect all control wiring by removing the terminal blocks. | If the display stays lit, the problem is in the control wiring. Check the wiring for shorts or incorrect connections. If the display continues to cut out, follow the procedure for <i>Display dark\No function</i> . |

| Symptom | Possible cause | Test | Solution |
|-------------------------------------|--|---|--|
| Motor not running | Service switch open or missing motor connection. | – | Connect the motor and check the service switch. |
| | No mains power with 24 V DC option card. | – | Apply mains power. |
| | LCP stop. | – | Depending on the operating mode, press [Auto On] or [Hand On]. |
| | Missing start signal (Standby). | – | Apply a valid start signal. |
| | Motor coast signal active (Coasting). | – | Apply 24 V on terminal 27 or program this terminal to [0] <i>No operation</i> . |
| | Wrong reference signal source. | Check reference signal: <ul style="list-style-type: none"> • Local • Remote or bus reference? • Preset reference active? • Terminal connection correct? • Scaling of terminals correct? • Reference signal available? | Program correct settings. Check <i>parameter 3-13 Reference Site</i> . Set preset reference active in <i>parameter group 3-1* References</i> . Check for correct wiring. Check scaling of terminals. Check reference signal. |
| Motor running in wrong direction | Motor rotation limit. | Check that <i>parameter 4-10 Motor Speed Direction</i> is programmed correctly. | Program correct settings. |
| | Active reversing signal. | Check if a reversing command is programmed for the terminal in <i>parameter group 5-1* Digital inputs</i> . | Deactivate reversing signal. |
| | Wrong motor phase connection. | – | Correct motor phase connection, or set <i>parameter 1-06 Clockwise Direction</i> to [1] <i>Inverse</i> . |
| Motor is not reaching maximum speed | Frequency limits set wrong. | Check output limits in <i>parameter 4-13 Motor Speed High Limit [RPM]</i> , <i>parameter 4-14 Motor Speed High Limit [Hz]</i> , and <i>parameter 4-19 Max Output Frequency</i> . | Program correct limits. |
| | Reference input signal not scaled correctly. | Check reference input signal scaling in <i>parameter group 6-0* Analog I/O mode</i> and <i>parameter group 3-1* References</i> . | Program correct settings. |
| Motor speed unstable | Possible incorrect parameter settings. | Check the settings of all motor parameters, including all motor compensation settings. For closed-loop operation, check PID settings. | Check settings in <i>parameter group 1-6* Load Depen. Setting</i> . For closed-loop operation, check settings in <i>parameter group 20-0* Feedback</i> . |
| Motor runs rough | Possible overmagnetization. | Check for incorrect motor settings in all motor parameters. | Check motor settings in <i>parameter groups 1-2* Motor data</i> , <i>1-3* Adv Motor Data</i> , and <i>1-5* Load Indep. Setting</i> . |
| Motor does not brake | Possible incorrect settings in the brake parameters. Ramp-down times may be too short. | Check brake parameters. Check ramp time settings. | Check <i>parameter groups 2-0* DC Brake</i> and <i>3-0* Reference Limits</i> . |

| Symptom | Possible cause | Test | Solution |
|---|--|--|--|
| Open power fuses | Phase-to-phase short. | Motor or panel has a short phase-to-phase. Check motor and panel phases for shorts. | Eliminate any shorts detected. |
| | Motor overload. | Motor is overloaded for the application. | Perform start-up test and verify that motor current is within specifications. If motor current is exceeding the name-plate full load current, the motor can run only with reduced load. Review the specifications for the application. |
| | Loose connections. | Perform pre-start-up check for loose connections. | Tighten loose connections. |
| Mains current imbalance greater than 3% | Problem with mains power (see <i>Alarm 4, Mains phase loss</i> description). | Rotate input power leads into the 1 position: A to B, B to C, C to A. | If imbalanced leg follows the wire, it is a power problem. Check the mains supply. |
| | Problem with the AC drive. | Rotate input power leads into the AC drive 1 position: A to B, B to C, C to A. | If the imbalanced leg stays on same input terminal, it is a problem with the AC drive. Contact the supplier. |
| Motor current imbalance greater than 3% | Problem with motor or motor wiring. | Rotate output motor cables 1 position: U to V, V to W, W to U. | If the imbalanced leg follows the wire, the problem is in the motor or motor wiring. Check motor and motor wiring. |
| | Problem with AC drive. | Rotate output motor cables 1 position: U to V, V to W, W to U. | If the imbalanced leg stays on same output terminal, it is a problem with the unit. Contact the supplier. |
| AC drive acceleration problems | Motor data are entered incorrectly. | If warnings or alarms occur, refer to the <i>Warnings and Alarms</i> section. Check that motor data are entered correctly. | Increase the ramp-up time in <i>parameter 3-41 Ramp 1 Ramp Up Time</i> . Increase current limit in <i>parameter 4-18 Current Limit</i> . Increase torque limit in <i>parameter 4-16 Torque Limit Motor Mode</i> . |
| AC drive deceleration problems | Motor data are entered incorrectly. | If warnings or alarms occur, refer to the <i>Warnings and Alarms</i> section. Check that motor data are entered correctly. | Increase the ramp-down time in <i>parameter 3-42 Ramp 1 Ramp Down Time</i> . Enable overvoltage control in <i>parameter 2-17 Over-voltage Control</i> . |

9 Specifications

9.1 Electrical Data

9.1.1 Electrical Data, 380–480 V AC

Table 45: Electrical Data, Mains Supply 3x380–480 V AC

| FC 202 | N355 | | N400 | | N450 | |
|--|-------------------|------|-------------------|------|-------------------|------|
| High/normal overload High overload=150% or 160% torque for a duration of 60 s. Normal overload=110% torque for a duration of 60 s. | HO | NO | HO | NO | HO | NO |
| Typical shaft output at 400 V [kW] | 315 | 355 | 355 | 400 | 400 | 450 |
| Typical shaft output at 460 V [hp] | 450 | 500 | 500 | 550 | 550 | 600 |
| Typical shaft output at 500 V [kW] | 355 | 400 | 400 | 500 | 500 | 530 |
| Enclosure size | E1h/E3h | | E1h/E3h | | E1h/E3h | |
| Output current (3-phase) | | | | | | |
| Continuous (at 400 V) [A] | 600 | 658 | 658 | 745 | 695 | 800 |
| Intermittent (60 s overload) (at 400 V) [A] | 900 | 724 | 987 | 820 | 1043 | 880 |
| Continuous (at 460/480 V) [A] | 540 | 590 | 590 | 678 | 678 | 730 |
| Intermittent (60 s overload) (at 460/480 V) [A] | 810 | 649 | 885 | 746 | 1017 | 803 |
| Continuous kVA (at 400 V) [kVA] | 416 | 456 | 456 | 516 | 482 | 554 |
| Continuous kVA (at 460 V) [kVA] | 430 | 470 | 470 | 540 | 540 | 582 |
| Continuous kVA (at 480 V) [kVA] | 449 | 491 | 491 | 564 | 564 | 607 |
| Maximum input current | | | | | | |
| Continuous (at 400 V) [A] | 578 | 634 | 634 | 718 | 670 | 771 |
| Continuous (at 460/480 V) [A] | 520 | 569 | 569 | 653 | 653 | 704 |
| Maximum number and size of cables per phase (E1h) | | | | | | |
| - Mains and motor without brake [mm ² (AWG)] | 5x240 (5x500 mcm) | | 5x240 (5x500 mcm) | | 5x240 (5x500 mcm) | |
| - Mains and motor with brake [mm ² (AWG)] | 4x240 (4x500 mcm) | | 4x240 (4x500 mcm) | | 4x240 (4x500 mcm) | |
| - Brake or regen [mm ² (AWG)] | 2x185 (2x350 mcm) | | 2x185 (2x350 mcm) | | 2x185 (2x350 mcm) | |
| Maximum number and size of cables per phase (E3h) | | | | | | |
| - Mains and motor [mm ² (AWG)] | 6x240 (6x500 mcm) | | 6x240 (6x500 mcm) | | 6x240 (6x500 mcm) | |
| - Brake [mm ² (AWG)] | 2x185 (2x350 mcm) | | 2x185 (2x350 mcm) | | 2x185 (2x350 mcm) | |
| - Load share or regen [mm ² (AWG)] | 4x185 (4x350 mcm) | | 4x185 (4x350 mcm) | | 4x185 (4x350 mcm) | |
| Maximum external mains fuses [A] ⁽¹⁾ | 800 | | 800 | | 800 | |
| Estimated power loss at 400 V [W] ^{(2) (3)} | 6178 | 6928 | 6851 | 8036 | 7297 | 8783 |
| Estimated power loss at 460 V [W] ^{(2) (3)} | 5322 | 5910 | 5846 | 6933 | 7240 | 7969 |

| FC 202 | N355 | N400 | N450 |
|--|-----------|-----------|-----------|
| Efficiency ⁽³⁾ | 0.98 | 0.98 | 0.98 |
| Output frequency [Hz] | 0–590 | 0–590 | 0–590 |
| Heat sink overtemperature trip [°C (°F)] | 110 (230) | 110 (230) | 110 (230) |
| Control card overtemperature trip [°C (°F)] | 80 (176) | 80 (176) | 80 (176) |
| Power card overtemperature trip [°C (°F)] | 85 (185) | 85 (185) | 85 (185) |
| Fan power card overtemperature trip [°C (°F)] | 85 (185) | 85 (185) | 85 (185) |
| Active in-rush card overtemperature trip [°C (°F)] | 85 (185) | 85 (185) | 85 (185) |

¹ For fuse ratings, see [9.7 Fuses](#).

² Typical power loss is at normal conditions and expected to be within $\pm 15\%$ (tolerance relates to variety in voltage and cable conditions.) These values are based on a typical motor efficiency (IE/IE3 border line). Lower efficiency motors add to the power loss in the drive. Applies for dimensioning of drive cooling. If the switching frequency is higher than the default setting, the power losses can increase. LCP and typical control card power consumptions are included. For power loss data according to EN 50598-2, refer to www.danfoss.com/vltenergyefficiency. Options and customer load can add up to 30 W to the losses, though usually a fully loaded control card and options for slots A and B each add only 4 W.

³ Measured using 5 m (16.4 ft) shielded motor cables at rated load and rated frequency. Efficiency measured at nominal current. For energy efficiency class, see [9.4 Ambient Conditions](#). For part load losses, see www.danfoss.com/vltenergyefficiency.

Table 46: Electrical Data, Mains Supply 3x380–480 V AC

| FC 202 | N500 | | N560 | |
|--|-------------------|-----|-------------------|------|
| | HO | NO | HO | NO |
| High/normal overload High overload=150% or 160% torque for a duration of 60 s. Normal overload=110% torque for a duration of 60 s. | | | | |
| Typical shaft output at 400 V [kW] | 450 | 500 | 500 | 560 |
| Typical shaft output at 460 V [hp] | 600 | 650 | 650 | 750 |
| Typical shaft output at 480 V [kW] | 530 | 560 | 560 | 630 |
| Enclosure size | E2h/E4h | | E2h/E4h | |
| Output current (3-phase) | | | | |
| Continuous (at 400 V) [A] | 800 | 880 | 880 | 990 |
| Intermittent (60 s overload) (at 400 V) [A] | 1200 | 968 | 1320 | 1089 |
| Continuous (at 460/480 V) [A] | 730 | 780 | 780 | 890 |
| Intermittent (60 s overload) (at 460/480 V) [A] | 1095 | 858 | 1170 | 979 |
| Continuous kVA (at 400 V) [kVA] | 554 | 610 | 610 | 686 |
| Continuous kVA (at 460 V) [kVA] | 582 | 621 | 621 | 709 |
| Continuous kVA (at 480 V) [kVA] | 607 | 648 | 648 | 740 |
| Maximum input current | | | | |
| Continuous (at 400 V) [A] | 771 | 848 | 848 | 954 |
| Continuous (at 460/480 V) [A] | 704 | 752 | 752 | 858 |
| Maximum number and size of cables per phase (E2h) | | | | |
| - Mains and motor without brake [mm ² (AWG)] | 6x240 (6x500 mcm) | | 6x240 (6x500 mcm) | |
| - Mains and motor with brake [mm ² (AWG)] | 5x240 (4x500 mcm) | | 5x240 (4x500 mcm) | |

| FC 202 | N500 | | N560 | |
|--|-------------------|------|-------------------|-------|
| - Brake or regen [mm ² (AWG)] | 2x185 (2x350 mcm) | | 2x185 (2x350 mcm) | |
| Maximum number and size of cables per phase (E4h) | | | | |
| - Mains and motor [mm ² (AWG)] | 6x240 (6x500 mcm) | | 6x240 (6x500 mcm) | |
| - Brake [mm ² (AWG)] | 2x185 (2x350 mcm) | | 2x185 (2x350 mcm) | |
| - Load share or regen [mm ² (AWG)] | 4x185 (4x350 mcm) | | 4x185 (4x350 mcm) | |
| Maximum external mains fuses [A] ⁽¹⁾ | 1200 | | 1200 | |
| Estimated power loss at 400 V [W] ^{(2) (3)} | 8352 | 9473 | 9449 | 11102 |
| Estimated power loss at 460 V [W] ^{(2) (3)} | 7182 | 7809 | 7771 | 9236 |
| Efficiency ⁽³⁾ | 0.98 | | 0.98 | |
| Output frequency [Hz] | 0–590 | | 0–590 | |
| Heat sink overtemperature trip [°C (°F)] | 110 (230) | | 100 (212) | |
| Control card overtemperature trip [°C (°F)] | 80 (176) | | 80 (176) | |
| Power card overtemperature trip [°C (°F)] | 85 (185) | | 85 (185) | |
| Fan power card overtemperature trip [°C (°F)] | 85 (185) | | 85 (185) | |
| Active in-rush card overtemperature trip [°C (°F)] | 85 (185) | | 85 (185) | |

¹ For fuse ratings, see [9.7 Fuses](#).

² Typical power loss is at normal conditions and expected to be within ±15% (tolerance relates to variety in voltage and cable conditions.) These values are based on a typical motor efficiency (IE/IE3 border line). Lower efficiency motors add to the power loss in the drive. Applies for dimensioning of drive cooling. If the switching frequency is higher than the default setting, the power losses can increase. LCP and typical control card power consumptions are included. For power loss data according to EN 50598-2, refer to www.danfoss.com/vltenergyefficiency. Options and customer load can add up to 30 W to the losses, though usually a fully loaded control card and options for slots A and B each add only 4 W.

³ Measured using 5 m (16.4 ft) shielded motor cables at rated load and rated frequency. Efficiency measured at nominal current. For energy efficiency class, see [9.4 Ambient Conditions](#). For part load losses, see www.danfoss.com/vltenergyefficiency.

9.1.2 Electrical Data, 525–690 V AC

Table 47: Electrical Data, Mains Supply 3x525–690 V AC

| FC 202 | N450 | | N500 | | N560 | |
|---|---------|-----|---------|-----|---------|-----|
| | HO | NO | HO | NO | HO | NO |
| High/normal overload High overload=150% or 160% torque for a duration of 60 s. Normal overload=110% torque for a duration of 60 s. | | | | | | |
| Typical shaft output at 525 V [kW] | 315 | 355 | 355 | 400 | 400 | 450 |
| Typical shaft output at 575 V [hp] | 400 | 450 | 400 | 500 | 500 | 600 |
| Typical shaft output at 690 V [kW] | 355 | 450 | 400 | 500 | 500 | 560 |
| Enclosure size | E1h/E3h | | E1h/E3h | | E1h/E3h | |
| Output current (3-phase) | | | | | | |
| Continuous (at 525 V) [A] | 395 | 470 | 429 | 523 | 523 | 596 |
| Intermittent (60 s overload) (at 525 V) [A] | 593 | 517 | 644 | 575 | 785 | 656 |

| FC 202 | N450 | | N500 | | N560 | |
|--|-------------------|------|-------------------|------|-------------------|------|
| Continuous (at 575/690 V) [A] | 380 | 450 | 410 | 500 | 500 | 570 |
| Intermittent (60 s overload) (at 575/690 V) [A] | 570 | 495 | 615 | 550 | 750 | 627 |
| Continuous kVA (at 525 V) [kVA] | 359 | 427 | 390 | 476 | 476 | 542 |
| Continuous kVA (at 575 V) [kVA] | 378 | 448 | 408 | 498 | 498 | 568 |
| Continuous kVA (at 690 V) [kVA] | 454 | 538 | 490 | 598 | 598 | 681 |
| Maximum input current | | | | | | |
| Continuous (at 525 V) [A] | 381 | 453 | 413 | 504 | 504 | 574 |
| Continuous (at 575/690 V) [A] | 366 | 434 | 395 | 482 | 482 | 549 |
| Maximum number and size of cables per phase (E1h) | | | | | | |
| - Mains and motor without brake [mm ² (AWG)] | 5x240 (5x500 mcm) | | 5x240 (5x500 mcm) | | 5x240 (5x500 mcm) | |
| - Mains and motor with brake [mm ² (AWG)] | 4x240 (4x500 mcm) | | 4x240 (4x500 mcm) | | 4x240 (4x500 mcm) | |
| - Brake or regen [mm ² (AWG)] | 2x185 (2x350 mcm) | | 2x185 (2x350 mcm) | | 2x185 (2x350 mcm) | |
| Maximum number and size of cables per phase (E3h) | | | | | | |
| - Mains and motor [mm ² (AWG)] | 6x240 (6x500 mcm) | | 6x240 (6x500 mcm) | | 6x240 (6x500 mcm) | |
| - Brake [mm ² (AWG)] | 2x185 (2x350 mcm) | | 2x185 (2x350 mcm) | | 2x185 (2x350 mcm) | |
| - Load share or regen [mm ² (AWG)] | 4x185 (4x350 mcm) | | 4x185 (4x350 mcm) | | 4x185 (4x350 mcm) | |
| Maximum external mains fuses [A] ⁽¹⁾ | 800 | | 800 | | 800 | |
| Estimated power loss at 600 V [W] ^{(2) (3)} | 4763 | 5758 | 5164 | 6516 | 6480 | 7629 |
| Estimated power loss at 690 V [W] ^{(2) (3)} | 4917 | 5935 | 5329 | 6711 | 6673 | 7846 |
| Efficiency ⁽³⁾ | 0.98 | | 0.98 | | 0.98 | |
| Output frequency [Hz] | 0–590 | | 0–590 | | 0–590 | |
| Heat sink overtemperature trip [°C (°F)] | 110 (230) | | 110 (230) | | 110 (230) | |
| Control card overtemperature trip [°C (°F)] | 80 (176) | | 80 (176) | | 80 (176) | |
| Power card overtemperature trip [°C (°F)] | 85 (185) | | 85 (185) | | 85 (185) | |
| Fan power card overtemperature trip [°C (°F)] | 85 (185) | | 85 (185) | | 85 (185) | |
| Active in-rush card overtemperature trip [°C (°F)] | 85 (185) | | 85 (185) | | 85 (185) | |

¹ For fuse ratings, see [9.7 Fuses](#).

² Typical power loss is at normal conditions and expected to be within ±15% (tolerance relates to variety in voltage and cable conditions.) These values are based on a typical motor efficiency (IE/IE3 border line). Lower efficiency motors add to the power loss in the drive. Applies for dimensioning of drive cooling. If the switching frequency is higher than the default setting, the power losses can increase. LCP and typical control card power consumptions are included. For power loss data according to EN 50598-2, refer to www.danfoss.com/vltenergyefficiency. Options and customer load can add up to 30 W to the losses, though usually a fully loaded control card and options for slots A and B each add only 4 W.

³ Measured using 5 m (16.4 ft) shielded motor cables at rated load and rated frequency. Efficiency measured at nominal current. For energy efficiency class, see [9.4 Ambient Conditions](#). For part load losses, see www.danfoss.com/vltenergyefficiency.

Table 48: Electrical Data, Mains Supply 3x525–690 V AC

| FC 202 | N630 | | N710 | | N800 | |
|---|-------------------|-----------|-------------------|-----------|-------------------|-----------|
| High/normal overload High overload=150% or 160% torque for a duration of 60 s. Normal overload=110% torque for a duration of 60 s. | HO | NO | HO | NO | HO | NO |
| Typical shaft output at 525 V [kW] | 450 | 500 | 500 | 560 | 560 | 670 |
| Typical shaft output at 575 V [hp] | 600 | 650 | 650 | 750 | 750 | 950 |
| Typical shaft output at 690 V [kW] | 560 | 630 | 630 | 710 | 710 | 800 |
| Enclosure size | E1h/E3h | | E2h/E4h | | E2h/E4h | |
| Output current (3-phase) | | | | | | |
| Continuous (at 525 V) [A] | 596 | 630 | 659 | 763 | 763 | 889 |
| Intermittent (60 s overload) (at 525 V) [A] | 894 | 693 | 989 | 839 | 1145 | 978 |
| Continuous (at 575/690 V) [A] | 570 | 630 | 630 | 730 | 730 | 850 |
| Intermittent (60 s overload) (at 575/690 V) [A] | 855 | 693 | 945 | 803 | 1095 | 935 |
| Continuous kVA (at 525 V) [kVA] | 542 | 573 | 599 | 694 | 694 | 808 |
| Continuous kVA (at 575 V) [kVA] | 568 | 627 | 627 | 727 | 727 | 847 |
| Continuous kVA (at 690 V) [kVA] | 681 | 753 | 753 | 872 | 872 | 1016 |
| Maximum input current | | | | | | |
| Continuous (at 525 V) [A] | 574 | 607 | 635 | 735 | 735 | 857 |
| Continuous (at 575/690 V) [A] | 549 | 607 | 607 | 704 | 704 | 819 |
| Maximum number and size of cables per phase (E1h/E2h) | | | | | | |
| - Mains and motor without brake [mm ² (AWG)] | 5x240 (5x500 mcm) | | 6x240 (5x500 mcm) | | 6x240 (5x500 mcm) | |
| - Mains and motor with brake [mm ² (AWG)] | 4x240 (4x500 mcm) | | 5x240 (4x500 mcm) | | 5x240 (4x500 mcm) | |
| - Brake or regen [mm ² (AWG)] | 2x185 (2x350 mcm) | | 2x185 (2x350 mcm) | | 2x185 (2x350 mcm) | |
| Maximum number and size of cables per phase (E3h/E4h) | | | | | | |
| - Mains and motor [mm ² (AWG)] | 6x240 (6x500 mcm) | | 6x240 (6x500 mcm) | | 6x240 (6x500 mcm) | |
| - Brake [mm ² (AWG)] | 2x185 (2x350 mcm) | | 2x185 (2x350 mcm) | | 2x185 (2x350 mcm) | |
| - Load share or regen [mm ² (AWG)] | 4x185 (4x350 mcm) | | 4x185 (4x350 mcm) | | 4x185 (4x350 mcm) | |
| Maximum external mains fuses [A] ⁽¹⁾ | 800 | | 1200 | | 1200 | |
| Estimated power loss at 600 V [W] ^{(2) (3)} | 7624 | 8676 | 8054 | 9709 | 9661 | 11848 |
| Estimated power loss at 690 V [W] ^{(2) (3)} | 7842 | 8915 | 8357 | 10059 | 10010 | 12253 |
| Efficiency ⁽³⁾ | 0.98 | | 0.98 | | 0.98 | |
| Output frequency [Hz] | 0–590 | | 0–590 | | 0–590 | |
| Heat sink overtemperature trip [°C (°F)] | 110 (230) | | 110 (230) | | 110 (230) | |
| Control card overtemperature trip [°C (°F)] | 80 (176) | | 80 (176) | | 80 (176) | |
| Power card overtemperature trip [°C (°F)] | 85 (185) | | 85 (185) | | 85 (185) | |

| FC 202 | N630 | N710 | N800 |
|--|----------|----------|----------|
| Fan power card overtemperature trip [°C (°F)] | 85 (185) | 85 (185) | 85 (185) |
| Active in-rush card overtemperature trip [°C (°F)] | 85 (185) | 85 (185) | 85 (185) |

¹ For fuse ratings, see [9.7 Fuses](#).

² Typical power loss is at normal conditions and expected to be within $\pm 15\%$ (tolerance relates to variety in voltage and cable conditions.) These values are based on a typical motor efficiency (IE/IE3 border line). Lower efficiency motors add to the power loss in the drive. Applies for dimensioning of drive cooling. If the switching frequency is higher than the default setting, the power losses can increase. LCP and typical control card power consumptions are included. For power loss data according to EN 50598-2, refer to www.danfoss.com/vltenergyefficiency. Options and customer load can add up to 30 W to the losses, though usually a fully loaded control card and options for slots A and B each add only 4 W.

³ Measured using 5 m (16.4 ft) shielded motor cables at rated load and rated frequency. Efficiency measured at nominal current. For energy efficiency class, see [9.4 Ambient Conditions](#). For part load losses, see www.danfoss.com/vltenergyefficiency.

9.2 Mains Supply

The unit is suitable for use on a circuit capable of delivering not more than 100 kA short circuit current rating (SCCR) at 480/600 V.

| | |
|--|---|
| Supply terminals | L1, L2, L3 |
| Supply voltage ⁽¹⁾ | 380–480/500 V $\pm 10\%$, 525–690 V $\pm 10\%$ |
| Supply frequency | 50/60 Hz $\pm 5\%$ |
| Maximum imbalance temporary between mains phases | 3.0% of rated supply voltage ⁽²⁾ |
| True power factor (λ) | ≥ 0.9 nominal at rated load |
| Displacement power factor ($\cos \Phi$) | Near unity (> 0.98) |
| Switching on the input supply L1, L2, and L3 (power-ups) | Maximum 1 time/2 minutes |
| Environment according to EN 60664-1 | Overvoltage category III/pollution degree 2 |

¹ Mains voltage low/mains drop-out: During low mains voltage or a mains drop-out, the drive continues until the DC-link voltage drops below the minimum stop level, which corresponds typically to 15% below the drive's lowest rated supply voltage. Power-up and full torque cannot be expected at mains voltage lower than 10% below the drive's lowest rated supply voltage.

² Calculations based on UL/IEC 61800-3.

9.3 Motor Output and Torque Characteristics

9.3.1 Motor Output (U, V, W)

| | |
|-------------------------------|---------------------------------|
| Voltage output | 0–100% of supply voltage output |
| Output frequency | 0–590 Hz ⁽¹⁾ |
| Output frequency in flux mode | 0–300 Hz |
| Switching on output | Unlimited |
| Ramp times | 0.01–3600 s |

¹ Dependent on voltage and power.

9.3.2 Torque Characteristics

The torque response time depends on application and load but as a rule, the torque step from 0 to reference is 4–5 x torque rise time.

Torque characteristics (NO)

| | |
|-----------------------------------|--|
| Starting torque (constant torque) | Maximum 110% for 60 s once in 10 minutes. ⁽¹⁾ |
| Overload torque (constant torque) | Maximum 110% for 60 s once in 10 minutes. ⁽¹⁾ |

¹ Percentage relates to the drive's nominal current.

Torque characteristics (HO)

| | |
|-----------------------------------|--|
| Starting torque (constant torque) | Maximum 150/160% for 60 s once in 10 minutes. ⁽¹⁾ |
| Starting torque (constant torque) | Maximum 150/160% for 60 s once in 10 minutes. ⁽¹⁾ |

¹ Percentage relates to the drive's nominal current.

| | |
|---|-------|
| Torque rise time in FLUX (for 5 kHz fsw) | 1 ms |
| Torque rise time in VVC+ (independent of fsw) | 10 ms |

9.4 Ambient Conditions

| | |
|---|---|
| Enclosure | IP20/Chassis, IP21/Type 1, IP54/Type 12 |
| Vibration test (standard/ruggedized) | 0.7 g/1.0 g |
| Relative humidity | 5%-95% (IEC 721-3-3; Class 3K3 (non-condensing) during operation) |
| Aggressive environment (IEC 60068-2-43) H ₂ S test | Class Kd |
| Aggressive gases (IEC 60721-3-3) | Class 3C3 |
| Test method according to IEC 60068-2-43 | H2S (10 days) |
| Ambient temperature (at 60 AVM switching mode) | |
| - with derating | Maximum 55° C (131° F) ⁽¹⁾ |
| - at full continuous FC output current (HO) | Maximum 50° C (122° F) ⁽¹⁾ |
| - at full continuous FC output current (NO) | Maximum 45° C (113° F) ⁽¹⁾ |
| Minimum ambient temperature during full-scale operation | 0° C (32° F) |
| Minimum ambient temperature at reduced speed performance | -10° C (14° F) |
| Temperature during storage/transport | -25 to +65/70° C (-13 to +149/158° F) |
| Maximum altitude above sea level without derating | 1000 m (3280 ft) |
| Maximum altitude above sea level with derating | 3000 m (9842 ft) |
| EMC standards, Emission | IEC/EN 61800-3 |
| EMC standards, Immunity | IEC/EN 61800-3 |
| Energy efficiency class | IE2 ⁽²⁾ |

¹ For more information, see the Derating section in the design guide.

² Determined according to IEC 61800-9-2 (EN 50598-2) at:

- Rated load.
- 90% rated frequency.
- Switching frequency factory setting.
- Switching pattern factory setting.

9.5 Cable Specifications

| | |
|--|------------------------------|
| Maximum motor cable length, shielded | 150 m (492 ft) |
| Maximum motor cable length, unshielded | 300 m (984 ft) |
| Maximum cross-section to control terminals, rigid wire | 1.5 mm ² /16 AWG |
| Maximum cross-section to control terminals, flexible cable | 1 mm ² /18 AWG |
| Maximum cross-section to control terminals, cable with enclosed core | 0.5 mm ² /20 AWG |
| Minimum cross-section to control terminals | 0.25 mm ² /24 AWG |

9.6 Control Input/Output and Control Data

9.6.1 Digital Inputs

All digital inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

| | |
|----------------------------------|------------------------|
| Programmable digital inputs | 4 (6) |
| Terminal number ⁽¹⁾ | 18, 19, 27, 29, 32, 33 |
| Logic | PNP or NPN |
| Voltage level | 0–24 V DC |
| Voltage level, logic 0 PNP | <5 V DC |
| Voltage level, logic 1, PNP | >10 V DC |
| Voltage level, logic 0 NPN | >19 V DC |
| Voltage level, logic 1 NPN | <14 V DC |
| Maximum voltage on input | 28 V DC |
| Pulse frequency range | 0–110 kHz |
| Input resistance, R _i | Approximately 4 kΩ |

¹ Terminals 27 and 29 can also be programmed as output.

9.6.2 STO Terminal 37

STO terminal 37 (terminal 37 is fixed PNP logic)

| | |
|-------------------------------|-----------|
| Voltage level | 0–24 V DC |
| Voltage level, logic 0 PNP | <4 V DC |
| Voltage level, logic 1 PNP | >20 V DC |
| Maximum voltage on input | 28 V DC |
| Typical input current at 24 V | 50 mA rms |
| Typical input current at 20 V | 60 mA rms |
| Input capacitance | 400 nF |

All digital inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

For further information about terminal 37 and Safe Torque Off, see the *VLT® FC Series- Safe Torque Off Operating Guide*.

When using a contactor with a DC coil inside with STO, it is important to make a return way for the current from the coil when turning it off. The return way can be created by using a freewheel diode (or, alternatively, a 30 V or 50 V MOV for quicker response time) across the coil. Typical contactors can be bought with this diode.

9.6.3 Analog Inputs

| | |
|------------------------------|---|
| Number of analog inputs | 2 |
| Terminal number | 53 (201), 54 (202) |
| Modes | Voltage or current |
| Mode select | Switch A53 (S201) and switch A54 (S202) |
| Voltage mode | Switch A53 (S201)/A54 (S202) = OFF (U) |
| Voltage level | -10 V to +10 V (scaleable) |
| Input resistance, R_i | Approximately 10 k Ω |
| Maximum voltage | ± 20 V |
| Current mode | Switch A53 (S201)/A54 (S202) = ON (I) |
| Current level | 0/4 to 20 mA (scaleable) |
| Input resistance, R_i | Approximately 200 Ω |
| Maximum current | 30 mA |
| Resolution for analog inputs | 10 bit (+ sign) |
| Accuracy of analog inputs | Maximum error 0.5% of full scale |
| Bandwidth | 100 Hz |

The analog inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

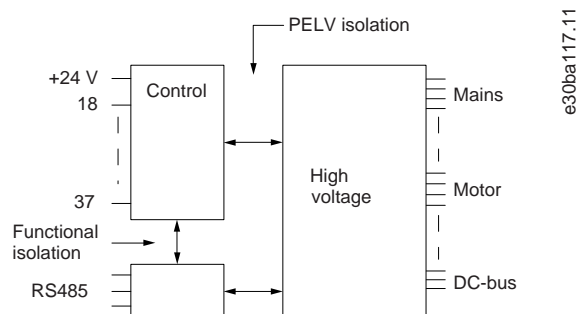


Illustration 52: PELV Isolation

9.6.4 Pulse/encoder Inputs

| | |
|---|-----------------------------|
| Programmable pulse/encoder inputs | 2/1 |
| Terminal number (pulse) | 29 ⁽¹⁾ , 33 |
| Terminal number (encoder) | 32, 33 ⁽²⁾ |
| Maximum frequency at terminals 29, 32, 33 | 110 kHz (Push-pull driven) |
| Maximum frequency at terminals 29, 32, 33 | 5 kHz (Open collector) |
| Maximum frequency at terminals 29, 32, 33 | 4 Hz |
| Voltage level | See <i>Digital Inputs</i> . |

| | |
|-----------------------------------|------------------------------------|
| Maximum voltage on input | 28 V DC |
| Input resistance, R_i | Approximately 4 k Ω |
| Pulse input accuracy (0.1–1 kHz) | Maximum error: 0.1% of full scale |
| Encoder input accuracy (1–11 kHz) | Maximum error: 0.05% of full scale |

¹ FC 302 only.

² Encoder inputs: 32=A and 33=B.

9.6.5 Analog Output

| | |
|--|-----------------------------------|
| Number of programmable outputs | 1 |
| Terminal number | 42 |
| Current range at analog output | 0/4 to 20 mA |
| Maximum load GND - analog output less than | 500 Ω |
| Accuracy on analog output | Maximum error: 0.8% of full scale |
| Resolution of analog output | 8 bit |

The analog output is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

9.6.6 Control Card, RS485 Serial Communication

| | |
|--------------------|------------------------------------|
| Terminal number | 68 (P, TX+, RX+), 69 (N, TX-, RX-) |
| Terminal number 61 | Common for terminals 68 and 69 |

The RS485 serial communication circuit is galvanically isolated from the supply voltage (PELV).

9.6.7 Digital Outputs

| | |
|--|-----------------------------------|
| Programmable digital/pulse outputs | 2 |
| Terminal number ⁽¹⁾ | 27, 29 |
| Voltage level at digital/frequency output | 0–24 V |
| Maximum output current (sink or source) | 40 mA |
| Maximum load at frequency output | 1 k Ω |
| Maximum capacitive load at frequency output | 10 nF |
| Minimum output frequency at frequency output | 0 Hz |
| Maximum output frequency at frequency output | 32 kHz |
| Accuracy of frequency output | Maximum error: 0.1% of full scale |
| Resolution of frequency outputs | 12 bit |

¹ Terminals 27 and 29 can also be programmed as input.

The digital output is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

9.6.8 Control Card, 24 V DC Output

| | |
|-----------------|--------|
| Terminal number | 12, 13 |
| Maximum load | 200 mA |

The 24 V DC supply is galvanically isolated from the supply voltage (PELV), but has the same potential as the analog and digital inputs and outputs.

9.6.9 Relay Outputs

| | |
|--|---|
| Programmable relay outputs | 2 |
| Maximum wire cross-section to relay terminals | 2.5 mm ² (12 AWG) |
| Minimum wire cross-section to relay terminals | 0.2 mm ² (30 AWG) |
| Length of stripped wire | 8 mm (0.3 in) |
| Relay 01 terminal number | 1–3 (break), 1–2 (make) |
| Maximum terminal load (AC-1) ⁽¹⁾ on 1–2 (NO) (Resistive load) ⁽²⁾⁽³⁾ | 400 V AC, 2 A |
| Maximum terminal load (AC-15) ⁽¹⁾ 1–2 (NO) (Inductive load @ cosφ 0.4) | 240 V AC, 0.2 A |
| Maximum terminal load (DC-1) ⁽¹⁾ on 1–2 (NO) (Resistive load) | 80 V DC, 2 A |
| Maximum terminal load (DC-13) ⁽¹⁾ on 1–2 (NO) (Inductive load) | 24 V DC, 0.1 A |
| Maximum terminal load (AC-1) ⁽¹⁾ on 1–3 (NC) (Resistive load) | 240 V AC, 2 A |
| Maximum terminal load (AC-15) ⁽¹⁾ 1–3 (NC) (Inductive load @ cosφ 0.4) | 240 V AC, 0.2 A |
| Maximum terminal load (DC-1) ⁽¹⁾ on 1–3 (NC) (Resistive load) | 50 V DC, 2 A |
| Maximum terminal load (DC-13) ⁽¹⁾ on 1–3 (NC) (Inductive load) | 24 V DC, 0.1 A |
| Minimum terminal load on 1–3 (NC), 1–2 (NO) | 24 V DC 10 mA, 24 V AC 2 mA |
| Environment according to EN 60664-1 | Overvoltage category III/pollution degree 2 |
| Relay 02 terminal number | 4–6 (break), 4–5 (make) |
| Maximum terminal load (AC-1) ⁽¹⁾ on 4–5 (NO) (Resistive load) ⁽²⁾⁽³⁾ | 400 V AC, 2 A |
| Maximum terminal load (AC-15) ⁽¹⁾ 4–5 (NO) (Inductive load @ cosφ 0.4) | 240 V AC, 0.2 A |
| Maximum terminal load (DC-1) ⁽¹⁾ on 4–5 (NO) (Resistive load) | 80 V DC, 2 A |
| Maximum terminal load (DC-13) ⁽¹⁾ on 4–5 (NO) (Inductive load) | 24 V DC, 0.1 A |
| Maximum terminal load (AC-1) ⁽¹⁾ on 4–6 (NC) (Resistive load) | 240 V AC, 2 A |
| Maximum terminal load (AC-15) ⁽¹⁾ 4–6 (NC) (Inductive load @ cosφ 0.4) | 240 V AC, 0.2 A |
| Maximum terminal load (DC-1) ⁽¹⁾ on 4–6 (NC) (Resistive load) | 50 V DC, 2 A |
| Maximum terminal load (DC-13) ⁽¹⁾ on 4–6 (NC) (Inductive load) | 24 V DC, 0.1 A |
| Minimum terminal load on 4–6 (NC), 4–5 (NO) | 24 V DC 10 mA, 24 V AC 2 mA |
| Environment according to EN 60664-1 | Overvoltage category III/pollution degree 2 |

¹ IEC 60947 parts 4 and 5.

² Overvoltage Category II

³ UL applications 300 V AC 2 A.

The relay contacts are galvanically isolated from the rest of the circuit by reinforced isolation (PELV).

9.6.10 Control Card, +10 V DC Output

| | |
|-----------------|---------------|
| Terminal number | 50 |
| Output voltage | 10.5 V ±0.5 V |
| Maximum load | 25 mA |

The 10 V DC supply is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

9.6.11 Control Characteristics

| | |
|---|----------------------------|
| Resolution of output frequency at 0–1000 Hz | ±0.003 Hz |
| System response time (terminals 18, 19, 27, 29, 32, 33) | ≤2 ms |
| Speed control range (open loop) | 1:100 of synchronous speed |
| Speed accuracy (open loop) | 30–4000 RPM: Error ±8 RPM |

All control characteristics are based on a 4-pole asynchronous motor.

9.6.12 Control Card Performance

| | |
|---------------|------|
| Scan interval | 5 ms |
|---------------|------|

9.6.13 Control Card, USB Serial Communication

| | |
|--------------|------------------------------------|
| USB standard | 1.1 (full speed) ⁽¹⁾ |
| USB plug | USB type B plug ^{(2) (3)} |

¹ Connection to PC is carried out via a standard host/device USB cable.

² The USB connection is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

³ The USB connection is not galvanically isolated from ground. Use only isolated laptop/PC as connection to the USB connector on the drive or an isolated USB cable/converter.

9.7 Fuses

Fuses installed on the supply side ensure that if a component breakdown (first fault) occurs inside the drive, any potential damage is contained inside the drive enclosure. To ensure compliance with EN 50178, use identical Bussmann fuses as replacements. Refer to [table 49](#).

NOTICE

IEC 60364 (CE) and NEC 2009 (UL) COMPLIANCE

Drives without supply side fuses do not meet IEC 60364 (CE) and NEC 2009 (UL) compliant installation standards.

- Install specified fuses on the supply side of the installation.

Table 49: Fuse Options

| Input voltage (V) | Model | Bussmann part number |
|-------------------|-----------|----------------------|
| 380–480 | N355–N400 | 170M6014 |
| 380–480 | N450–N560 | 170M7309 |
| 525–690 | All | 170M7342 |

The fuses listed in [table 49](#) are suitable for use on a circuit capable of delivering 100000 A_{rms} (symmetrical), depending on the drive voltage rating. With the proper fusing, the drive short-circuit current rating (SCCR) is 100000 A_{rms}. E1h and E2h drives are supplied with internal drive fusing to meet the 100 kA SCCR. E3h and E4h drives must be fitted with Type aR fuses to meet the 100 kA SCCR.

NOTICE

DISCONNECT SWITCH SCCR REQUIREMENTS

All units ordered and supplied with a factory-installed disconnect switch require Class L branch circuit fusing to meet the 100 kA SCCR for the drive.

- If a circuit breaker is used, the SCCR rating is 42 kA. The input voltage and power rating of the drive determines the specific Class L fuse. The input voltage and power rating are found on the product nameplate.

Table 50: Disconnect Switch SCCR Requirements

| Input voltage (V) | Model | Short circuit rating (A) | Required protection |
|-------------------|-----------|--------------------------|----------------------|
| 380–480 | N355–N450 | 42000 | Circuit breaker |
| | | 100000 | Class L fuse, 800 A |
| 380–480 | N500–N560 | 42000 | Circuit breaker |
| | | 100000 | Class L fuse, 1200 A |
| 525–690 | N450–N630 | 42000 | Circuit breaker |
| | | 100000 | Class L fuse, 800 A |
| 525–690 | N710–N800 | 42000 | Circuit breaker |
| | | 100000 | Class L fuse, 1200 A |

9.8 Enclosure Dimensions

9.8.1 E1h Exterior Dimensions



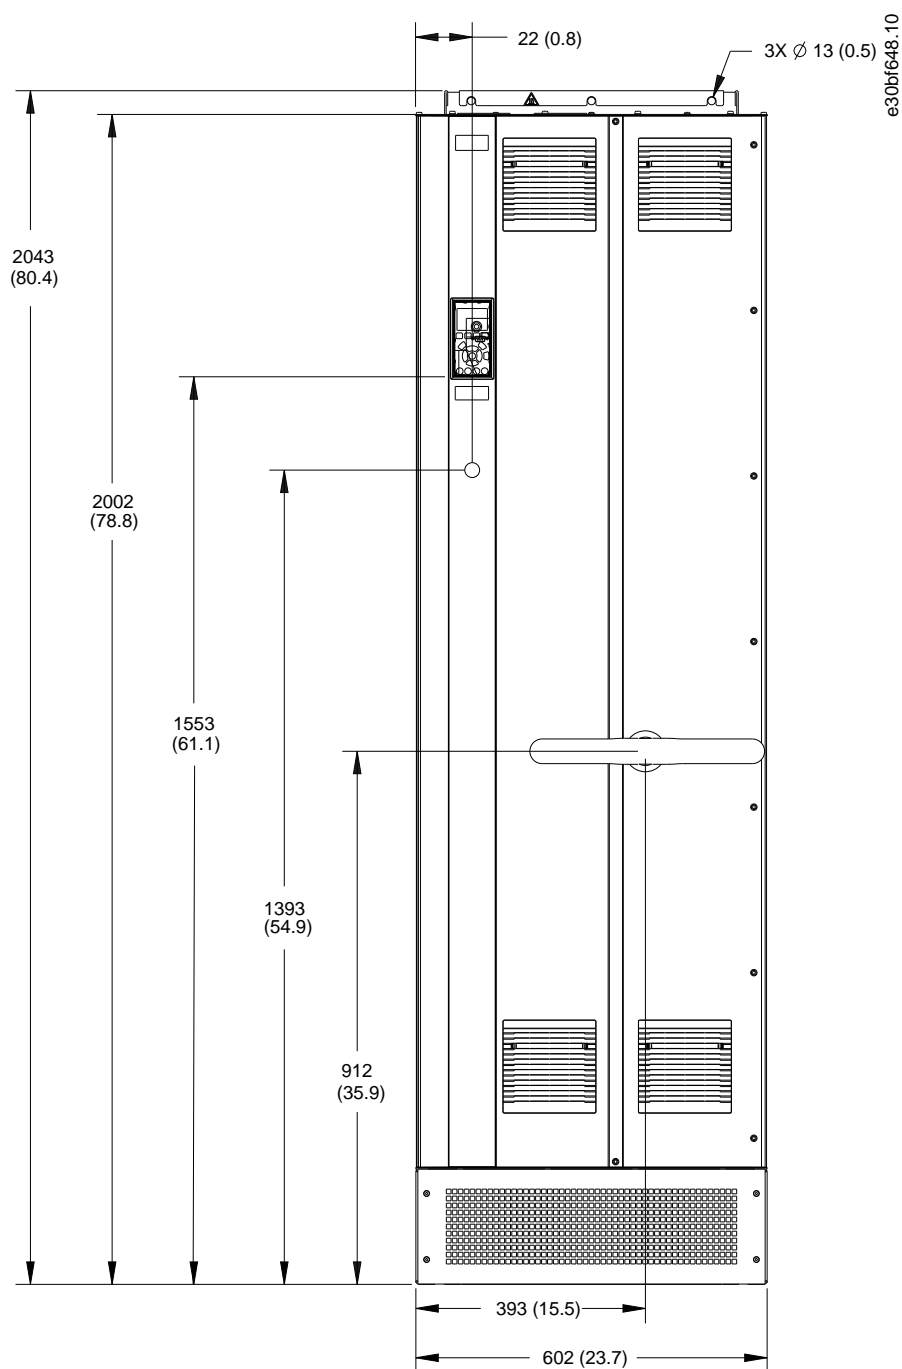


Illustration 53: Front View of E1h

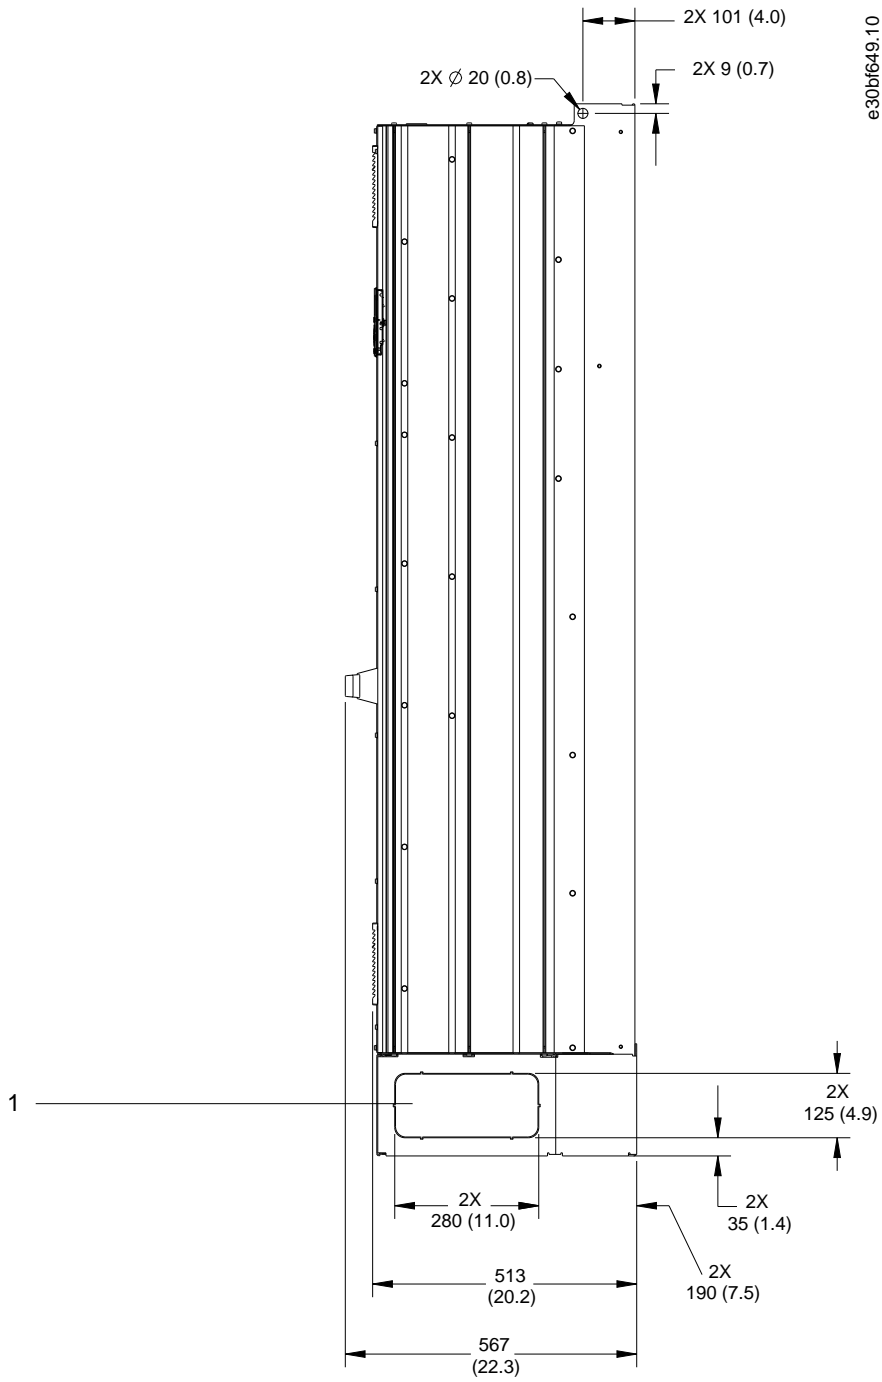

1 Knockout panel



Illustration 54: Side View of E1h

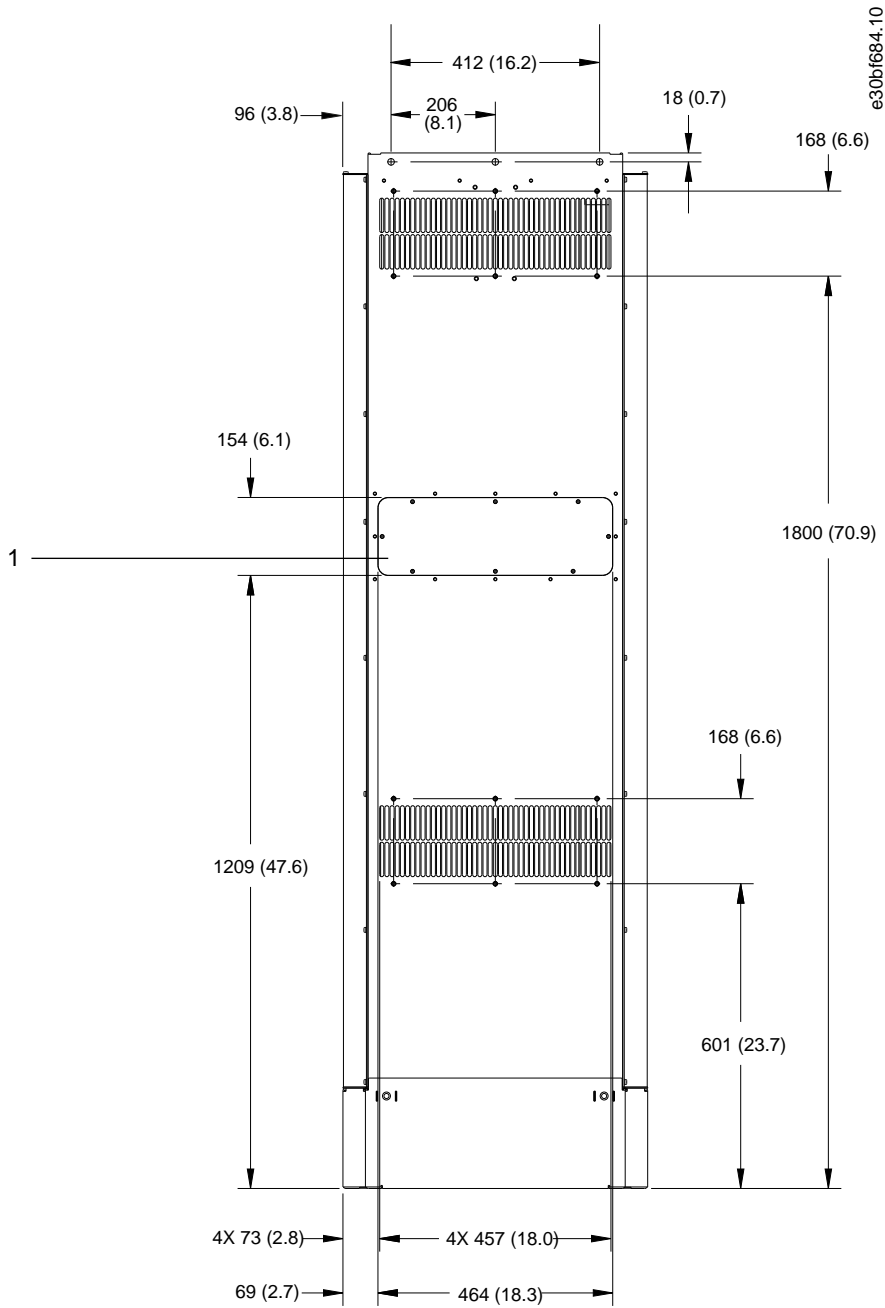

1 Heat sink access panel (optional)

Illustration 55: Back View of E1h

e30bf651.10

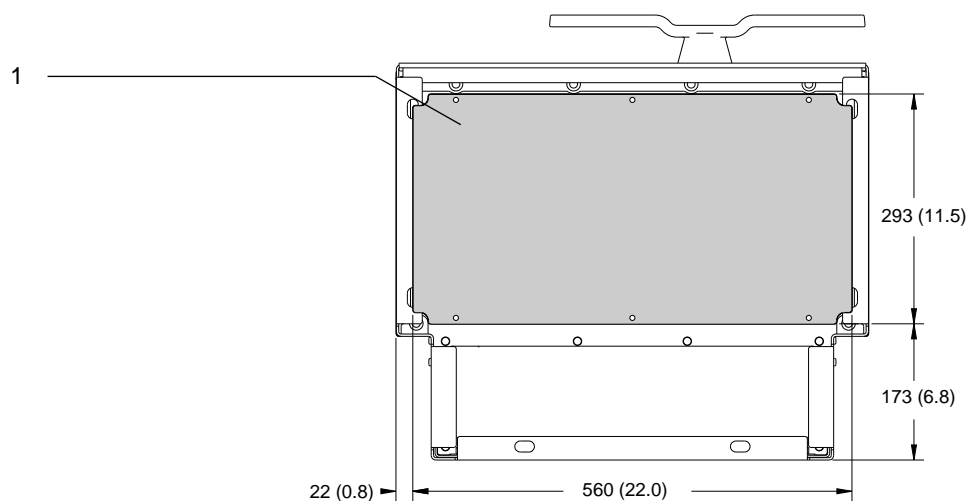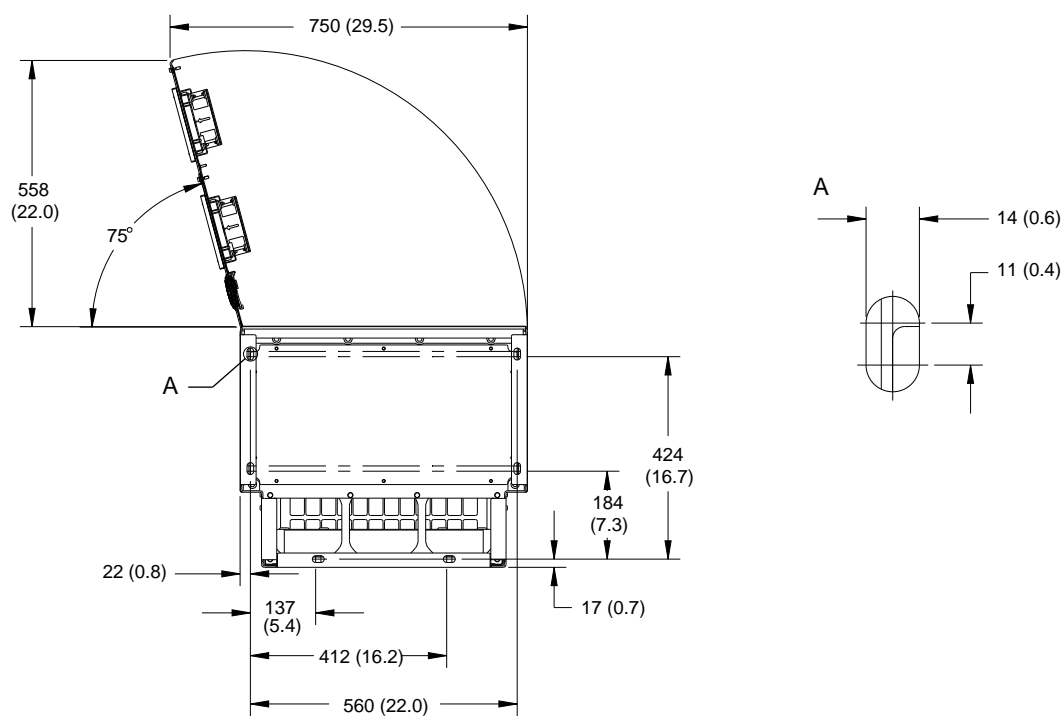

1 Cable entry plate

Illustration 56: Door Clearance and Cable Entry Plate Dimensions for E1h

9.8.2 E2h Exterior Dimensions


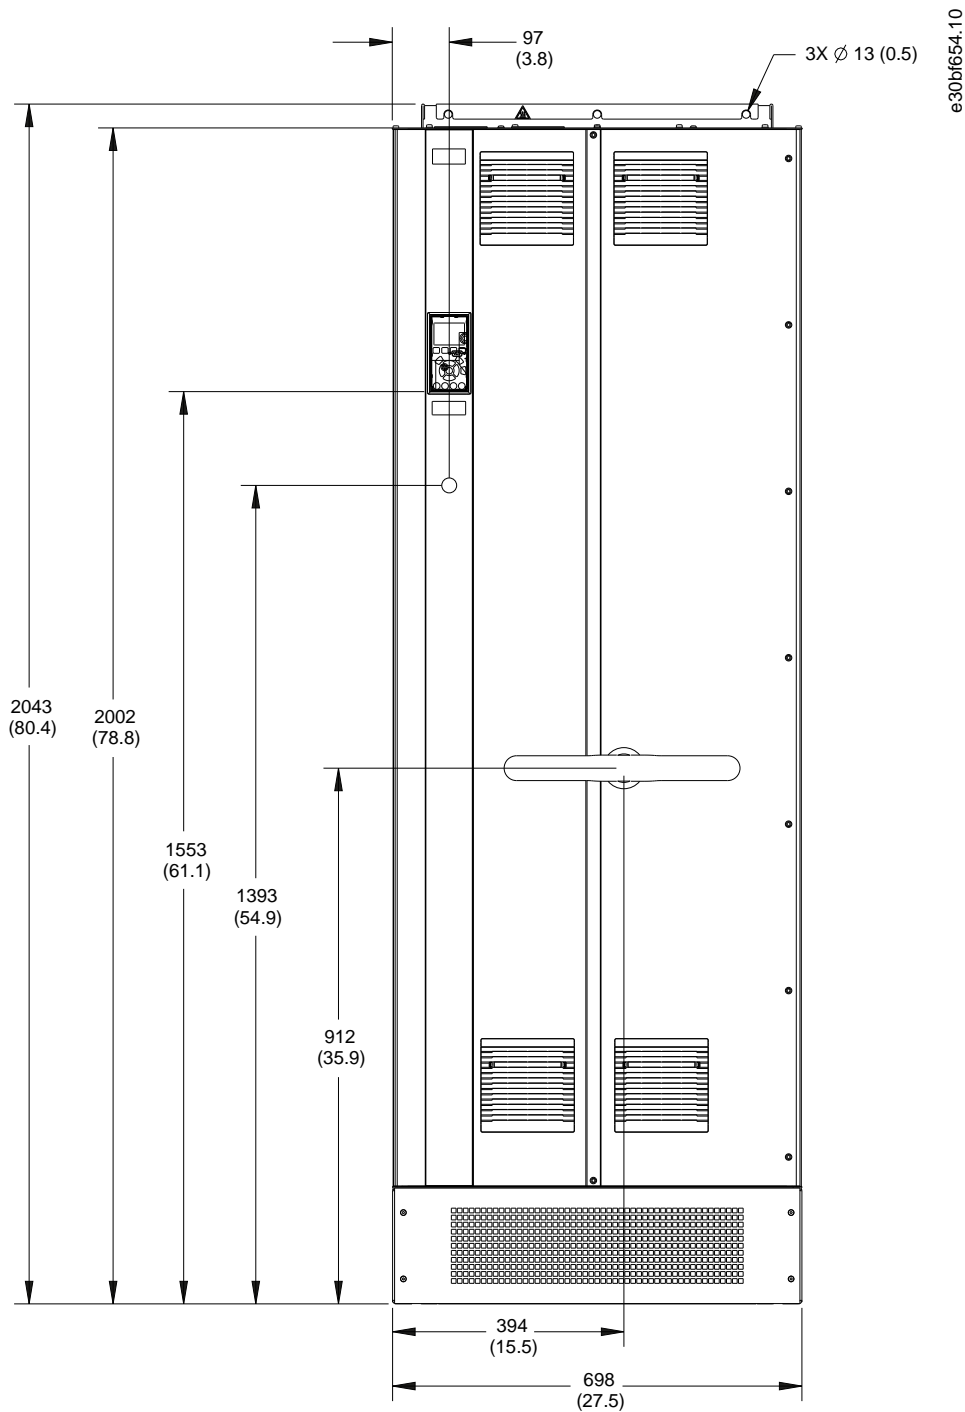



Illustration 57: Front View of E2h

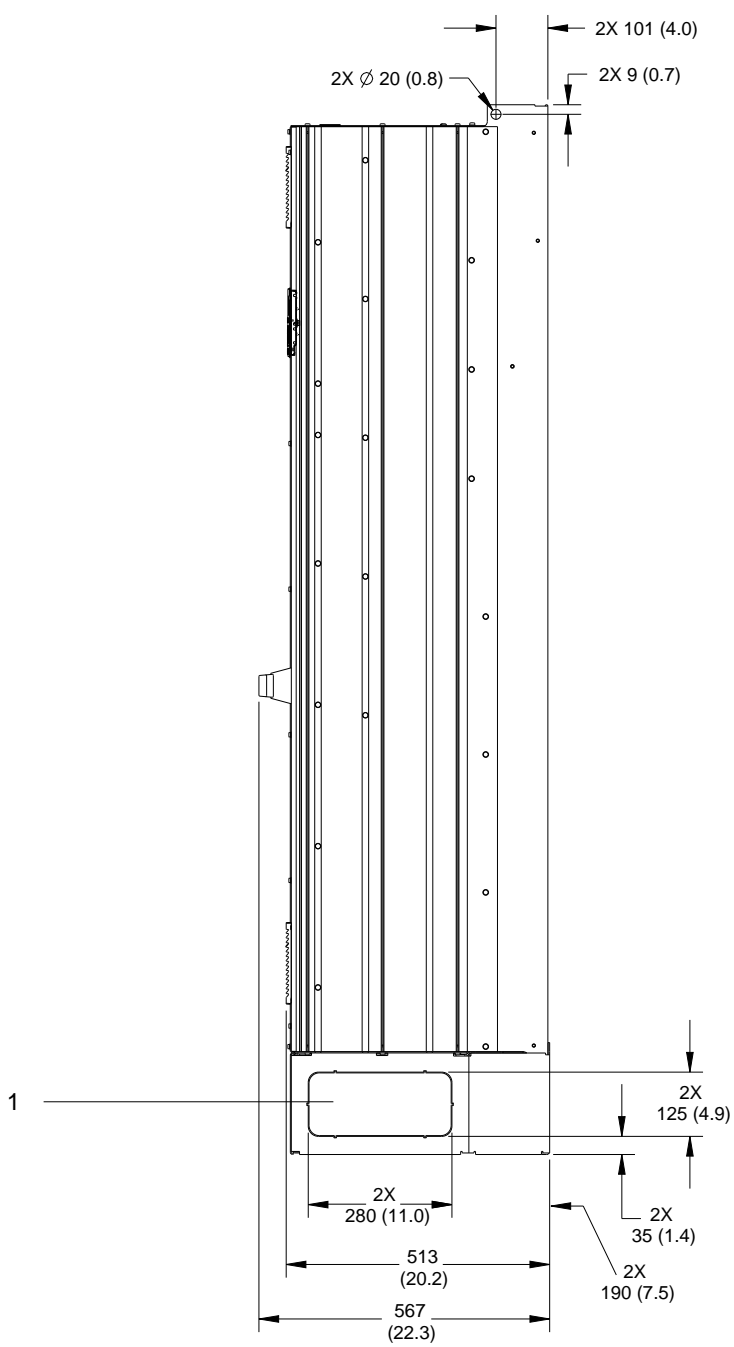

e30bf653.10

1 Knockout panel



Illustration 58: Side View of E2h

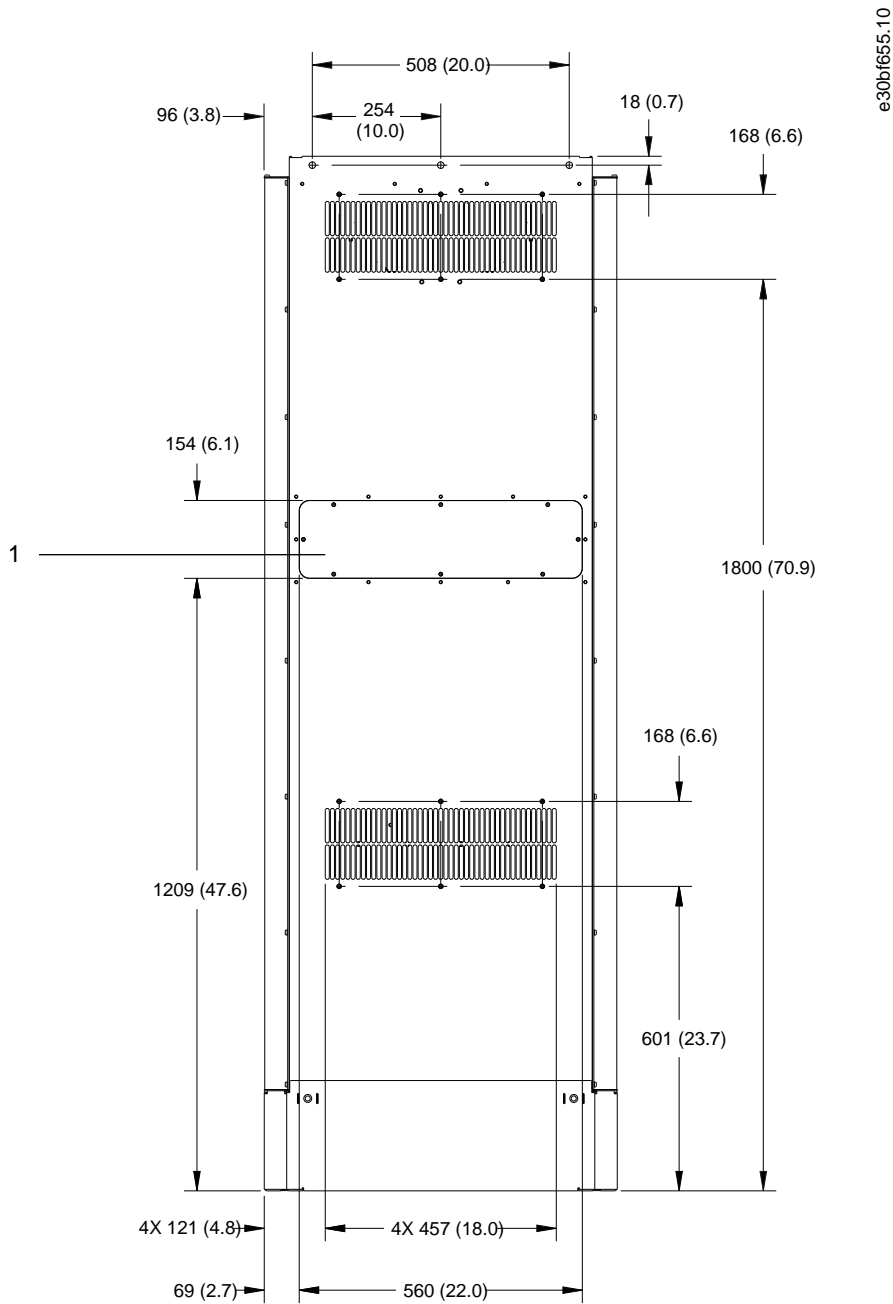

1 Heat sink access panel (optional)

Illustration 59: Back View of E2h


e30bf652.10

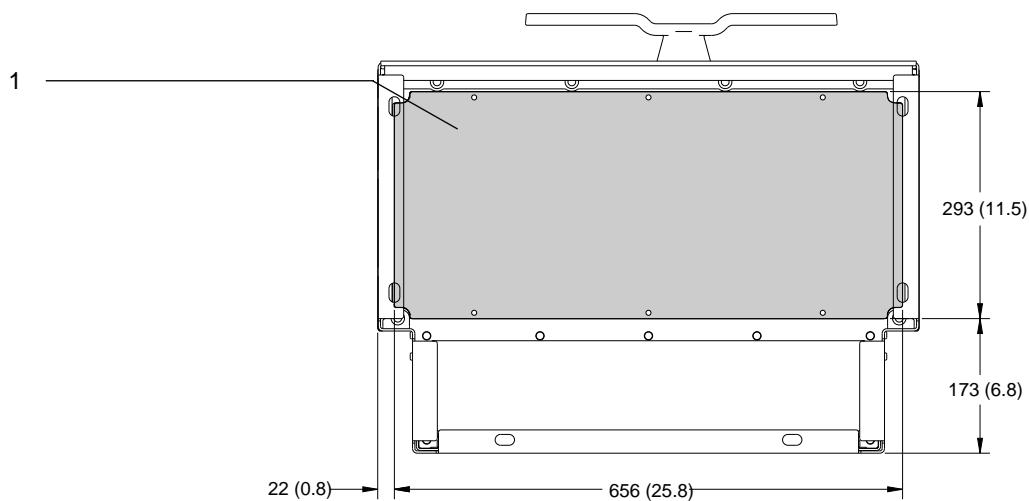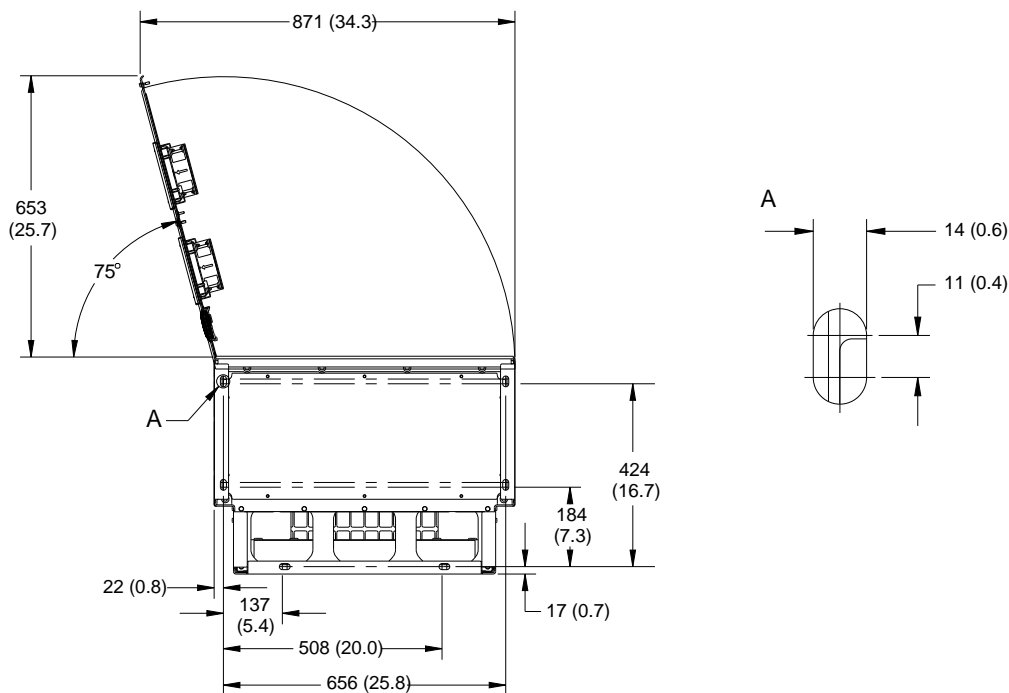

1 Cable entry plate


Illustration 60: Door Clearance and Cable Entry Plate Dimensions for E2h

9.8.3 E3h Exterior Dimensions

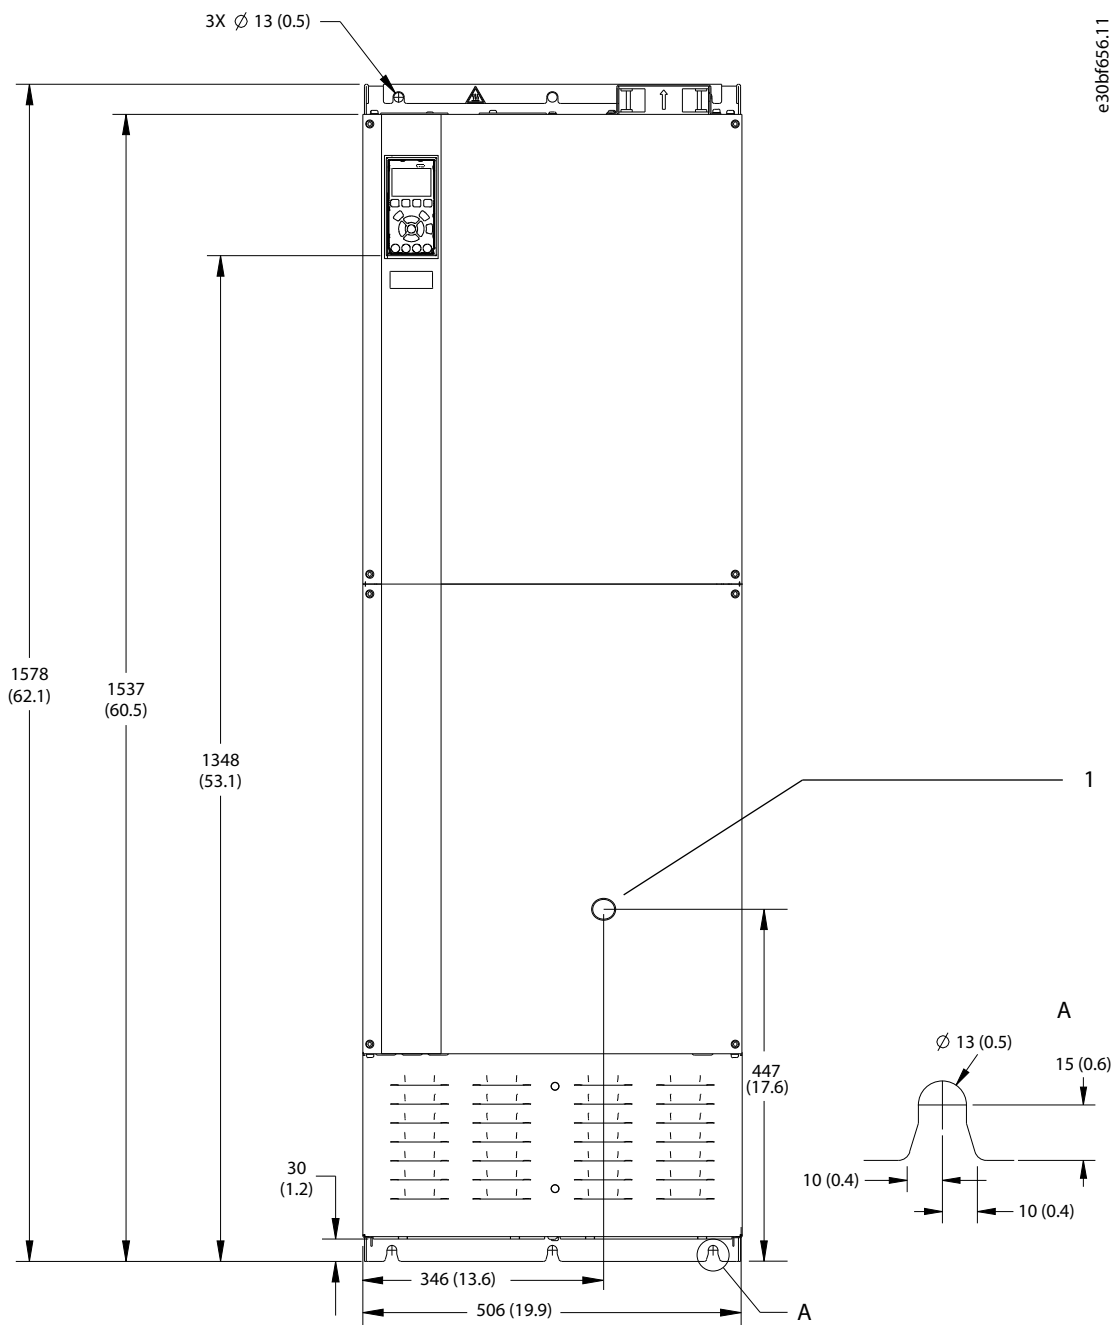


1 Disconnect option only

Illustration 61: Front View of E3h

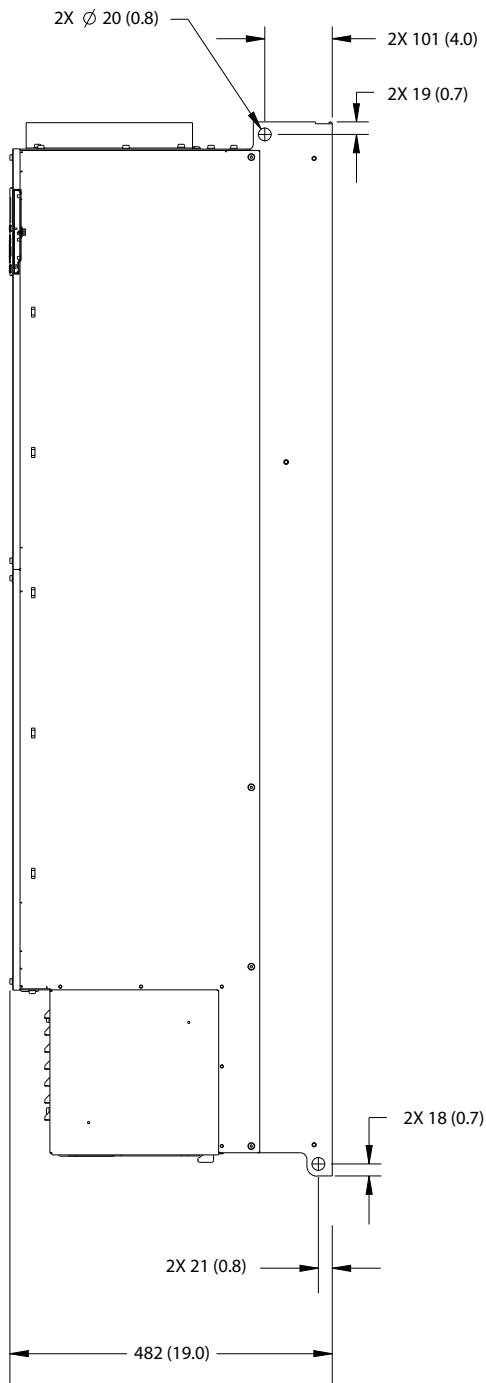

e30bf658.10

Illustration 62: Side View of E3h

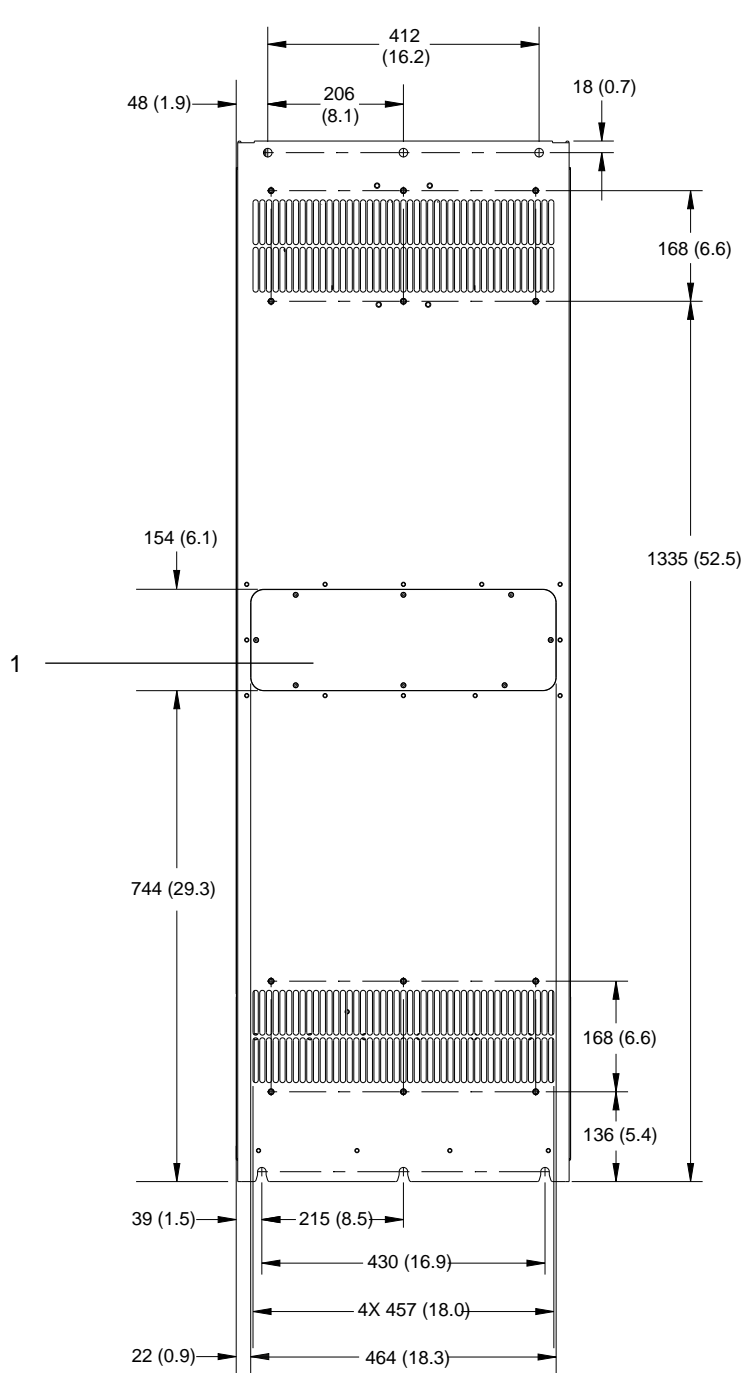


e30bf657.10

1 Heat sink access panel (optional)

Illustration 63: Back View of E3h


e30bf659.10

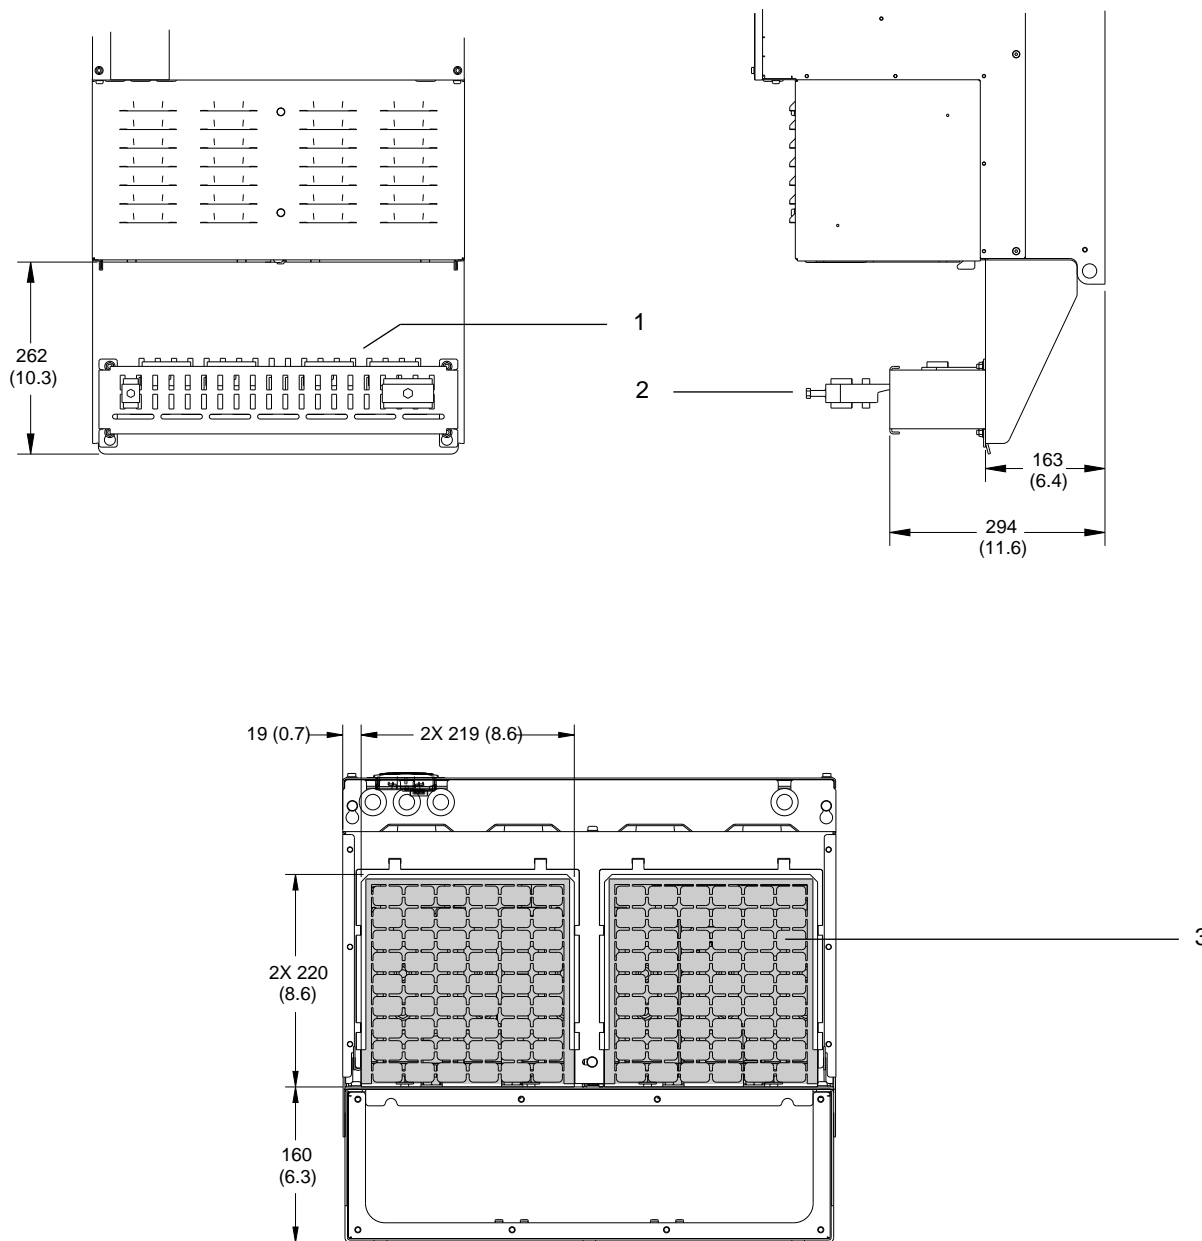

| | |
|---|-------------------|
| 1 RFI shield termination (standard with RFI option) | 2 Cable/EMC clamp |
| 3 Cable entry plate | |

Illustration 64: RFI Shield Termination and Cable Entry Plate Dimensions for E3h

9.8.4 E4h Exterior Dimensions

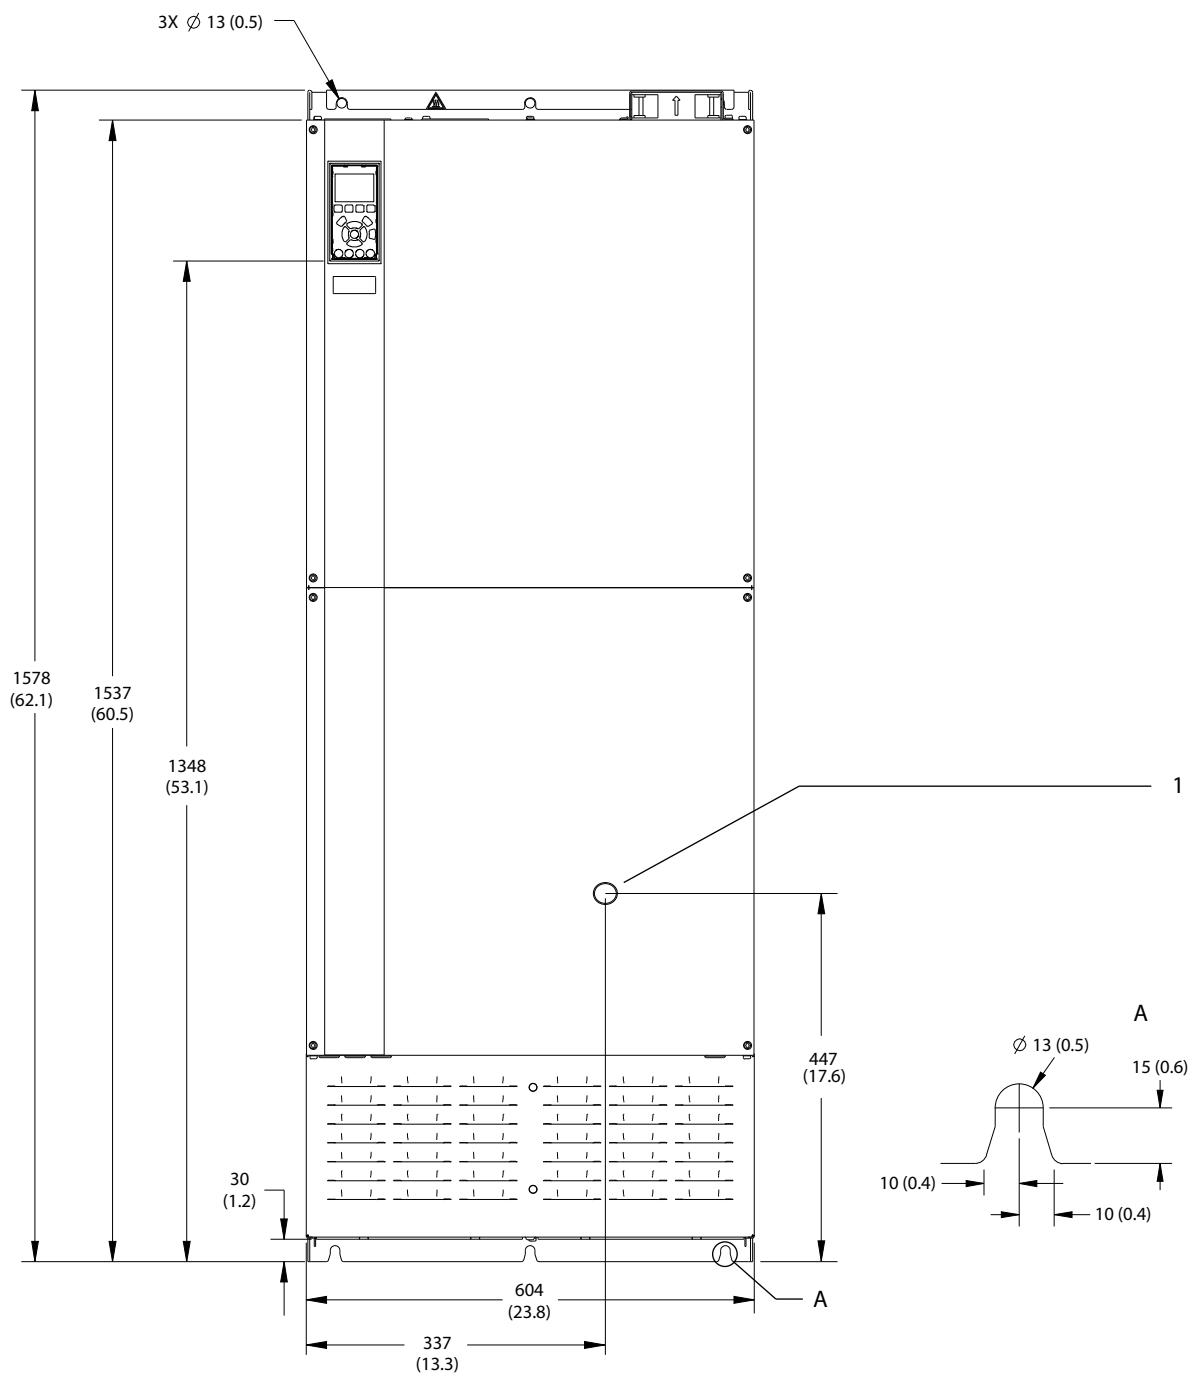

e30bf664.11

1 Disconnect option only

Illustration 65: Front View of E4h


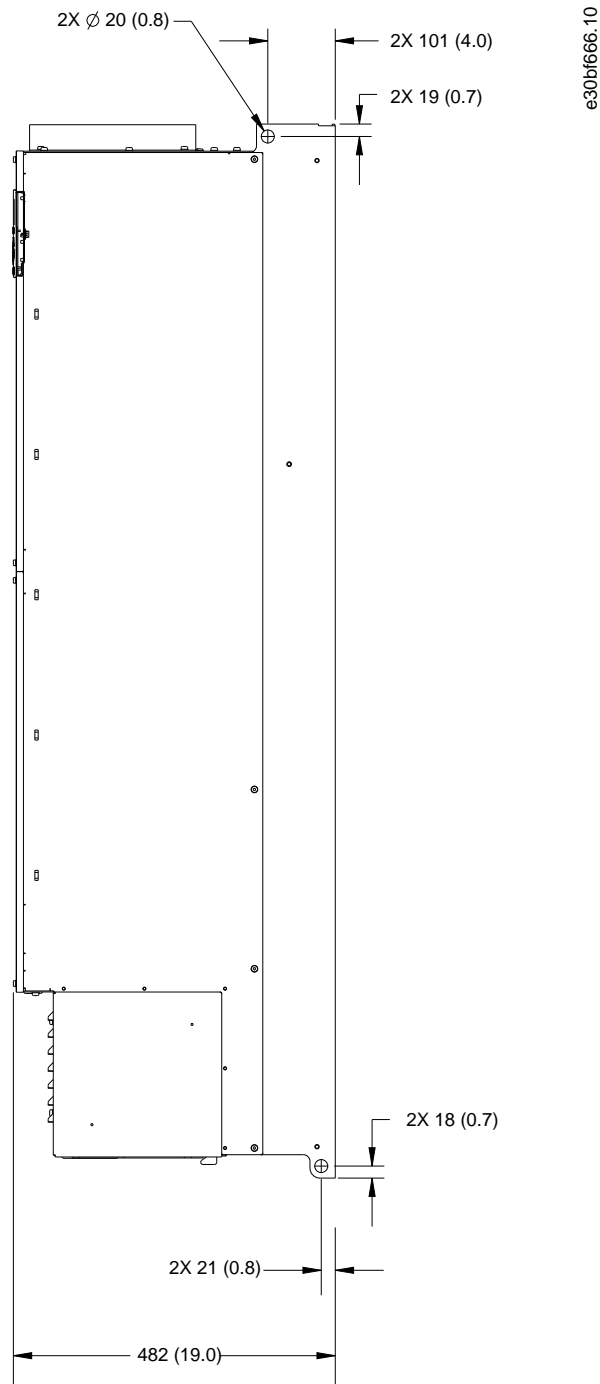



Illustration 66: Side View of E4h

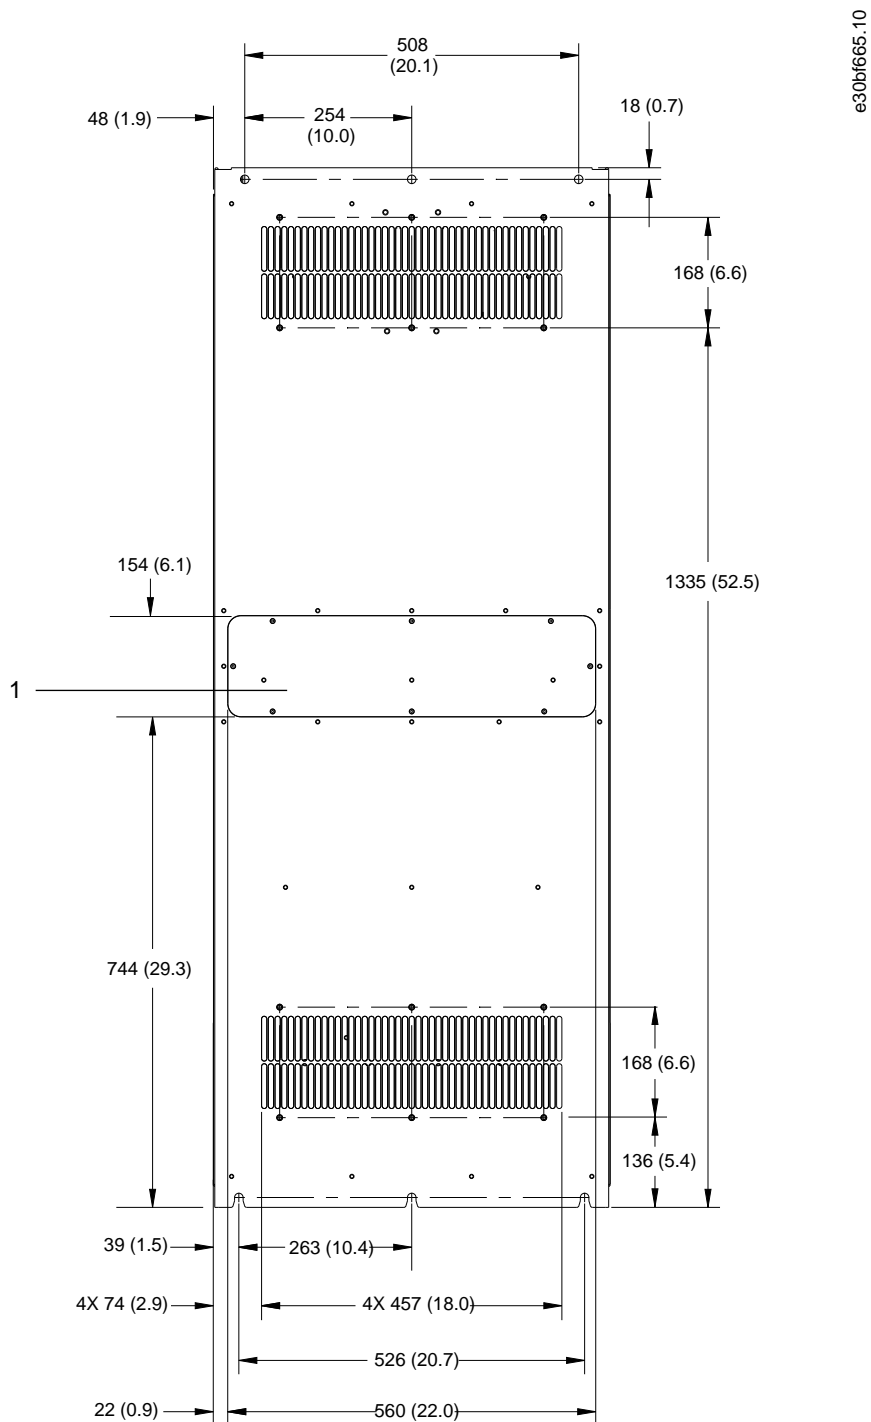

1 Heat sink access panel (optional)

Illustration 67: Back View of E4h

e30bf667.10

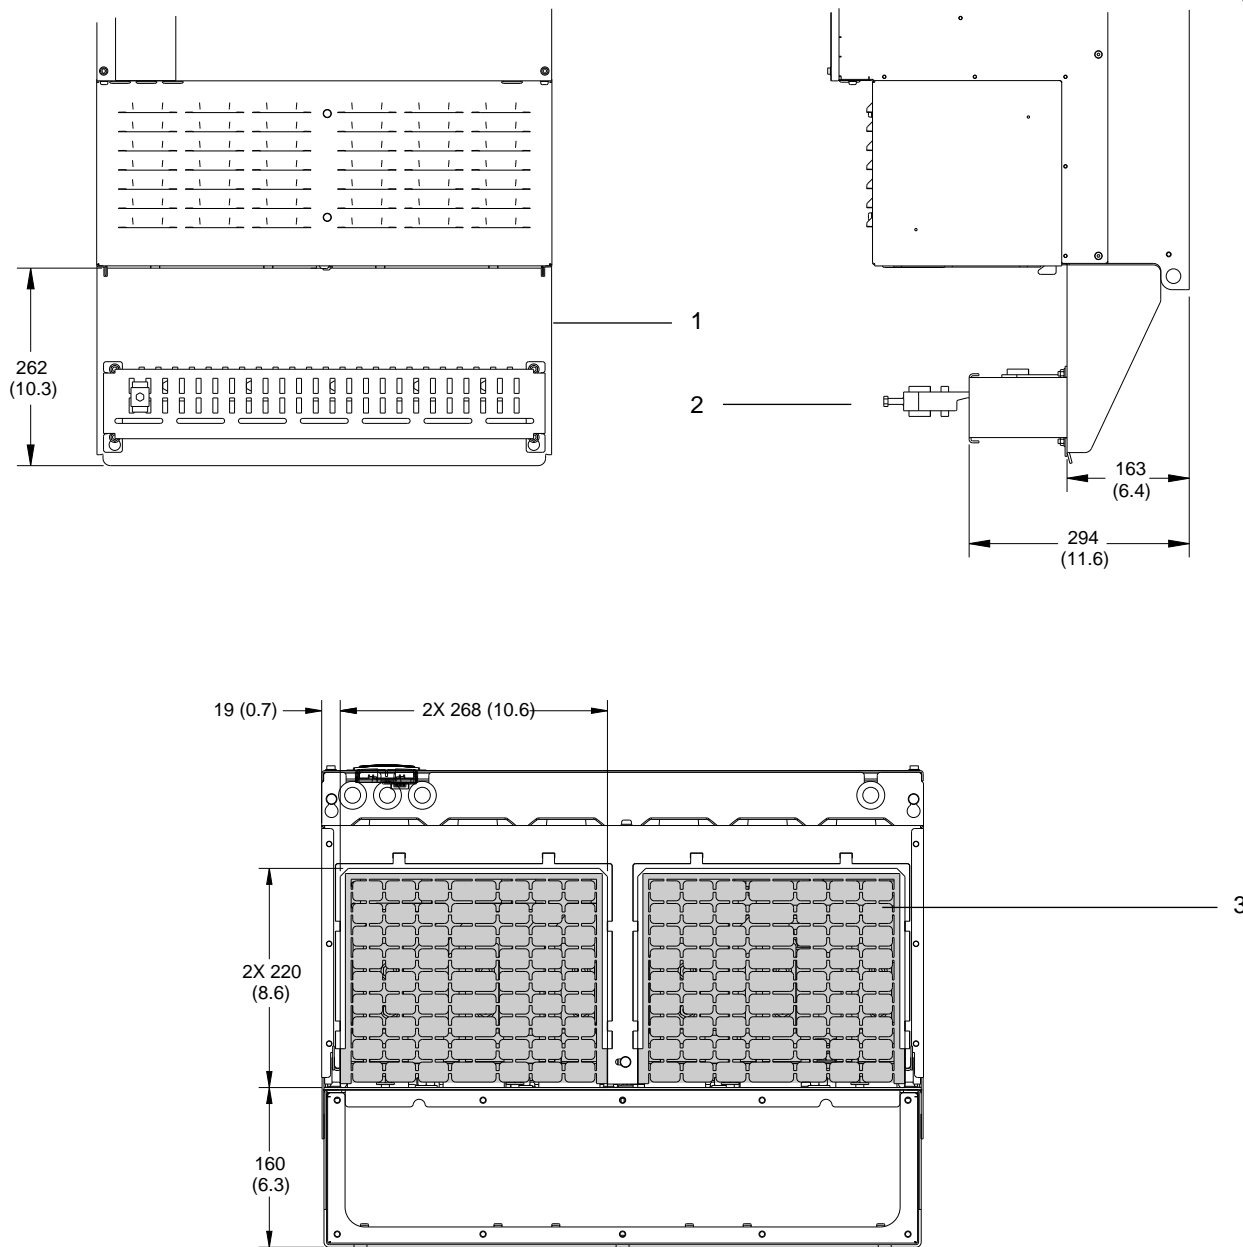

| | |
|---|---------------------------------|
| <p>1 RFI shield termination (standard with RFI option)</p> | <p>2 Cable/EMC clamp</p> |
| <p>3 Cable entry plate</p> | |

Illustration 68: RFI Shield Termination and Cable Entry Plate Dimensions for E4h

9.9 Enclosure Airflow

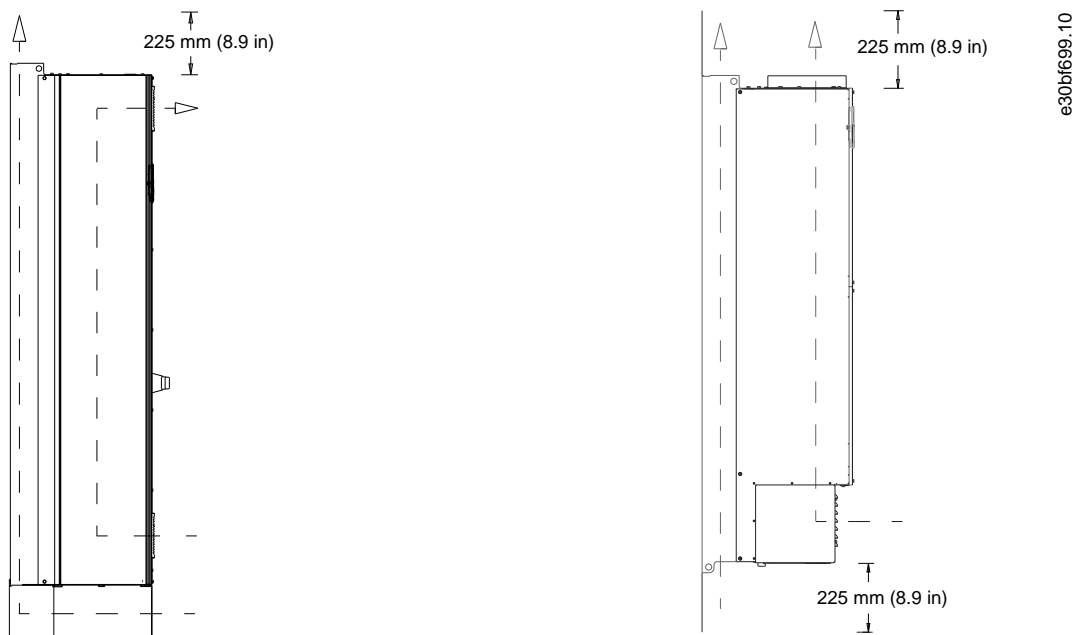


Illustration 69: Airflow for E1h/E2h (Left) and E3h/E4h (Right)

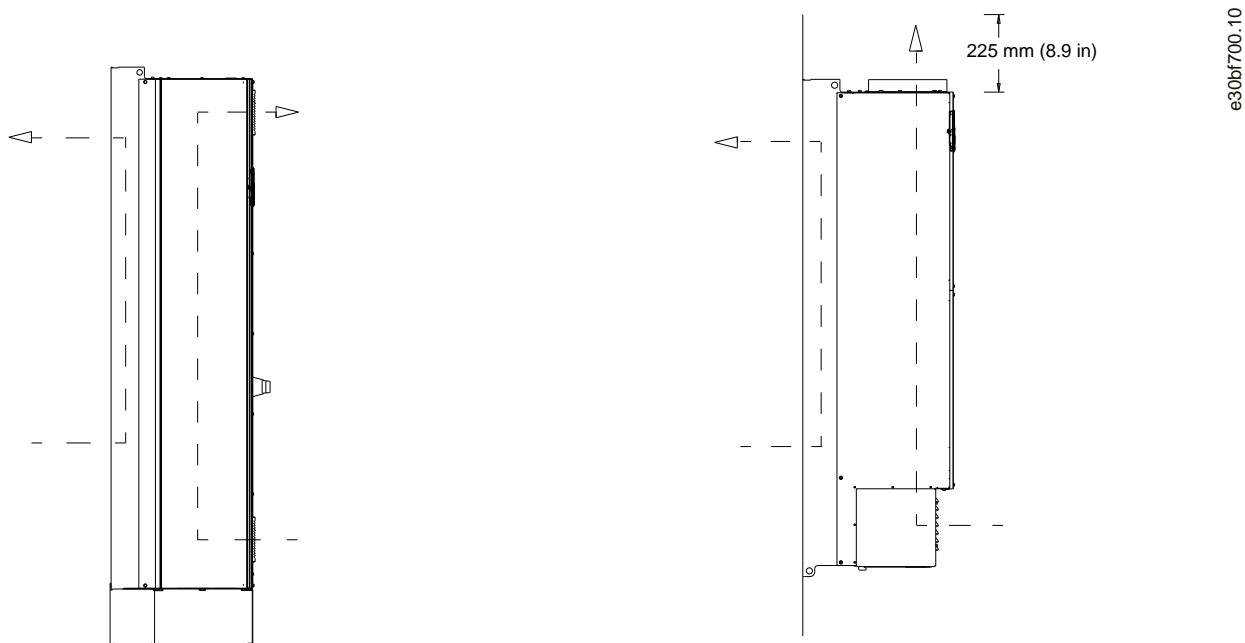


Illustration 70: Airflow Using Back-wall Cooling Kits on E1h/E2h (Left) and E3h/E4h (Right)

9.10 Fastener Torque Ratings

Apply the correct torque when tightening fasteners in the locations that are listed in [table 51](#). Too low or too high torque when fastening an electrical connection results in a bad electrical connection. To ensure correct torque, use a torque wrench.

Table 51: Fastener Torque Ratings

| Location | Bolt size | Torque [Nm (in-lb)] |
|--------------------------------------|-----------|---------------------|
| Mains terminals | M10/M12 | 19 (168)/37 (335) |
| Motor terminals | M10/M12 | 19 (168)/37 (335) |
| Ground terminals | M8/M10 | 9.6 (84)/19.1 (169) |
| Brake terminals | M8 | 9.6 (84) |
| Load sharing terminals | M10/M12 | 19 (168)/37 (335) |
| Regen terminals (Enclosures E1h/E2h) | M8 | 9.6 (84) |
| Regen terminals (Enclosures E3h/E4h) | M10/M12 | 19 (168)/37 (335) |
| Relay terminals | – | 0.5 (4) |
| Door/panel cover | M5 | 2.3 (20) |
| Cable entry plate | M5 | 2.3 (20) |
| Heat sink access panel | M5 | 2.3 (20) |
| Serial communication cover | M5 | 2.3 (20) |

10 Appendix

10.1 Conventions

- Numbered lists indicate procedures.
- Bullet lists indicate other information and description of illustrations.
- Italicized text indicates:
 - Cross reference.
 - Link.
 - Footnote.
 - Parameter name.
 - Parameter group name.
 - Parameter option.
- All dimensions are in mm (inch).

10.2 Abbreviations

Table 52: Abbreviations, Acronyms, and Symbols

| Term | Definition |
|-----------|---|
| °C | Degrees Celsius |
| °F | Degrees Fahrenheit |
| Ω | Ohm |
| AC | Alternating current |
| AEO | Automatic energy optimization |
| ACP | Application control processor |
| AMA | Automatic motor adaptation |
| AWG | American wire gauge |
| CPU | Central processing unit |
| CSIV | Customer-specific initialization values |
| CT | Current transformer |
| DC | Direct current |
| DVM | Digital voltmeter |
| EEPROM | Electrically erasable programmable read-only memory |
| EMC | Electromagnetic compatibility |
| EMI | Electromagnetic interference |
| ESD | Electrostatic discharge |
| ETR | Electronic thermal relay |
| $f_{M,N}$ | Nominal motor frequency |
| FPC | Fan power card |

| Term | Definition |
|---------------|---|
| HF | High frequency |
| HVAC | Heating, ventilation, and air conditioning |
| Hz | Hertz |
| I_{LIM} | Current limit |
| I_{INV} | Rated inverter output current |
| $I_{M,N}$ | Nominal motor current |
| $I_{VLT,MAX}$ | Maximum output current |
| $I_{VLT,N}$ | Rated output current supplied by the drive |
| IEC | International Electrotechnical Commission |
| IGBT | Insulated-gate bipolar transistor |
| I/O | Input/output |
| IP | Ingress protection |
| kHz | Kilohertz |
| kW | Kilowatt |
| L_d | Motor d-axis inductance |
| L_q | Motor q-axis inductance |
| LC | Inductor-capacitor |
| LCP | Local control panel |
| LED | Light-emitting diode |
| LOP | Local operation pad |
| mA | Milliamp |
| MCB | Miniature circuit breakers |
| MCCB | Molded-case circuit breaker |
| MCO | Motion control option |
| MCP | Motor control processor |
| MCT | Motion control tool |
| MDCIC | Multi-drive control interface card |
| mV | Millivolts |
| NEMA | National Electrical Manufacturers Association |
| NTC | Negative temperature coefficient |
| $P_{M,N}$ | Nominal motor power |
| PCB | Printed circuit board |
| PE | Protective earth |
| PELV | Protective extra low voltage |

| Term | Definition |
|-----------|---|
| PHF | Passive harmonic filter |
| PID | Proportional integral derivative |
| PLC | Programmable logic controller |
| P/N | Part number |
| PROM | Programmable read-only memory |
| PS | Power section |
| PTC | Positive temperature coefficient |
| PWM | Pulse width modulation |
| R_s | Stator resistance |
| RAM | Random-access memory |
| RCD | Residual current device |
| Regen | Regenerative terminals |
| RFI | Radio frequency interference |
| RMS | Root means square (cyclically alternating electric current) |
| RPM | Revolutions per minute |
| SCR | Silicon-controlled rectifier |
| SMPS | Switch mode power supply |
| S/N | Serial number |
| STO | Safe Torque Off |
| T_{LIM} | Torque limit |
| $U_{M,N}$ | Nominal motor voltage |
| V | Volt |
| VVC | Voltage vector control |
| X_h | Motor main reactance |

10.3 International/North American Default Parameter Settings

Setting *parameter 0-03 Regional Settings* to [0] International or [1] North America changes the default settings for some parameters.

Table 53: International/North American Default Parameter Settings

| Parameter | International default parameter value | North American default parameter value |
|--|---------------------------------------|--|
| <i>Parameter 0-03 Regional Settings</i> | International | North America |
| <i>Parameter 0-71 Date Format</i> | DD-MM-YYYY | MM/DD/YYYY |
| <i>Parameter 0-72 Time Format</i> | 24 h | 12 h |
| <i>Parameter 1-20 Motor Power [kW]⁽¹⁾</i> | – | – |

| Parameter | International default parameter value | North American default parameter value |
|---|--|---|
| <i>Parameter 1-21 Motor Powr [HP]⁽²⁾</i> | – | – |
| <i>Parameter 1-22 Motor Voltage [V]</i> | 230/400/575 | 208/460/575 |
| <i>Parameter 1-23 Motor Frequency</i> | 50 Hz | 60 Hz |
| <i>Parameter 3-03 Maximum Reference</i> | 50 Hz | 60 Hz |
| <i>Parameter 3-04 Reference Function</i> | Sum | External/Preset |
| <i>Parameter 4-13 Motor Speed High Limit⁽³⁾</i> | 1500 RPM | 1800 RPM |
| <i>Parameter 4-14 Motor Speed High Limit [Hz]⁽⁴⁾</i> | 50 Hz | 60 Hz |
| <i>Parameter 4-19 Max Output Frequency</i> | 100 Hz | 120 Hz |
| <i>Parameter 4-53 Warning Speed High</i> | 1500 RPM | 1800 RPM |
| <i>Parameter 5-12 Terminal 27 Digital Input</i> | Coast inverse | External interlock |
| <i>Parameter 5-40 Function Relay</i> | Alarm | No alarm |
| <i>Parameter 6-15 Terminal 53 High Ref./Feedb. Value</i> | 50 Hz | 60 Hz |
| <i>Parameter 6-50 Terminal 42 Output</i> | Speed 0-HighLim | Speed 4–20 mA |
| <i>Parameter 14-20 Reset Mode</i> | Manual reset | Infinite auto reset |
| <i>Parameter 22-85 Speed at Design Point (RPM)</i> | 1500 RPM | 1800 RPM |
| <i>Parameter 22-86 Speed at Design Point (Hz)</i> | 50 Hz | 60 Hz |
| <i>Parameter 24-04 Fire Mode Max Reference</i> | 50 Hz | 60 Hz |

¹ Visible only when parameter 0-03 Regional Settings is set to [0] International.

² Visible only when parameter 0-03 Regional Settings is set to [1] North America.

³ Visible only when parameter 0-02 Motor Speed Unit is set to [0] RPM.

⁴ Visible only when parameter 0-02 Motor Speed Unit is set to [1] RPM.

Index

| | |
|---------------------------------------|----------------|
| A | |
| A53/A54 switches | 17, 138 |
| Abbreviations | 161 |
| AC mains | 42 |
| See Mains | |
| ADN compliance | 8 |
| Airflow | |
| Enclosure configuration | 159 |
| Rates | 26 |
| Alarms | |
| Definition | 103 |
| Indicator light | 19, 104 |
| List of | 104 |
| Log | 18 |
| Reset | 103 |
| AMA | 70 |
| See Automatic motor adaptation | |
| Ambient conditions | |
| Overview | 23 |
| Specifications | 136 |
| Analog | |
| Input specifications | 138 |
| Input/output descriptions | 59 |
| Input/output terminal locations | 17, 58 |
| Output specifications | 139 |
| Approvals and certifications | 7 |
| ATEX | 24 |
| Auto on | 19, 100 |
| Automatic energy optimization | 69 |
| Automatic motor adaptation | |
| Alarms | 117 |
| Configuring | 70 |
| Preventing motor overheating | 106 |
| Wiring example | 74 |
| Auxiliary contacts | 63 |
| B | |
| Back-wall cooling | 26 |
| Brake | |
| Terminal dimensions | 47, 49, 51, 54 |
| Terminal location | 14, 16 |
| Terminal torque rating | 160 |
| Brake resistor | |
| Terminal location | 17 |
| Warning | 110 |
| Wiring schematic | 40 |
| Wiring the temperature switch | 64 |
| Burst transient | 45 |
| Bus termination switch | 16 |
| C | |
| Cable entry plate | |
| Description | 30 |
| Dimensions for E1h | 146 |
| Dimensions for E2h | 150 |
| Dimensions for E3h | 154 |
| Dimensions for E4h | 158 |
| Torque rating | 160 |
| Cables | |
| Cable length and cross-section | 137 |
| Control | 60 |
| Creating openings for | 30, 31 |
| Installation warning | 35 |
| Mains | 42 |
| Motor | 41 |
| Routing | 57 |
| Shielded | 36 |
| Specifications | 137 |
| Capacitor storage | 23 |
| Circuit breakers | 142 |
| Closed loop | |
| Troubleshooting | 128 |
| Condensation | 23 |
| Control | |
| Cable routing | 57 |
| Cables | 56, 60 |
| Characteristics | 141 |
| Input/output descriptions | 58 |
| Shelf location | 13, 15, 17 |
| Control card | |
| Location | 17 |
| Overtemperature trip point | 131, 133 |
| Cooling | |
| Airflow rates | 26 |
| Dust | 24 |
| Requirements | 25 |

| | | |
|--------------------------------------|-------|----------------|
| Current | | |
| Leakage hazard | | 45 |
| Limits | | 130, 132 |
| Selecting input signal | | 64 |
| D | | |
| Depth | | 12 |
| Design guide | | 136 |
| Digital | | |
| Input | | 137 |
| Input/output descriptions | | 59 |
| Input/output terminal locations | | 16, 58 |
| Output specifications | | 139 |
| Disconnect switch | | 67 |
| Disposal instructions | | 8 |
| Door clearance | | |
| E1h | | 146 |
| E2h | | 150 |
| Door/panel cover torque rating | | 160 |
| Drive | | |
| Clearance requirements | | 25 |
| Definition | | 12 |
| Dimensions | | 12 |
| Initialization | | 73, 73 |
| Mounting configurations | | 25 |
| Status | | 99 |
| Duct cooling | | 26 |
| E | | |
| Electrical specifications, 380–480 V | | 130 |
| Electrical specifications, 525–690 V | | 132 |
| Electromagnetic compatibility (EMC) | | 36 |
| Electronic thermal relay (ETR) | | 35 |
| EN 60664-1 | | 135, 140 |
| EN 61800-3 | | 136 |
| Encoder | | 71 |
| Energy efficiency class | | 136 |
| Environment | | 23, 136 |
| Exterior dimensions | | |
| E1h | | 143 |
| E2h | | 147 |
| E3h | | 151 |
| E4h | | 155 |
| External alarm reset | | 87 |
| External interlock | | 81, 118 |
| F | | |
| Factory default settings | | 73 |
| Fan power card | | |
| Location | | 13, 16 |
| Overtemperature trip point | | 131, 133 |
| Warning | | 125, 127 |
| Fans | | |
| Dust | | 24 |
| External fault | | 110 |
| Internal fault | | 109 |
| Location | | 16 |
| Mixing fan fault | | 124 |
| Required airflow | | 26 |
| Fault log | | 18 |
| Fieldbus | | 36, 113 |
| Floating delta | | 43 |
| Fuses | | |
| Location | | 13, 15 |
| Overcurrent protection | | 35 |
| Specifications | | 130, 133, 141 |
| Warning | | 113 |
| G | | |
| Gases | | 23 |
| Glossary | | 161 |
| Ground | | |
| Connecting to | | 45 |
| Floating delta | | 43 |
| Grounded delta | | 43 |
| Isolated mains | | 43 |
| Terminal dimensions | | 47, 49, 51, 54 |
| Terminal location | | 14, 15 |
| Terminal torque rating | | 160 |
| H | | |
| Hand on | | 19, 100 |
| Heat sink | | |
| Cleaning | | 98 |
| E1h access panel dimensions | | 145 |
| E2h access panel dimensions | | 149 |
| E3h access panel dimensions | | 153 |
| E4h access panel dimensions | | 157 |
| Overtemperature trip point | | 131, 133 |
| Warning | | 114 |
| Heater | | |

| | | | |
|----------------------------------|---------|--|-------------------------|
| Location | 14, 16 | Terminal torque rating | 160 |
| Usage | 23 | Wiring schematic | 40 |
| Wiring of | 63 | | |
| Wiring schematic | 40 | M | |
| Height | 12 | Main menu | 18 |
| | | Mains | |
| I | | Cable specifications | 130, 133 |
| IEC 60068-2-43 | 136 | Connecting | 42 |
| IEC 61800-3 | 136 | Specifications | 135 |
| IEC 721-3-3 | 136 | Terminal dimensions | 47, 49, 51, 54 |
| Indicator lights | 18, 104 | Terminal location | 13, 15 |
| Initial set-up | 67 | Terminal torque rating | 160 |
| Input | | Warning | 105, 113 |
| Voltage | 67 | Mains fuses | 13 |
| Installation | | See Fuses | |
| Electrical | 35 | Maintenance | 24, 98 |
| EMC-compliant | 36, 45 | Measurements | 12 |
| Initialization | 73, 73 | Menu | |
| Load share/regen terminals | 34 | Keys | 18 |
| Mechanical | 27, 30 | Motor | |
| Qualified personnel | 9 | Cable specifications | 130, 133 |
| Quick set-up | 69 | Class protection | 24 |
| Requirements | 25 | Connecting | 41 |
| Start up | 71 | Interlock | 61 |
| Tools required | 22 | Output | 135 |
| Interference | | Terminal dimensions | 47, 49, 51, 54 |
| EMC | 36 | Terminal location | 14, 16 |
| Radio | 12 | Terminal torque rating | 160 |
| Interior view | 13, 15 | Testing rotation | 71 |
| Interlock | 61 | Torque | 136 |
| Isolated mains | 43 | Troubleshooting | 128 |
| | | Warning | 107, 107, 111, 112, 112 |
| L | | Wiring thermistor | 89 |
| L1, L2, L3 | 135 | Mounting configurations | 25 |
| See Mains | | | |
| Label | 22 | N | |
| LCP | | Nameplate | 22 |
| Display | 17 | Navigation keys | 18 |
| Indicator light | 0 | | |
| LCP Indicator light | 18 | O | |
| Location | 13, 15 | Open-loop speed control configurations | 75 |
| Troubleshooting | 127 | Optional equipment | 67 |
| Leakage current | 11, 45 | Overcurrent protection | 35 |
| Lifting | 22, 26 | Overvoltage | 130, 132 |
| Load share | | | |
| Terminal location | 15 | | |

| | | |
|---|----------------------|--|
| P | | |
| Parameters | 18 | |
| Pedestal | 27 | |
| PELV | 89 | |
| Periodic forming | 23 | |
| Phase imbalance | 113 | |
| Pigtails | 36 | |
| Potential equalization | 45 | |
| Potentiometer | 59 | |
| Power card | | |
| Location | 17 | |
| Overtemperature trip point | 131, 133 | |
| Power rating | 12, 22, 130, 132 | |
| Pre-start Check List | 67 | |
| Programming | 18 | |
| Pulse start/stop wiring configuration | 85 | |
| Pulse/encoder input specifications | 138 | |
| Pump | | |
| Wiring a fixed variable speed pump | 96 | |
| Wiring lead pump alternation | 97 | |
| Q | | |
| Qualified personnel | 7, 9 | |
| Quick menu | 18 | |
| R | | |
| Ramp up/down time | 130, 132 | |
| Recycling | 8 | |
| Regen | | |
| Terminal location | 15 | |
| Terminal torque rating | 160 | |
| Wiring configuration | 90 | |
| Regional settings | 163 | |
| Relay | | |
| Description | 60 | |
| Location | 17 | |
| Output specifications | 140 | |
| Terminal torque rating | 160 | |
| Reset | 19, 120 | |
| RFI | | |
| E3h shield dimensions | 154 | |
| E4h shield dimensions | 158 | |
| Location | 13, 16 | |
| RS485 | 58, 62, 88, 139, 160 | |
| Run/stop command | 82 | |
| Run/stop wiring configuration | 81 | |
| S | | |
| S201/S202 switches | 138 | |
| Safe Torque Off | | |
| Terminal 37 specifications | 137 | |
| Warning | 120, 121, 121, 121 | |
| Wiring schematic | 40 | |
| Safety instructions | 35 | |
| Serial communication | | |
| Configuring RS485 | 62 | |
| Descriptions and default settings | 58 | |
| Terminal locations | 16 | |
| Service | 98 | |
| Setup | 18 | |
| Short circuit | | |
| Alarm | 108 | |
| Short circuit current ratings (SCCR) | 142 | |
| Sleep mode | 102 | |
| Software version number | 7 | |
| Space heater | 14 | |
| See Heater | | |
| Speed reference | 75 | |
| Start/stop command | 84 | |
| Status messages | 99, 100, 100 | |
| Storage | 23 | |
| Supply voltage | 135 | |
| Switches | | |
| A53 and A54 | 40, 64, 138 | |
| Brake resistor temperature | 40, 64 | |
| Bus termination | 16, 40, 58, 62 | |
| Disconnect | 10, 40, 67, 98, 142 | |
| Symbols | 9 | |
| T | | |
| Temperature | 23 | |
| Terminals | | |
| Analog input/output descriptions | 59 | |
| Control locations | 58 | |
| Digital input/output descriptions | 59 | |
| E1h dimensions (front and side views) | 47 | |
| E2h dimensions (front and side views) | 49 | |
| E3h dimensions (front and side views) | 51 | |
| E4h dimensions (front and side views) | 54 | |
| Relays | 59 | |
| Serial communication descriptions | 58 | |

| | | | |
|---------------------------------|---------------------------|------------------------|----|
| Terminal 27 | 59, 62 | Open loop | 75 |
| Terminal 37 | 59 | Regen | 90 |
| Thermal protection | 7 | Start/stop | 84 |
| Thermistor | | Thermistor | 89 |
| Cable routing | 57 | Wiring schematic | 40 |
| Terminal description | 59 | | |
| Warning | 121 | | |
| Wiring configuration | 89 | | |
| Tools | 23 | | |
| Torque | | | |
| Characteristics | 136 | | |
| Fastener ratings | 160 | | |
| Troubleshooting | 129 | | |
| Warning | 107 | | |
| Transducers | 59 | | |
| Trip lock | 103 | | |
| Troubleshooting | 127 | | |
| | | | |
| U | | | |
| UL certification | 7 | | |
| Unintended start | 10, 67, 98 | | |
| USB | | | |
| Port location | 17 | | |
| Specifications | 141 | | |
| | | | |
| V | | | |
| Version number | 7 | | |
| Voltage | | | |
| Safety warning | 9, 67, 108, 111, 112, 112 | | |
| Selecting input signal | 64 | | |
| Voltage level | 137 | | |
| | | | |
| W | | | |
| Warnings | | | |
| Definition | 103 | | |
| Indicator light | 19 | | |
| List of | 104 | | |
| Weight | 12 | | |
| Width | 12 | | |
| Wires | | | |
| Access | 56 | | |
| Wiring configurations | | | |
| External alarm reset | 87 | | |
| Fixed variable speed pump | 96 | | |
| Lead pump alternation | 97 | | |

ENGINEERING
TOMORROW

Danfoss

.....
Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.
.....

Danfoss A/S
Ulsnaes 1
DK-6300 Graasten
vlt-drives.danfoss.com

