

1. General

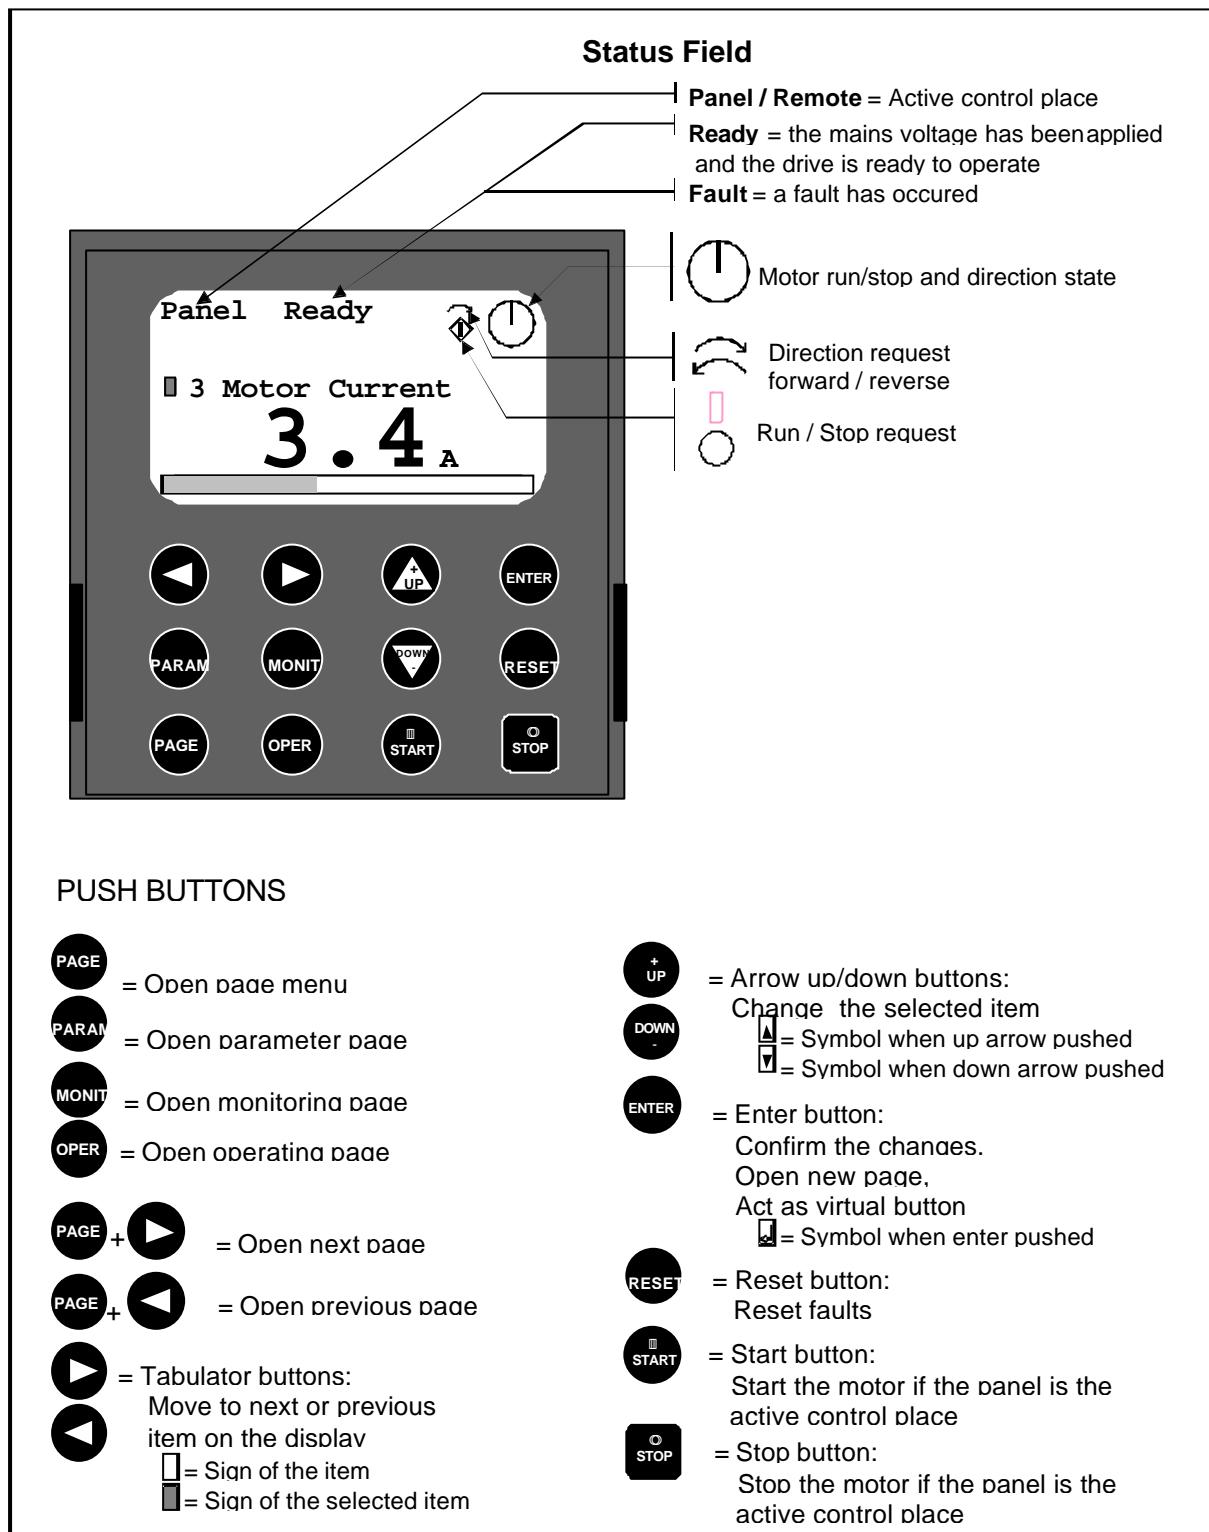


Figure 1. Graphical control panel with LCD display.

2. Page menu

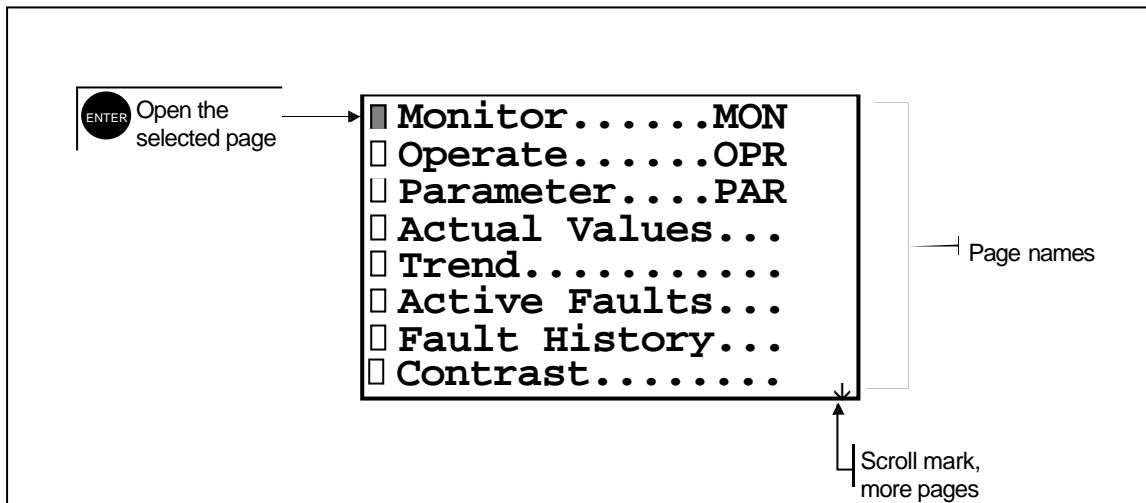


Figure 2. Menu.

3. Monitoring page

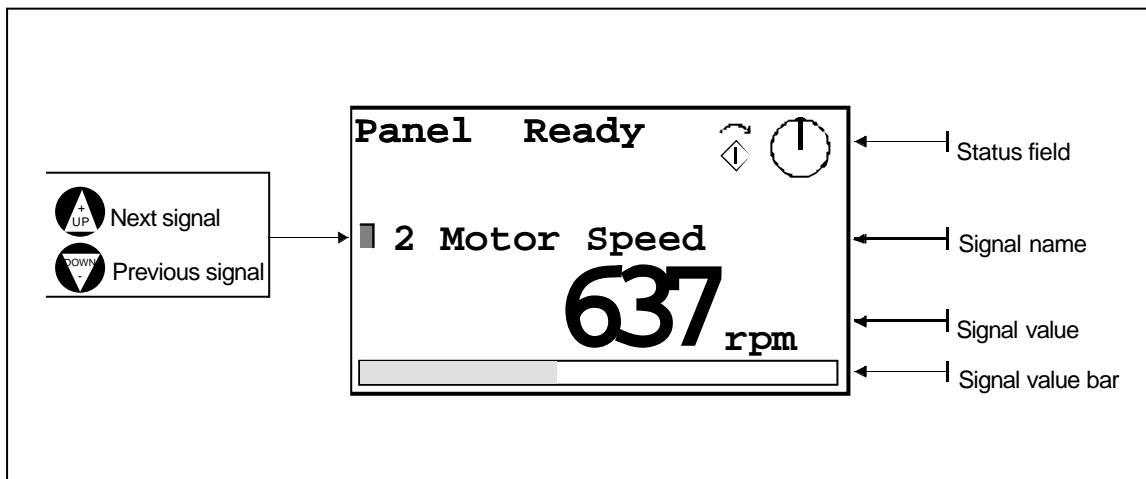


Figure 3. Monitoring signals (reachable from menu page or button).

4. Operating page

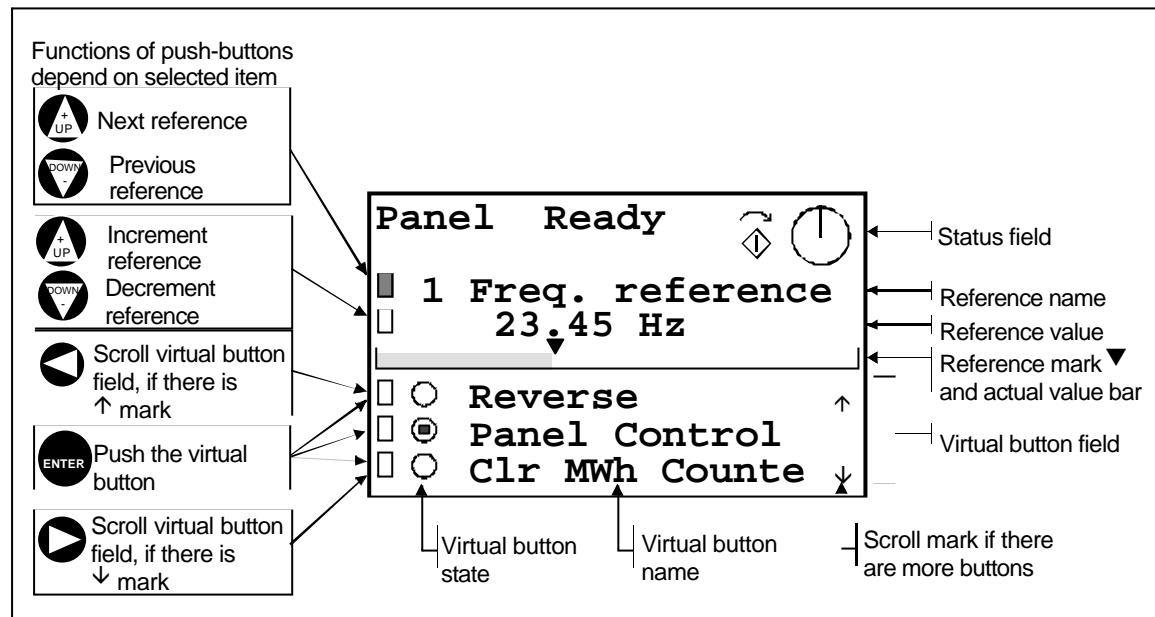


Figure 4. Reference value setting and virtual button (reachable from menu page or -button).

5. Parameter page

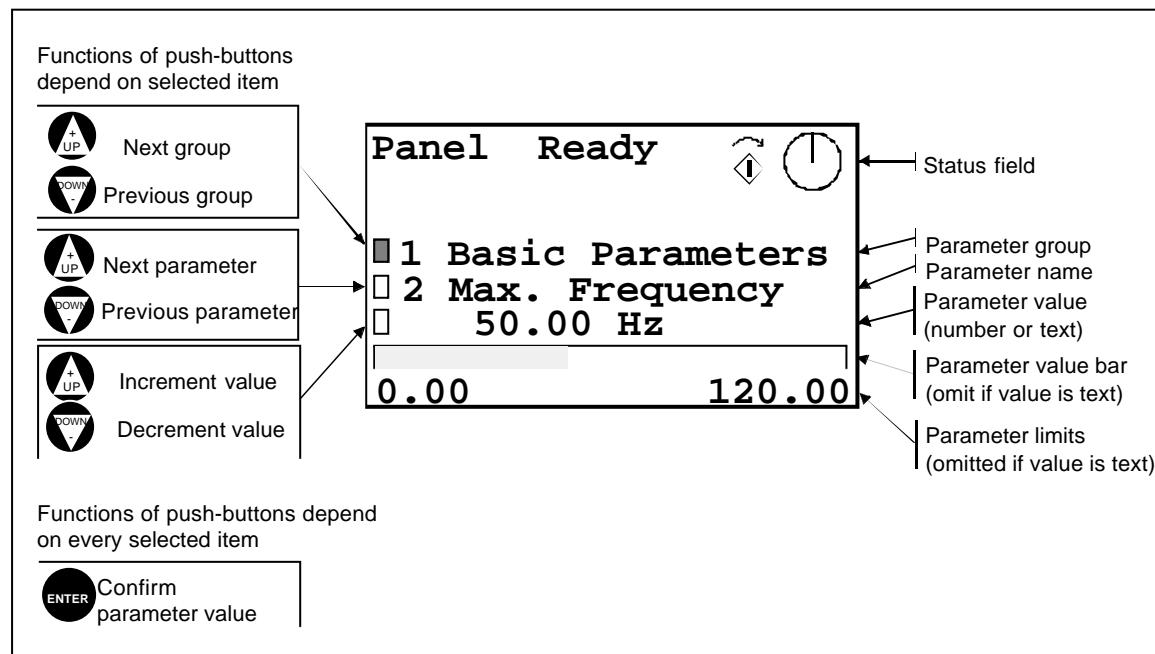


Figure 4. Parameter value setting.

6. Actual values page

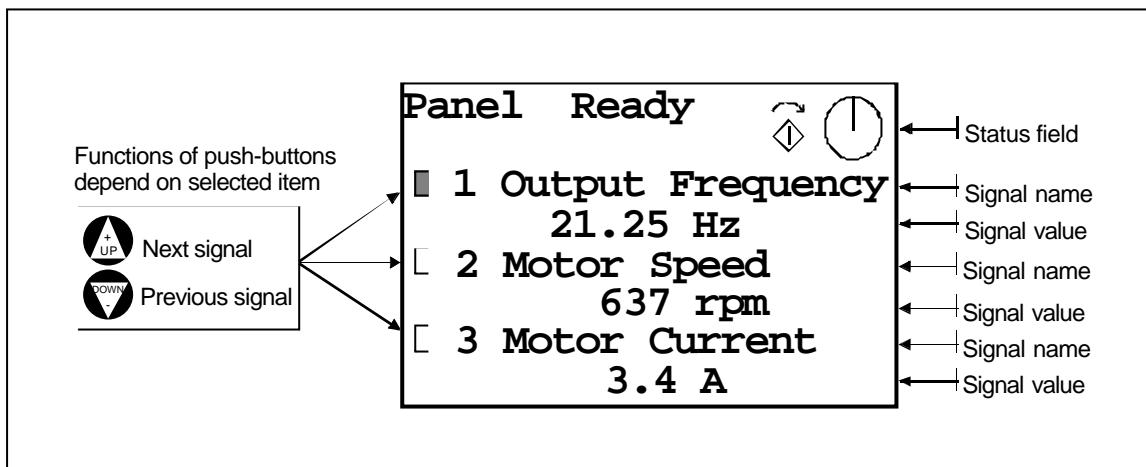


Figure 6. Actual value signals monitoring.

7. Trend page

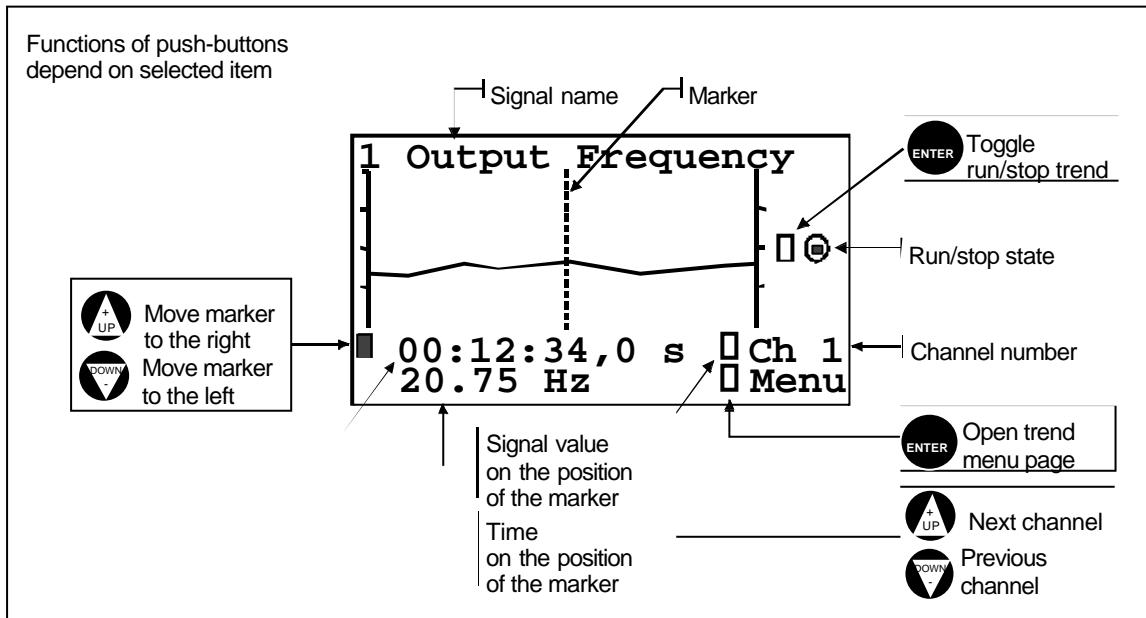


Figure 7. Trend of the signals.

8. Trend menu page

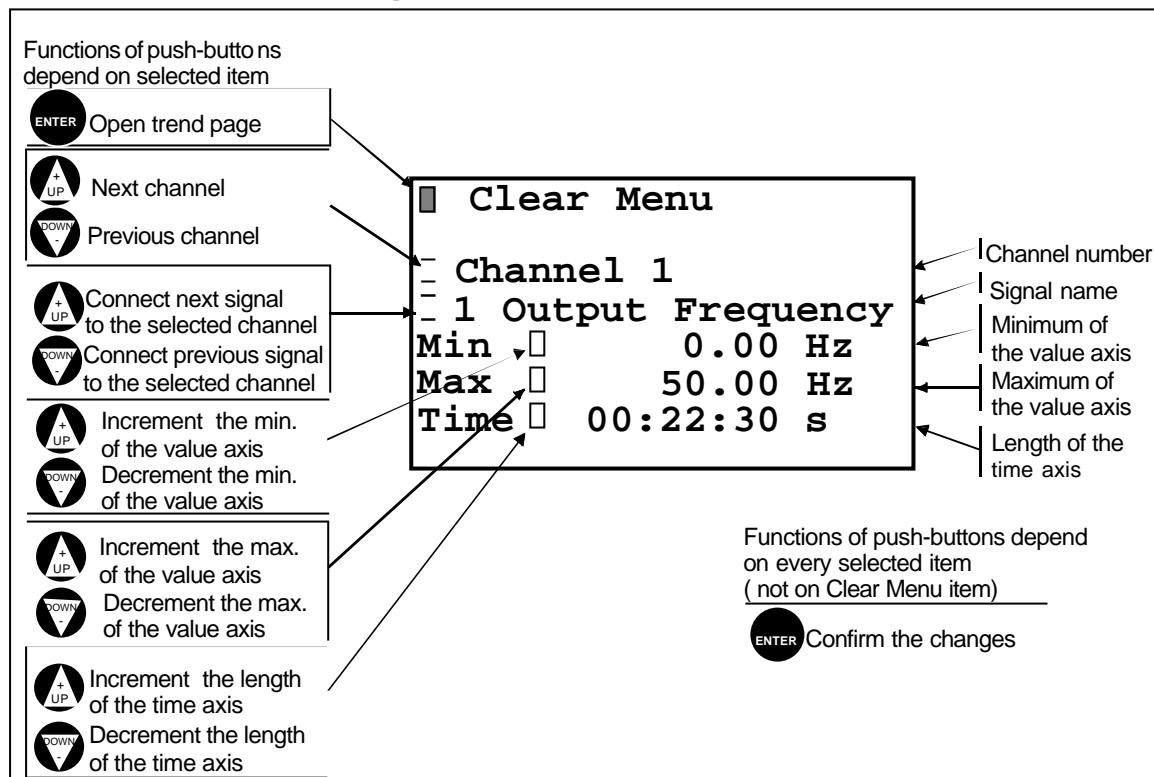


Figure 8. Connect trend signals and change scale of the signal.

9. Active fault page

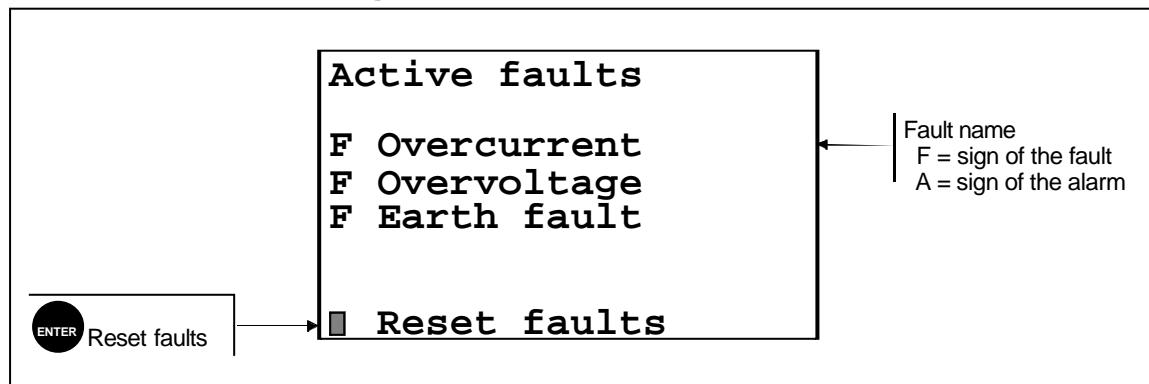


Figure 9. Active fault display.

10. Fault history page

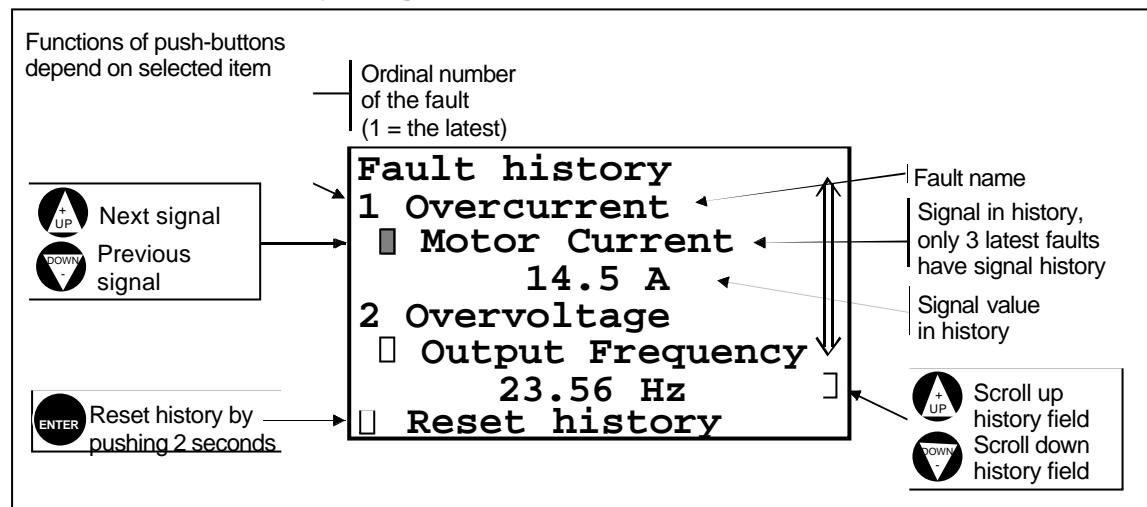


Figure 10. Fault history display.

11. Contrast page

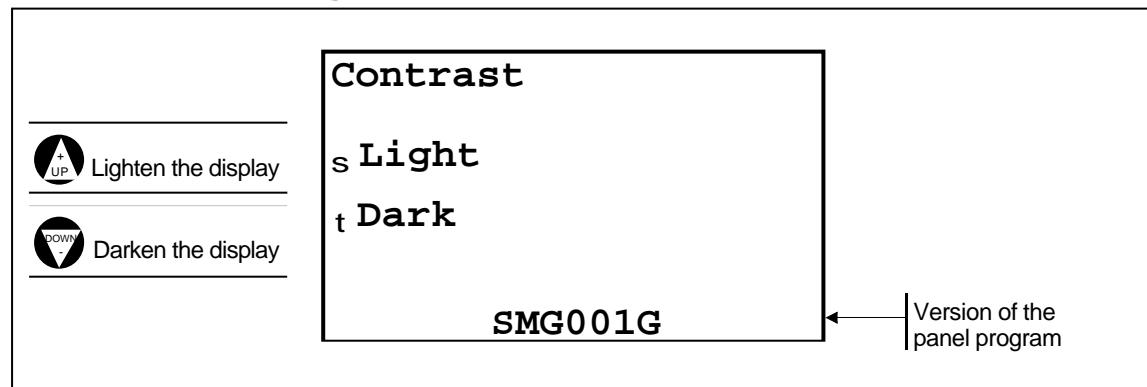


Figure 11. Adjust contrast.

12. Info/Files page

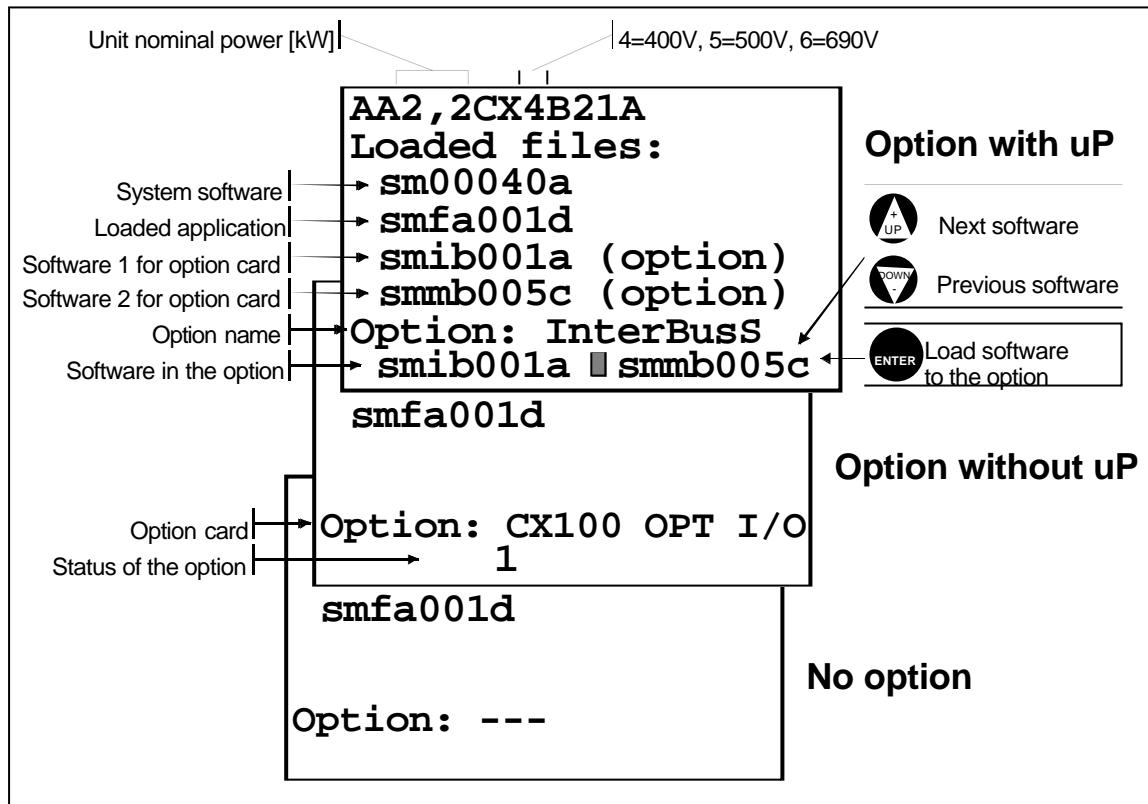


Figure 12. Software information and loading software to the option card.