



PLUS+1® Autonomous Control Library

70405444v100

Revision History

This file contains important supplementary and late-breaking information that may not appear in the main product documentation. We recommend that you read this file in its entirety.

Version 1.00 (February 2020)

What is Included

- Autonomous Control Library User Manual
- Recommended Machine Startup Procedures (In HWD)

What is New

- Initial release

Known issues

- Do not use Autonomous Control Library function blocks in applications in version 11.0 of PLUS+1® GUIDE.
 - The PLUS+1® GUIDE compiler stops working when ACL function blocks are used in version 11.0.
 - You can successfully compile applications that use the blocks in PLUS+1® GUIDE version 10.1 and versions 11.1 and later.
 - ClearQuest: P100004836.

Minimum Requirements

- PLUS+1 GUIDE 10.1 or greater
- PLUS+1 Service Tool 10.1 or greater

Support

Web

<https://www.danfoss.com/en/products/software/dps/plus1-software-services-support-and-training/plus1-support-and-services/>

Telephone

North America: Toll free number 1-888-50PLUS1 (1-888-507-5871)

Europe: +46-10-44 00 300

E-mail

plus1helpdesk@danfoss.com

Terms of Use

The Danfoss Software License Agreement completely defines the licensed use of this software.

Information in this document is provided in connection with Danfoss PLUS+1 Tool set. No license, express or implied, to any intellectual property rights is granted by this document.

Danfoss disclaims all warranties and liabilities for the use of this document and the information contained herein and assumes no responsibility for any errors, which may appear in this document, nor does Danfoss make a commitment to update the information contained herein. Danfoss reserves the right to make changes to this document at any time, without notice.

Copyright

© 2020 Danfoss, Inc. All rights reserved.

Third party trademarks and brand names are the property of their respective owners.