

## NOTES:

1. \* INDICATES COMPONENTS NOT SUPPLIED BY MANUFACTURER.

2. REFER TO THE INSTALLATION AND OPERATION MANUAL FOR DRIVE FUNCTIONS AND PARAMETER SETTINGS.

3. BRANCHCIRCUIT PROTECTION, INPUT POWER AND MOTOR WIRING MUST BE SELECTED IN ACCORDANCE WITH THE N.E.C., ANY APPLICATION LOCAL CODES AND THE LOAD CURRENT RATING.

4. REPLACE JUMPER 'J1' WITH NORMALLY CLOSED SAFETY INTERLOCK CONTACT AS NECESSARY. CONTACT MUST BE RATED 1/4 HP @ 120VAC MINIMUM.

5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY FOR FOLLOWING CONDITIONS:

5.1. HIGHER SWITCHING FREQUENCY THAN DRIVE DEFAULT

5.2. HIGHER THAN PANEL LISTED AMBIENT TEMPERATURES

5.3. ELEVATION ABOVE 3300 FEET (1000 METERS)

5.4. LONG MOTOR LEAD LENGTHS


THE FOLLOWING TABLE LISTS THE PARAMETERS THAT ARE SET DIFFERENT FROM THE DRIVE DEFAULT SETTINGS. ADDITIONAL PARAMETER SETTINGS MAY BE REQUIRED FOR YOUR APPLICATION.


WARNING!

## DRIVE PARAMETER SETTINGS

PARAMETER #	NAME	SETTING	VALUE HZ	
0-02	MOTOR SPEED UNIT	1		
0-03	-03 REGIONAL SETTINGS		NORTH AMERICA	
1-03	TORQUE CHAR.	3	AUTO ENERGY OPTIM VT	
5-02	TERMINAL 29 TYPE	TERMINAL 29 TYPE 1 OU		
5-31	TERMINAL 29		RUNNING	
14-20	RESET MODE 13 INFINITE AU		INFINITE AUTO REST	

В	0540440	44 /40	NOTICE -  HIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.  IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND	DRN / TM	NAME		EMA 3R,208V,3C N DISC, DRIVE FUSE	Danfoss
DR	SP10119	00 /10	THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL	APR	,3MB,IR,SINGLE MOTOR,1 FAN		Our J	
REV	ECN	DATE	NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES	DTM	MODEL	VLT	PAGE 1 OF 2 SIZE A DWG 1 8	5B0147
11/2	2011	DATE	AND SHALL BE RETURNED UPON REQUEST.				/ / /	

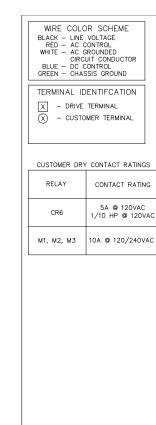

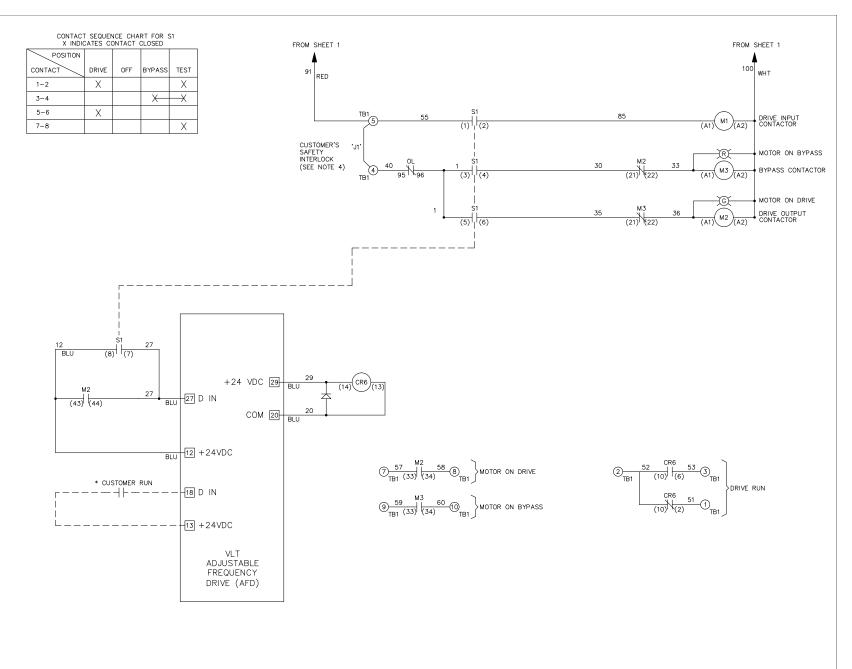

В		
Α	SP10119	11/10
DR	SP10076	09/10
REV	ECN	DATE

- NOTICE -
THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.
IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND
THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD
AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED
IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL
NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED
TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES
AND SHALL BE RETURNED UPON REQUEST.

DRN	D TM	
ΔPR		
		DTM

DTM

NAME NEMA 3R,208V,3C ,MAIN DISC, DRIVE FUSE ,3MB,IR,SINGLE MOTOR,1 FAN

Danfoss
---------

MODEL VLT

page <u>2</u> of <u>2</u>

<sup>e</sup>a | <sup>rwg</sup> 185B01