

## WARNING!

THE FOLLOWING TABLE LISTS THE PARAMETERS THAT ARE SET DIFFERENT FROM THE DRIVE DEFAULT SETTINGS. ADDITIONAL PARAMETER SETTINGS MAY BE REQUIRED FOR YOUR APPLICATION.

#### ATEC.

- 1. \*INDICATES COMPONENTS NOT SUPPLIED BY MANUFACTURER.
  2. REFER TO THE INSTALLATION AND OPERATION MANUAL FOR DRIVE FUNCTIONS AND PARAMETER SETTINGS.
- 3. BRANCHCIRCUIT PROTECTION, INPUT POWER AND MOTOR WIRING MUST BE SELECTED IN ACCORDANCE WITH THE N.E.C., ANY APPLICATION LOCAL CODES AND THE LOAD CURRENT RATING.
- 4. REPLACE JUMPER 'J1' WITH NORMALLY CLOSED SAFETY INTERLOCK CONTACT AS NECESSARY. CONTACT MUST BE RATED 1/4 HP @ 120VAC MINIMUM.
- 5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY FOR FOLLOWING CONDITIONS:
- 5.1. HIGHER SWITCHING FREQUENCY THAN DRIVE DEFAULT
- 5.2. HIGHER THAN PANEL LISTED AMBIENT TEMPERATURES
- 5.3. ELEVATION ABOVE 3300 FEET (1000 METERS)
- 5.4. LONG MOTOR LEAD LENGTHS
- 6. WHEN MOTOR OVERLOADS SIZES ARE DIFFERENT, MOTOR 1 WILL BE THE LARGER OF THE TWO MOTORS

### DRIVE PARAMETER SETTINGS

| PARAMETER # NAME       |  | SETTING | VALUE              |
|------------------------|--|---------|--------------------|
| 0-02 MOTOR SPEED UNIT  |  | 1       | HZ                 |
| 0-03 REGIONAL SETTINGS |  | 1       | NORTH AMERICA      |
| 1-03 TORQUE CHAR.      |  | 1       | VARIABLE TORQUE    |
| 5-02 TERMINAL 29 TYPE  |  | 1       | OUTPUT             |
| 5-31 TERMINAL 29       |  | 5       | RUNNING            |
| 14-20 RESET MODE       |  | 13      | INFINITE AUTO REST |
|                        |  |         |                    |
|                        |  |         |                    |

| В   |         |       | - NOTICE - THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.   | DRN  | NAME  | Ν        | EMA 3R,208V,3C  | - Lu    |
|-----|---------|-------|--|------|-------|----------|---|---------|
| А   | SP10119 | 11/10 | IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED | DIM  |       | •        | N DISC, DRIVE FUSE                                      | Janjoos |
| DR  | SP10076 | 09/10 | IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL  NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED  | APR  | MODEL | ,314161, | IR,DUAL MOTOR,1 FAN                                     |         |
| REV | ECN     | DATE  | NOT BE REPRODUCED OR OPIED IN WHOLE OR IN PART, OR DISCLOSED TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES AND SHALL BE RETURNED UPON REQUEST.                                 | D TM | MODEL | VLT      | PAGE $\underline{1}$ of $\underline{2}$ Size $A$ No. 18 | 5BU154  |



CIRCUIT CONDUCTOR
BLUE - DC CONTROL
GREEN - CHASSIS GROUND


# TERMINAL IDENTIFCATION


- DRIVE TERMINAL


CUSTOMER TERMINAL

#### CUSTOMER DRY CONTACT RATINGS

| RELAY      | CONTACT RATING                  |  |
|------------|---------------------------------|--|
| CR1, CR6   | 5A @ 120VAC<br>1/10 HP @ 120VAC |  |
| M1, M2, M3 | 10A @ 120/240VAC                |  |

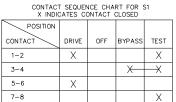

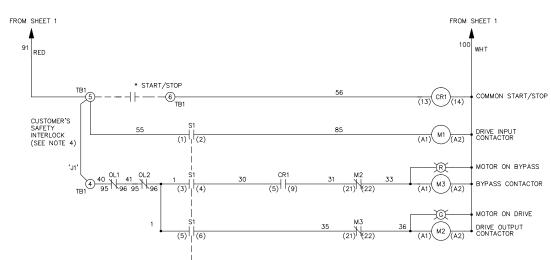

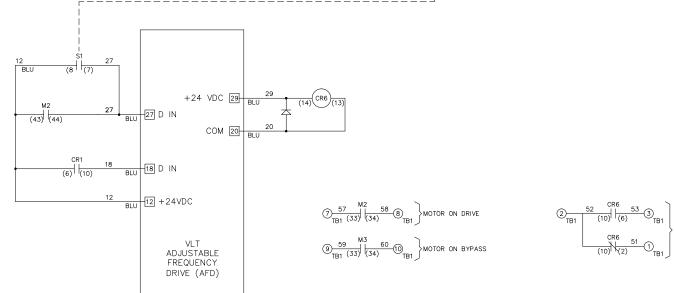

| В   |         |       |
|-----|---------|-------|
| Α   | SP10119 | 11/10 |
| DR  | SP10076 | 09/10 |
| REV | ECN     | DATE  |

- NOTICE 
THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.
IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND
THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD
AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED
IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL
NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED
TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES
AND SHALL BE RETURNED UPON REQUEST.

| DRN | D TM |
|-----|------|
| APR |      |

DTM

NAME NEMA 3R,208V,3C ,MAIN DISC, DRIVE FUSE ,3MB1,IR,DUAL MOTOR,1 FAN



MODEL

VLT

PAGE <u>2</u> OF <u>2</u>

· | 312L A

PWG 185B0154