WIRE COLOR SCHEME TERMINAL IDENTIFICATION BLACK - LINE VOLTAGE RED - AC CONTROL - DRIVE TERMINAL WHITE - AC GROUNDED - CUSTOMER TERMINAL CIRCUIT CONDUCTOR BLUE - DC CONTROL GREEN - CHASSIS GROUND EARTH GROUND EARTH GROUND \neg 4T1 (L1) M2 4T2 (L2) (T2) 2T1 * AC MOTOR 1 *CUSTOMER BLK 2L1 5L1 L1/R/91 VLT (L1) (T1) 1T1 (L1) T1 INPUT SUPPLIED T1/U/96 -[F16B] 5L2 [F16A] POWER ADJUSTABLE FREQUENCY (L2) (T2) 1T2 (L2) T2 2T2 FEEDER BLK 2L2 T2/V/97 3 PH, 600V, L2/S/92 DRIVE |F16B| 5L3 | L2/5/92 | |F16C| 5L3 | L3/T/93 2T3 (L3) (T3) 1T3 (L3) T3 CIRCUIT BLK 2L3 4T3 (L3) (T3) T3/W/98 PROTECTION ``~^ (AFD) 60Hz (SEE NOTE 3) CB1 DRIVE INPUT FUSES CIRCUIT BREAKER (L1) (T1) (L2) (T2) *AC MOTOR 2 EARTH GROUND GRN (L3) (T3) (L3) (T3) 3T3 (L3) 163 RED 100 WHT F12 X2 X3 250V 115VAC T2 HEATER (SET: 65° F) (12) (4) (12) 5 (11) TS1 CR6 167 (SET: 80° F) (9) (5) (23) (24) TB2 TS1 TO SHEET 2 TO SHEET 2

WARNING!

THE FOLLOWING TABLE LISTS THE PARAMETERS THAT ARE SET DIFFERENT FROM THE DRIVE DEFAULT SETTINGS. ADDITIONAL PARAMETER SETTINGS MAY BE REQUIRED FOR YOUR APPLICATION.


1. * INDICATES COMPONENTS NOT SUPPLIED BY MANUFACTURER.

- REFER TO THE INSTALLATION AND OPERATION MANUAL FOR DRIVE FUNCTIONS AND PARAMETER SETTINGS.
- 3. FEEDER CIRCUIT PROTECTION, INPUT POWER AND MOTOR WIRING MUST BE SELECTED IN ACCORDANCE WITH THE N.E.C., ANY APPLICATION LOCAL CODES AND THE LOAD CURRENT RATING.
- 4. REPLACE JUMPER 'J1' WITH NORMALLY CLOSED SAFETY INTERLOCK CONTACT AS NECESSARY. CONTACT MUST BE RATED 1/4 HP @ 120VAC MINIMUM.
- 5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY FOR FOLLOWING CONDITIONS: 5.1. HIGHER SWITCHING FREQUENCY THAN DRIVE DEFAULT
- HIGHER THAN PANEL LISTED AMBIENT TEMPERATURES
- 5.3. ELEVATION ABOVE 3300 FEET (1000 METERS)
- 5.4. LONG MOTOR LEAD LENGTHS

DRIVE PARAMETER SETTINGS

PARAMETER #	NAME	SETTING	VALUE
0-02	MOTOR SPEED UNIT	1	HZ
0-03	REGIONAL SETTINGS	1	NORTH AMERICA
1-03	TORQUE CHAR.	3	AUTO ENERGY OPTIM VT
5-02	TERMINAL 29 TYPE	1	OUTPUT
5-31	TERMINAL 29	5	RUNNING
14-20	RESET MODE	13	INFINITE AUTO REST

В			- NOTICE - THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.	DRN	NAME		EMA 3R,600V,2C		The sheet
А	SP10119	11/10	IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED	D TM			IN CB ,DRIVE FU		Janjose
DR	SP10076	ln9 /10	IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL	APR	LIODEL	, JMBT, CONT	ACT MOTOR SEL	EUI, I F.	AN
REV	ECN	DATE	NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES AND SHALL BE RETURNED UPON REQUEST.	D TM	MODEL	VLT	PAGE <u>1</u> OF <u>2</u>	SIZE	No. 185B0/46

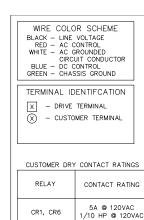

10A @ 120/240VAC





X INDICATES CONTACT CLOSED				
POSITION				
CONTACT	DRIVE	OFF	BYPASS	
13-14			Χ	
23-24	Χ			

)	CONTIA
ON.	13-14
UN	

CONTACT SEQUENCE CHART FOR S2

X INDICATES CONTACT CLOSED				
MOTOR 1	AUTO	MOTOR 2		
X	X			
		X		
	X	X		
Х				

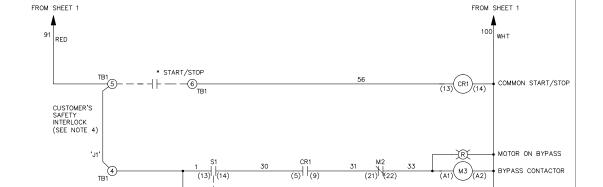

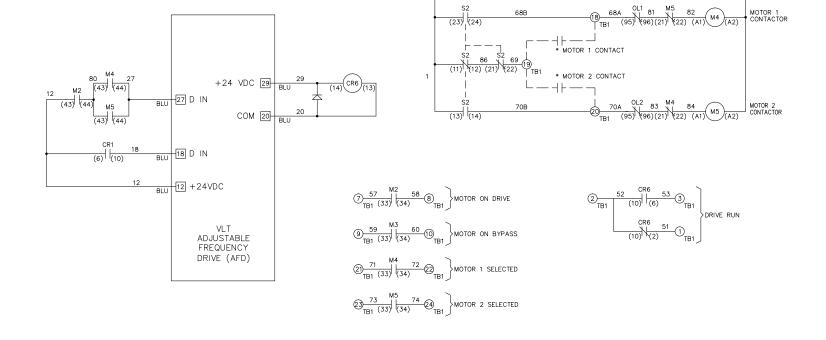

В		
Α	SP10119	11/10
DR	SP10076	09/10
RFV	FCN	DATE

- NOTICE -THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES. IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES AND SHALL BE RETURNED UPON REQUEST.

DRN		NAME
DIVIA		147 (141
	DTM	
	DINI	
APR		İ
APK		11000
	$\cap TII$	MODEL
	DIN	

NEMA 3R,600V,2C ,MAIN CB ,DRIVE FUSE ,3MB1,CONTACT MOTOR SELECT,1 FAN

VLT