WIRE COLOR SCHEME TERMINAL IDENTIFICATION BLACK - LINE VOLTAGE RED - AC CONTROL X - DRIVE TERMINAL WHITE - AC GROUNDED X - CUSTOMER TERMINAL CIRCUIT CONDUCTOR BLUE - DC CONTROL GREEN - CHASSIS GROUND EARTH GROUND EARTH GROUND GRN / \neg * AC MOTOR OL 4T1 (L1) M2 (T1) 2T1 *CUSTOMER (L1) | (T1) 3L1 (U1) (U2) 4L1 | F16A| 5L1 | L1/R/91 L1 (L1) (T1) VLT (L1)_{XX} T1 INPUT SUPPLIED T1/U/96 POWER (L2) (T2) 3L2 (V1) (V2) 4L2 [F16B] 5L2 L2/S/92 ADJUSTABLE FREQUENCY BLK 2L2 4T2 (L2) (T2) 2T2 (L2) T2 BRANCH L2 (L2) (T2) T2/V/97 3 PH, 600V, (L3) (L3) (X3) 3L3 (W1) (W2) 4L3 (F16C) 5L3 L3/T/93 DRIVE (L3)_C T3 CIRCUIT L3 (L3) (T3) BLK 2L3 4T3 (L3) (T3) PROTECTION T3/W/98 (AFD) 60Hz (SEE NOTE 3) INPUT DRIVE INPUT FUSES MAIN DISCONNECT REACTOR (L1) (T1) (L2) (T2) EARTH GROUND GRN (L3) (T3) 163 RED 100 WHT -| F12 |-X2 X3 250V 115VAC T2 (3)_____ (12) 5 (11) TS1 HEATER (SET: 65° F) (12) (4) CR6 167 (9) (5) (2) FAN 1 (SET: 80° F) (23) (24) TB2 TS1 TO SHEET 2 TO SHEET 2

WARNING!

THE FOLLOWING TABLE LISTS THE PARAMETERS THAT ARE SET DIFFERENT FROM THE DRIVE DEFAULT SETTINGS. ADDITIONAL PARAMETER SETTINGS MAY BE REQUIRED FOR YOUR APPLICATION.

NOTES:

1. * INDICATES COMPONENTS NOT SUPPLIED BY MANUFACTURER.

- 2. REFER TO THE INSTALLATION AND OPERATION MANUAL FOR DRIVE FUNCTIONS AND PARAMETER SETTINGS.
- 3. BRANCHCIRCUIT PROTECTION, INPUT POWER AND MOTOR WRING MUST BE SELECTED IN ACCORDANCE WITH THE N.E.C., ANY APPLICATION LOCAL CODES AND THE LOAD CURRENT RATING.
- 4. REPLACE JUMPER 'J1' WITH NORMALLY CLOSED SAFETY INTERLOCK CONTACT AS NECESSARY. CONTACT MUST BE RATED 1/4 HP @ 120VAC MINIMUM.
- 5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY FOR FOLLOWING CONDITIONS:
- 5.1. HIGHER SWITCHING FREQUENCY THAN DRIVE DEFAULT
- 5.2. HIGHER THAN PANEL LISTED AMBIENT TEMPERATURES
- 5.3. ELEVATION ABOVE 3300 FEET (1000 METERS)
- 5.4. LONG MOTOR LEAD LENGTHS

DRIVE PARAMETER SETTINGS

PARAMETER #	PARAMETER # NAME		VALUE
0-02 MOTOR SPEED UNIT		1	HZ
0-03 REGIONAL SETTINGS		1	NORTH AMERICA
1-03 TORQUE CHAR.		3	AUTO ENERGY OPTIM VT
5-02	5-02 TERMINAL 29 TYPE		OUTPUT
5-31 TERMINAL 29		5	RUNNING
14-20 RESET MODE		13	INFINITE AUTO REST

В			- NOTICE - THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.	DRN	NAME	N	EMA 3R,600V,3C	- Lu
А	SP10119	11/10	IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED	DIM		•	N DISC, DRIVE FUSE	Janjoos
DR	SP10076	09/10	IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL	APR		,31011,11	R,SINGLE MOTOR,1 FAN	
REV	ECN	DATE	NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES AND SHALL BE RETURNED UPON REQUEST.	D TM	MODEL	VLT	PAGE 1 OF 2 SIZE A NO. 18	5B083/



CIRCUIT CONDUCTOR
BLUE - DC CONTROL
GREEN - CHASSIS GROUND

 
TERMINAL IDENTIFCATION

- DRIVE TERMINAL

CUSTOMER TERMINAL


CUSTOMER DRY CONTACT RATINGS


RELAY	CONTACT RATING		
CR1, CR6	5A @ 120VAC 1/10 HP @ 120VAC		
M1, M2, M3	10A @ 120/240VAC		



Χ

7-8

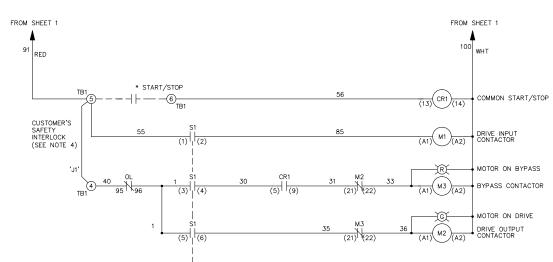

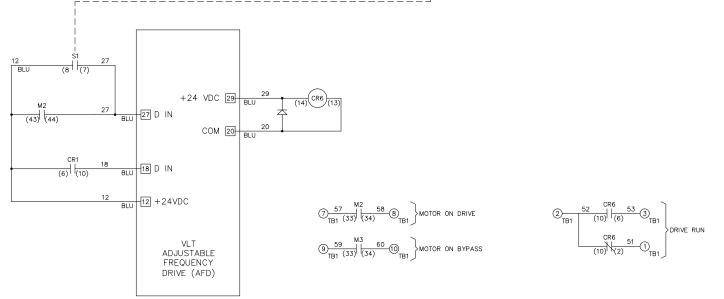

В		
Α	SP10119	11/10
DR	SP10076	09/10
REV	ECN	DATE

- NOTICE
THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.
IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND
THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD
AND REFERENCE PURPOSSES, SHALL NOT BE USED OR CAUSED TO BE USED
IN ANY WAY PREJUDICAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL
NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED
TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES
AND SHALL BE RETURNED UPON REQUEST.

)	DRN	D TM
	٨٥٥	

DTM

NEMA 3R,600V,3C ,MAIN DISC, DRIVE FUSE ,3MB1,IR,SINGLE MOTOR,1 FAN



MODEL

VLT

NAME

PAGE 2 OF 2

 $A \mid DWG \mid NO.$

DWG 185B0837