

NOTES:

1. * INDICATES COMPONENTS NOT SUPPLIED BY MANUFACTURER.

- 1. INDICATES COMPONENTS NOT SOFFIELD IN MANUAL FOR DRIVE FUNCTIONS AND PARAMETER SETTINGS.
- 3. FEEDER CIRCUIT PROTECTION, INPUT POWER AND MOTOR WIRING MUST BE SELECTED IN ACCORDANCE WITH THE N.E.C., ANY APPLICATION LOCAL CODES AND THE LOAD CURRENT RATING.
- 4. REPLACE JUMPER 'J1' WITH NORMALLY CLOSED SAFETY INTERLOCK CONTACT AS NECESSARY. CONTACT MUST BE RATED 1/4 HP @ 120VAC MINIMUM.
- 5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY FOR FOLLOWING CONDITIONS:
- 5.1. HIGHER SWITCHING FREQUENCY THAN DRIVE DEFAULT
- 5.2. HIGHER THAN PANEL LISTED AMBIENT TEMPERATURES
- 5.3. ELEVATION ABOVE 3300 FEET (1000 METERS)
- 5.4. LONG MOTOR LEAD LENGTHS

DRIVE PARAMETER SETTINGS

r							
PARAMETER #		NAME	SETTING	VALUE			
ſ	0-02	MOTOR SPEED UNIT	1	HZ			
	0-03	REGIONAL SETTINGS	1	NORTH AMERICA			
I	1-03	TORQUE CHAR.	3	AUTO ENERGY OPTIM VT			
I	5-02	TERMINAL 29 TYPE	1	OUTPUT			
	5-31	TERMINAL 29	5	RUNNING			
14-20		RESET MODE	13	INFINITE AUTO REST			
ſ							

WARNING!
THE FOLLOWING TABLE LISTS THE PARAMETERS THAT
ARE SET DIFFERENT FROM THE DRIVE DEFAULT SETTINGS.
ADDITIONAL PARAMETER SETTINGS MAY BE REQUIRED
FOR YOUR APPLICATION.

В			- NOTICE - THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.	DRN	NAME	NE	EMA 3R,600V,3C			- Les
А	SP10119	11/10	IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES AND SHALL BE RETURNED UPON REQUEST.	DIM	,MAIN CB ,DRIVE FUSE				Janjuos	
DR	SP10076	09/10		APR D TM	,3MB,IR,CONTACT MOTOR SELECT,1 FAN					
REV	ECN	DATE			MODEL	VLT	page <u>1</u> of <u>2</u>	SIZE	DWG 18	5B088/

