WIRE COLOR SCHEME TERMINAL IDENTIFICATION BLACK - LINE VOLTAGE X - DRIVE TERMINAL RED - AC CONTROL WHITE - AC GROUNDED - CUSTOMER TERMINAL CIRCUIT CONDUCTOR BLUE - DC CONTROL GREEN - CHASSIS GROUND EARTH GROUND EARTH GROUND GRN H* AC MOTOR OL 4T1 (L1) M2 (T1) 2T1 *CUSTOMER BLK 2L1 (U1) (U2) 4L1 (F16A) 5L1 (L1/R/91 VLT (L1)₀₀ T1 INPUT SUPPLIED T1/U/96 POWER (V1) (V2) 4L2 |F16B| 5L2 |L2/S/92 ADJUSTABLE FREQUENCY 4T2 (L2) (T2) (L2) T2 FEEDER BLK 2L2 3 PH, 208V, T2/V/97 (W1) (W2) 4L3 [F16C] 5L3 L2/5/92 L3/T/93 DRIVE CIRCUIT (L3)<u>~ T3</u>. BLK 2L3 4T3 (L3) (T3) PROTECTION T3/W/98 (AFD) 60Hz (SEE NOTE 3) CB1 INPUT DRIVE INPUT FUSES CIRCUIT REACTOR BREAKER (L1) (T1) (L2) (T2) GROUND GRN (L3) (T3) 163 RED X3 100 WHT F12 115VAC HEATER (SET: 65° F) (12) 5 (11) TS1 CR6 167 7) FAN 1 (SET: 80° F) (9) (23) (24) TB2 TS1 FAN 2 TO SHEET 2 TO SHEET 2

WARNING!

THE FOLLOWING TABLE LISTS THE PARAMETERS THAT ARE SET DIFFERENT FROM THE DRIVE DEFAULT SETTINGS. ADDITIONAL PARAMETER SETTINGS MAY BE REQUIRED FOR YOUR APPLICATION.

NOTES:

1. * INDICATES COMPONENTS NOT SUPPLIED BY MANUFACTURER.

2. REFER TO THE INSTALLATION AND OPERATION MANUAL FOR DRIVE FUNCTIONS AND PARAMETER SETTINGS. 3. FEEDER CIRCUIT PROTECTION, INPUT POWER AND MOTOR WIRING MUST BE SELECTED IN ACCORDANCE WITH

THE N.E.C., ANY APPLICATION LOCAL CODES AND THE LOAD CURRENT RATING. 4. REPLACE JUMPER 'J1' WITH NORMALLY CLOSED SAFETY INTERLOCK CONTACT AS NECESSARY. CONTACT

MUST BE RATED 1/4 HP @ 120VAC MINIMUM.

5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY FOR FOLLOWING CONDITIONS:

5.1. HIGHER SWITCHING FREQUENCY THAN DRIVE DEFAULT

HIGHER THAN PANEL LISTED AMBIENT TEMPERATURES

ELEVATION ABOVE 3300 FEET (1000 METERS)

5.4. LONG MOTOR LEAD LENGTHS

DRIVE PARAMETER SETTINGS

PARAMETER #	NAME	SETTING	VALUE
0-02	MOTOR SPEED UNIT	1	HZ
0-03	REGIONAL SETTINGS	1	NORTH AMERICA
1-03	TORQUE CHAR.	3	AUTO ENERGY OPTIM VT
5-02	TERMINAL 29 TYPE	1	OUTPUT
5-11	TERMINAL 19	52	RUN PERMISSIVE
5-31	TERMINAL 29	5	RUNNING
5-40[0]	RELAY 1	160	NO ALARM
5-40[1]	RELAY 2	167	START COMMAND
14-20	RESET MODE	13	INFINITE AUTO REST

В			ТН
Α	SP10119	11/10	TH AN
DR	SP10076	09/10	IN
REV	ECN	DATE	TC AN

- NOTICE -HIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES. IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND HE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD ND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL OT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED O ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES ND SHALL BE RETURNED UPON REQUEST.

DRN D TM **APR**

DTM

MODEL

NAME NEMA 3R,208V,2C ,MAIN CB ,DRIVE FUSE

VLT

,3MB2,IR,SINGLE MOTOR,2 FAN PAGE <u>1</u> OF <u>2</u>

