WIRE COLOR SCHEME TERMINAL IDENTIFICATION BLACK - LINE VOLTAGE X - DRIVE TERMINAL RED - AC CONTROL WHITE - AC GROUNDED - CUSTOMER TERMINAL CIRCUIT CONDUCTOR BLUE - DC CONTROL GREEN - CHASSIS GROUND EARTH GROUND EARTH GROUND GRN \* AC MOTOR 1 H(SEE NOTES 6) OL1 4T1 (L1) M2 (T1) 2T1 \*CUSTOMER 1T1 (L1) X T1 L1 (L1) (T1) 1L1 BLK (F15A) 2L1 5L1 VLT INPUT SUPPLIED [F16A] L1/R/91 T1/U/96 -TF18AT POWER ADJUSTABLE FREQUENCY 5L2 4T2 (L2) (T2) 1T2 (L2) T2 FEEDER L2 (L2) (T2) 1L2 BLK [F15B] 2L2 3L2 [F16B] 3 PH, 240V, L2/S/92 T2/V/97 F18B DRIVE CIRCUIT L3 (L3) (T3) 1L3 BLK |F15C|| 2L3 1T3 (L3) 13 4T3 (L3) (T3) PROTECTION L3/T/93 T3/W/98 -TF18CT-(AFD) 60Hz (SEE NOTE 3) DRIVE INPUT FUSES DRIVE MAIN \*AC MOTOR 2 DISCONNECT FUSES DISCONNECT M3 (L1) (T1) (L2) (T2) OL2 (SEE NOTES 6) 3T1 (L1) X T1 EARTH GROUND GRN F19A 3T2 (L2) T2 F19B (L3) 3T3 (L3) (T3) F19C 163 RED X2 100 WHT F12 115VAC HEATER (SET: 65° F) (12) 5 (11) TS1 CR6 167 7) FAN 1 (SET: 80° F) (9) (23) (24) TB2 TS1 FAN 2 TO SHEET 2 TO SHEET 2

WARNING!
THE FOLLOWING TABLE LISTS THE PARAMETERS THAT
ARE SET DIFFERENT FROM THE DRIVE DEFAULT SETTINGS.
ADDITIONAL PARAMETER SETTINGS MAY BE REQUIRED
FOR YOUR APPLICATION.

## NOTES:

1. \* INDICATES COMPONENTS NOT SUPPLIED BY MANUFACTURER.

2. REFER TO THE INSTALLATION AND OPERATION MANUAL FOR DRIVE FUNCTIONS AND PARAMETER SETTINGS.
3. FEEDER CIRCUIT PROTECTION, INPUT POWER AND MOTOR WIRING MUST BE SELECTED IN ACCORDANCE WITH

THE N.E.C., ANY APPLICATION LOCAL CODES AND THE LOAD CURRENT RATING.

4. REPLACE JUMPER 'J1' WITH NORMALLY CLOSED SAFETY INTERLOCK CONTACT AS NECESSARY. CONTACT MUST BE RATED 1/4 HP @ 120VAC MINIMUM.

5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY FOR FOLLOWING CONDITIONS:

5.1. HIGHER SWITCHING FREQUENCY THAN DRIVE DEFAULT

- 5.2. HIGHER THAN PANEL LISTED AMBIENT TEMPERATURES
- 5.3. ELEVATION ABOVE 3300 FEET (1000 METERS)

5.4. LONG MOTOR LEAD LENGTHS

6. WHEN MOTOR OVERLOADS SIZES ARE DIFFERENT, MOTOR 1 WILL BE THE LARGER OF THE TWO MOTORS

DRIVE PARAMETER SETTINGS

PARAMETER #	NAME	SETTING	VALUE
0-02	MOTOR SPEED UNIT	1	HZ
0-03	REGIONAL SETTINGS	1	NORTH AMERICA
1-03	TORQUE CHAR.	1	VARIABLE TORQUE
5-02	TERMINAL 29 TYPE	1	OUTPUT
5-11	TERMINAL 19	52	RUN PERMISSIVE
5-31	TERMINAL 29	5	RUNNING
5-40[0]	RELAY 1	160	NO ALARM
5-40[1]	RELAY 2	167	START COMMAND
14-20	RESET MODE	13	INFINITE AUTO REST

В			THIS DOCUMENT CONT
Α	SP10119	11/10	IT IS LOANED BY DAN THE INFORMATION EME AND REFERENCE PURF IN ANY WAY PREJUDIC NOT BE REPRODUCED
DR	SP10076	09/10	
REV	ECN	DATE	TO ANYONE WITHOUT AND SHALL BE RETUR

- NOTICE 
THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES. IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES AND SHALL BE RETURNED UPON REQUEST.

DRN	
	D TM

DTM

**APR** 

NAME NEMA 3R,240V,2C ,MAIN & DRIVE DISC, MAIN & DRIVE FUSE

,3MB2,DUAL MOTOR,2 FAN

Danfoss

MODEL

VLT

PAGE <u>1</u> OF <u>2</u>

- SIZEA

PWG 185B117

