WIRE COLOR SCHEME TERMINAL IDENTIFICATION BLACK - LINE VOLTAGE RED - AC CONTROL - DRIVE TERMINAL WHITE - AC GROUNDED - CUSTOMER TERMINAL CIRCUIT CONDUCTOR
BLUE - DC CONTROL GREEN - CHASSIS GROUND EARTH GROUND EARTH GROUND H* AC MOTOR 1 4T1 (L1) (T1) 2T1 *CUSTOMER (L1) (T1) 1T1 (L1) T1 L1 (L1) (T1) 1L1 BLK [F15A] 2L1 5L1 VLT INPUT SUPPLIED T1/U/96 [F16A] L1/R/91 5L2 POWER ADJUSTABLE FREQUENCY L2 (L2) (T2) 1L2 BLK F15B 2L2 (L2) (T2) 3L2 4T2 (L2) (T2) 2T2 (L2) (T2) 1T2 (L2) T2 FEEDER 3 PH, 240V, L2/S/92 T2/V/97 F16C 5L3 DRIVE 2T3 (L3) (T3) 1T3 (L3) T3 CIRCUIT L3 (L3) (T3) 1L3 BLK [F15C] 2L3 (L3) (T3) 3L3 4T3 (L3) (T3) PROTECTION L3/T/93 T3/W/98 (AFD) 60Hz (SEE NOTE 3) DRIVE INPUT FUSES MAIN MAIN DISCONNECT **FUSES** (L1) (T1) (L2) (T2) (L1) (T1) 3T1 (L1) T1 (L2) (T2) 3T2 (L2) T2 *AC MOTOR 2 EARTH GROUND GRN (L3) (T3) (L3) (T3) 3T3 (L3) 163 RED X2 100 WHT F12 115VAC CR6 (12) 5 (11) TS1 HEATER (SET: 65° F) CR6 167 (9) (5) (2) FAN 1 (SET: 80° F) (23) (24) TB2 TS1 FAN 2 TO SHEET 2 TO SHEET 2

DTM

WARNING!

THE FOLLOWING TABLE LISTS THE PARAMETERS THAT ARE SET DIFFERENT FROM THE DRIVE DEFAULT SETTINGS. ADDITIONAL PARAMETER SETTINGS MAY BE REQUIRED FOR YOUR APPLICATION.

NOTES:

- 1. * INDICATES COMPONENTS NOT SUPPLIED BY MANUFACTURER.
- 2. REFER TO THE INSTALLATION AND OPERATION MANUAL FOR DRIVE FUNCTIONS AND PARAMETER SETTINGS.
- 3. FEEDER CIRCUIT PROTECTION, INPUT POWER AND MOTOR WRING MUST BE SELECTED IN ACCORDANCE WITH THE N.E.C., ANY APPLICATION LOCAL CODES AND THE LOAD CURRENT RATING.
- 4. REPLACE JUMPER 'J1' WITH NORMALLY CLOSED SAFETY INTERLOCK CONTACT AS NECESSARY. CONTACT MUST BE RATED 1/4 HP @ 120VAC MINIMUM.
- 5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY FOR FOLLOWING CONDITIONS:
- 5.1. HIGHER SWITCHING FREQUENCY THAN DRIVE DEFAULT
- 5.2. HIGHER THAN PANEL LISTED AMBIENT TEMPERATURES
- 5.3. ELEVATION ABOVE 3300 FEET (1000 METERS)
- 5.4. LONG MOTOR LEAD LENGTHS

000/5	0.40.445750	OFTTILLOO
DRIVE	PARAMETER	SE LIINGS

PARAMETER #	NAME	SETTING	VALUE
0-02	MOTOR SPEED UNIT	1	HZ
0-03	REGIONAL SETTINGS	1	NORTH AMERICA
1-03	TORQUE CHAR.	3	AUTO ENERGY OPTIM VT
5-02	TERMINAL 29 TYPE 1 0		OUTPUT
5-11	TERMINAL 19 52 RUN PE		RUN PERMISSIVE
5-31	TERMINAL 29	5	RUNNING
5-40[0]	RELAY 1	160	NO ALARM
5-40[1]	RELAY 2	167	START COMMAND
14-20	RESET MODE	13 INFINITE AUTO REST	

В			- NOTICE - THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.
А	SP10119	11/10	IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD
DR	SP10076	09/10	AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED
REV	ECN	DATE	TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES AND SHALL BE RETURNED UPON REQUEST.

, MAIN DISC, MAIN & DRIVE FL ,3MB2,CONTACT MOTOR SELECT,2	FAN
DTM , MAIN DISC, MAIN & DRIVE FU	
	JSE
DRN NAME NEMA 3R,240V,3C	

Danfoss

MODEL VLT PAGE 1 OF 2 SIZE NO. 185B122

