

## NOTES:

1. \* INDICATES COMPONENTS NOT SUPPLIED BY MANUFACTURER.

- 1. INDICATES COMPONENTS NOT SOFFIELD IN MANUAL FOR DRIVE FUNCTIONS AND PARAMETER SETTINGS.
- 3. FEEDER CIRCUIT PROTECTION, INPUT POWER AND MOTOR WIRING MUST BE SELECTED IN ACCORDANCE WITH THE N.E.C., ANY APPLICATION LOCAL CODES AND THE LOAD CURRENT RATING.
- REPLACE JUMPER 'J1' WITH NORMALLY CLOSED SAFETY INTERLOCK CONTACT AS NECESSARY. CONTACT MUST BE RATED 1/4 HP @ 120VAC MINIMUM.
- 5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY FOR FOLLOWING CONDITIONS:
- 5.1. HIGHER SWITCHING FREQUENCY THAN DRIVE DEFAULT
- 5.2. HIGHER THAN PANEL LISTED AMBIENT TEMPERATURES
- 5.3. ELEVATION ABOVE 3300 FEET (1000 METERS)
- 5.4. LONG MOTOR LEAD LENGTHS

DRIVE PARAMETER SETTINGS

| PARAMETER # | NAME              | SETTING | VALUE                                 |  |  |  |
|-------------|-------------------|---------|---------------------------------------|--|--|--|
| 0-02        | MOTOR SPEED UNIT  | 1       | HZ                                    |  |  |  |
| 0-03        | REGIONAL SETTINGS | 1       | NORTH AMERICA<br>AUTO ENERGY OPTIM VT |  |  |  |
| 1-03        | TORQUE CHAR.      | 3       |                                       |  |  |  |
| 5-02        | TERMINAL 29 TYPE  | 1       | OUTPUT                                |  |  |  |
| 5-31        | TERMINAL 29       | 5       | RUNNING                               |  |  |  |
| 14-20       | RESET MODE        | 13      | INFINITE AUTO REST                    |  |  |  |
|             |                   |         |                                       |  |  |  |
|             |                   |         |                                       |  |  |  |

| В   |         |       | - NOTICE - THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.  | DRN  | NAME   | NE  | EMA 3R,480V,3C            |      |         | - Lu   |
|-----|---------|-------|---|------|--|-----|---------------------------|------|---------|--------|
| Α   | SP10119 | 11/10 | IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES AND SHALL BE RETURNED UPON REQUEST. | DIM  | , MAIN DISC, MAIN & DRIVE FUSE                                       |     |                           |      | Janjuos |        |
| DR  | SP10076 | 09/10 |   | APR  | ,3MB,IR,CONTACT MOTOR SELECT,2 FAN  MODEL SIZE A DWG 1 0 5 D 1 7 0 1 |     |                           |      |         |        |
| REV | ECN     | DATE  |   | D TM | MODEL  | VLT | page <u>1</u> of <u>2</u> | SIZE | NO. 18  | 5B1391 |

