WIRE COLOR SCHEME TERMINAL IDENTIFICATION BLACK - LINE VOLTAGE - DRIVE TERMINAL RED - AC CONTROL WHITE - AC GROUNDED - CUSTOMER TERMINAL CIRCUIT CONDUCTOR BLUE - DC CONTROL GREEN - CHASSIS GROUND EARTH GROUND EARTH GROUND H* AC MOTOR OL 4T1 (L1) M2 (T1) 2T1 *CUSTOMER _L1_(<u>L1)</u>__(T1) 5L1 VLT INPUT SUPPLIED T1/U/96 [F16A] L1/R/91 POWER ADJUSTABLE FREQUENCY 5L2 4T2 (L2) (T2) (L2) T2 BRANCH L2 (L2) (T2) BLK 2L2 3L2 [F16B] 3 PH, 600V, L2/S/92 T2/V/97 DRIVE CIRCUIT L3 (L3) (T3) BLK 2L3 4T3 (L3) (T3) PROTECTION L3/T/93 T3/W/98 (AFD) 60Hz (SEE NOTE 3) DRIVE INPUT FUSES DRIVE DISCONNECT DISCONNECT EARTH GROUND GRN (L1) (T1) (L2) (T2) (L3) (T3) 163 RED 100 WHT F12 X2 X3 115VAC T2 HEATER (SET: 65° F) (12) 5 (11) TS1 CR6 167 7)FAN 1 (SET: 80°F) (9) (5) (23) (24) TB2 TS1 FAN 2

WARNING!

THE FOLLOWING TABLE LISTS THE PARAMETERS THAT ARE SET DIFFERENT FROM THE DRIVE DEFAULT SETTINGS. ADDITIONAL PARAMETER SETTINGS MAY BE REQUIRED FOR YOUR APPLICATION.

DRIVE PARAMETER SETTINGS

PARAMETER #	NAME	SETTING	VALUE
0-02	MOTOR SPEED UNIT	1	HZ
0-03	REGIONAL SETTINGS	1	NORTH AMERICA
1-03	TORQUE CHAR.	3	AUTO ENERGY OPTIM VT
5-02	TERMINAL 29 TYPE	1	OUTPUT
5-31	TERMINAL 29	5	RUNNING
14-20	RESET MODE	13	INFINITE AUTO REST

1. * INDICATES COMPONENTS NOT SUPPLIED BY MANUFACTURER.

- REFER TO THE INSTALLATION AND OPERATION MANUAL FOR DRIVE FUNCTIONS AND PARAMETER SETTINGS.
- BRANCH CIRCUIT PROTECTION, INPUT POWER AND MOTOR WIRING MUST BE SELECTED IN ACCORDANCE WITH THE N.E.C., ANY APPLICATION LOCAL CODES AND THE LOAD CURRENT RATING.
- 4. REPLACE JUMPER 'J1' WITH NORMALLY CLOSED SAFETY INTERLOCK CONTACT AS NECESSARY. CONTACT MUST BE RATED 1/4 HP @ 120VAC MINIMUM.
- 5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY FOR FOLLOWING CONDITIONS:

TO SHEET 2

- 5.1. HIGHER SWITCHING FREQUENCY THAN DRIVE DEFAULT
- HIGHER THAN PANEL LISTED AMBIENT TEMPERATURES
- ELEVATION ABOVE 3300 FEET (1000 METERS)
- LONG MOTOR LEAD LENGTHS

В		
Α	SP10119	11/10
DR	SP10076	09/10
REV	ECN	DATE

- NOTICE -THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES. IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES AND SHALL BE RETURNED UPON REQUEST.

DRN D TM **APR**

DTM

TO SHEET 2

NAME NEMA 3R,600V,2C ,MAIN & DRIVE DISC, DRIVE FUSE ,3MB1,SINGLE MOTOR,2 FAN

MODEL VLT

PAGE <u>1</u> OF <u>2</u>

DWG NO.

WIRE COLOR SCHEME BLACK - LINE VOLTAGE RED - AC CONTROL WHITE - AC GROUNDED

CIRCUIT CONDUCTOR
BLUE - DC CONTROL
GREEN - CHASSIS GROUND

TERMINAL IDENTIFCATION

- DRIVE TERMINAL


 $\overline{\otimes}$ - CUSTOMER TERMINAL


CUSTOMER DRY CONTACT RATINGS

RELAY	CONTACT RATING		
CR1, CR6	5A @ 120VAC 1/10 HP @ 120VAC		
M2, M3	10A @ 120/240VAC		

CONTACT SEQUENCE CHART FOR S1

X INDICATES CONTACT CLOSED				
POSITION				
ONTACT	DRIVE	OFF	BYPASS	
13-14			Х	
23-24	X			

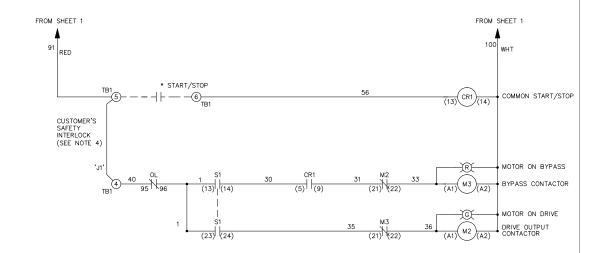

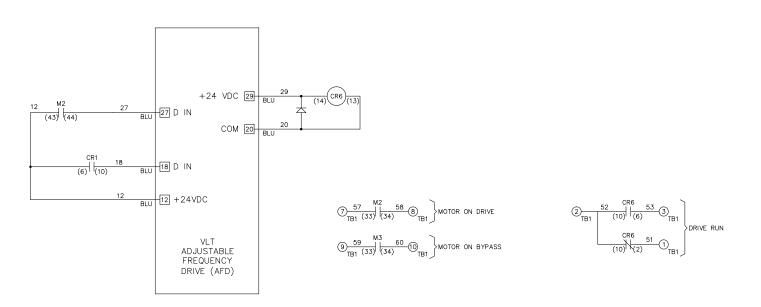

В		
Α	SP10119	11/10
DR	SP10076	09/10
REV	ECN	DATE

- NOTICE -THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES. IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES AND SHALL BE RETURNED UPON REQUEST.

)	DRN	D TM
	ΔPR	

DTM

MODEL

VLT

NAME NEMA 3R,600V,2C ,MAIN

NEMA 3R,600V,2C & DRIVE DISC, DRIVE FUSE MB1,SINGLE MOTOR,2 FAN				D	anfoss
	PAGE <u>2</u> OF <u>2</u>	SIZE	DWG 1 (85B1	494