


- 2. REFER TO THE INSTALLATION AND OPERATION MANUAL FOR DRIVE FUNCTIONS AND PARAMETER SETTINGS.
- 3. FEEDER CIRCUIT PROTECTION, INPUT POWER AND MOTOR WIRING MUST BE SELECTED IN ACCORDANCE WITH THE N.E.C., ANY APPLICATION LOCAL CODES AND THE LOAD CURRENT RATING.
- 4. REPLACE JUMPER 'J1' WITH NORMALLY CLOSED SAFETY INTERLOCK CONTACT AS NECESSARY. CONTACT MUST BE RATED 1/4 HP @ 120VAC MINIMUM.
- 5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY FOR FOLLOWING CONDITIONS:
- HIGHER SWITCHING FREQUENCY THAN DRIVE DEFAULT
- HIGHER THAN PANEL LISTED AMBIENT TEMPERATURES
- ELEVATION ABOVE 3300 FEET (1000 METERS)
- LONG MOTOR LEAD LENGTHS

PARAMETER #	NAME	SETTING	VALUE
0-02	MOTOR SPEED UNIT	1	HZ
0-03	REGIONAL SETTINGS	1	NORTH AMERICA
1-03	TORQUE CHAR.	3	AUTO ENERGY OPTIM VT
5-02	TERMINAL 29 TYPE	1	OUTPUT
5-31	TERMINAL 29	5	RUNNING
14-20	RESET MODE	13	INFINITE AUTO REST

В			- NOTICE - THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.	DRN	NAME	NE	EMA 3R,480V,2C				lu
А	SP10119	11/10	IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD	D TM			N CB ,DRIVE FU				anjuse
DR	SP10076	09/10	AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL	APR		,3MB,IR,CON	FACT MOTOR SEL	_ECT,4	- AN		
REV	ECN	DATE	NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES AND SHALL BE RETURNED UPON REQUEST.	D TM	MODEL	VLT	page <u>1</u> of <u>2</u>	SIZEA	DWG 1 8	35B1	997

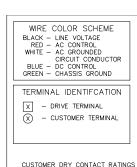

RELAY

CR6

M2, M3, M4, M5



CONTACT RATING 5A @ 120VAC

1/10 HP @ 120VAC

10A @ 120/240VAC

CONTACT	DRIVE	OFF	BYPAS
13-14			Χ
23-24	Χ		


A HADICATES CONTACT CEOSED							
POSITION							
CONTACT	DRIVE	OFF	BYPASS				
13-14			X				
23-24	Χ						

CONTACT SEQUENCE CHART FOR S1

X INDICATES CONTACT CLUSED						
POSITION						
CONTACT	MOTOR 1	AUTO	MOTOR 2			
11-12	X	<del></del> X				
13-14			Χ			
21-22		X	X			
23-24	Х					



POSITION			
CONTACT	MOTOR 1	AUTO	MOTOR 2
11-12	X	X	
13-14			X
21-22		X	X
23-24	Х		

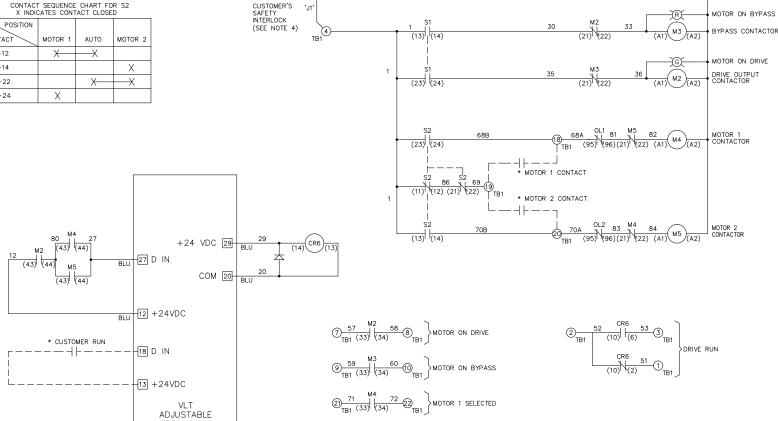

FROM SHEET 1

TB1 —5

91 RED

В		
А	SP10119	11/10
DR	SP10076	09/10
REV	ECN	DATE

- NOTICE -
THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.
IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND
THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD
AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED
IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL
NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED
TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES
AND SHALL BE RETURNED UPON REQUEST.

FREQUENCY

DRIVE (AFD)

drn D <i>TM</i>	NAME NEMA 3R,480V,2C ,MAIN CB ,DRIVE FUSE ,3MB,IR,CONTACT MOTOR SELECT,4 FAN					Danfoss
APR		,JIVID,IIN,COIN	IACT MOTOR SEL		AIN	
DTM	MODEL	VLT	page <u>2</u> of <u>2</u>	SIZE	DWG 1 8	5B1997

		anjuos	
_	$\Box$ 1	$\bigcirc \bigcirc \bigcirc \bigcirc \bigcirc$	

FROM SHEET 1

100 WHT