

- 2. REFER TO THE INSTALLATION AND OPERATION MANUAL FOR DRIVE FUNCTIONS AND PARAMETER SETTINGS.
 3. FEEDER CIRCUIT PROTECTION, INPUT POWER AND MOTOR WIRING MUST BE SELECTED IN ACCORDANCE WITH
- THE N.E.C., ANY APPLICATION LOCAL CODES AND THE LOAD CURRENT RATING.

 4. REPLACE JUMPER 'J1' WITH NORMALLY CLOSED SAFETY INTERLOCK CONTACT AS NECESSARY. CONTACT
- MUST BE RATED 1/4 HP @ 120VAC MINIMUM.

 5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY FOR FOLLOWING CONDITIONS:
- 5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY

 5.1. HIGHER SWITCHING FREQUENCY THAN DRIVE DEFAULT
- 5.1. HIGHER SWITCHING FREQUENCY THAN DRIVE DEFAULT
 5.2. HIGHER THAN PANEL LISTED AMBIENT TEMPERATURES
- 5.2. HIGHER THAN PANEL LISTED AMBIENT TEMPERATOR 5.3. ELEVATION ABOVE 3300 FEET (1000 METERS)
- 5.4. LONG MOTOR LEAD LENGTHS
- 6. WHEN MOTOR OVERLOADS SIZES ARE DIFFERENT, MOTOR 1 WILL BE THE LARGER OF THE TWO MOTORS

PARAMETER #	NAME	SETTING	VALUE
0-02	MOTOR SPEED UNIT	1	HZ
0-03	REGIONAL SETTINGS	1	NORTH AMERICA
1-03	TORQUE CHAR.	1	VARIABLE TORQUE
5-02	TERMINAL 29 TYPE	1	OUTPUT
5-11	TERMINAL 19	52	RUN PERMISSIVE
5-31	TERMINAL 29	5	RUNNING
5-40[0]	RELAY 1	160	NO ALARM
5-40[1]	RELAY 2	167	START COMMAND
14-20	RESET MODE	13	INFINITE AUTO REST

В		
Α	SP10119	11/10
DR	SP10076	09/10
REV	ECN	DATE

- NOTICE
THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.

IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND
THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD
AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED
IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL
NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED
TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES
AND SHALL BE RETURNED UPON REQUEST.

drn *D TM*

D TM

APR

, NAME

NEMA 3R,480V,2C ,MAIN CB, DRIVE DISC, DRIVE FUSE ,3MB2,DUAL MOTOR,4 FAN Danfoss

MODEL VLT PAGE <u>1</u> OF <u>2</u>

| PWG 185B2059

