

## NOTES:

- 1. \* INDICATES COMPONENTS NOT SUPPLIED BY MANUFACTURER.
- 2. REFER TO THE INSTALLATION AND OPERATION MANUAL FOR DRIVE FUNCTIONS AND PARAMETER SETTINGS. 3. FEEDER CIRCUIT PROTECTION, INPUT POWER AND MOTOR WIRING MUST BE SELECTED IN ACCORDANCE WITH THE N.E.C., ANY APPLICATION LOCAL CODES AND THE LOAD CURRENT RATING.
- 4. REPLACE JUMPER 'J1' WITH NORMALLY CLOSED SAFETY INTERLOCK CONTACT AS NECESSARY. CONTACT MUST BE RATED 1/4 HP @ 120VAC MINIMUM.
- 5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY FOR FOLLOWING CONDITIONS:
- 5.1. HIGHER SWITCHING FREQUENCY THAN DRIVE DEFAULT
- 5.2. HIGHER THAN PANEL LISTED AMBIENT TEMPERATURES
- 5.3. ELEVATION ABOVE 3300 FEET (1000 METERS)
- 5.4. LONG MOTOR LEAD LENGTHS

PARAMETER #	NAME	SETTING	VALUE HZ		
0-02	MOTOR SPEED UNIT	1			
0-03	REGIONAL SETTINGS	1	NORTH AMERICA		
1-03	TORQUE CHAR.	3	AUTO ENERGY OPTIM VT		
5-02	TERMINAL 29 TYPE	1	OUTPUT		
5-11	TERMINAL 19	52	RUN PERMISSIVE		
5-31	TERMINAL 29	5	RUNNING		
5-40[0]	RELAY 1	160	NO ALARM		
5-40[1]	RELAY 2	167	START COMMAND		
14-20	RESET MODE	13	INFINITE AUTO REST		

DRIVE FUSE

DWG

В			- NOTICE - THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.	DRN	NAME	N	EMA 3R,600V,2C	
Α	SP10119	11/10	IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED	D TM			SC, MAIN & DRI' SINGLE MOTOR.4	
DR	SP10076	09/10	AND REFERENCE PURPOSES, SHALL NOT BE USED OF CAUSED TO BE USED IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART. OR DISCLOSED	APR	MODEL	,SMB2,	SIZE A	
REV	ECN	DATE	TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES AND SHALL BE RETURNED UPON REQUEST.	DM	INIODEL	VLT	page <u>1</u> of <u>2</u>	

