

NOTES:

- 1. * INDICATES COMPONENTS NOT SUPPLIED BY MANUFACTURER.
- REFER TO THE INSTALLATION AND OPERATION MANUAL FOR DRIVE FUNCTIONS AND PARAMETER SETTINGS.
 FEEDER CIRCUIT PROTECTION, INPUT POWER AND MOTOR WIRING MUST BE SELECTED IN ACCORDANCE WITH THE N.E.C., ANY APPLICATION LOCAL CODES AND THE LOAD CURRENT RATING.
- 4. REPLACE JUMPER 'J1' WITH NORMALLY CLOSED SAFETY INTERLOCK CONTACT AS NECESSARY. CONTACT MUST BE RATED 1/4 HP @ 120VAC MINIMUM.
- MUST BE RATED 1/4 HP @ 120VAC MINIMUM.

 5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY FOR FOLLOWING CONDITIONS:
- 5.1. HIGHER SWITCHING FREQUENCY THAN DRIVE DEFAULT
- 5.2. HIGHER THAN PANEL LISTED AMBIENT TEMPERATURES
- 5.3. ELEVATION ABOVE 3300 FEET (1000 METERS)
- 5.4. LONG MOTOR LEAD LENGTHS

DRIVE PARAMETER SETTINGS

PARAMETER #	NAME	SETTING	VALUE HZ	
0-02	MOTOR SPEED UNIT	1		
0-03	REGIONAL SETTINGS	1	NORTH AMERICA	
1-03	TORQUE CHAR.	3	AUTO ENERGY OPTIM VT	
5-02	TERMINAL 29 TYPE	1	OUTPUT RUN PERMISSIVE RUNNING	
5-11	TERMINAL 19	52		
5-31	TERMINAL 29	5		
5-40[0]	RELAY 1	160	NO ALARM	
5-40[1]	RELAY 2	167	START COMMAND	
14-20	RESET MODE	13	INFINITE AUTO REST	

DWG NO.

В			- NOTICE - THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.	DRN	$\cap TM$	NAME
Α	SP10119	11/10	IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD AND REFERENCE PURPOSES. SHALL NOT BE USED OR CAUSED TO BE USED		DIM	
DR	SP10076	09/10	IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED	APR	D 71.4	MODEL
REV	ECN	DATE	TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES AND SHALL BE RETURNED UPON REQUEST.		DIM	IMODEL

NEMA 3R,600V,2C ,MAIN CB ,DRIVE FUSE ,3MB2,IR,SINGLE MOTOR,4 FAN

PAGE _1_ OF _2

VLT

Danfoss

