WIRE COLOR SCHEME TERMINAL IDENTIFICATION BLACK - LINE VOLTAGE RED - AC CONTROL X - DRIVE TERMINAL WHITE - AC GROUNDED - CUSTOMER TERMINAL CIRCUIT CONDUCTOR BLUE - DC CONTROL GREEN - CHASSIS GROUND EARTH GROUND EARTH GROUND GRN /  $\neg$ OL \*AC MOTOR 4T1 (L1) M2 (T1) 2T1 \*CUSTOMER (L1) | (T1) 3L1 (U1) (U2) 4L1 | F16A| 5L1 | L1/R/91 (L1) <u>T1</u> L1 (L1) (T1) 1L1 BLK [F15A] 2L1 VLT INPUT SUPPLIED T1/U/96 POWER (L2) (T2) 3L2 (V1) (V2) 4L2 [F16B] 5L2 L2/S/92 ADJUSTABLE FREQUENCY L2 (L2) (T2) 1L2 BLK F15B 2L2 4T2 (L2) (T2) (L2) T2 FEEDER T2/V/97 3 PH, 600V, (L3) (L3) (X3) 3L3 (W1) (W2) 4L3 (F16C) 5L3 L3/T/93 DRIVE (L3)<sub>X</sub> T3 L3 (L3) (T3) 1L3 BLK [F15C] 2L3 CIRCUIT 4T3 (L3) (T3) PROTECTION T3/W/98 (AFD) 60Hz (SEE NOTE 3) INPUT DRIVE INPUT FUSES MAIN MAIN DISCONNECT **FUSES** REACTOR (L1) (T1) (L2) (T2) GROUND GRN (L3) (T3) 163 RED 100 WHT -| F12 | X2 X3 250V 115VAC T2 (12) (4) HEATER (SET: 65° F) (12) 5 (11) TS1 CR6 166 167 2)FAN 1 (SET: 80° F) (9) (5) (23) (24) TB2 TS1 FAN 2 2)FAN 3 TB2 FAN 4 WARNING! THE FOLLOWING TABLE LISTS THE PARAMETERS THAT ARE SET DIFFERENT FROM THE DRIVE DEFAULT SETTINGS. ADDITIONAL PARAMETER SETTINGS MAY BE REQUIRED TO SHEET 2 TO SHEET 2 FOR YOUR APPLICATION.

## NOTES:

- 1. \* INDICATES COMPONENTS NOT SUPPLIED BY MANUFACTURER.
- 2. REFER TO THE INSTALLATION AND OPERATION MANUAL FOR DRIVE FUNCTIONS AND PARAMETER SETTINGS.
- 3. FEEDER CIRCUIT PROTECTION, INPUT POWER AND MOTOR WRING MUST BE SELECTED IN ACCORDANCE WITH THE N.E.C., ANY APPLICATION LOCAL CODES AND THE LOAD CURRENT RATING.
- 4. REPLACE JUMPER 'J1' WITH NORMALLY CLOSED SAFETY INTERLOCK CONTACT AS NECESSARY. CONTACT MUST BE RATED 1/4 HP @ 120VAC MINIMUM.
- 5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY FOR FOLLOWING CONDITIONS:
- 5.1. HIGHER SWITCHING FREQUENCY THAN DRIVE DEFAULT
- 5.2. HIGHER THAN PANEL LISTED AMBIENT TEMPERATURES
- 5.3. ELEVATION ABOVE 3300 FEET (1000 METERS)
- 5.4. LONG MOTOR LEAD LENGTHS

DRIVE P	ARAMETER	SETTINGS

PARAMETER #	NAME	SETTING	VALUE		
0-02	MOTOR SPEED UNIT	1	HZ		
0-03	REGIONAL SETTINGS	1	NORTH AMERICA		
1-03	TORQUE CHAR.	3	AUTO ENERGY OPTIM VT		
5-02	TERMINAL 29 TYPE	1	OUTPUT		
5-11	TERMINAL 19	52	RUN PERMISSIVE		
5-31	TERMINAL 29	5	RUNNING		
5-40[0]	RELAY 1	160	NO ALARM		
5-40[1]	RELAY 2	167	START COMMAND		
14-20	RESET MODE	13	INFINITE AUTO REST		

В	CD10110	11 /10	- NOTICE - THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES. IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND	drn <i>DTM</i>	NAME		EMA 3R,600V,3C ISC, MAIN & DRI		Dantos
DR	SP10119	09 /10	THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL	APR			R,SINGLE MOTOR		0-4
REV	ECN	DATE	NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES AND SHALL BE RETURNED UPON REQUEST.	DTM	MODEL	VLT	PAGE <u>1</u> OF <u>2</u>	SIZE	DWG 185B2271

