





DRIVE PARAMETER SETTINGS

PARAMETER #	NAME	SETTING	VALUE			
0-02	0-02 MOTOR SPEED UNIT		HZ			
0-03 REGIONAL SETTINGS		1	NORTH AMERICA			
1-03	1-03 TORQUE CHAR.		VARIABLE TORQUE			
5-02	TERMINAL 29 TYPE	1	OUTPUT RUNNING INFINITE AUTO REST			
5-31	TERMINAL 29	5				
14-20	RESET MODE	13				

NOTES:

- 1. * INDICATES COMPONENTS NOT SUPPLIED BY MANUFACTURER.
- 2. REFER TO THE INSTALLATION AND OPERATION MANUAL FOR DRIVE FUNCTIONS AND PARAMETER SETTINGS.
- 3. BRANCH CIRCUIT PROTECTION, INPUT POWER AND MOTOR WIRING MUST BE SELECTED IN ACCORDANCE WITH THE N.E.C., ANY APPLICATION LOCAL CODES AND THE LOAD CURRENT RATING.
- 4. REPLACE JUMPER 'J1' WITH NORMALLY CLOSED SAFETY INTERLOCK CONTACT AS NECESSARY.
- 5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY FOR FOLLOWING CONDITIONS:
- 5.1. HIGHER SWITCHING FREQUENCY THAN DRIVE DEFAULT
- 5.2. HIGHER THAN PANEL LISTED AMBIENT TEMPERATURES
- 5.3. ELEVATION ABOVE 3300 FEET (1000 METERS)
- 5.4. LONG MOTOR LEAD LENGTHS
- 6. WHEN MOTOR OVERLOADS SIZES ARE DIFFERENT, MOTOR 1 WILL BE THE LARGER OF THE TWO MOTORS

В			-NOTICE-	DRN	NAME		EMA 3R,600V,NB			THE TRANE COMPANY
А	SP10119	11/10	THIS DRAWING IS PROPRIETARY AND SHALL NOT BE COPIED OR ITS CONTENTS DISCLOSED TO OUTSIDE PARTIES WITHOUT THE WRITTEN CONSENT OF THE TRANE COMPANY	DIM	,MAIN DISC, DRIVE FUSE DUAL MOTOR,1 FAN				A DIVISION OF AMERICAN STANDARD INC.	
DR	SP10076	09/10		APR	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,					
REV	ECN	DATE		D IM	MODEL	TR200	PAGE <u>1</u> OF <u>1</u>	JIZL A	PWG 185B3229	