

1. * INDICATES COMPONENTS NOT SUPPLIED BY MANUFACTURER.

REFER TO THE INSTALLATION AND OPERATION MANUAL FOR DRIVE FUNCTIONS AND PARAMETER SETTINGS.

3. BRANCH CIRCUIT PROTECTION, INPUT POWER AND MOTOR WIRING MUST BE SELECTED IN ACCORDANCE WITH THE N.E.C., ANY APPLICATION LOCAL CODES AND THE LOAD CURRENT RATING.

4. REPLACE JUMPER 'J1' WITH NORMALLY CLOSED SAFETY INTERLOCK CONTACT AS NECESSARY. CONTACT MUST BE RATED 1/4 HP @ 120VAC MINIMUM.

5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY FOR FOLLOWING CONDITIONS: 5.1. HIGHER SWITCHING FREQUENCY THAN DRIVE DEFAULT

HIGHER THAN PANEL LISTED AMBIENT TEMPERATURES

5.3. ELEVATION ABOVE 3300 FEET (1000 METERS)

5.4. LONG MOTOR LEAD LENGTHS

DRIVE PARAMETER SETTINGS

PARAMETER #	NAME	SETTING	VALUE			
0-02	MOTOR SPEED UNIT	1	HZ			
0-03	REGIONAL SETTINGS	1	NORTH AMERICA			
1-03	TORQUE CHAR.	3	AUTO ENERGY OPTIM VT			
5-02	TERMINAL 29 TYPE	1	OUTPUT			
5-31	TERMINAL 29	5	RUNNING INFINITE AUTO REST			
14-20	RESET MODE	13				

В			-NOTICE-	DRN	NAME	Ν	EMA 3R,480V,2C			THE TRANE COMPANY	
А	SP10119	11/10	THIS DRAWING IS PROPRIETARY AND SHALL NOT BE COPIED OR ITS CONTENTS DISCLOSED TO OUTSIDE PARTIES WITHOUT THE WRITTEN CONSENT OF THE TRANE COMPANY	TO DIGOLOGED TO					- A N I	A DIVISION OF AMERICAN STANDARD INC.	
DR	SP10076	09/10		APR	,3MB1,CONTACT MOTOR SELECT,2 FAN						
REV	ECN	DATE		D TM	MODEL	TR200	PAGE <u>1</u> OF <u>2</u>	SIZE	DWG 1 8	5B3596	

