



TRANE®

NEMA 1 Conversion Kit Instructions

TR200



BAS-SVX32A-EN

December 2008

BAS-SVX32A-EN

Instruction MCF 101 IP21 / Type 1 Enclosure Kit

Warnings, Cautions and Notices

Note that warnings, cautions and notices appear at appropriate intervals throughout this manual. Warnings are provide to alert installing contractors to potential hazards that could result in personal injury or death. Cautions are designed to alert personnel to hazardous situations that could result in personal injury, while notices indicate a situation that could result in equipment or property-damage-only accidents.

Your personal safety and the proper operation of this machine depend upon the strict observance of these precautions.

Warnings, Cautions and Notices appear at appropriate sections throughout this literature. Read these carefully.

WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury. It could also be used to alert against unsafe practices.

NOTICE

Indicates a situation that could result in equipment or property-damage only accidents.

Note



Indicates something important to be noted by the reader.

★	Indicates default setting
---	---------------------------

WARNING

Hazardous Voltage!

Disconnect all electric power, including remote disconnects before servicing. Follow proper lockout/tagout procedures to ensure the power can not be inadvertently energized. Failure to disconnect power before servicing could result in death or serious injury.

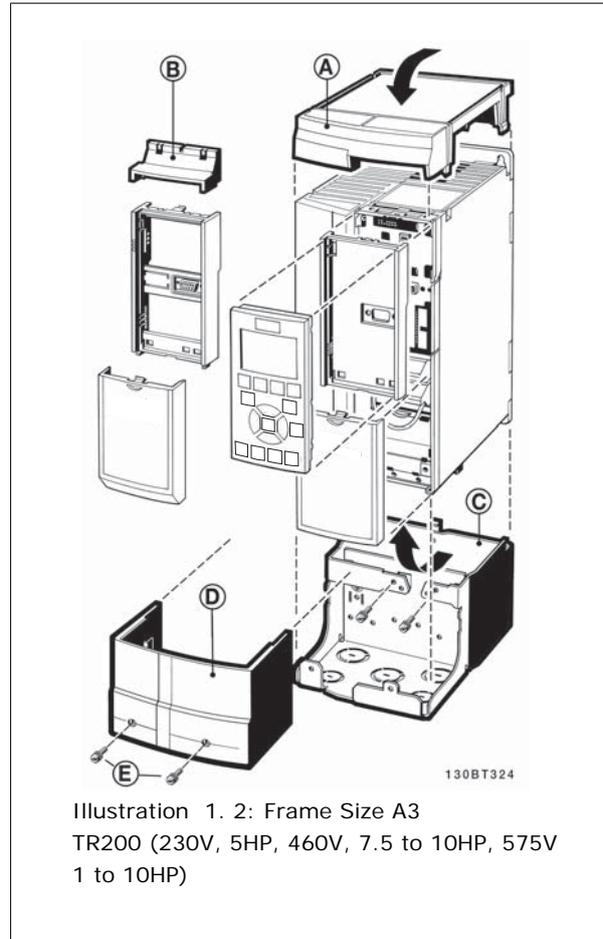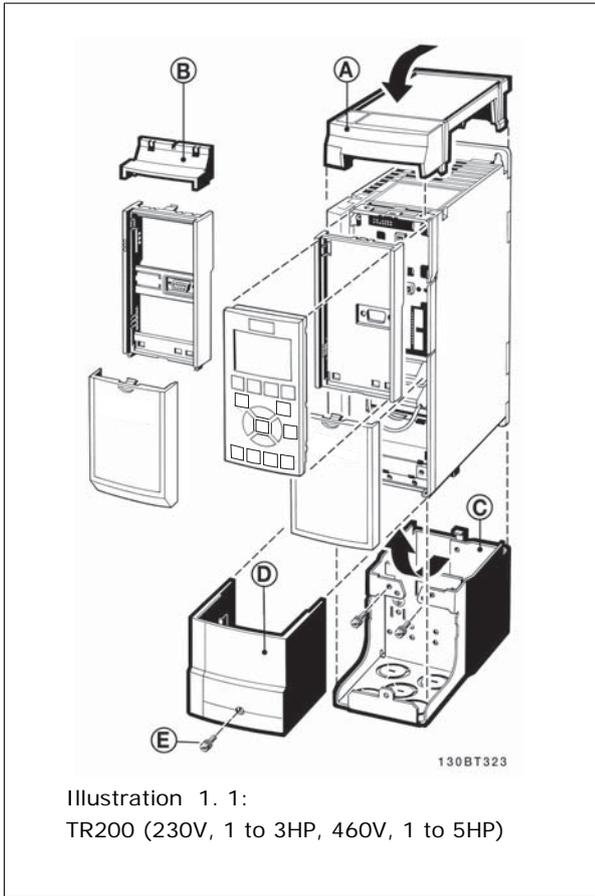

- A - Top cover
- B - Brim
- C - Base part
- D - Base cover
- E - Screw(s)

When option module A and/or option module B is/are used the brim (B) must be fitted on the top cover (A).

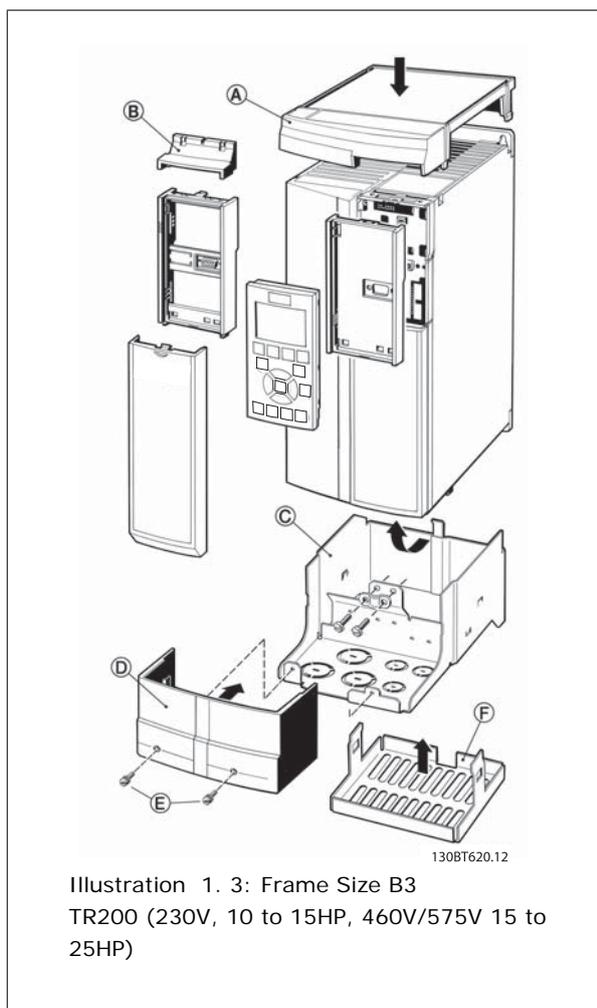


Illustration 1. 3: Frame Size B3
TR200 (230V, 10 to 15HP, 460V/575V 15 to 25HP)

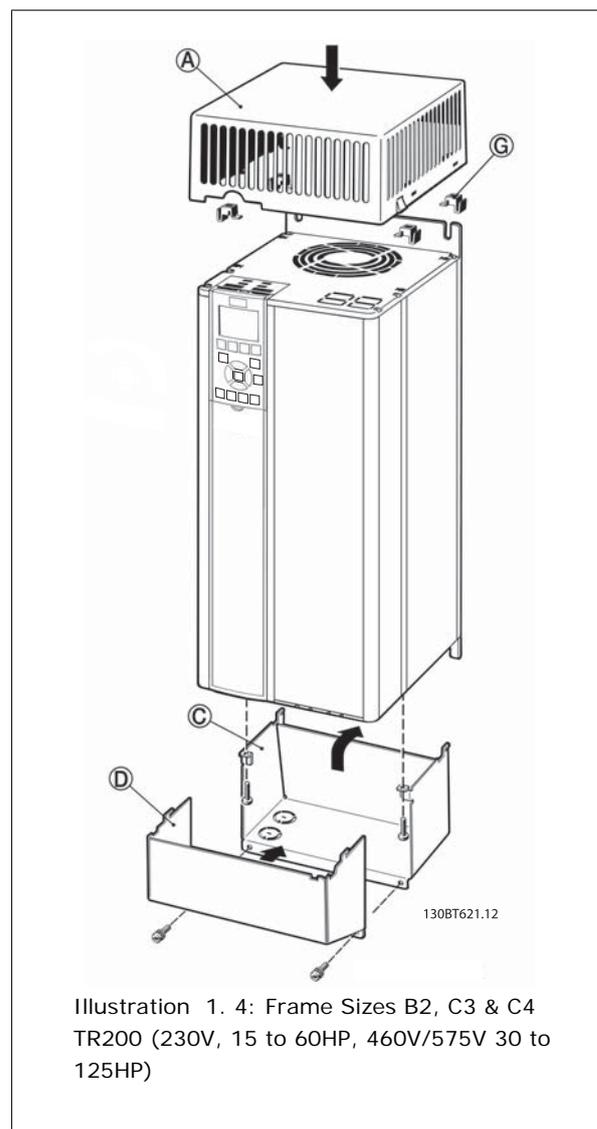


Illustration 1. 4: Frame Sizes B2, C3 & C4
TR200 (230V, 15 to 60HP, 460V/575V 30 to 125HP)

- A - Top cover
- B - Brim
- C - Base part
- D - Base cover
- E - Screw(s)
- F - Fan cover
- G - Top clip

When option module A and/or option module B is/are used the brim (B) must be fitted on the top cover (A).



www.trane.com

For more information, contact your local Trane office or e-mail us at comfort@trane.com

Literature Order Number BAS-SVX32A-EN

Date December 2008

Supersedes

Trane has a policy of continuous product and product data improvement and reserves the right to change design and specifications without notice.

