KIT VFD TO DC-DC CABLE

110000 & 110106.

Installation and servicing of Danfoss Turbocor® compressors by qualified and product trained personnel only. Follow these instructions and sound refrigeration/electrical/servicing practices relating to installation, commissioning, maintenance and service.

Consult the appropriate **Danfoss Turbocor** Compressors Inc. (DTC) Service Manual on turbocoroem.com for detailed service instructions. Never power compressor without covers in place and secured.

Opening the drive panel will expose you to a voltage hazard of up to 575V AC and 900V DC. Ensure the mains input power is off and locked out before opening panel.

Before opening the drive panel, wait at least 20 minutes after isolating AC power to allow the high voltage capacitors to discharge.

Always wear appropriately rated safety equipment when from compressor in working around equipment and/or components energized with high voltage.

This equipment contains hazardous voltages that can cause serious injury or death.

Recover all refrigerant accordance with local codes and ensure pressure is fully vented before the removal of refrigerant containing components.

1 - Introduction

VTT/VTX VFD to DC-DC CABLE replacement.

This kit contains the VFD to DC-DC Cable. Please refer to our Service Manual for details regarding the replacement of this cable.

We have made the VTT/VTX Service Manual available to anyone. To access the manual, you may scan the applicable QR code below or you may go to our DTC website at www.turbocoroem.com. At the top of the page there is a pull-down menu called "Quick Links." Click this menu and select the appropriate service manual.

Refer to the applicable QR code below to download the VTT/VTX Service Manual.

English



Chinese



Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

2 - VFD to DC-DC CABLE Removal Instructions

- 1. Isolate VTT/VTX power as described in Section "Electrical Isolation of the VFD" of the Service Manual (M-SV-VT-001).
- 2. Remove VFD Cover.
- 3. Remove the Service Side Cover.
- 4. Remove cable.

3 - VFD to DC-DC CABLE Installation Instructions

- 1. Install the new cable.
- 2. Replace all covers.
- 3. Return the compressor to normal operation.

4 - Kit Contents

Kit	rc	Compressor models		
numbers 110000		VTT/VTX		
			Dist(a)	
QTY	Pa	rt(s) Description	Picture(s)	
1		BLE VFD TO DC-DC METERS)	3M	

Kit numbe		Compressor models	
110106		VTT/VTX	
QTY	Part((s) Description	Picture(s)
1		LE VFD TO DC-DC METERS)	

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

