



# Operating Guide

## VLT<sup>®</sup> Refrigeration Drive FC 103

355–800 kW, Enclosure Sizes E1h–E4h





**Contents**

<b>1 Introduction</b>	<b>4</b>
1.1 Purpose of the Manual	4
1.2 Additional Resources	4
1.3 Manual and Software Version	4
1.4 Approvals and Certifications	4
1.5 Disposal	4
<b>2 Safety</b>	<b>5</b>
2.1 Safety Symbols	5
2.2 Qualified Personnel	5
2.3 Safety Precautions	5
<b>3 Product Overview</b>	<b>7</b>
3.1 Intended Use	7
3.2 Power Ratings, Weights, and Dimensions	7
3.3 Interior View of Enclosures E1h and E2h	8
3.4 Interior View of Enclosures E3h and E4h	9
3.5 Control Shelf	10
3.6 Local Control Panel (LCP)	11
<b>4 Mechanical Installation</b>	<b>13</b>
4.1 Items Supplied	13
4.2 Tools Needed	13
4.3 Storage	13
4.4 Operating Environment	13
4.5 Installation and Cooling Requirements	15
4.6 Lifting the Unit	15
4.7 E1h/E2h Mechanical Installation	16
4.8 E3h/E4h Mechanical Installation	18
<b>5 Electrical Installation</b>	<b>22</b>
5.1 Safety Instructions	22
5.2 EMC-compliant Installation	22
5.3 Wiring Schematic	25
5.4 Connecting the Motor	26
5.5 Connecting the AC Mains	28
5.6 Connecting to Ground	30
5.7 Terminal Dimensions	32
5.8 Control Wiring	42

5.9 Pre-start Check List	47
<b>6 Commissioning</b>	<b>49</b>
6.1 Safety Instructions	49
6.2 Applying Power	49
6.3 LCP Menu	50
6.4 Programming the Drive	51
6.5 Testing Before System Start-up	54
6.6 System Start-up	55
6.7 Parameter Settings	55
<b>7 Wiring Configuration Examples</b>	<b>57</b>
7.1 Wiring for Open-loop Speed Control	57
7.2 Wiring for Start/Stop	58
7.3 Wiring for External Alarm Reset	60
7.4 Wiring for a Motor Thermistor	60
7.5 Wiring for Regeneration	61
<b>8 Maintenance, Diagnostics, and Troubleshooting</b>	<b>62</b>
8.1 Maintenance and Service	62
8.2 Heat Sink Access Panel	62
8.3 Status Messages	63
8.4 Warning and Alarm Types	66
8.5 List of Warnings and Alarms	66
8.6 Troubleshooting	76
<b>9 Specifications</b>	<b>79</b>
9.1 Electrical Data	79
9.2 Mains Supply	83
9.3 Motor Output and Motor Data	83
9.4 Ambient Conditions	83
9.5 Cable Specifications	84
9.6 Control Input/Output and Control Data	84
9.7 Fuses	87
9.8 Enclosure Dimensions	88
9.9 Enclosure Airflow	104
9.10 Fastener Torque Ratings	105
<b>10 Appendix</b>	<b>106</b>
10.1 Abbreviations and Conventions	106

10.2 International/North American Default Parameter Settings	107
10.3 Parameter Menu Structure	107
<b>Index</b>	<b>112</b>

# 1 Introduction

## 1.1 Purpose of the Manual

This operating guide provides information for safe installation and commissioning of the VLT® drives in an enclosure size E (E1h, E2h, E3h, and E4h).

The operating guide is intended for use by qualified personnel. To use the unit safely and professionally, read and follow this operating guide. Pay particular attention to the safety instructions and general warnings. Always keep the operating guide with the drive.

VLT® is a registered trademark.

## 1.2 Additional Resources

Other resources are available to understand advanced E1h–E4h drive functions and programming.

- The *VLT® Refrigeration Drive FC 103 Programming Guide* provides greater detail on working with parameters and refrigeration application examples.
- The *VLT® HVAC Drive FC 102, 90–1200 kW Design Guide* provides detailed capabilities and functionality to design motor control systems for refrigeration applications.
- The *Safe Torque Off Operating Guide* provides detailed specifications, requirements, and installation instructions for the Safe Torque Off function.

Supplementary publications and manuals are available from Danfoss. See [www.danfoss.com/en/search/?filter=type%3Adocumentation](http://www.danfoss.com/en/search/?filter=type%3Adocumentation) for listings.

## 1.3 Manual and Software Version

This manual is regularly reviewed and updated. All suggestions for improvement are welcome. *Table 1.1* shows the version of the manual and the corresponding software version.

Manual version	Remarks	Software version
MG16P2xx	Added output contactor warning and other corrections.	1.51

Table 1.1 Manual and Software Version

## 1.4 Approvals and Certifications



Table 1.2 Approvals and Certifications

More approvals and certifications are available. Contact the local Danfoss office or partner. Drives of voltage T7 (525–690 V) are UL certified for only 525–690 V.

The drive complies with UL 61800-5-1 thermal memory retention requirements. For more information, refer to the section *Motor Thermal Protection* in the product-specific *design guide*.

### NOTICE

#### IMPOSED LIMITATIONS ON THE OUTPUT FREQUENCY

From software version 1.10, the output frequency of the drive is limited to 590 Hz due to export control regulations.

### 1.4.1 Compliance with ADN

For compliance with the European Agreement concerning International Carriage of Dangerous Goods by Inland Waterways (ADN), refer to *ADN-compliant Installation* in the *design guide*.

## 1.5 Disposal



Do not dispose of equipment containing electrical components together with domestic waste. Collect it separately in accordance with local and currently valid legislation.

## 2 Safety

### 2.1 Safety Symbols

The following symbols are used in this guide:

#### **⚠ WARNING**

Indicates a potentially hazardous situation that could result in death or serious injury.

#### **⚠ CAUTION**

Indicates a potentially hazardous situation that could result in minor or moderate injury. It can also be used to alert against unsafe practices.

#### **NOTICE**

Indicates important information, including situations that can result in damage to equipment or property.

### 2.2 Qualified Personnel

Correct and reliable transport, storage, installation, operation, and maintenance are required for the trouble-free and safe operation of the drive. Only qualified personnel are allowed to install or operate this equipment.

Qualified personnel are defined as trained staff, who are authorized to install, commission, and maintain equipment, systems, and circuits in accordance with pertinent laws and regulations. Also, the personnel must be familiar with the instructions and safety measures described in this manual.

### 2.3 Safety Precautions

#### **⚠ WARNING**

##### HIGH VOLTAGE

Drives contain high voltage when connected to AC mains input, DC supply, load sharing, or permanent motors. Failure to use qualified personnel to install, start up, and maintain the drive can result in death or serious injury.

- Only qualified personnel must install, start up, and maintain the drive.

#### **⚠ WARNING**

##### UNINTENDED START

When the drive is connected to the AC mains, DC supply, or load sharing, the motor can start at any time. Unintended start during programming, service, or repair work can result in death, serious injury, or property damage. The motor can start with an external switch, a fieldbus command, an input reference signal from the LCP or LOP, via remote operation using MCT 10 Set-up Software, or after a cleared fault condition.

To prevent unintended motor start:

- Press [Off/Reset] on the LCP before programming parameters.
- Disconnect the drive from the mains.
- Completely wire and assemble the drive, motor, and any driven equipment before connecting the drive to the AC mains, DC supply, or load sharing.

#### **⚠ WARNING**

##### DISCHARGE TIME

The drive contains DC-link capacitors, which can remain charged even when the drive is not powered. High voltage can be present even when the warning LED indicator lights are off. Failure to wait 40 minutes after power has been removed before performing service or repair work can result in death or serious injury.

1. Stop the motor.
2. Disconnect AC mains and remote DC-link supplies, including battery back-ups, UPS, and DC-link connections to other drives.
3. Disconnect or lock motor.
4. Wait 40 minutes for the capacitors to discharge fully.
5. Before performing any service or repair work, use an appropriate voltage measuring device to make sure that the capacitors are fully discharged.

**⚠ WARNING****LEAKAGE CURRENT HAZARD**

Leakage currents exceed 3.5 mA. Failure to ground the drive properly can result in death or serious injury.

- Ensure the correct grounding of the equipment by a certified electrical installer.

**⚠ WARNING****EQUIPMENT HAZARD**

Contact with rotating shafts and electrical equipment can result in death or serious injury.

- Ensure that only trained and qualified personnel install, start up, and maintain the drive.
- Ensure that electrical work conforms to national and local electrical codes.
- Follow the procedures in this guide.

**⚠ CAUTION****HOT SURFACES**

The drive contains metal components that are still hot even after the drive has been powered off. Failure to observe the high temperature symbol (yellow triangle) on the drive can result in serious burns.

- Be aware that internal components, such as busbars, may be extremely hot even after the drive has been powered off.
- Exterior areas marked by the high temperature symbol (yellow triangle) are hot while the drive is in use and immediately after being powered off.

**⚠ WARNING****INTERNAL FAILURE HAZARD**

Under certain circumstances, an internal failure can cause a component to explode. Failure to keep the enclosure closed and properly secured can cause death or serious injury.

- Do not operate the drive with the door open or panels off.
- Ensure that the enclosure is properly closed and secured during operation.

**NOTICE****MAINS SHIELD SAFETY OPTION**

A mains shield option is available for enclosures with a protection rating of IP21/IP54 (Type 1/Type 12). The mains shield is a cover installed inside the enclosure to protect against the accidental touch of the power terminals, according to BGV A2, VBG 4.

## 3 Product Overview

### 3.1 Intended Use

The drive is an electronic motor controller that converts AC mains input into a variable AC waveform output. The frequency and voltage of the output are regulated to control the motor speed or torque. The drive is designed to:

- Regulate motor speed in response to system feedback or to remote commands from external controllers.
- Monitor system and motor status.
- Provide motor overload protection.

The drive is designed for industrial and commercial environments in accordance with local laws and standards. Depending on configuration, the drive can be used in standalone applications or form part of a larger system or installation.

#### **NOTICE**

In a residential environment, this product can cause radio interference, in which case supplementary mitigation measures can be required.

#### Foreseeable misuse

Do not use the drive in applications which are non-compliant with specified operating conditions and environments. Ensure compliance with the conditions specified in *chapter 9 Specifications*.

### 3.2 Power Ratings, Weights, and Dimensions


Table 3.1 provides dimensions for standard configurations. For dimensions on optional configurations, see *chapter 9 Specifications*.

Enclosure size	E1h	E2h	E3h	E4h
Rated power at 380–480 V [kW (hp)]	355–450 (500–600)	500–560 (650–750)	355–450 (500–600)	500–560 (650–750)
Rated power at 525–690 V [kW (hp)]	450–630 (450–650)	710–800 (750–950)	450–630 (450–650)	710–800 (750–950)
Enclosure protection rating	IP21/Type 1 IP54/Type 12	IP21/Type 1 IP54/Type 12	IP20/ Chassis	IP20/ Chassis
<b>Unit dimensions</b>				
Height [mm (in)]	2043 (80.4)	2043 (80.4)	1578 (62.1)	1578 (62.1)
Width [mm (in)]	602 (23.7)	698 (27.5)	506 (19.9)	604 (23.89)
Depth [mm (in)]	513 (20.2)	513 (20.2)	482 (19.0)	482 (19.0)
Weight [kg (lb)]	295 (650)	318 (700)	272 (600)	295 (650)
<b>Shipping dimensions</b>				
Height [mm (in)]	2191 (86.3)	2191 (86.3)	1759 (69.3)	1759 (69.3)
Width [mm (in)]	768 (30.2)	768 (30.2)	746 (29.4)	746 (29.4)
Depth [mm (in)]	870 (34.3)	870 (34.3)	794 (31.3)	794 (31.3)
Weight [kg (lb)]	–	–	–	–

Table 3.1 Enclosure Power Ratings and Dimensions

### 3.3 Interior View of Enclosures E1h and E2h


3

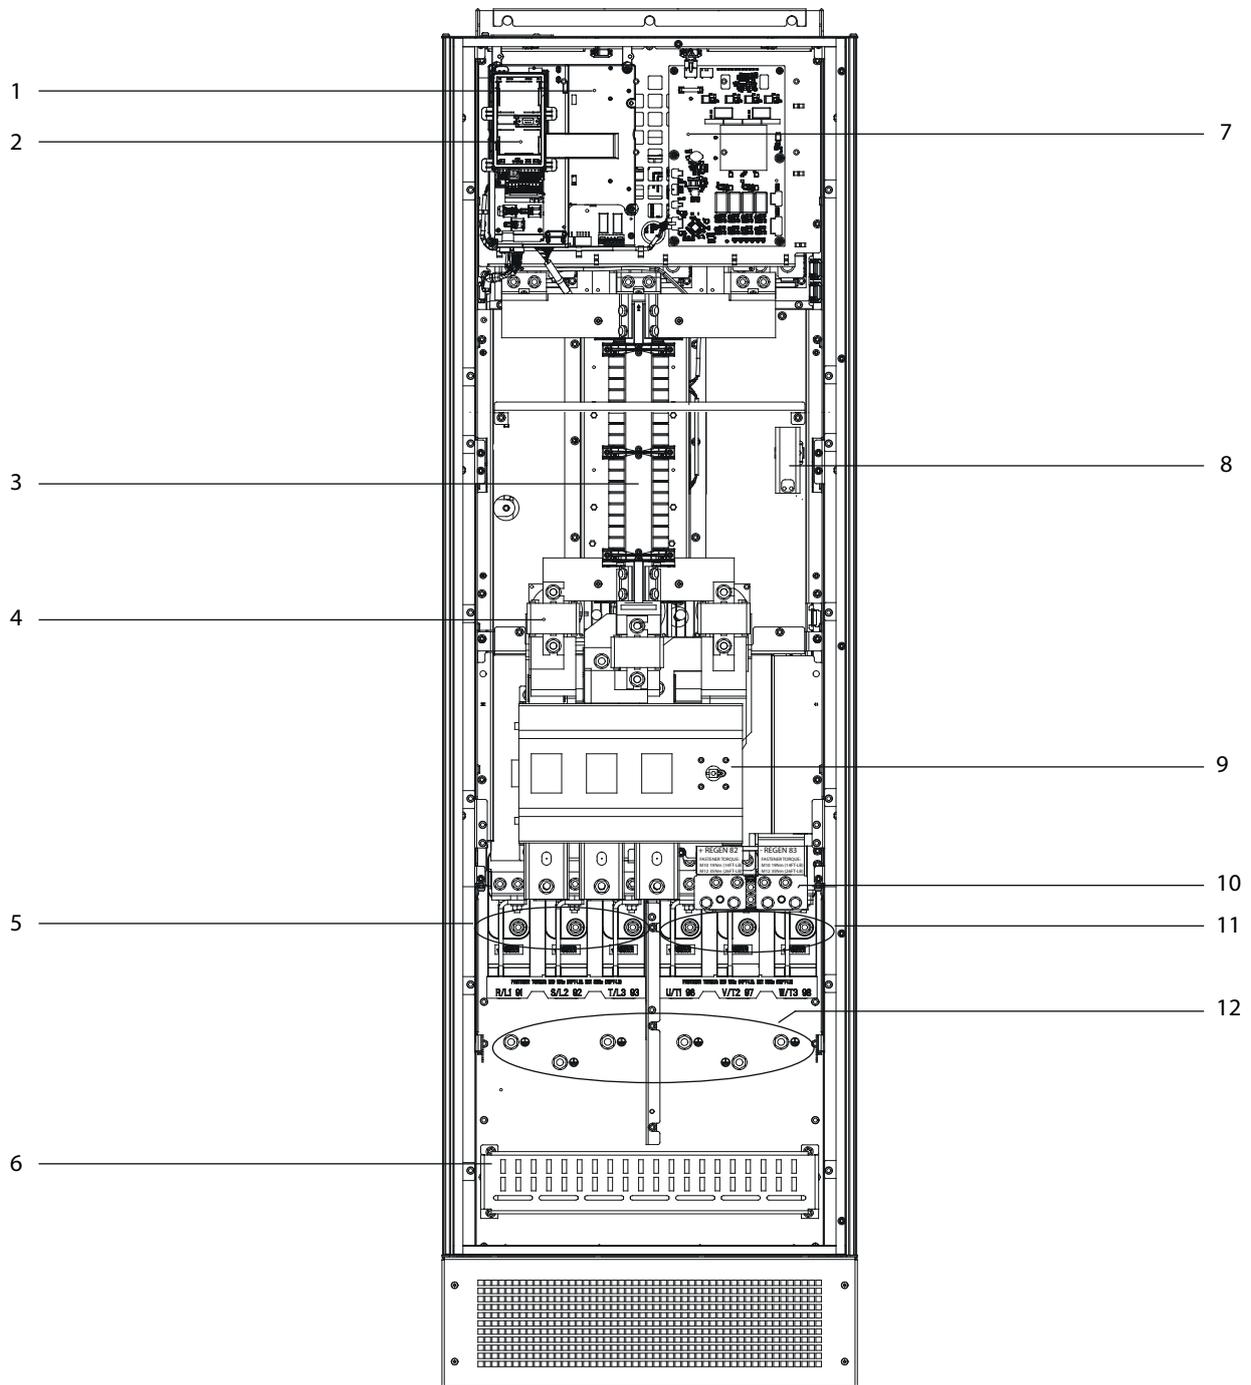

1	Control shelf (see <i>Illustration 3.3</i> )	7	Fan power card
2	Local control panel (LCP) cradle	8	Space heater (optional)
3	RFI filter (optional)	9	Mains disconnect (optional)
4	Mains fuses (required for UL compliance, but otherwise optional)	10	Brake/regeneration terminals (optional)
5	Mains terminals	11	Motor terminals
6	RFI shield termination	12	Ground terminals

Illustration 3.1 Interior View of Enclosure E1h (Enclosure E2h is Similar)

### 3.4 Interior View of Enclosures E3h and E4h

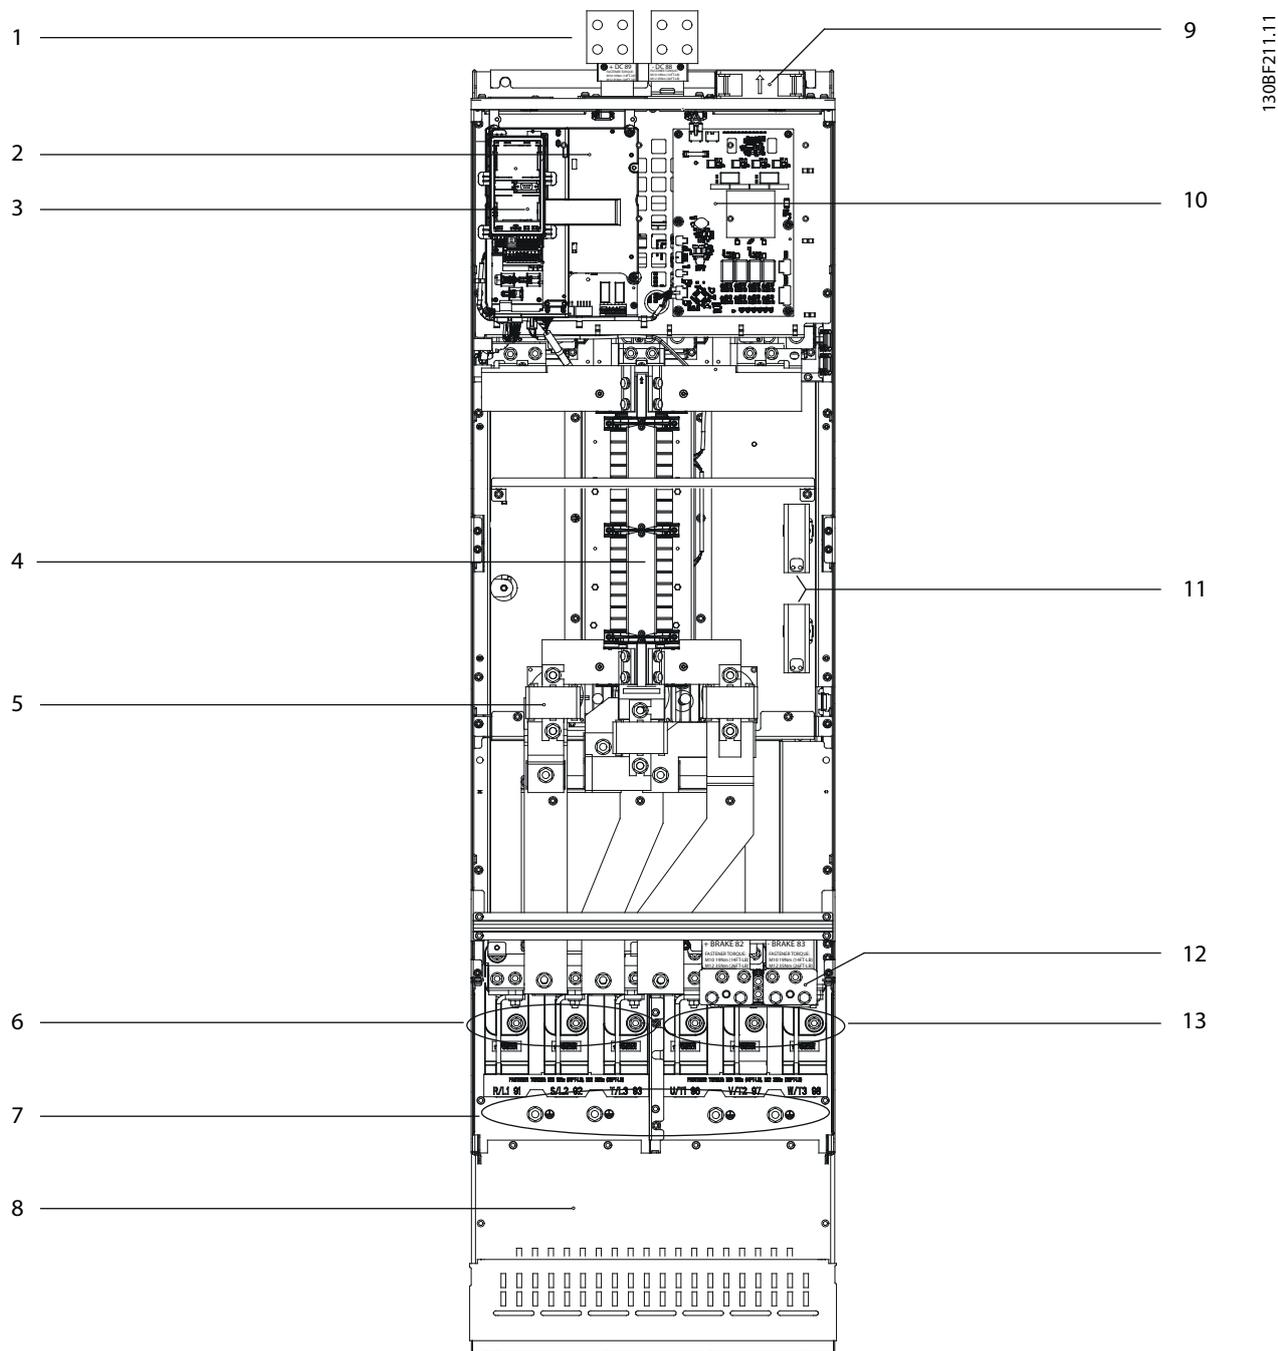

130BF21.1.11


3

1	Load share/regeneration terminals (optional)	8	RFI shield termination (optional, but is standard when RFI filter is ordered)
2	Control shelf (see <i>Illustration 3.3</i> )	9	Fans (used to cool the front section of enclosure)
3	Local control panel (LCP) cradle	10	Fan power card
4	RFI filter (optional)	11	Space heater (optional)
5	Mains fuses (optional)	12	Brake terminals (optional)
6	Mains terminals	13	Motor terminals
7	Ground terminals	-	-

Illustration 3.2 Interior View of Enclosure E3h (Enclosure E4h is Similar)

## 3.5 Control Shelf

3

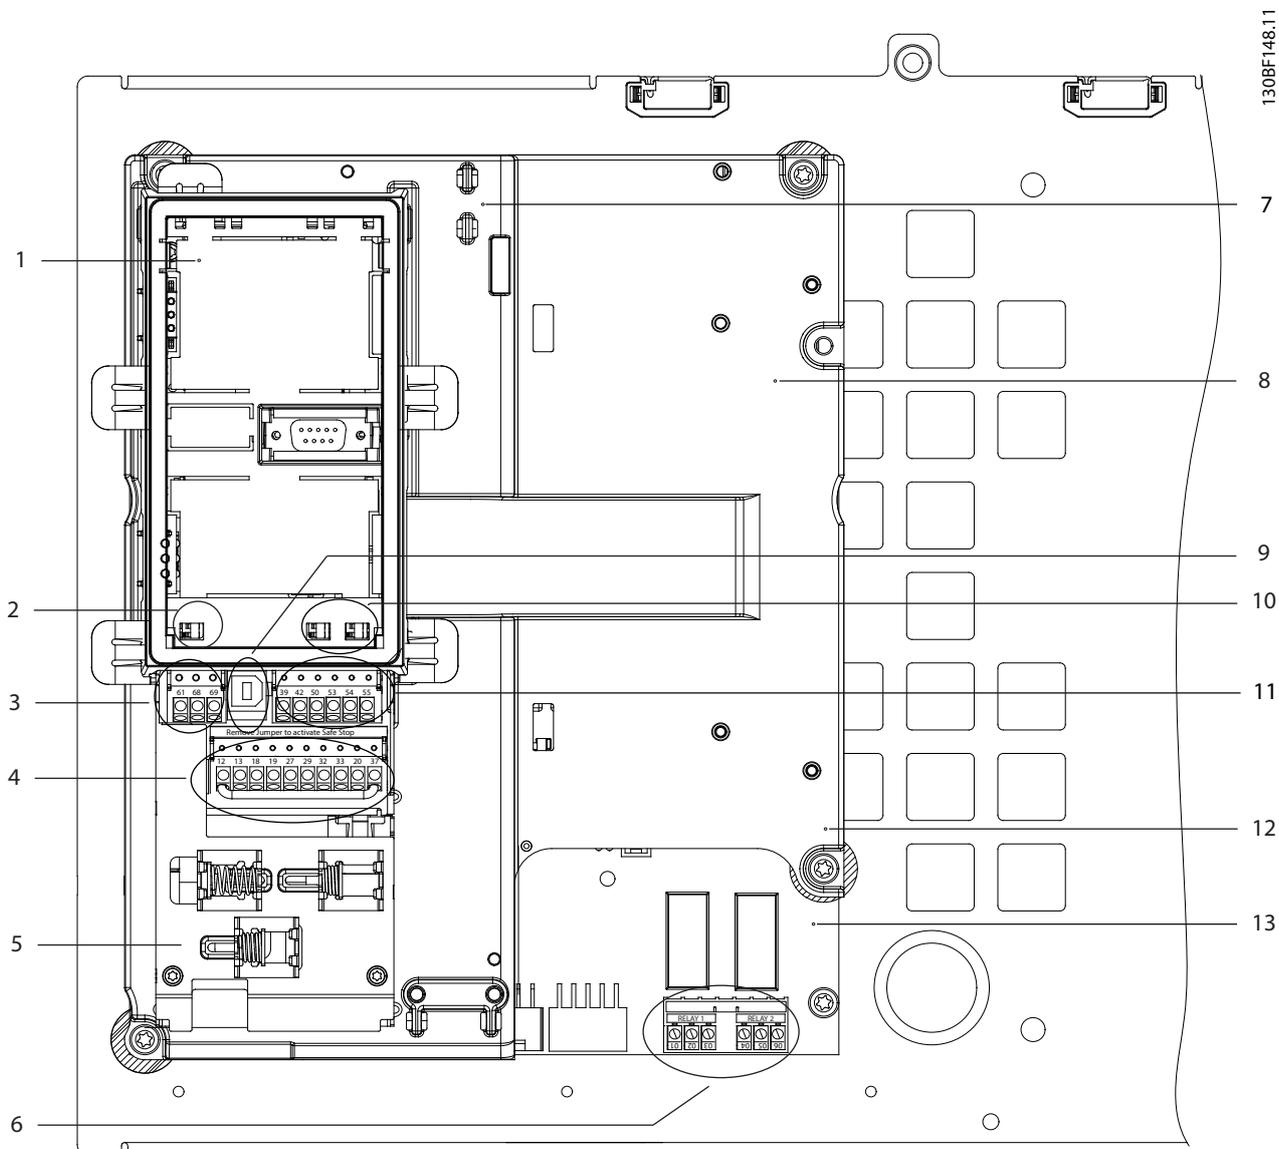

1	LCP cradle (LCP not shown)	8	Control shelf
2	Bus terminal switch (see chapter 5.8.6 Configuring RS485 Serial Communication)	9	USB port
3	Serial communication terminals (see Table 5.1)	10	Analog input switches A53/A54 (see chapter 5.8.11 Selecting Voltage/Current Input Signal)
4	Digital input/output terminals (see Table 5.2)	11	Analog input/output terminals (see Table 5.3)
5	Cable/EMC clamps	12	Brake resistor terminals, 104–106 (on power card underneath control shelf)
6	Relay 1 and relay 2 (see Illustration 5.19)	13	Power card (underneath the control shelf)
7	Control card (underneath LCP and control terminals)	–	–

Illustration 3.3 View of Control Shelf

### 3.6 Local Control Panel (LCP)

The local control panel (LCP) is the combined display and keypad on the front of the drive.

The LCP is used to:

- Control the drive and motor.
- Access drive parameters and program the drive.
- Display operational data, drive status, and warnings.

A numeric local control panel (NLCP) is available as an option. The NLCP operates in a manner similar to the LCP, but there are differences. For details on how to use the NLCP, see the product-specific *programming guide*.

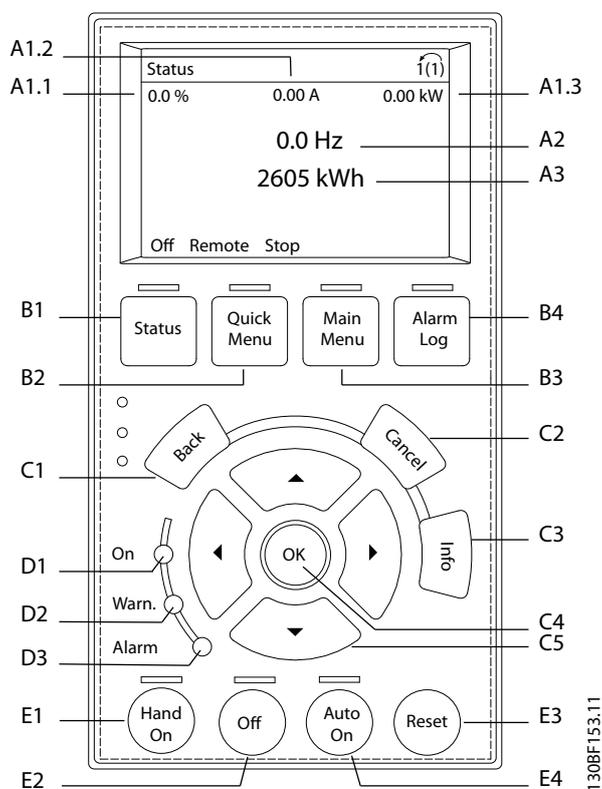


Illustration 3.4 Graphical Local Control Panel (LCP)

#### A. Display area

Each display readout has a parameter associated with it. See *Table 3.2*. The information shown on the LCP can be customized for specific applications. Refer to *chapter 6.3.1.2 Q1 My Personal Menu*.

Callout	Parameter	Default setting
A1.1	Parameter 0-20 Display Line 1.1 Small	Reference [%]
A1.2	Parameter 0-21 Display Line 1.2 Small	Motor current [A]
A1.3	Parameter 0-22 Display Line 1.3 Small	Power [Kw]
A2	Parameter 0-23 Display Line 2 Large	Frequency [Hz]
A3	Parameter 0-24 Display Line 3 Large	kWh counter

Table 3.2 LCP Display Area

### B. Menu keys

Menu keys are used to access the menu for setting up parameters, toggling through status display modes during normal operation, and viewing fault log data.

Callout	Key	Function
B1	Status	Shows operational information.
B2	Quick Menu	Allows access to parameters for initial set-up instructions. Also provides detailed application steps. Refer to <i>chapter 6.3.1.1 Quick Menu Mode</i> .
B3	Main Menu	Allows access to all parameters. Refer to <i>chapter 6.3.1.8 Main Menu Mode</i> .
B4	Alarm Log	Shows a list of current warnings and the last 10 alarms.

Table 3.3 LCP Menu Keys

### C. Navigation keys

Navigation keys are used for programming functions and moving the display cursor. The navigation keys also provide speed control in local (hand) operation. The display brightness can be adjusted by pressing [Status] and [▲]/[▼] keys.

Callout	Key	Function
C1	Back	Reverts to the previous step or list in the menu structure.
C2	Cancel	Cancels the last change or command as long as the display mode has not changed.
C3	Info	Shows a definition of the function being shown.
C4	OK	Accesses parameter groups or enables an option.
C5	▲ ▼ ◀ ▶	Moves between items in the menu.

Table 3.4 LCP Navigation Keys

### D. Indicator lights

Indicator lights are used to identify the drive status and to provide a visual notification of warning or fault conditions.

Callout	Indicator	Indicator light	Function
D1	On	Green	Activates when the drive receives power from the mains voltage or a 24 V DC external supply.
D2	Warn.	Yellow	Activates when warning conditions are active. Text appears in the display area identifying the problem.
D3	Alarm	Red	Activates during a fault condition. Text appears in the display area identifying the problem.

Table 3.5 LCP Indicator Lights

### E. Operation keys and reset

The operation keys are found toward the bottom of the local control panel.

Callout	Key	Function
E1	Hand On	Starts the drive in local control. An external stop signal by control input or serial communication overrides the local Hand On.
E2	Off	Stops the motor but does not remove power to the drive.
E3	Auto On	Puts the system in remote operational mode so it can respond to an external start command by control terminals or serial communication.
E4	Reset	Resets the drive manually after a fault has been cleared.


Table 3.6 LCP Operation Keys and Reset

## 4 Mechanical Installation

### 4.1 Items Supplied

Items supplied can vary according to product configuration.

- Make sure the items supplied and the information on the nameplate correspond to the order confirmation.
- Visually check the packaging and the drive for damage caused by inappropriate handling during shipment. File any claim for damage with the carrier. Retain damaged parts for clarification.

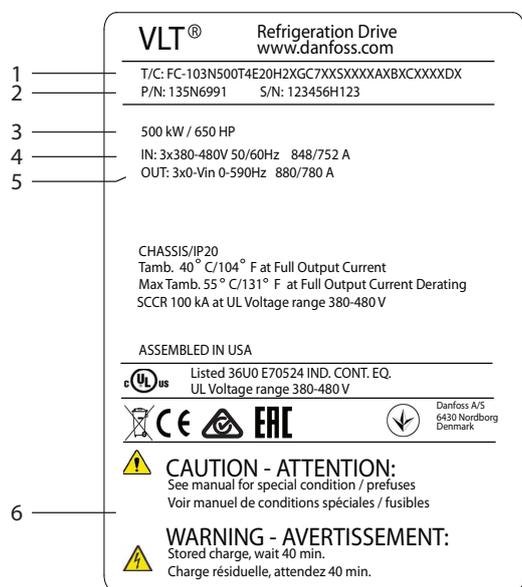

1	Type code
2	Code number
3	Power rating
4	Input voltage, frequency, and current (at low/high voltages)
5	Output voltage, frequency, and current (at low/high voltages)
6	Discharge time

Illustration 4.1 Product Nameplate for E4h Enclosure (Example)

### NOTICE

Removing the nameplate from the drive can result in the loss of warranty.

### 4.2 Tools Needed

#### Receiving/unloading

- I-beam and hooks rated to lift the weight of the drive. Refer to *chapter 3.2 Power Ratings, Weights, and Dimensions*.
- Crane or other lifting aid to place the unit into position.

#### Installation

- Drill with 10 mm or 12 mm drill bits.
- Tape measurer.
- Various sizes of Phillips and flat bladed screwdrivers.
- Wrench with relevant metric sockets (7–17 mm).
- Wrench extensions.
- Torx drives (T25 and T50).
- Sheet metal punch for conduits or cable glands.
- I-beam and hooks to lift the weight of the drive. Refer to *chapter 3.2 Power Ratings, Weights, and Dimensions*.
- Crane or other lifting aid to place the drive onto pedestal and into position.

### 4.3 Storage

Store the drive in a dry location. Keep the equipment sealed in its packaging until installation. Refer to *chapter 9.4 Ambient Conditions* for recommended ambient temperature.

Periodic forming (capacitor charging) is not necessary during storage unless storage exceeds 12 months.

### 4.4 Operating Environment

In environments with airborne liquids, particles, or corrosive gases, ensure that the IP/Type rating of the equipment matches the installation environment. For specifications regarding ambient conditions, see *chapter 9.4 Ambient Conditions*.

**NOTICE****CONDENSATION**

Moisture can condense on the electronic components and cause short circuits. Avoid installation in areas subject to frost. Install an optional space heater when the drive is colder than the ambient air. Operating in standby mode reduces the risk of condensation as long as the power dissipation keeps the circuitry free of moisture.

**NOTICE****EXTREME AMBIENT CONDITIONS**

Hot or cold temperatures compromise unit performance and longevity.

- Do not operate in environments where the ambient temperature exceeds 55 °C (131 °F).
- The drive can operate at temperatures down to -10 °C (14 °F). However, proper operation at rated load is only guaranteed at 0 °C (32 °F) or higher.
- If temperature exceeds ambient temperature limits, extra air conditioning of the cabinet or installation site is required.

**4.4.1 Gases**

Aggressive gases, such as hydrogen sulfide, chlorine, or ammonia can damage the electrical and mechanical components. The unit uses conformal-coated circuit boards to reduce the effects of aggressive gases. For conformal-coating class specifications and ratings, see *chapter 9.4 Ambient Conditions*.

**4.4.2 Dust**

When installing the drive in dusty environments, pay attention to the following:

**Periodic maintenance**

When dust accumulates on electronic components, it acts as a layer of insulation. This layer reduces the cooling capacity of the components, and the components become warmer. The hotter environment decreases the life of the electronic components.

Keep the heat sink and fans free from dust buildup. For more service and maintenance information, refer to *chapter 8 Maintenance, Diagnostics, and Troubleshooting*.

**Cooling fans**

Fans provide airflow to cool the drive. When fans are exposed to dusty environments, the dust can damage the fan bearings and cause premature fan failure. Also, dust can accumulate on fan blades causing an imbalance which prevents the fans from properly cooling the unit.

**4.4.3 Potentially Explosive Atmospheres****⚠ WARNING****EXPLOSIVE ATMOSPHERE**

Do not install the drive in a potentially explosive atmosphere. Install the unit in a cabinet outside of this area. Failure to follow this guideline increases risk of death or serious injury.

Systems operated in potentially explosive atmospheres must fulfill special conditions. EU Directive 94/9/EC (ATEX 95) classifies the operation of electronic devices in potentially explosive atmospheres.

- Class d specifies that if a spark occurs, it is contained in a protected area.
- Class e prohibits any occurrence of a spark.

**Motors with class d protection**

Does not require approval. Special wiring and containment are required.

**Motors with class e protection**

When combined with an ATEX approved PTC monitoring device like the VLT® PTC Thermistor Card MCB 112, installation does not need an individual approval from an approved organization.

**Motors with class d/e protection**

The motor itself has an e ignition protection class, while the motor cabling and connection environment is in compliance with the d classification. To attenuate the high peak voltage, use a sine-wave filter at the drive output.

**When using a drive in a potentially explosive atmosphere, use the following:**

- Motors with ignition protection class d or e.
- PTC temperature sensor to monitor the motor temperature.
- Short motor cables.
- Sine-wave output filters when shielded motor cables are not used.

## NOTICE

### MOTOR THERMISTOR SENSOR MONITORING

Drives with the VLT® PTC Thermistor Card MCB 112 option are PTB-certified for potentially explosive atmospheres.

## 4.5 Installation and Cooling Requirements

### NOTICE

Improper mounting can result in overheating and reduced performance.

#### Installation requirements

- Locate the unit as near to the motor as possible. See *chapter 9.5 Cable Specifications* for the maximum motor cable length.
- Ensure unit stability by mounting the unit to a solid surface.
- Enclosures E3h and E4h can be mounted:
  - Vertically on the back plate of the panel (typical installation).
  - Vertically upside down on the back plate of the panel.<sup>1)</sup>
  - Horizontally on its back, mounted on the back plate of the panel.<sup>1)</sup>
  - Horizontally on its side, mounted on floor of the panel.<sup>1)</sup>
- Ensure that the strength of the mounting location supports the unit weight.
- Ensure that there is enough space around the unit for proper cooling. Refer to *chapter 9.9 Enclosure Airflow*.
- Ensure enough access to open the door.
- Ensure cable entry from the bottom.

1) For non-typical installation, contact the factory.

#### Cooling requirements

- Ensure that top and bottom clearance for air cooling is provided. Clearance requirement: 225 mm (9 in).
- Provide sufficient airflow flow rate. See *Table 4.1*.
- Consider derating for temperatures starting between 45 °C (113 °F) and 50 °C (122 °F) and elevation 1000 m (3300 ft) above sea level. See the *design guide* for detailed information.

The drive utilizes a back-channel cooling concept that removes heat sink cooling air. The heat sink cooling air carries approximately 90% of the heat out of the back channel of the drive. Redirect the back-channel air from the panel or room by using:

- **Duct cooling**  
Back-channel cooling kits are available to direct the heat sink cooling air out of the panel when IP20/Chassis drives are installed in Rittal enclosures. These kits reduce the heat in the panel and smaller door fans can be specified.
- **Back-wall cooling**  
Installing top and base covers to the unit allows the back-channel cooling air to be ventilated out of the room.

### NOTICE

For E3h and E4h enclosures (IP20/Chassis), at least 1 door fan is required on the enclosure to remove the heat not contained in the back-channel of the drive. It also removes any additional losses generated by other components inside the drive. To select the appropriate fan size, calculate the total required airflow.

Secure the necessary airflow over the heat sink.

Frame	Door fan/top fan [m <sup>3</sup> /hr (cfm)]	Heat sink fan [m <sup>3</sup> /hr (cfm)]
E1h51h	510 (300)	994 (585)
E2h	552 (325)	1053–1206 (620–710)
E3h	595 (350)	994 (585)
E4h	629 (370)	1053–1206 (620–710)

Table 4.1 Airflow Rate

## 4.6 Lifting the Unit

Always lift the drive using the dedicated lifting eyes. To avoid bending the lifting holes, use a bar.

**⚠ WARNING**

**RISK OF INJURY OR DEATH**

Follow local safety regulations for lifting heavy weights. Failure to follow recommendations and local safety regulations can result in death or serious injury.

- Ensure that the lifting equipment is in proper working condition.
- See *chapter 3.2 Power Ratings, Weights, and Dimensions* for the weight of the different enclosure sizes.
- Maximum diameter for bar: 20 mm (0.8 in).
- The angle from the top of the drive to the lifting cable: 60° or greater.

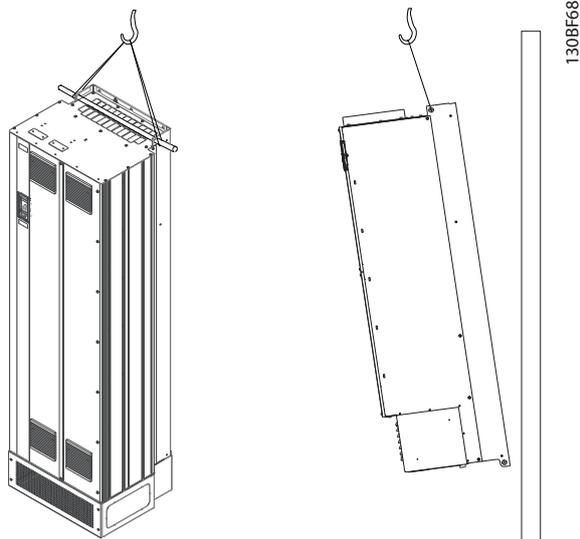


Illustration 4.2 Recommended Lifting Method

The gland plate is necessary to provide cooling air to the control components of the drive via the door fan, and to maintain the IP21/Type 1 or IP54/Type 12 protection rating.

**4.7.1 Securing the Pedestal to the Floor**

The pedestal must be secured to the floor using 6 bolts before installing the enclosure.

1. Determine proper placement of the unit, concerning operating conditions and cable access.
2. Access the mounting holes by removing the front panel of the pedestal.
3. Set the pedestal on the floor and secure using 6 bolts through the mounting holes. Refer to the circled areas in *Illustration 4.3*.

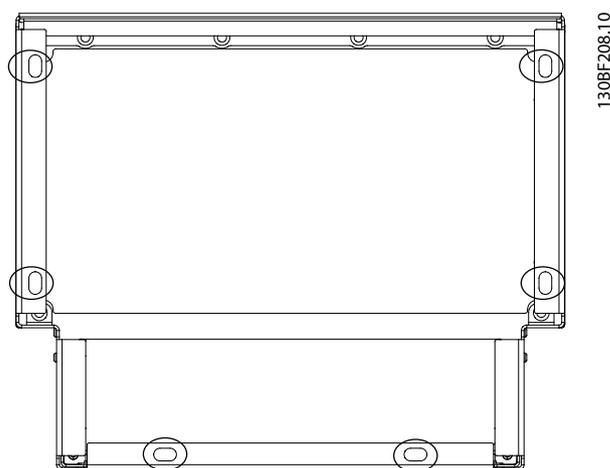


Illustration 4.3 Pedestal to Floor Mounting Points


**4.7 E1h/E2h Mechanical Installation**

The E1h and E2h enclosure size is intended only for floor installation, and is shipped with a pedestal and a gland plate. The pedestal and gland plate must be installed for proper installation.

The pedestal is 200 mm (7.9 in) and has an opening in the front to allow airflow necessary to cool the power components of the drive.


### 4.7.2 Attaching the E1h/E2h to the Pedestal

1. Lift the drive and position it on the pedestal. There are 2 bolts in the rear of the pedestal that slide into the 2 slotted holes in the rear of the enclosure. Position the drive by adjusting the bolts up or down. Loosely secure with 2 M10 nuts and locking brackets. See *Illustration 4.4*.
2. Verify that there is 225 mm (9 in) top clearance for air exhaust.
3. Verify that the air intake at the bottom front of the unit is not obstructed.
4. Around the top of the pedestal, secure the enclosure using 6 M10x30 fasteners. Refer to *Illustration 4.5*. Loosely tighten each bolt until all bolts are installed.
5. Fasten each bolt securely and torque to 19 Nm (169 in-lb).
6. Torque the 2 M10 nuts at the rear of the enclosure to 19 Nm (169 in-lb).

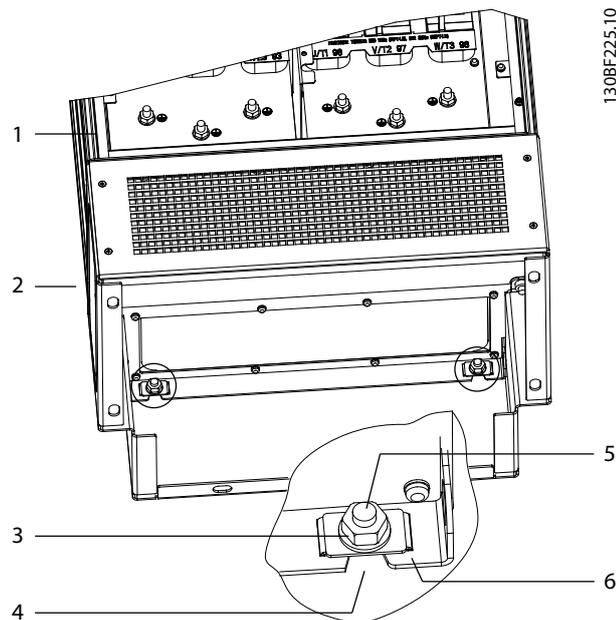

1	Enclosure	4	Slotted hole in enclosure
2	Pedestal	5	Bolt at rear of pedestal
3	M10 nut	6	Locking bracket

Illustration 4.4 Pedestal to Enclosure Back Mounting Points

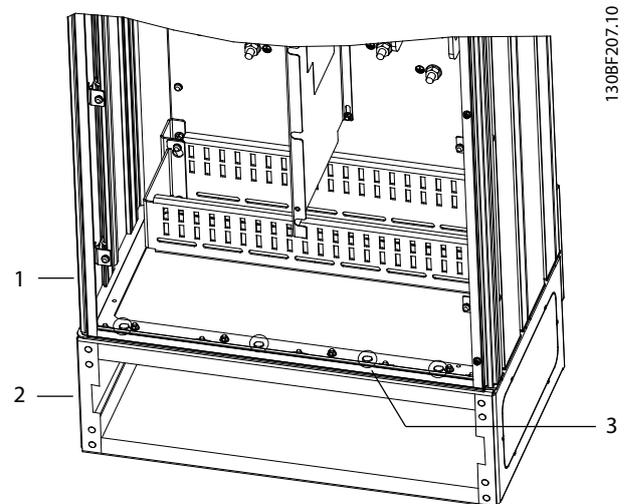

1	Enclosure	3	M10x30 fasteners (rear corner bolts not shown)
2	Pedestal	-	-


Illustration 4.5 Pedestal to Enclosure Mounting Points

### 4.7.3 Creating Cable Openings

The gland plate is a sheet of metal with studs along the outer edge. The gland plate provides cable entry and cable termination points, and must be installed to maintain the IP21/IP54 (Type 1/Type 12) protection rating. The plate is placed between the drive enclosure and the pedestal. Depending on stud orientation, the plate can be installed from inside the enclosure or the pedestal. For gland plate dimensions, see *chapter 9.8.1 E1h Exterior Dimensions*.

Refer to *Illustration 4.6* for the following steps.

1. Create cable entry holes in the gland plate using a sheet metal punch.
2. Insert the gland plate using 1 of the following methods:
  - 2a To insert the gland plate through the pedestal, slide the gland plate through the slot (4) in the front of the pedestal.
  - 2b To insert the gland plate through the enclosure, angle the gland plate until it can be slid under the slotted brackets.
3. Align the studs on the gland plate to the holes in the pedestal and secure with 10 M5 nuts (2).
4. Torque each nut to 2.3 Nm (20 in-lb).

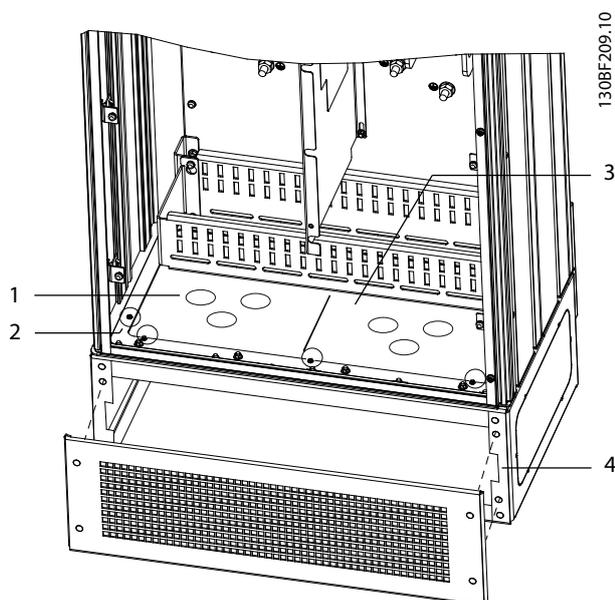

### 4.8.1 Attaching the E3h/E4h to a Mounting Plate or Wall

1. Drill the mounting holes according to the enclosure size. Refer to *chapter 9.8 Enclosure Dimensions*.
2. Secure the top of the drive enclosure to the mounting plate or wall.
3. Secure the base of the drive enclosure to the mounting plate or wall.

1	Cable entry hole	4	Slot in pedestal base
2	M5 nut	5	Front cover/grill
3	Gland plate	-	-

Illustration 4.6 Installing the Gland Plate

## 4.8 E3h/E4h Mechanical Installation

The E3h and E4h enclosure sizes are intended to be mounted on a wall or on a mounting panel within an enclosure. A plastic gland plate is installed on the enclosure. It is designed to prevent unintentional access to the terminals in an IP20/protected chassis unit.

### **NOTICE**

#### **REGENERATION/LOAD SHARE OPTION**


Due to the exposed terminals at the top of the enclosure, units with the regeneration/load share option have an IP00 protection rating.

### 4.8.2 Creating Cable Openings

The gland plate covers the bottom part of the drive enclosure and must be installed to maintain the IP20/Chassis protection rating. The gland plate consists of plastic squares that can be cut out to provide cable access to the terminals. See *Illustration 4.7*.

1. Remove the bottom panel and terminal cover. See *Illustration 4.8*.
  - 1a Detach the bottom panel by removing 4 T25 screws.
  - 1b Remove 5 T20 screws that secure the bottom of the drive to the top of the terminal cover, and then pull the terminal cover straight out.
2. Determine the size and position of the motor, mains, and ground cables. Note their position and measurements.
3. Based on the measurement and positions of the cables, create openings in the plastic gland plate by cutting out the necessary squares.
4. Slide the plastic gland plate (7) onto the bottom rails of the terminal cover.
5. Tilt the front of the terminal cover downward until the fastener points (8) rest on the slotted drive brackets (6).
6. Make sure the side panels of the terminal cover are on the outside track guide (5).


7. Push the terminal cover until it is up against the slotted drive bracket.
8. Tilt the front of the terminal cover upward until the fastener hole in the bottom of the drive aligns with the keyhole opening (9) in the terminal. Secure with 2 T25 screws and torque to 2.3 Nm (20 in-lb).
9. Secure the bottom panel with 3 T25 screws and torque to 2.3 Nm (20 in-lb).

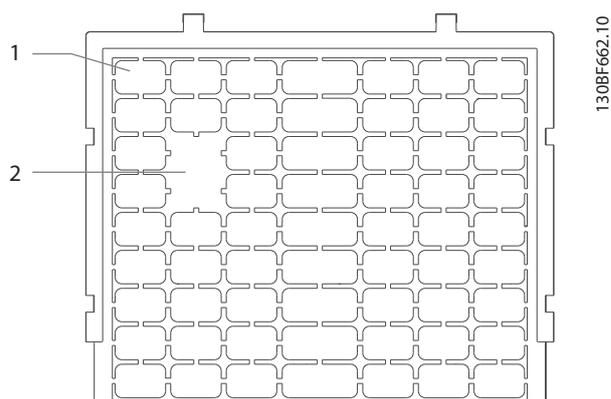

1	Plastic square
2	Squares removed for cable access

**Illustration 4.7 Plastic Gland Plate**

4

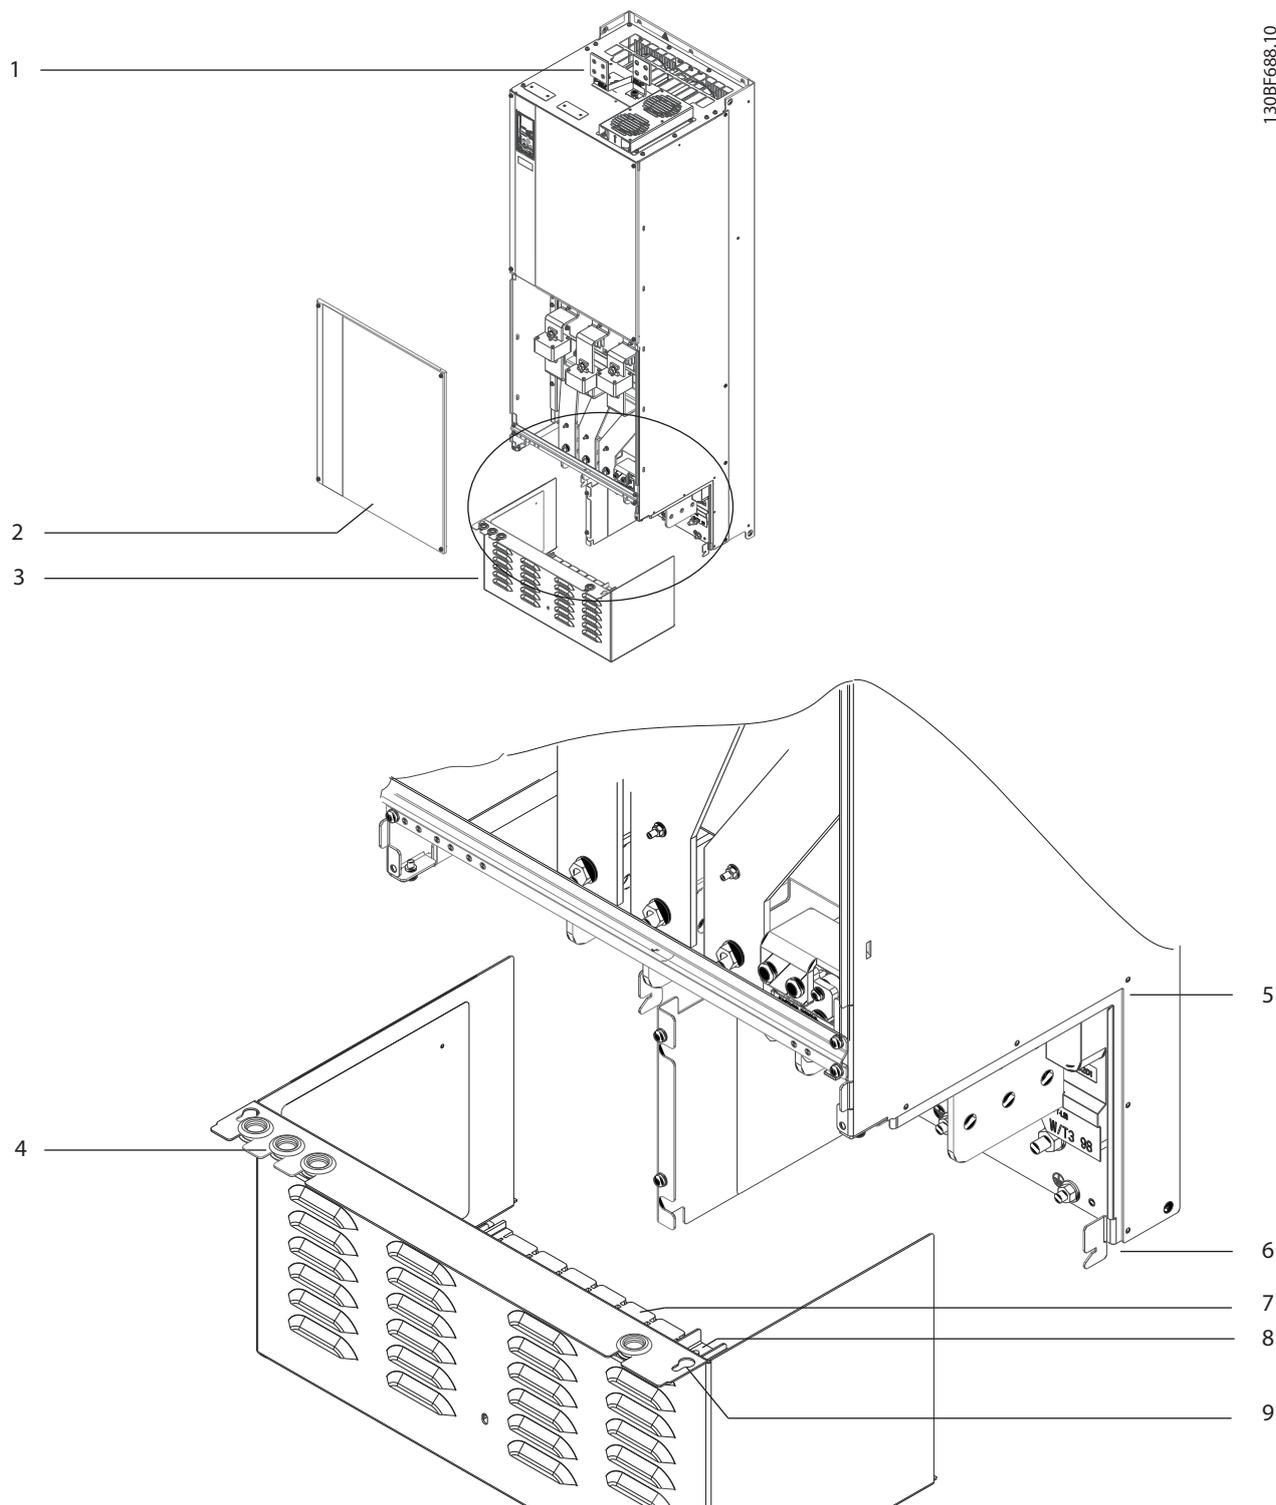


1	Load share/regeneration terminals (optional)	6	Slotted drive bracket
2	Bottom panel	7	Plastic gland plate (installed)
3	Terminal cover	8	Fastener point
4	Grommet access hole for control wiring	9	Keyhole opening
5	Track guide	-	-

Illustration 4.8 Assembling the Gland Plate and Terminal Cover

### 4.8.3 Installing Load share/Regeneration Terminals

The load share/regeneration terminals, located on the top of the drive, are not installed from the factory to prevent damage during shipping. Refer to *Illustration 4.9* for the following steps.

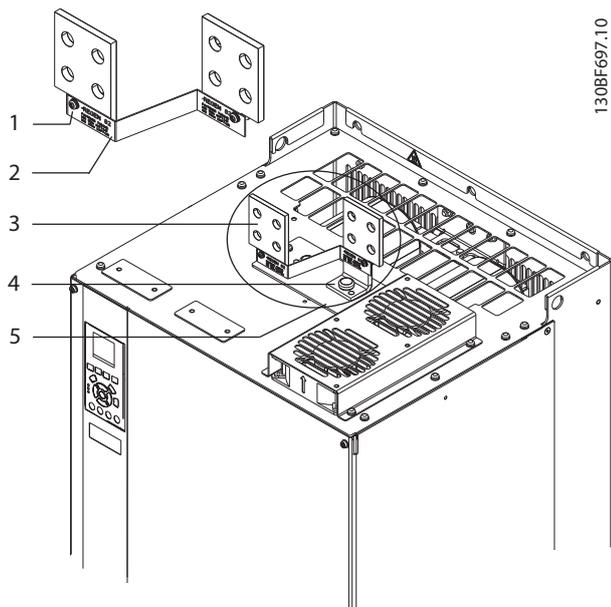

1	Label fastener, M4
2	Label
3	Load share/regeneration terminal
4	Terminal fastener, M10
5	Terminal plate with 2 openings

Illustration 4.9 Load share/Regeneration Terminals

1. Remove the terminal plate, 2 terminals, label, and fasteners from the accessory bag included with the drive.
2. Remove the cover from the load share/regeneration opening on the top of the drive. Put aside the 2 M5 fasteners for reuse later.
3. Remove the plastic backing and install the terminal plate over the load share/regeneration opening. Secure with the 2 M5 fasteners and torque to 2.3 Nm (20 in-lb).
4. Install both terminals to the terminal plate using 1 M10 fastener per terminal. Torque to 19 Nm (169 in-lb).
5. Install the label on the front of the terminals as shown in *Illustration 4.9*. Secure with 2 M4 screws and torque to 1.2 Nm (10 in-lb).

## 5 Electrical Installation

### 5.1 Safety Instructions

See *chapter 2 Safety* for general safety instructions.

#### **⚠ WARNING**

##### INDUCED VOLTAGE

Induced voltage from output motor cables from different drives that run together can charge equipment capacitors even with the equipment turned off and locked out. Failure to run output motor cables separately or use shielded cables or metal conduits could result in death or serious injury.

- Run output motor cables separately or use shielded cables.
- Simultaneously lock out all the drives.

#### **⚠ WARNING**

##### SHOCK HAZARD

The drive can cause a DC current in the ground conductor and thus result in death or serious injury.

- When a residual current-operated protective device (RCD) is used for protection against electrical shock, only an RCD of Type B is allowed on the supply side.

Failure to follow the recommendation means that the RCD cannot provide the intended protection.

#### **NOTICE**

The drive is supplied with Class 20 motor overload protection.

##### Overcurrent protection

- Additional protective equipment such as short-circuit protection or motor thermal protection between drive and motor is required for applications with multiple motors.
- Input fusing is required to provide short circuit and overcurrent protection. If fuses are not factory-supplied, the installer must provide them. See maximum fuse ratings in *chapter 9.7 Fuses*.

##### Wire type and ratings

- All wiring must comply with local and national regulations regarding cross-section and ambient temperature requirements.
- Power connection wire recommendation: Minimum 75 °C (167 °F) rated copper wire.

See *chapter 9.5.1 Cable Specifications* for recommended wire sizes and types.

#### **⚠ CAUTION**

##### PROPERTY DAMAGE

Protection against motor overload is not included in the default setting. To add this function, set *parameter 1-90 Motor Thermal Protection* to [ETR trip] or [ETR warning]. For the North American market, the ETR function provides class 20 motor overload protection in accordance with NEC. Failure to set *parameter 1-90 Motor Thermal Protection* to [ETR trip] or [ETR warning] means that motor overload protection is not provided and, if the motor overheats, property damage can occur.

### 5.2 EMC-compliant Installation

To obtain an EMC-compliant installation, follow the instructions provided in:

- *Chapter 5.3 Wiring Schematic.*
- *Chapter 5.4 Connecting the Motor.*
- *Chapter 5.6 Connecting to Ground.*
- *Chapter 5.8 Control Wiring.*

#### **NOTICE**

##### TWISTED SHIELD ENDS (PIGTAILS)

Twisted shield ends (pigtailed) increase the shield impedance at higher frequencies, reducing the shield effect and increasing the leakage current. Avoid twisted shield ends by using integrated shield clamps.

- For use with relays, control cables, a signal interface, fieldbus, or brake, connect the shield to the enclosure at both ends. If the ground path has high impedance, is noisy, or is carrying current, break the shield connection on 1 end to avoid ground current loops.
- Convey the currents back to the unit using a metal mounting plate. Ensure good electrical contact from the mounting plate through the mounting screws to the drive chassis.
- Use shielded cables for motor output cables. An alternative is unshielded motor cables within metal conduit.

**NOTICE****SHIELDED CABLES**

If shielded cables or metal conduits are not used, the unit and the installation do not meet regulatory limits on radio frequency (RF) emission levels.

- Ensure that motor and brake cables are as short as possible to reduce the interference level from the entire system.
- Avoid placing cables with a sensitive signal level alongside motor and brake cables.
- For communication and command/control lines, follow the particular communication protocol standards. For example, USB must use shielded cables, but RS485/ethernet can use shielded UTP or unshielded UTP cables.
- Ensure that all control terminal connections are PELV.

**NOTICE****EMC INTERFERENCE**

Run cables for mains input, motor wiring, and control wiring in 3 separate metallic conduits. Failure to isolate power, motor, and control cables can result in unintended behavior or reduced performance. Minimum 200 mm (7.9 in) clearance between mains input, motor, and control cables are required.

**NOTICE****INSTALLATION AT HIGH ALTITUDE**


There is a risk for overvoltage. Isolation between components and critical parts could be insufficient, and not comply with PELV requirements. Reduce the risk for overvoltage by using external protective devices or galvanic isolation.

For installations above 2000 m (6500 ft) altitude, contact Danfoss regarding PELV compliance.

**NOTICE****PELV COMPLIANCE**

Prevent electric shock by using protective extra low voltage (PELV) electrical supply and complying with local and national PELV regulations.


5

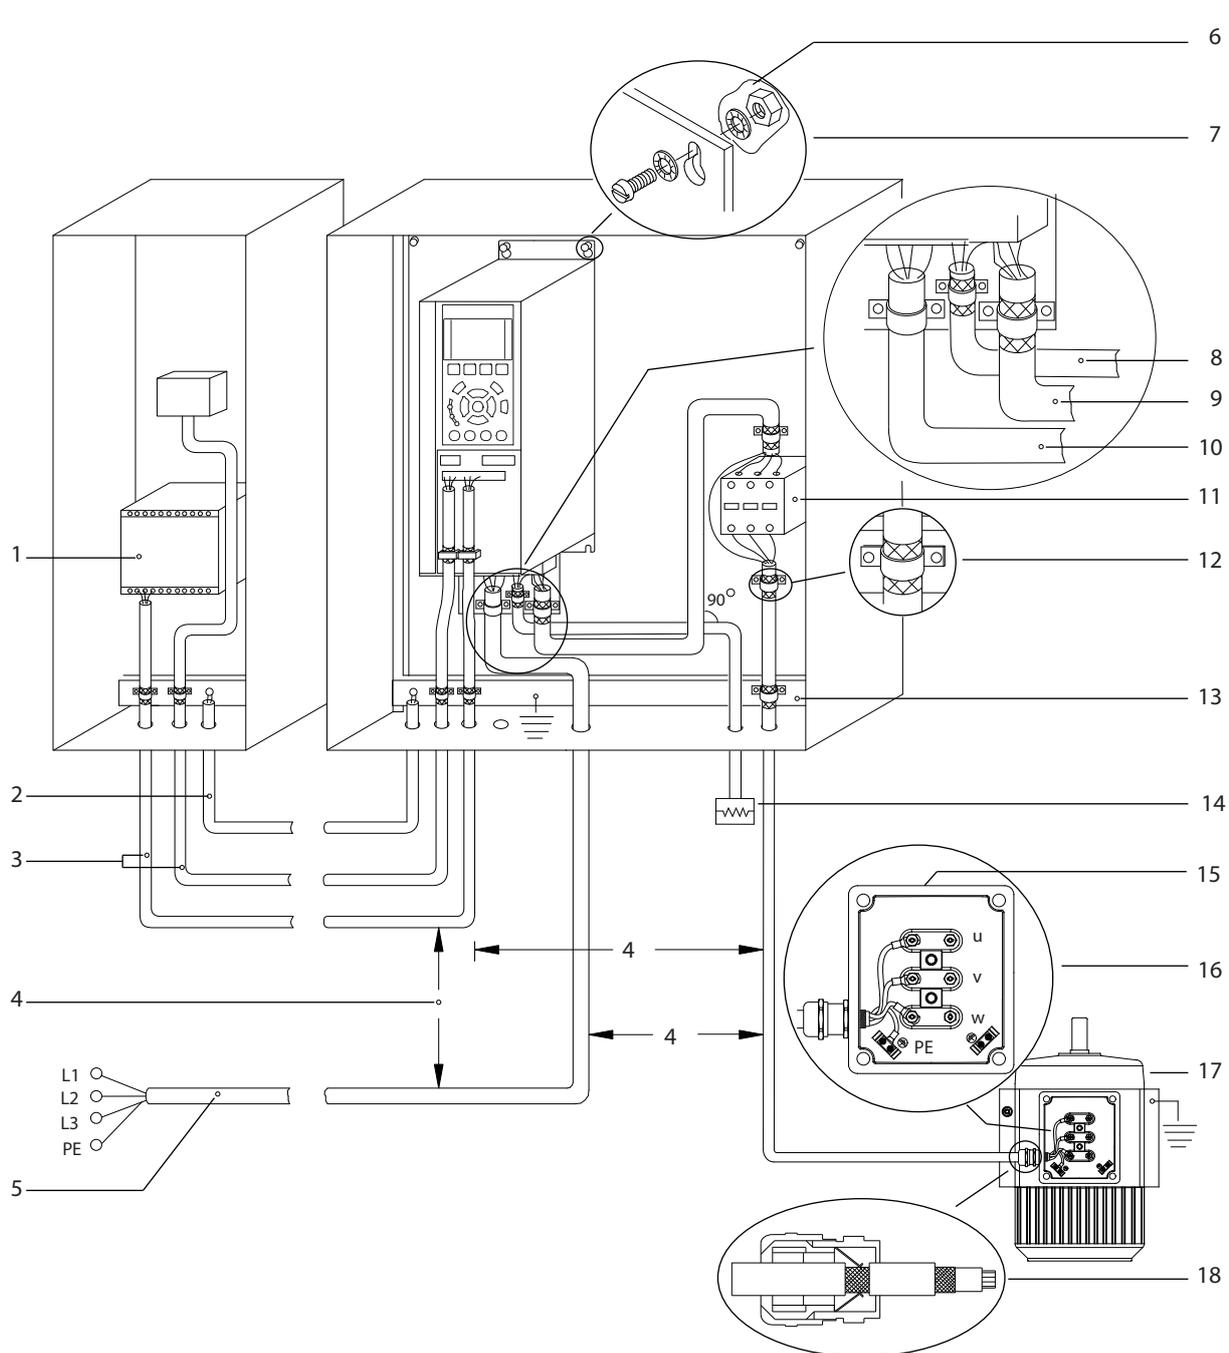

1	PLC	10	Mains cable (unshielded)
2	Minimum 16 mm <sup>2</sup> (6 AWG) equalizing cable	11	Output contactor and similar options
3	Control cables	12	Cable insulation stripped
4	Minimum 200 mm (7.9 in) required between control cables, motor cables, and mains cables.	13	Common ground busbar. Follow local and national requirements for enclosure grounding.
5	Mains supply	14	Brake resistor
6	Bare (unpainted) surface	15	Metal box
7	Star washers	16	Connection to motor
8	Brake cable (shielded)	17	Motor
9	Motor cable (shielded)	18	EMC cable gland

Illustration 5.1 Example of Proper EMC Installation

### 5.3 Wiring Schematic

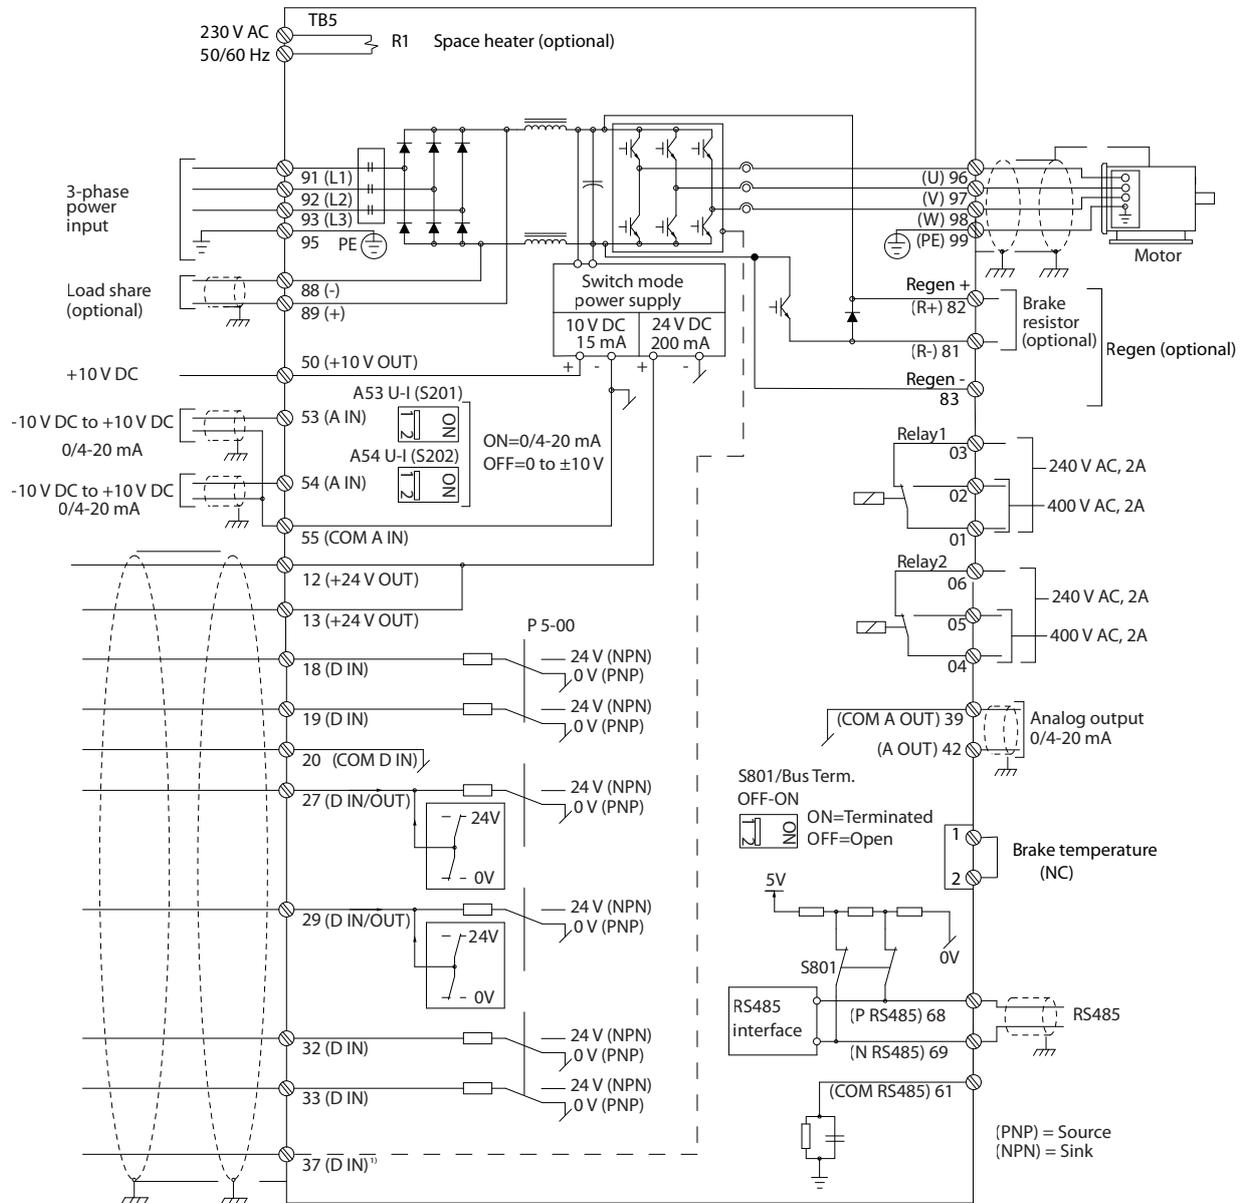

e30bg483.10

Illustration 5.2 Basic Wiring Schematic

1) Terminal 37 (optional) is used for Safe Torque Off. Refer to the VLT® FC Series - Safe Torque Off Operating Guide for installation instructions.

## 5.4 Connecting the Motor

### **⚠ WARNING**

#### INDUCED VOLTAGE

Induced voltage from output motor cables that run together can charge equipment capacitors even with the equipment turned off and locked out. Failure to run output motor cables separately or use shielded cables or metal conduits could result in death or serious injury.

- Comply with local and national electrical codes for cable sizes. For maximum wire sizes, see *chapter 9.1 Electrical Data*.
- Follow motor manufacturer wiring requirements.
- Motor wiring knockouts or access panels are provided on the pedestal of IP21/IP54 (Type 1/Type 12) units.
- Do not wire a starting or pole-changing device (for example Dahlander motor or slip ring asynchronous motor) between the drive and the motor.

#### Procedure

1. Strip a section of the outer cable insulation.
2. Establish mechanical fixation and electrical contact between the cable shield and ground by positioning the stripped wire under the cable clamp.
3. Connect the ground wire to the nearest grounding terminal in accordance with the grounding instructions provided in *chapter 5.6 Connecting to Ground*.
4. Connect the 3-phase motor wiring to terminals 96 (U), 97 (V), and 98 (W), see *Illustration 5.3*.
5. Tighten the terminals in accordance with the information provided in *chapter 9.10.1 Fastener Torque Ratings*.

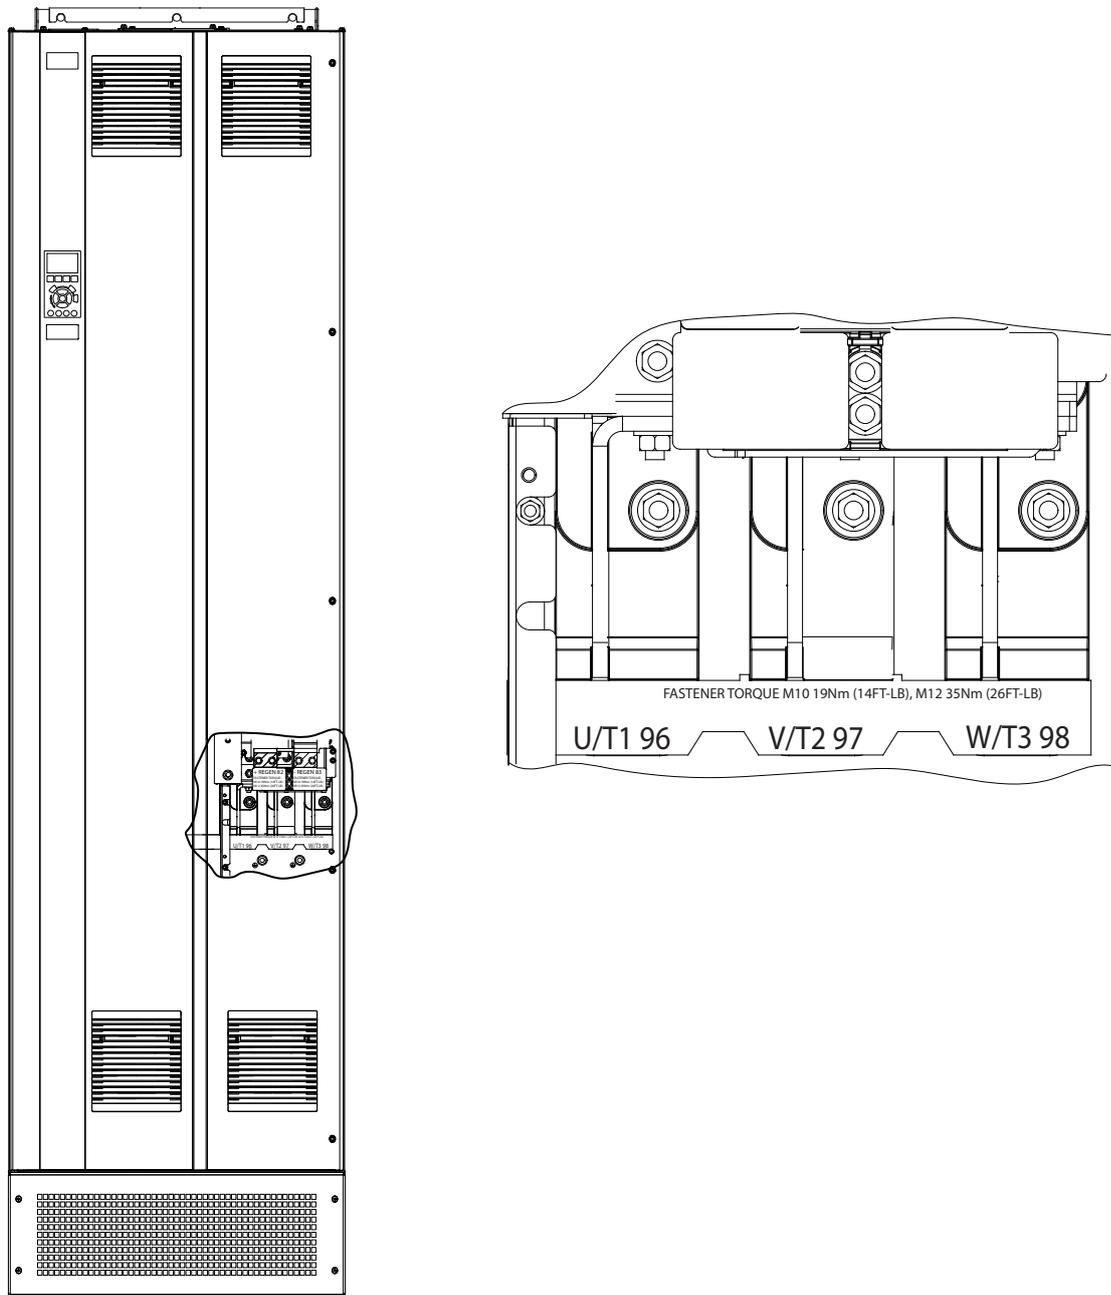


Illustration 5.3 AC motor terminals (E1h shown). For a detailed view of terminals, refer to *chapter 5.7 Terminal Dimensions*.

## 5.5 Connecting the AC Mains

- Size the wiring according to the input current of the drive. For maximum wire sizes, see *chapter 9.1 Electrical Data*.
- Comply with local and national electrical codes for cable sizes.

### Procedure

1. Strip a section of the outer cable insulation.
2. Establish mechanical fixation and electrical contact between the cable shield and ground by positioning the stripped wire under the cable clamp.
3. Connect the ground wire to the nearest grounding terminal in accordance with the grounding instructions provided in *chapter 5.6 Connecting to Ground*.
4. Connect the 3-phase AC input power wiring to terminals R, S, and T (see *Illustration 5.4*).
5. Tighten the terminals in accordance with the information provided in *chapter 9.10.1 Fastener Torque Ratings*.
6. When supplied from an isolated mains source (IT mains or floating delta) or TT/TN-S mains with a grounded leg (grounded delta), ensure that *parameter 14-50 RFI 1* is set to [0] Off to avoid damage to the DC link and to reduce ground capacity currents.

### **NOTICE**

#### **OUTPUT CONTACTOR**

Danfoss does not recommend using an output contactor on 525–690 V drives that are connected to an IT mains network.

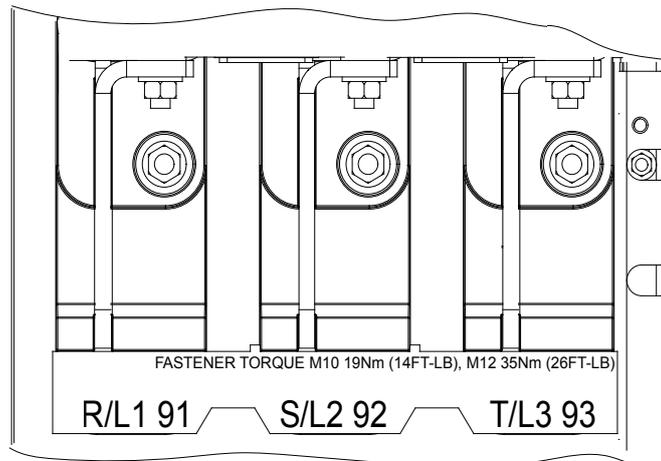
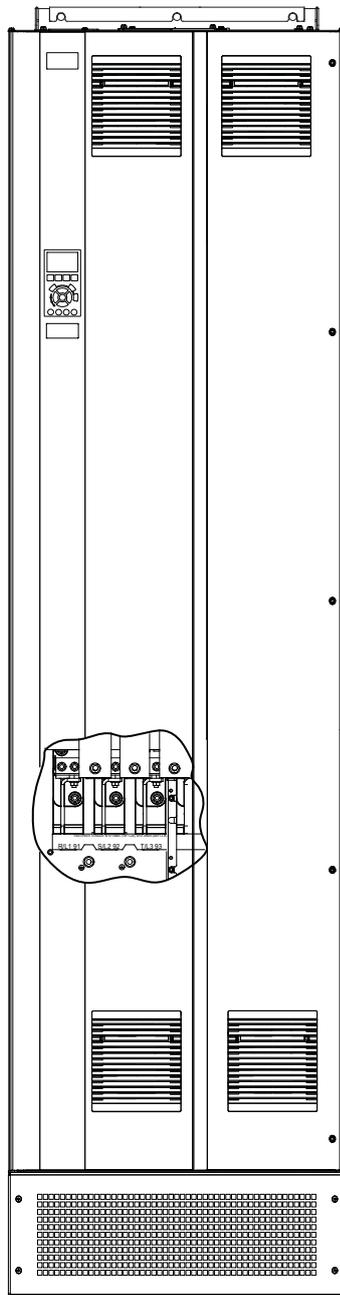


Illustration 5.4 AC mains terminals (E1h shown). For a detailed view of terminals, refer to *chapter 5.7 Terminal Dimensions*.

## 5.6 Connecting to Ground

### **⚠ WARNING**

#### **LEAKAGE CURRENT HAZARD**

Leakage currents exceed 3.5 mA. Failure to ground the drive properly can result in death or serious injury.

- Ensure the correct grounding of the equipment by a certified electrical installer.

#### **For electrical safety**

- Ground the drive in accordance with applicable standards and directives.
- Use a dedicated ground wire for input power, motor power, and control wiring.
- Do not ground 1 drive to another in a daisy chain fashion.
- Keep the ground wire connections as short as possible.
- Follow motor manufacturer wiring requirements.
- Minimum cable cross-section: 10 mm<sup>2</sup> (6 AWG) (or 2 rated ground wires terminated separately).
- Tighten the terminals in accordance with the information provided in *chapter 9.10.1 Fastener Torque Ratings*.

#### **For EMC-compliant installation**

- Establish electrical contact between the cable shield and the drive enclosure by using metal cable glands or by using the clamps provided on the equipment.
- Reduce burst transient by using high-strand wire.
- Do not use pigtailed.

### **NOTICE**

#### **POTENTIAL EQUALIZATION**

There is a risk of burst transient when the ground potential between the drive and the control system is different. Install equalizing cables between the system components. Recommended cable cross-section: 16 mm<sup>2</sup> (5 AWG).



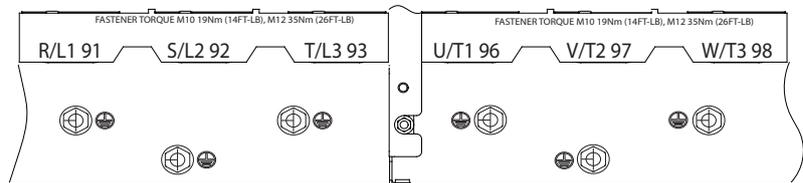


Illustration 5.5 Ground terminals (E1h shown). For a detailed view of terminals, refer to *chapter 5.7 Terminal Dimensions*.


5.7 Terminal Dimensions

5.7.1 E1h Terminal Dimensions

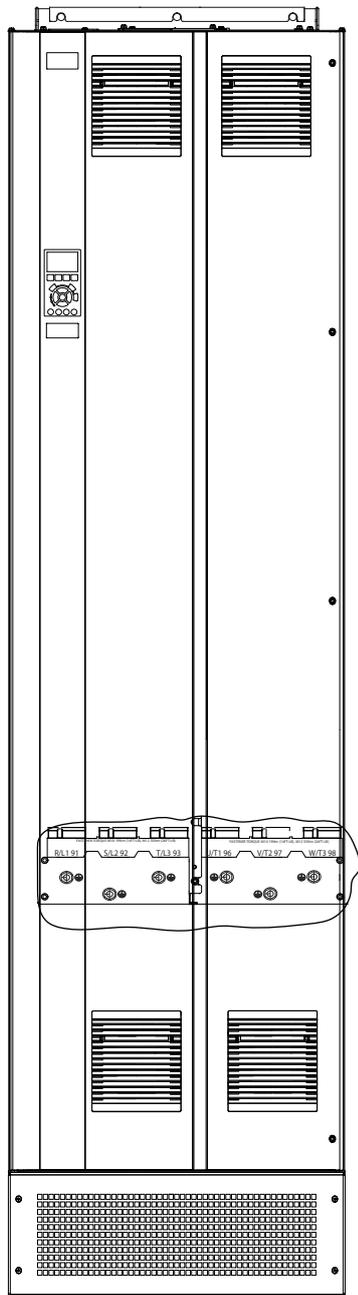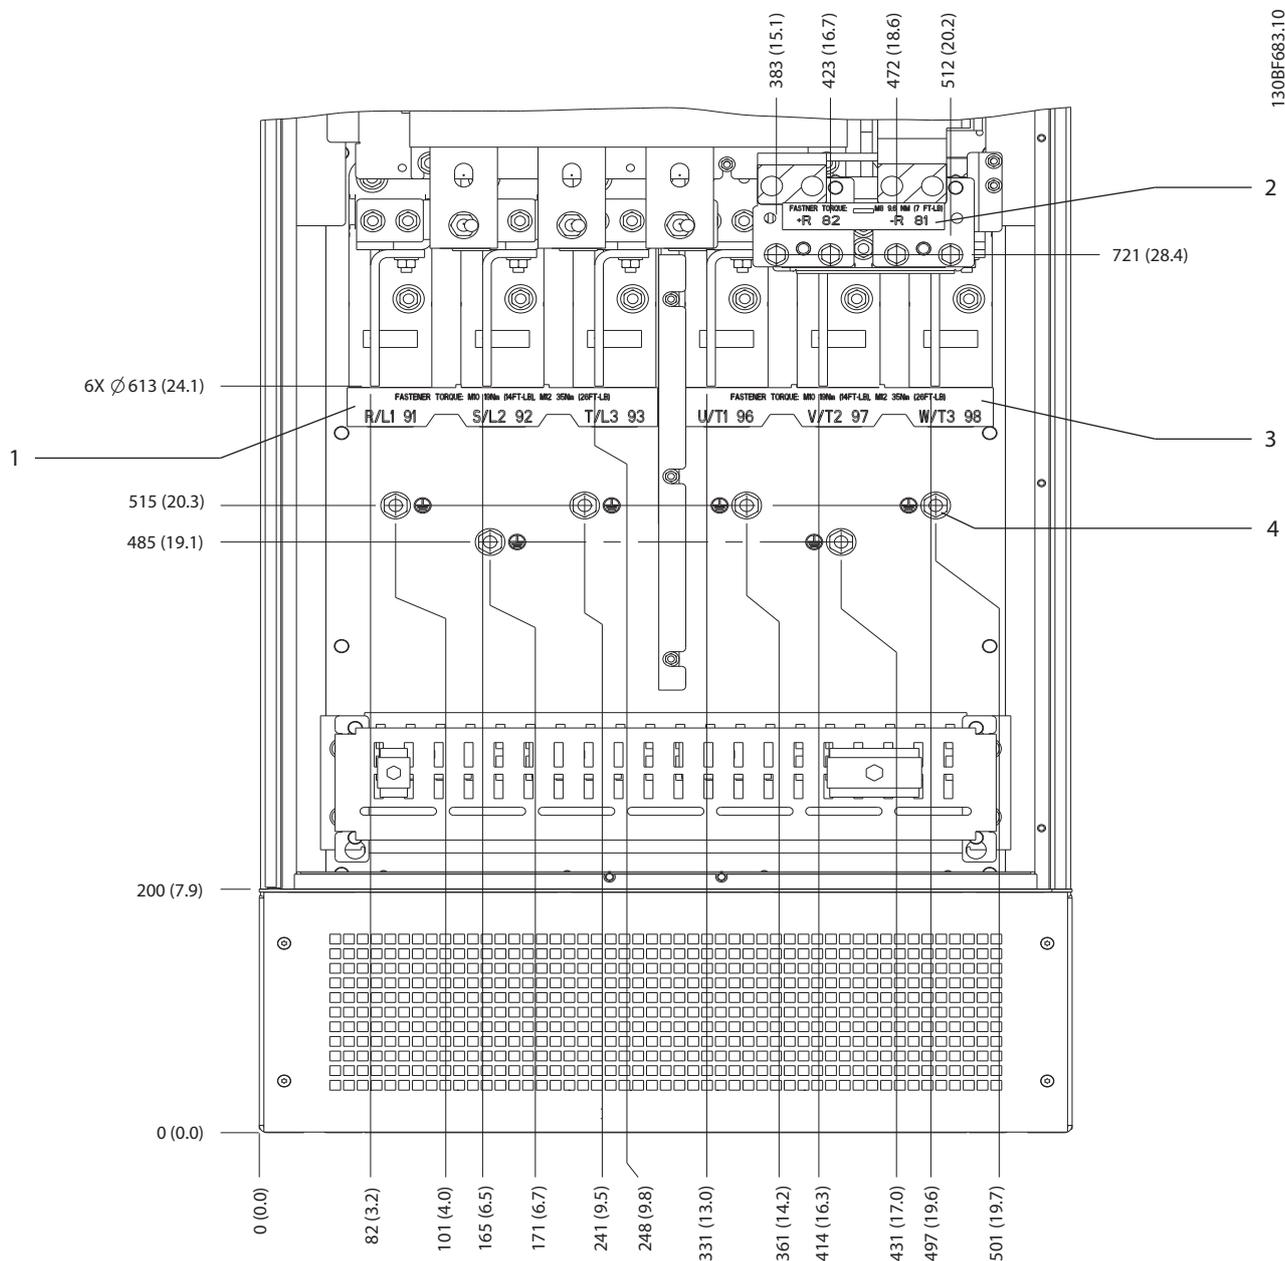

1	Mains terminals	3	Motor terminals
2	Brake or regeneration terminals	4	Ground terminals, M10 nut


Illustration 5.6 E1h Terminal Dimensions (Front View)

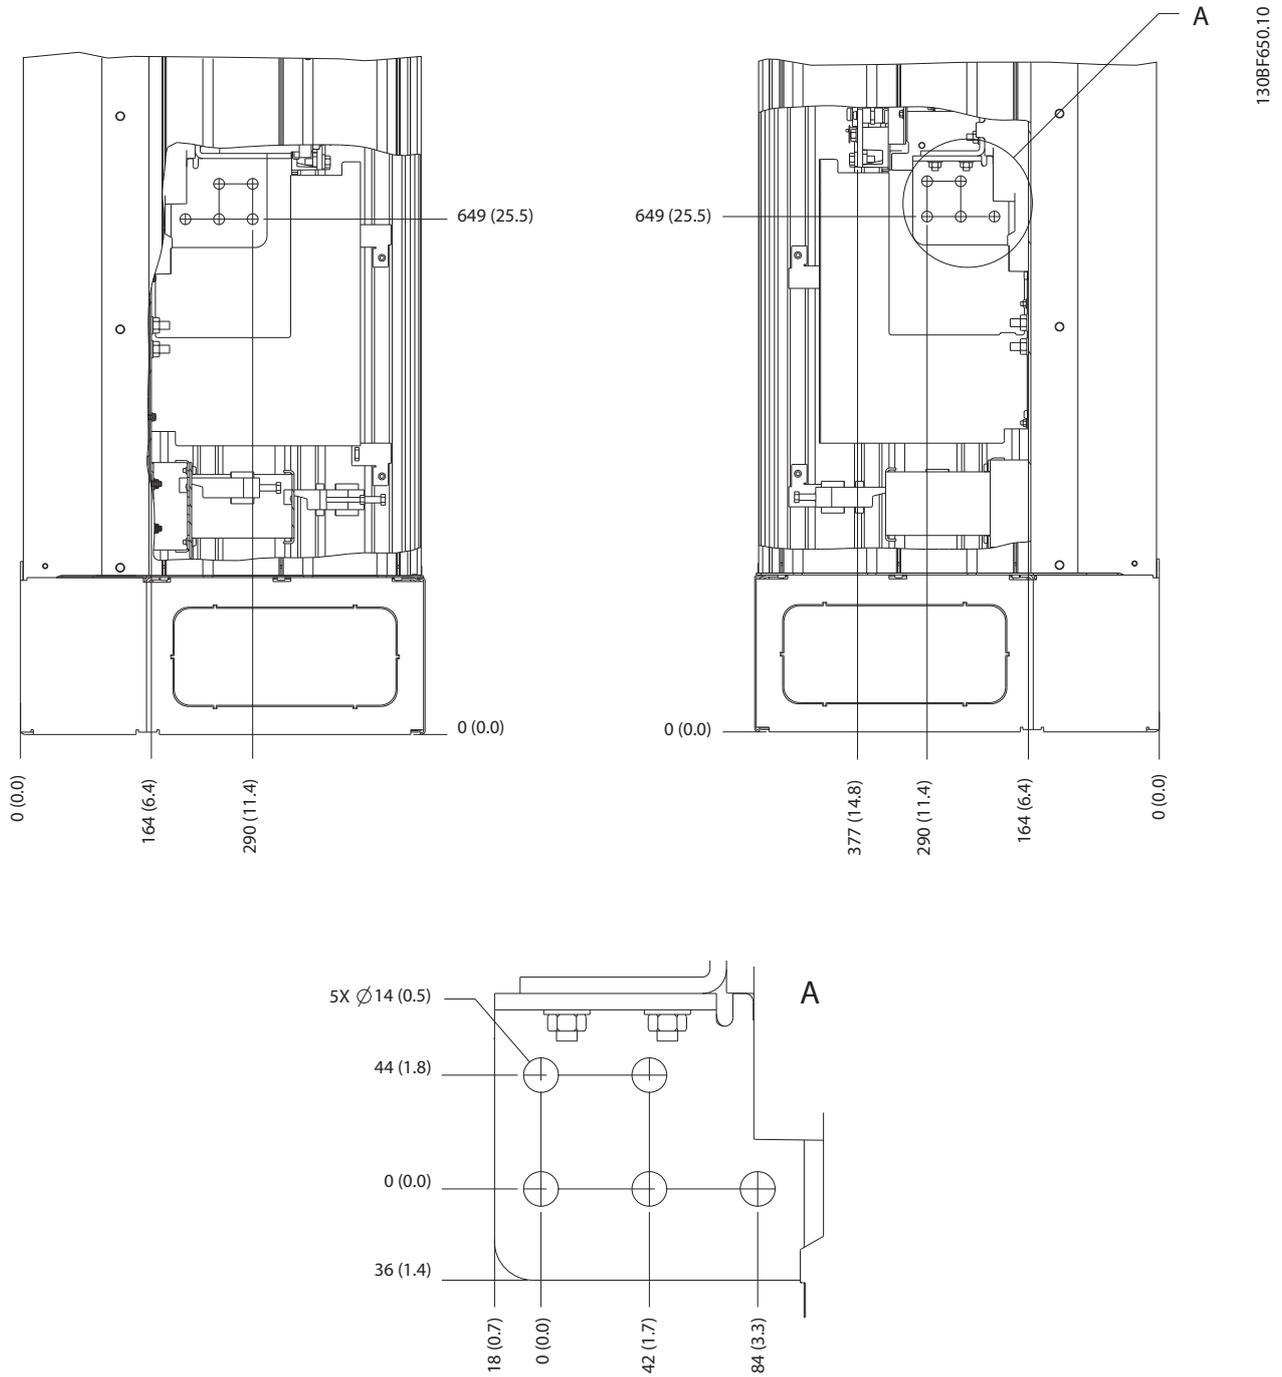

5


Illustration 5.7 E1h Terminal Dimensions (Side Views)

5.7.2 E2h Terminal Dimensions

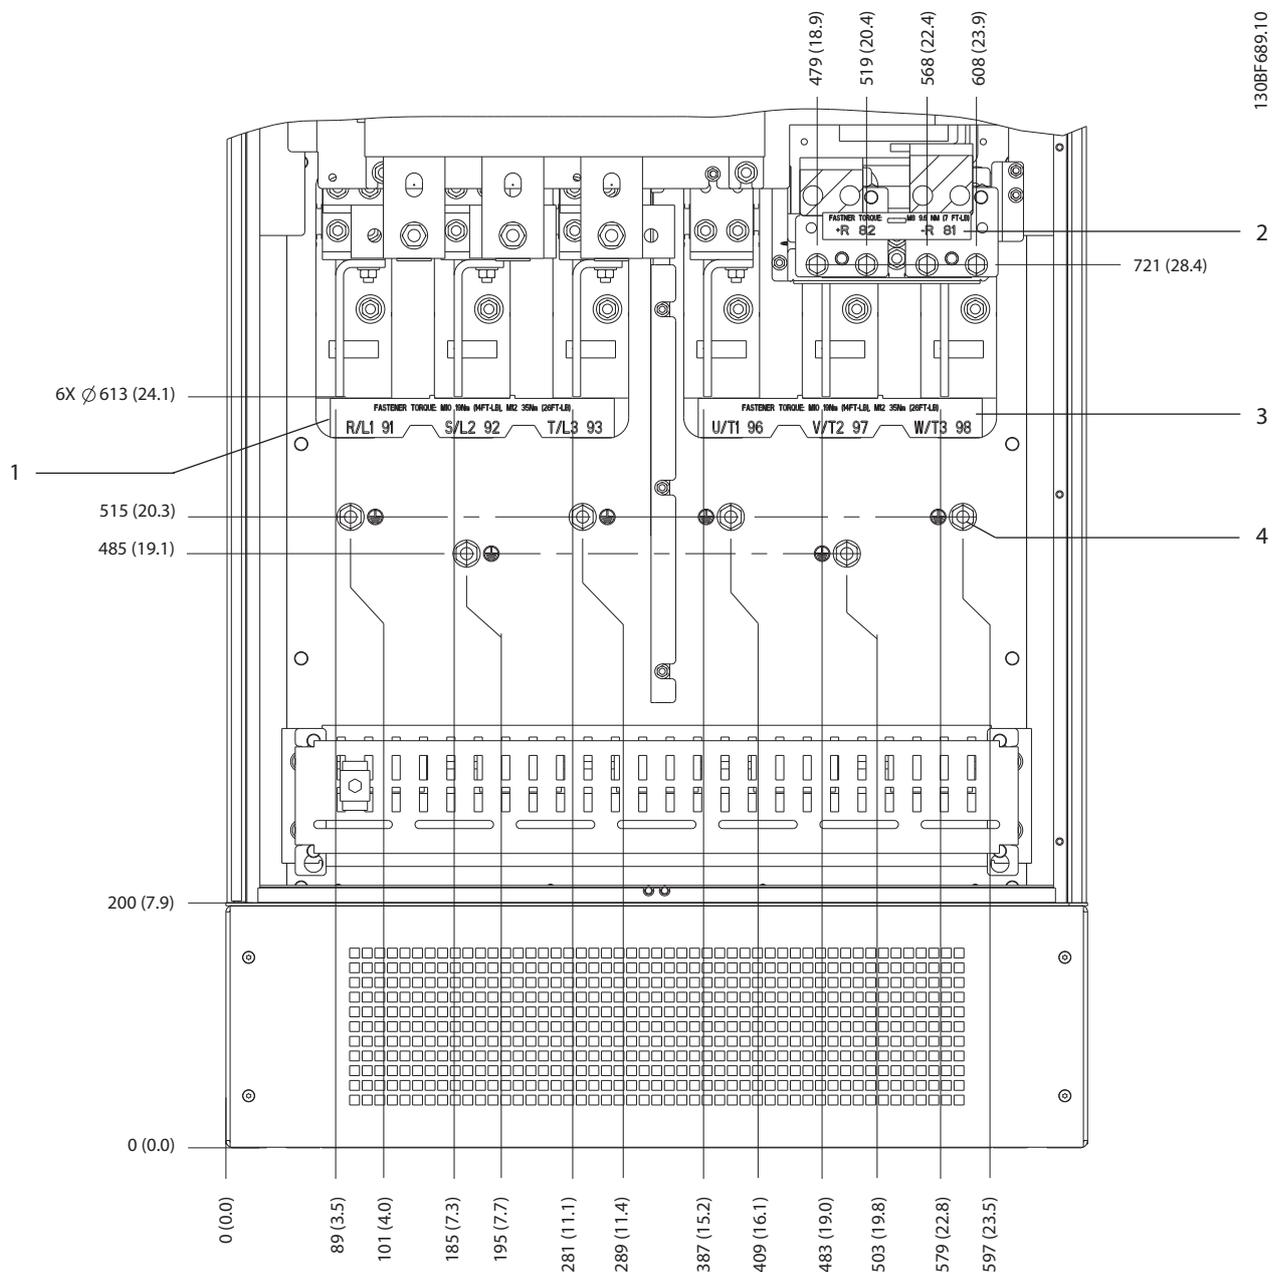

1	Mains terminals	3	Motor terminals
2	Brake or regeneration terminals	4	Ground terminals, M10 nut

Illustration 5.8 E2h Terminal Dimensions (Front View)

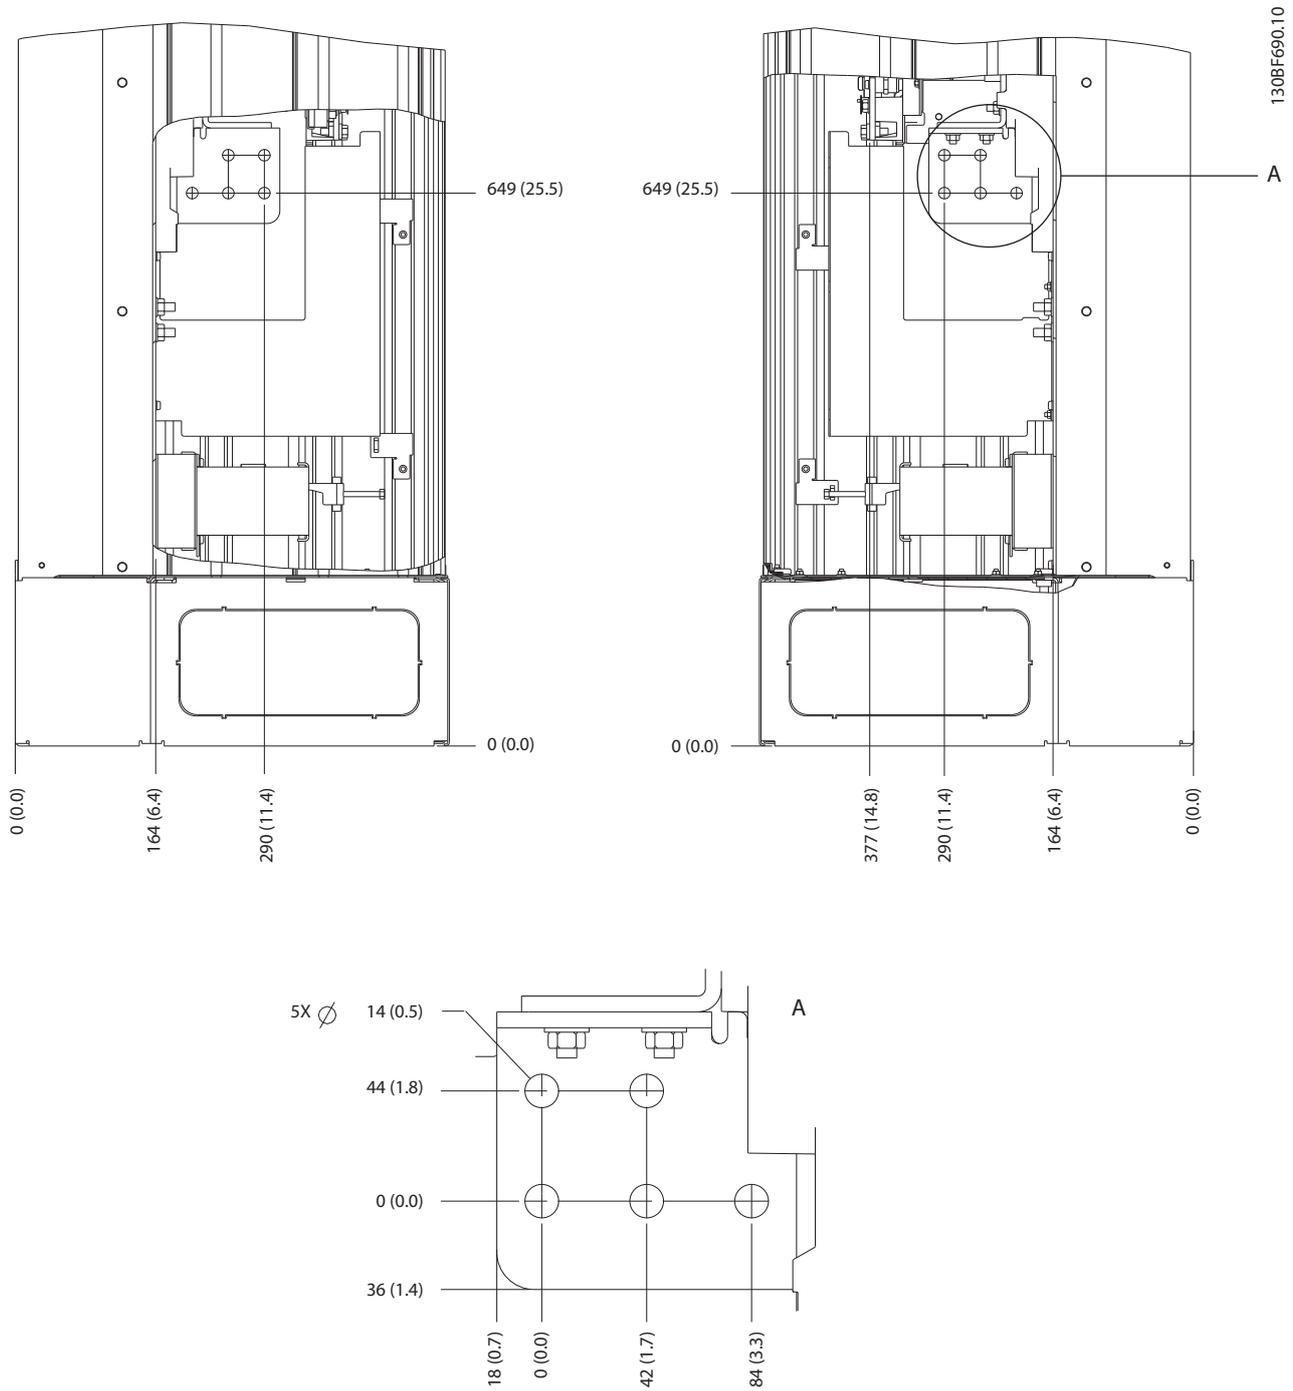


5

Illustration 5.9 E2h Terminal Dimensions (Side Views)


5.7.3 E3h Terminal Dimensions

5

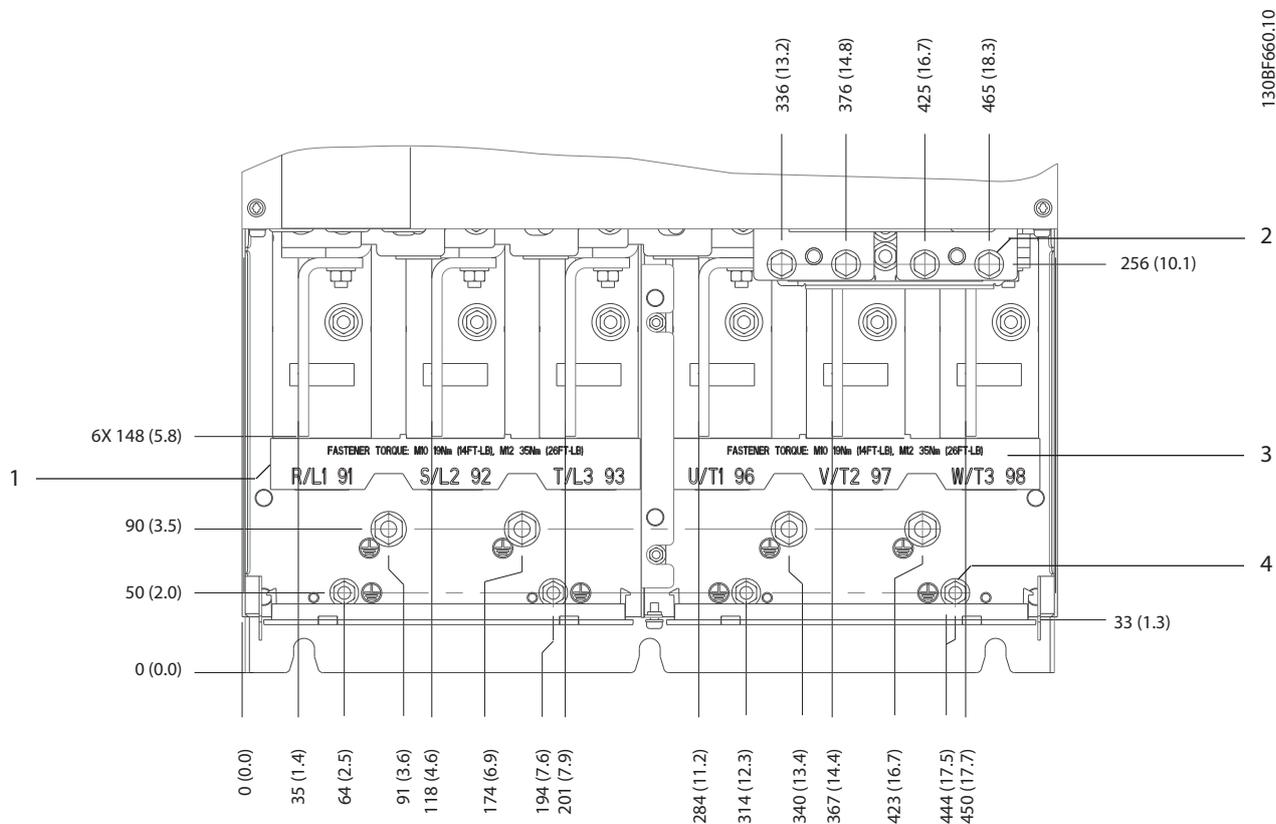

1	Mains terminals	3	Motor terminals
2	Brake or regeneration terminals	4	Ground terminals, M8 and M10 nuts

Illustration 5.10 E3h Terminal Dimensions (Front View)

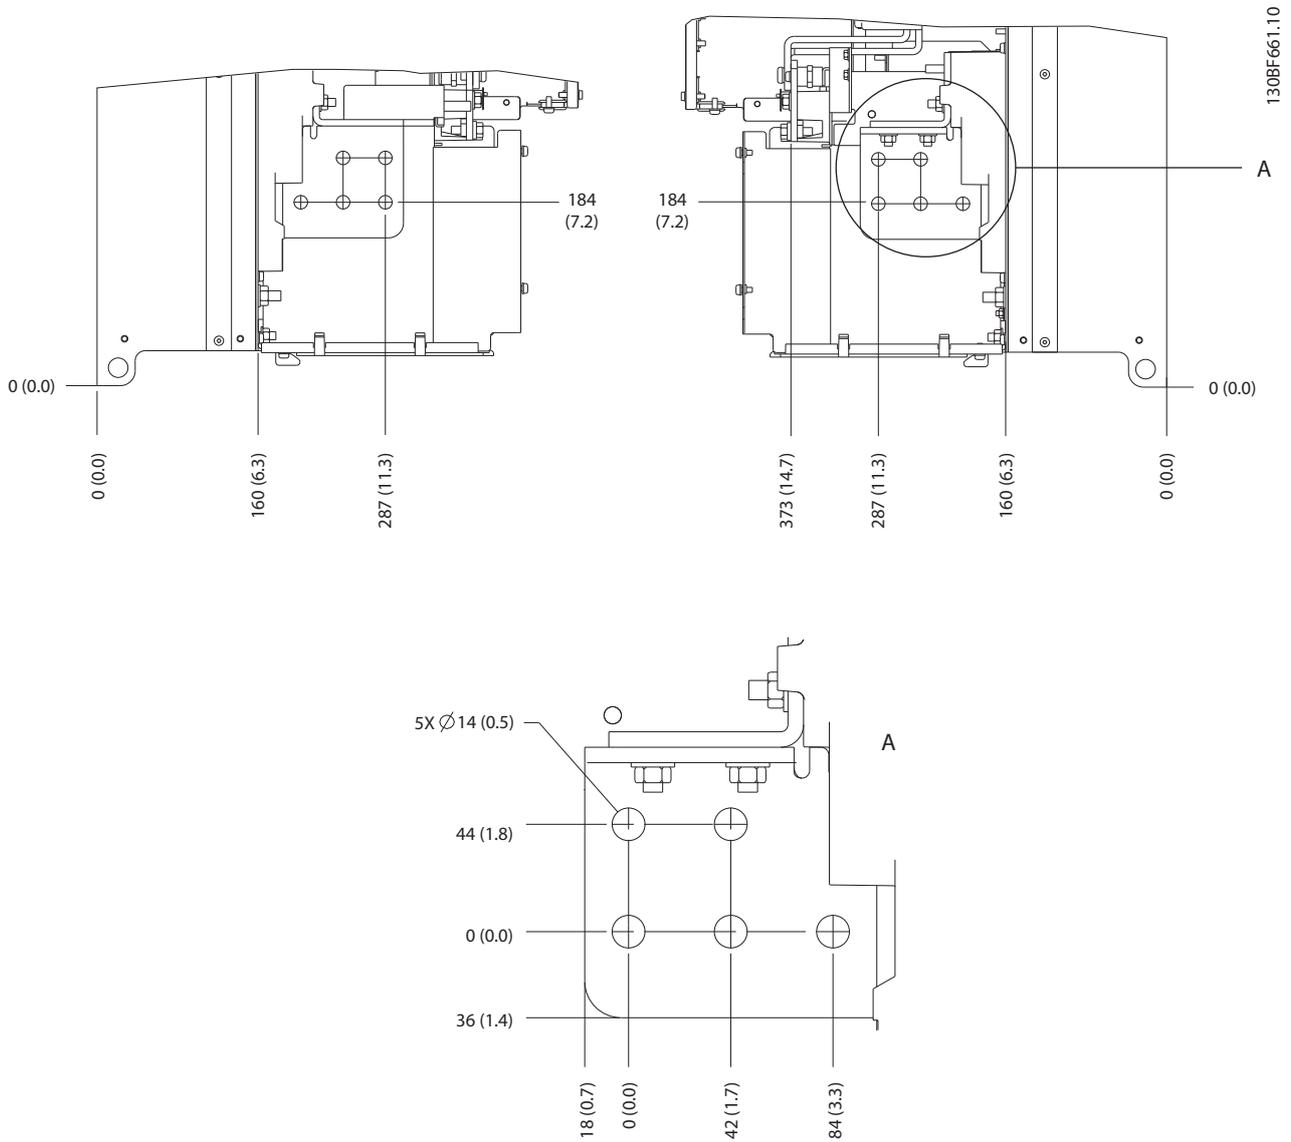

5

Illustration 5.11 E3h Mains, Motor, and Ground Terminal Dimensions (Side Views)

5



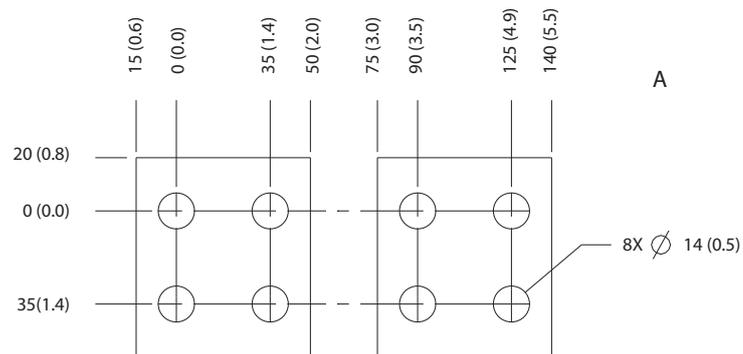


Illustration 5.12 E3h Load Share/Regeneration Terminal Dimensions

5.7.4 E4h Terminal Dimensions

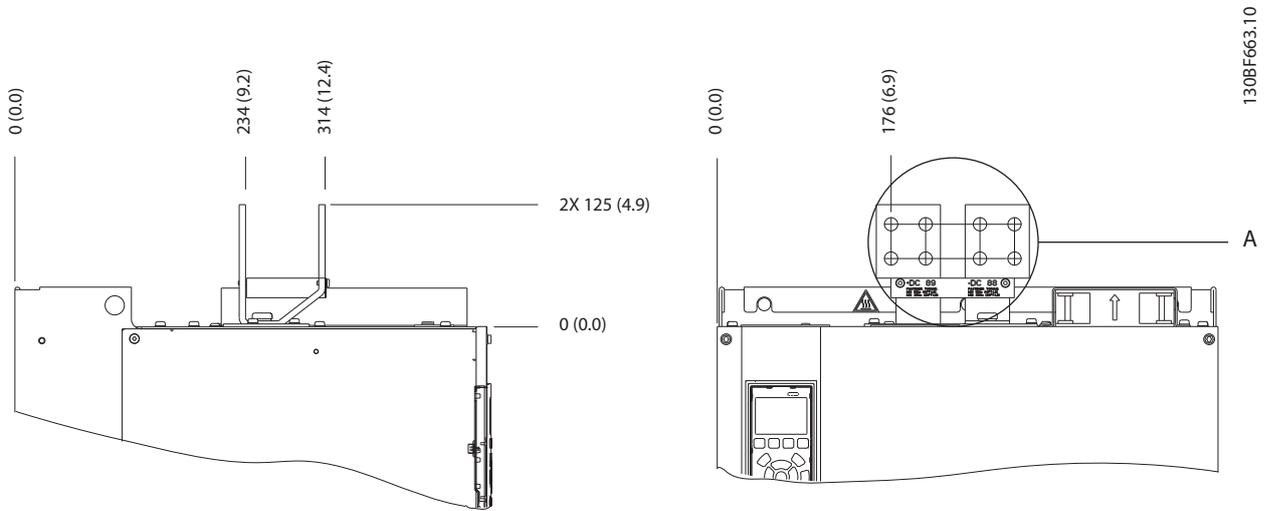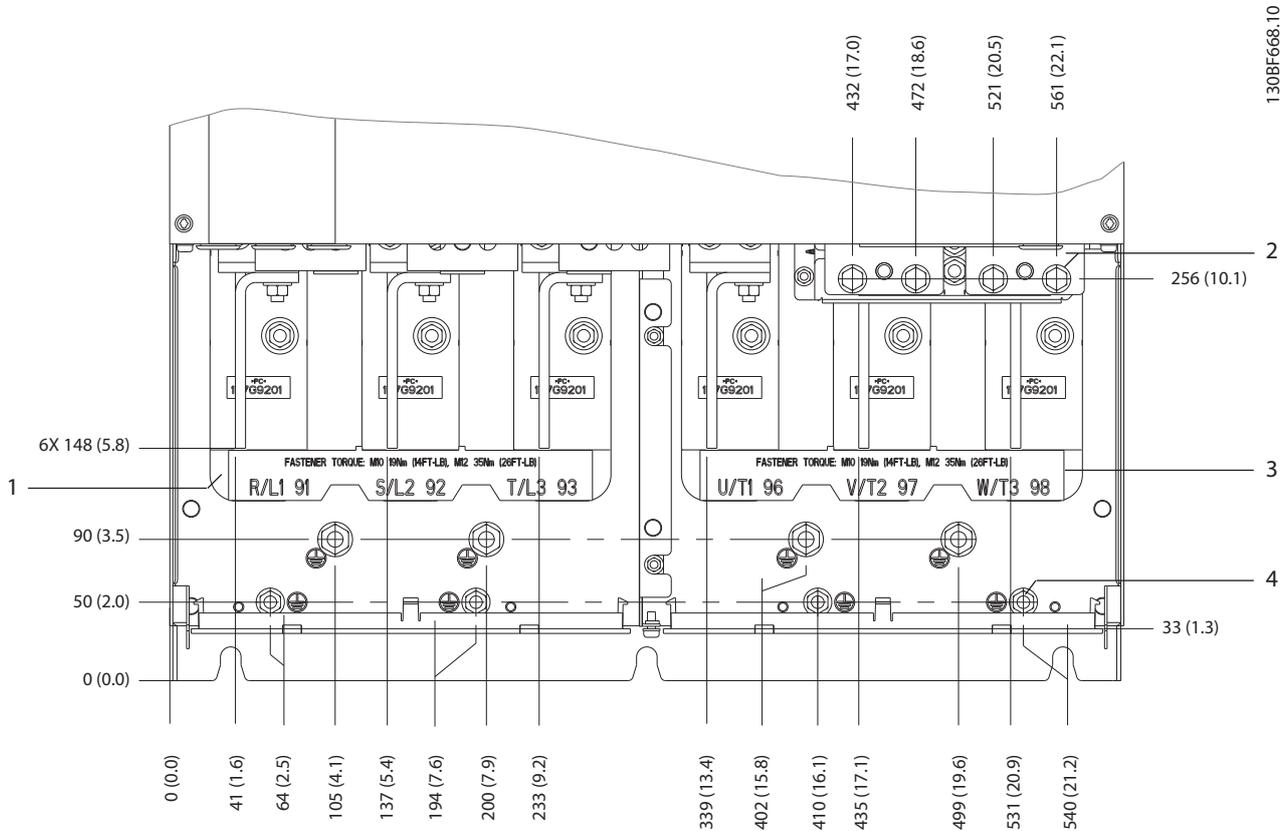

1	Mains terminals	3	Motor terminals
2	Brake or regeneration terminals	4	Ground terminals, M8 and M10 nuts

Illustration 5.13 E4h Terminal Dimensions (Front View)

5


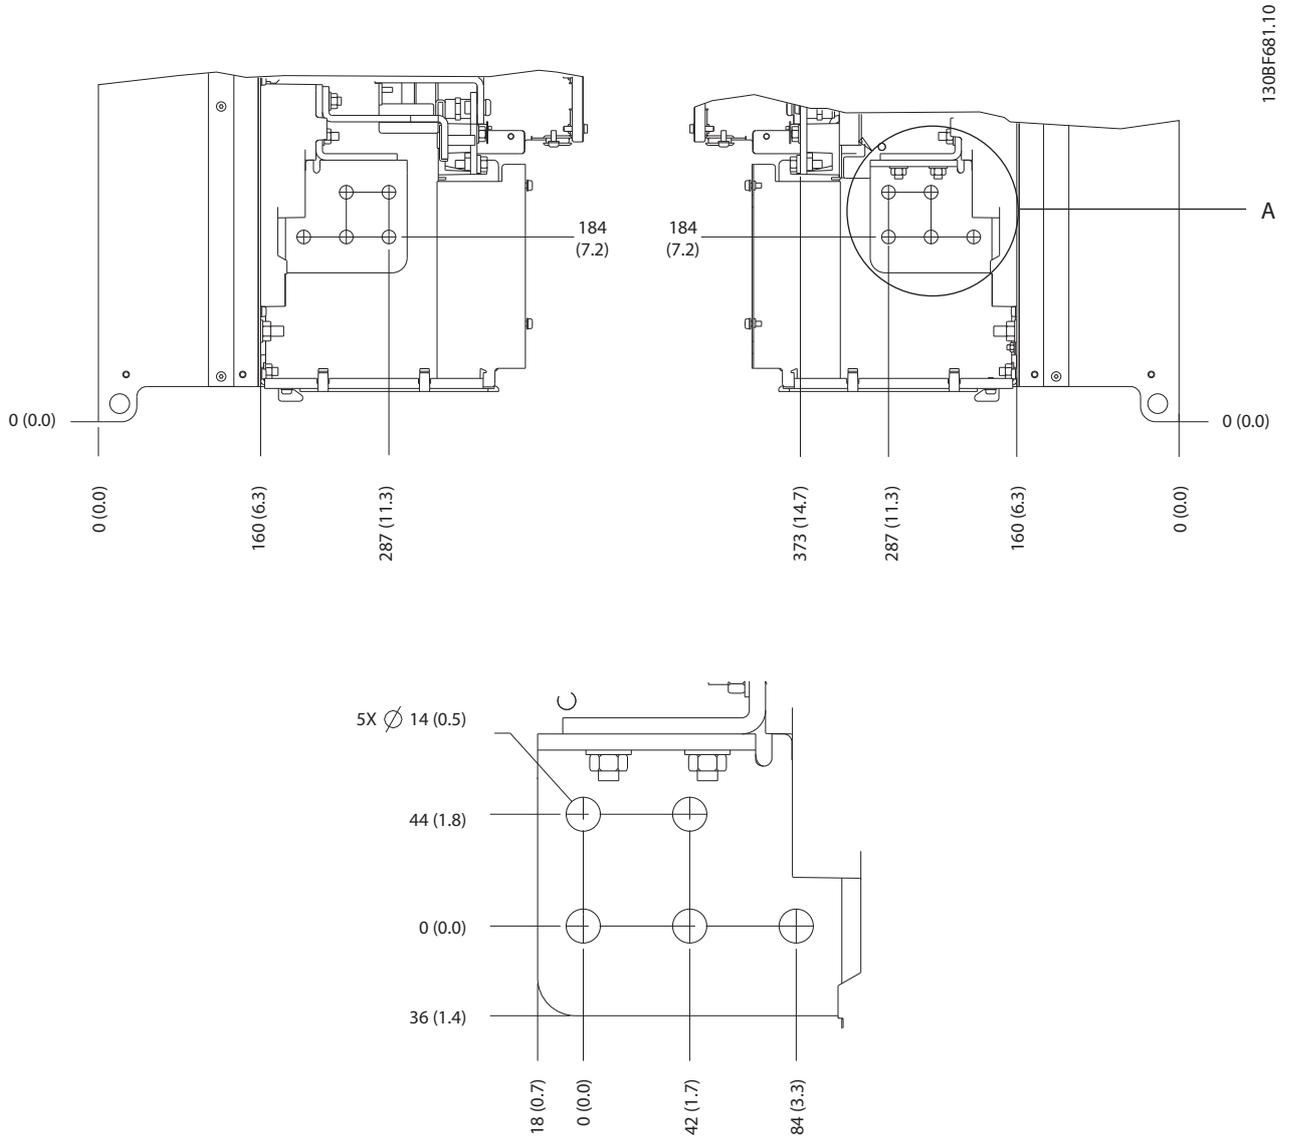


Illustration 5.14 E4h Mains, Motor, and Ground Terminal Dimensions (Side Views)

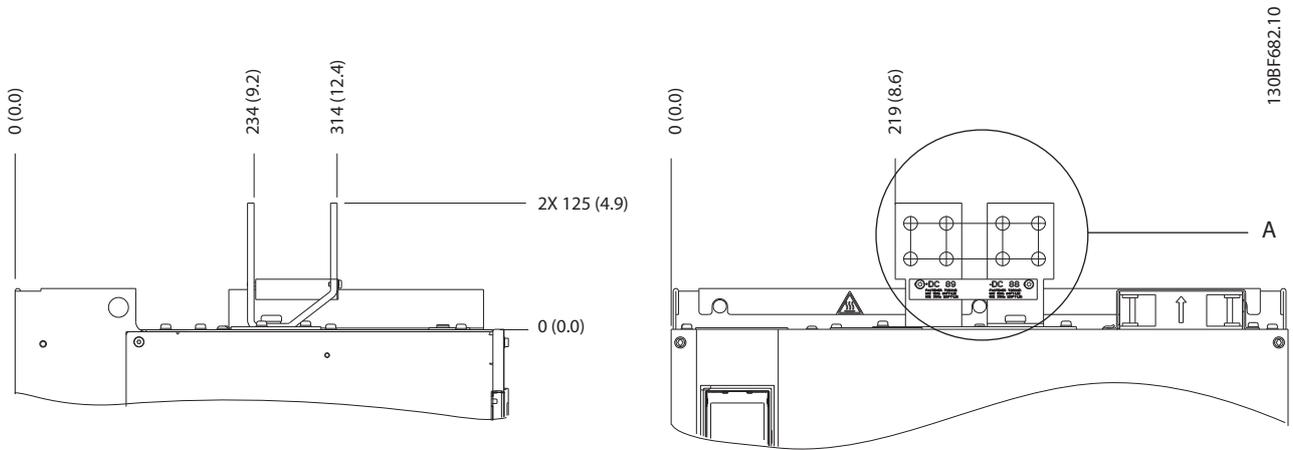

5

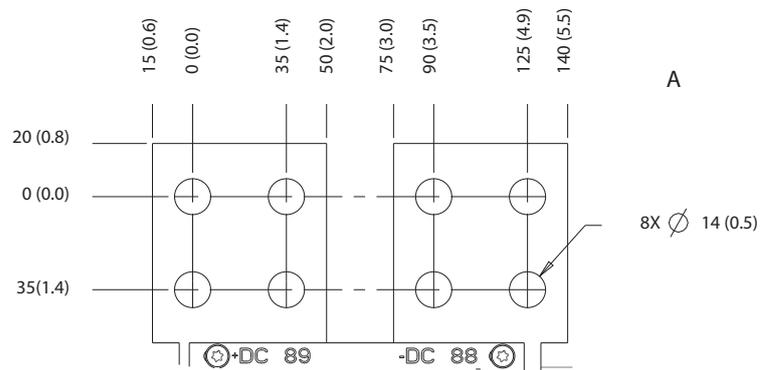


Illustration 5.15 E4h Load Share/Regeneration Terminal Dimensions

## 5.8 Control Wiring

All terminals to the control cables are inside the drive below the LCP. To access, either open the door (E1h and E2h) or remove the front panel (E3h and E4h).

### 5.8.1 Control Cable Routing

Tie down and route all control wires as shown in *Illustration 5.16*. Remember to connect the shields in a proper way to ensure optimum electrical immunity.

- Isolate control wiring from high-power cables in the drive.
- When the drive is connected to a thermistor, ensure that the thermistor control wiring is shielded and reinforced/double insulated. A 24 V DC supply voltage is recommended.

#### Fieldbus connection

Connections are made to the relevant options on the control card. For more detail, see the relevant fieldbus instruction. The cable must be tied down and routed along with other control wires inside the unit. See *Illustration 5.16*.

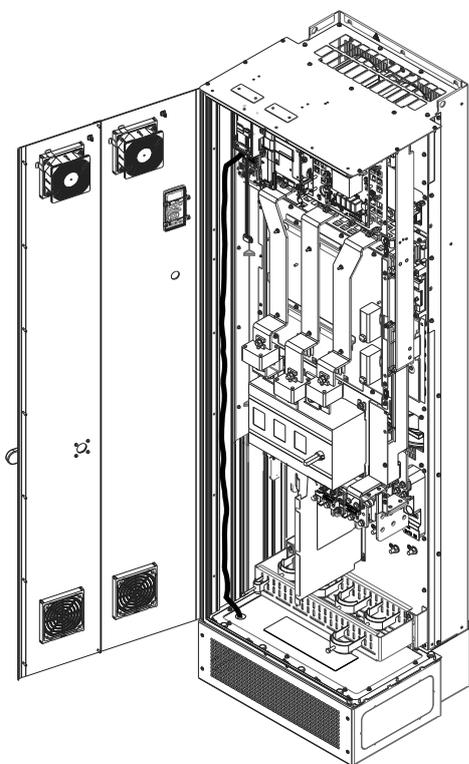


Illustration 5.16 Control Card Wiring Path

### 5.8.2 Control Terminal Types

*Illustration 5.17* shows the removable drive connectors. Terminal functions and default settings are summarized in *Table 5.1 – Table 5.3*.


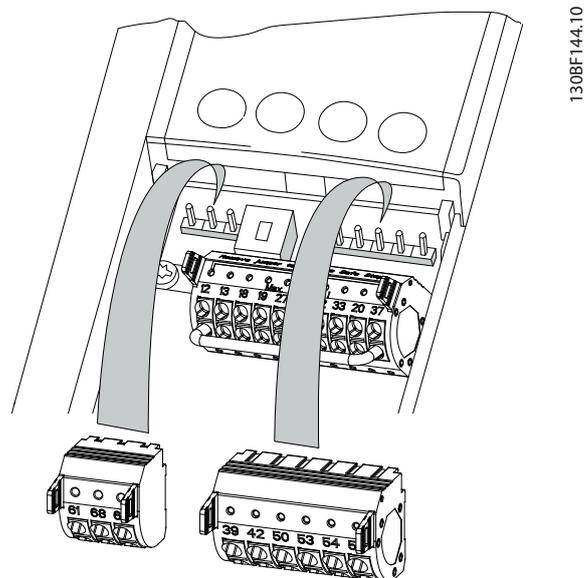


Illustration 5.17 Control Terminal Locations

130BF715.10

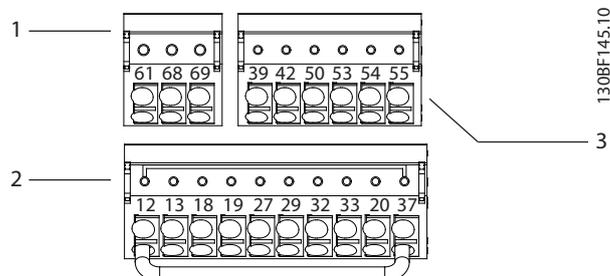

1	Serial communication terminals
2	Digital input/output terminals
3	Analog input/output terminals

Illustration 5.18 Terminal Numbers Located on the Connectors

Terminal	Parameter	Default setting	Description
61	–	–	Integrated RC-filter for cable shield. ONLY for connecting the shield in the event of EMC problems.
68 (+)	<i>Parameter group 8-3* FC Port Settings</i>	–	RS485 interface. A switch (BUS TER.) is provided on the control card for bus termination resistance. See <i>Illustration 5.23</i> .
69 (-)	<i>Parameter group 8-3* FC Port Settings</i>	–	

Table 5.1 Serial Communication Terminal Descriptions

Digital input/output terminals			
Terminal	Parameter	Default setting	Description
12, 13	–	+24 V DC	24 V DC supply voltage for digital inputs and external transducers. Maximum output current 200 mA for all 24 V loads.
18	<i>Parameter 5-10 Terminal 18 Digital Input</i>	<i>[8] Start</i>	Digital inputs.
19	<i>Parameter 5-11 Terminal 19 Digital Input</i>	<i>[10] Reversing</i>	
32	<i>Parameter 5-14 Terminal 32 Digital Input</i>	<i>[0] No operation</i>	
33	<i>Parameter 5-15 Terminal 33 Digital Input</i>	<i>[0] No operation</i>	
27	<i>Parameter 5-12 Terminal 27 Digital Input</i>	<i>[2] Coast inverse</i>	
29	<i>Parameter 5-13 Terminal 29 Digital Input</i>	<i>[14] JOG</i>	For digital input or output. Default setting is input.
20	–	–	Common for digital inputs and 0 V potential for 24 V supply.


Digital input/output terminals			
Terminal	Parameter	Default setting	Description
37	–	STO	When not using the optional STO feature, a jumper wire is required between terminal 12 (or 13) and terminal 37. This set-up allows the drive to operate with factory default programming values.

Table 5.2 Digital Input/Output Terminal Descriptions

Analog input/output terminals			
Terminal	Parameter	Default setting	Description
39	–	–	Common for analog output.
42	<i>Parameter 6-50 Terminal 42 Output</i>	<i>[0] No operation</i>	Programmable analog output. 0–20 mA or 4–20 mA at a maximum of 500 Ω.
50	–	+10 V DC	10 V DC analog supply voltage for potentiometer or thermistor. 15 mA maximum.
53	<i>Parameter group 6-1* Analog Input 1</i>	Reference	Analog input. For voltage or current. Switches A53 and A54 select mA or V.
54	<i>Parameter group 6-2* Analog Input 2</i>	Feedback	
55	–	–	Common for analog input.

Table 5.3 Analog Input/Output Terminal Descriptions

### 5.8.3 Relay Terminals

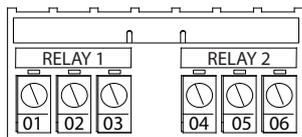

130BF156.10

Illustration 5.19 Relay 1 and Relay 2 Terminals

- Relay 1 and relay 2. The location of the outputs depends on the drive configuration. See *chapter 3.5 Control Shelf*.
- Terminals on built-in optional equipment. See the manual provided with the equipment option.

Terminal	Parameter	Default setting	Description
01, 02, 03	Parameter 5-40 Function Relay [0]	[0] No operation	Form C relay output. For AC or DC voltage and resistive or inductive loads.
04, 05, 06	Parameter 5-40 Function Relay [1]	[0] No operation	

Table 5.4 Relay Terminal Descriptions

### 5.8.4 Wiring to Control Terminals

The control terminals are located near the LCP. The control terminal connectors can be unplugged from the drive for convenience when wiring, as shown in *Illustration 5.17*. Either solid or flexible wire can be connected to the control terminals. Use the following procedures to connect or disconnect the control wires.

#### **NOTICE**


Minimize interference by keeping control wires as short as possible and separate from high-power cables.

#### Connecting wire to control terminals

1. Strip 10 mm (0.4 in) of the outer plastic layer from the end of the wire.
2. Insert the control wire into the terminal.
  - For a solid wire, push the bare wire into the contact. See *Illustration 5.20*.
  - For a flexible wire, open the contact by inserting a small screwdriver into the slot between the terminal holes and


push the screwdriver inward. See *Illustration 5.21*. Then, insert the stripped wire into the contact and remove the screwdriver.

3. Pull gently on the wire to ensure that the contact is firmly established and not loose. Loose control wiring can be the source of equipment faults or reduced performance.

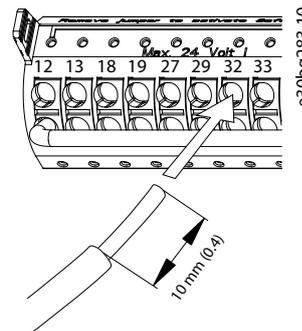

e30bg283.10

Illustration 5.20 Connecting Solid Control Wires

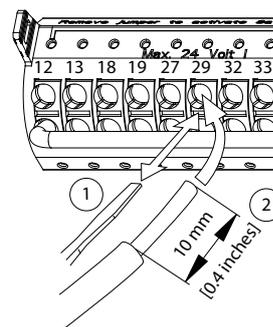

130BD546.11

Illustration 5.21 Connecting Flexible Control Wires

#### Disconnecting wires from the control terminals

1. To open the contact, insert a small screwdriver into the slot between the terminal holes and push the screwdriver inward.
2. Pull gently on the wire to free it from the control terminal contact.

See *chapter 9.5 Cable Specifications* for control terminal wiring sizes and *chapter 7 Wiring Configuration Examples* for typical control wiring connections.

### 5.8.5 Enabling Motor Operation (Terminal 27)

A jumper wire is required between terminal 12 (or 13) and terminal 27 for the drive to operate when using factory default programming values.

- Digital input terminal 27 is designed to receive 24 V DC external interlock command.
- When no interlock device is used, wire a jumper between control terminal 12 (recommended) or 13 to terminal 27. This wire provides an internal 24 V signal on terminal 27.
- When the status line at the bottom of the LCP reads *AUTO REMOTE COAST*, the unit is ready to operate, but is missing an input signal on terminal 27.
- When factory-installed optional equipment is wired to terminal 27, do not remove that wiring.

#### NOTICE

The drive cannot operate without a signal on terminal 27, unless terminal 27 is reprogrammed using *parameter 5-12 Terminal 27 Digital Input*.

### 5.8.6 Configuring RS485 Serial Communication

RS485 is a 2-wire bus interface compatible with multi-drop network topology, and it contains the following features:

- Either Danfoss FC or Modbus RTU communication protocol, which are internal to the drive, can be used.
- Functions can be programmed remotely using the protocol software and RS485 connection or in *parameter group 8-\*\*\* Communications and Options*.
- Selecting a specific communication protocol changes various default parameter settings to match the specifications of the protocol, making more protocol-specific parameters available.
- Option cards for the drive are available to provide more communication protocols. See the option card documentation for installation and operation instructions.
- A switch (BUS TER) is provided on the control card for bus termination resistance. See *Illustration 5.23*.

For basic serial communication set-up, perform the following steps:

1. Connect RS485 serial communication wiring to terminals (+)68 and (-)69.
  - 1a Use shielded serial communication cable (recommended).
  - 1b See *chapter 5.6 Connecting to Ground* for proper grounding.
2. Select the following parameter settings:
  - 2a Protocol type in *parameter 8-30 Protocol*.
  - 2b Drive address in *parameter 8-31 Address*.
  - 2c Baud rate in *parameter 8-32 Baud Rate*.

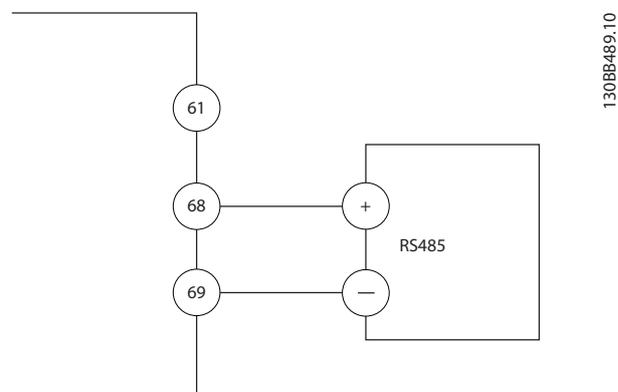


Illustration 5.22 Serial Communication Wiring Diagram

### 5.8.7 Wiring Safe Torque Off (STO)

The Safe Torque Off (STO) function is a component in a safety control system. STO prevents the unit from generating the voltage required to rotate the motor.

To run STO, more wiring for the drive is required. Refer to *Safe Torque Off Operating Guide* for further information.

### 5.8.8 Wiring the Space Heater

The space heater is an option used to prevent condensation from forming inside the enclosure when the unit is turned off. It is designed to be field wired and controlled by an HVAC management system.

#### Specifications

- Nominal voltage: 100–240
- Wire size: 12–24 AWG

### 5.8.9 Wiring the Auxiliary Contacts to the Disconnect

The disconnect is an option that is installed at the factory. The auxiliary contacts, which are signal accessories used with the disconnect, are not installed at the factory to allow more flexibility during installation. The contacts snap into place without the need for tools.

Contacts must be installed in specific locations on the disconnect depending upon their functions. Refer to the datasheet included in the accessory bag that comes with the drive.

#### Specifications

- $U_i$ /[V]: 690
- $U_{imp}$ /[kV]: 4
- Pollution degree: 3
- $I_{th}$ /[A]: 16
- Cable size: 1...2x0.75...2.5 mm<sup>2</sup>
- Maximum fuse: 16 A/gG
- NEMA: A600, R300, wire size: 18–14 AWG, 1(2)

### 5.8.10 Wiring the Brake Resistor Temperature Switch

The brake resistor terminal block is located on the power card and allows for the connection of an external brake resistor temperature switch. The switch can be configured as normally closed or normally open. If the input changes, a signal trips the drive and shows *alarm 27, Brake chopper fault* on the LCP display. At the same time, the drive stops braking and the motor coasts.

1. Locate the brake resistor terminal block (terminals 104–106) on the power card. See *Illustration 3.3*.
2. Remove the M3 screws that hold the jumper to the power card.
3. Remove the jumper and wire the brake resistor temperature switch in 1 of the following configurations:
  - 3a **Normally closed.** Connect to terminals 104 and 106.
  - 3b **Normally open.** Connect to terminals 104 and 105.
4. Secure the switch wires with the M3 screws. Torque to 0.5-0.6 Nm (5 in-lb).

### 5.8.11 Selecting Voltage/Current Input Signal

The analog input terminals 53 and 54 allow setting of input signal to voltage (0–10 V) or current (0/4–20 mA).

#### Default parameter setting:

- Terminal 53: Speed reference signal in open loop (see *parameter 16-61 Terminal 53 Switch Setting*).
- Terminal 54: Feedback signal in closed loop (see *parameter 16-63 Terminal 54 Switch Setting*).

#### **NOTICE**

**Disconnect power to the drive before changing switch positions.**

1. Remove the LCP (local control panel). See *chapter 6.3 LCP Menu*.
2. Remove any optional equipment covering the switches.
3. Set switches A53 and A54 to select the signal type (U = voltage, I = current).

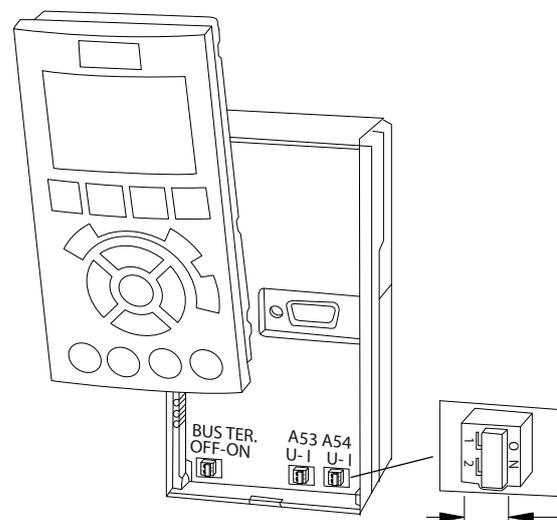


Illustration 5.23 Location of Terminal 53 and 54 Switches

130BF146.10

## 5.9 Pre-start Check List

Before completing installation of the unit, inspect the entire installation as detailed in *Table 5.5*. Check and mark the items when completed.

Inspect for	Description	<input checked="" type="checkbox"/>
Motor	<ul style="list-style-type: none"> <li>Confirm continuity of the motor by measuring ohm values on U–V (96–97), V–W (97–98), and W–U (98–96).</li> <li>Confirm that the supply voltage matches the voltage of the drive and the motor.</li> </ul>	
Switches	<ul style="list-style-type: none"> <li>Ensure that all switch and disconnect settings are in the proper positions.</li> </ul>	
Auxiliary equipment	<ul style="list-style-type: none"> <li>Look for auxiliary equipment, switches, disconnects, or input fuses/circuit breakers that reside on the input power side of the drive or output side to the motor. Ensure that they are ready for full-speed operation.</li> <li>Check function and installation of any sensors used for feedback to the drive.</li> <li>Remove any power factor correction caps on motor.</li> <li>Adjust any power factor correction caps on the mains side and ensure that they are dampened.</li> </ul>	
Cable routing	<ul style="list-style-type: none"> <li>Ensure that motor wiring, brake wiring (if equipped), and control wiring are separated or shielded, or in 3 separate metallic conduits for high-frequency interference isolation.</li> </ul>	
Control wiring	<ul style="list-style-type: none"> <li>Check for broken or damaged wires and loose connections.</li> <li>Check that control wiring is isolated from high-power wiring for noise immunity.</li> <li>Check the voltage source of the signals, if necessary.</li> <li>Use shielded cable or twisted pair and ensure that the shield is terminated correctly.</li> </ul>	
Input and output power wiring	<ul style="list-style-type: none"> <li>Check for loose connections.</li> <li>Check that motor and mains are in separate conduit or separated shielded cables.</li> </ul>	
Grounding	<ul style="list-style-type: none"> <li>Check for good ground connections that are tight and free of oxidation.</li> <li>Grounding to conduit, or mounting the back panel to a metal surface, is not a suitable grounding.</li> </ul>	
Fuses and circuit breakers	<ul style="list-style-type: none"> <li>Check for proper fusing or circuit breakers.</li> <li>Check that all fuses are inserted firmly and are in operational condition and that all circuit breakers (if used) are in the open position.</li> </ul>	
Cooling clearance	<ul style="list-style-type: none"> <li>Look for any obstructions in the airflow path.</li> <li>Measure top and bottom clearance of the drive to verify adequate airflow for cooling, see <i>chapter 4.5.1 Installation and Cooling Requirements</i>.</li> </ul>	
Ambient conditions	<ul style="list-style-type: none"> <li>Check that requirements for ambient conditions are met. See <i>chapter 9.4 Ambient Conditions</i>.</li> </ul>	
Interior of the drive	<ul style="list-style-type: none"> <li>Inspect that the unit interior is free of dirt, metal chips, moisture, and corrosion.</li> <li>Verify that all installation tools have been removed from unit interior.</li> <li>For E3h and E4h enclosures, ensure that the unit is mounted on an unpainted, metal surface.</li> </ul>	
Vibration	<ul style="list-style-type: none"> <li>Check that the unit is mounted solidly, or that shock mounts are used, if necessary.</li> <li>Check for an unusual amount of vibration.</li> </ul>	

**Table 5.5 Pre-start Check List**

**⚠ CAUTION**

POTENTIAL HAZARD IN THE EVENT OF INTERNAL FAILURE

If the drive is not properly secured with covers, personal injury can occur.

- Before applying power, ensure all safety covers (door and panels) are in place and securely fastened. Refer to *chapter 9.10.1 Fastener Torque Ratings*.

## 6 Commissioning

### 6.1 Safety Instructions

See *chapter 2 Safety* for general safety instructions.

#### **⚠ WARNING**

##### HIGH VOLTAGE

Drives contain high voltage when connected to AC mains input power. Failure to use qualified personnel to install, start up, and maintain the drive can result in death or serious injury.

- Only qualified personnel must install, start up, and maintain the drive.

##### Before applying power:

1. Ensure that input power to the unit is OFF and locked out. Do not rely on the drive disconnect switches for input power isolation.
2. Verify that there is no voltage on input terminals L1 (91), L2 (92), and L3 (93), phase-to-phase, and phase-to-ground.
3. Verify that there is no voltage on output terminals 96 (U), 97 (V), and 98 (W), phase-to-phase, and phase-to-ground.
4. Confirm continuity of the motor by measuring ohm values on U–V (96–97), V–W (97–98), and W–U (98–96).
5. Check for proper grounding of the drive and the motor.
6. Inspect the drive for loose connections on the terminals.
7. Check that all cable glands are firmly tightened.
8. Confirm that the supply voltage matches the voltage of the drive and the motor.
9. Close and securely fasten the front cover.

### 6.2 Applying Power

#### **⚠ WARNING**

##### UNINTENDED START

When the drive is connected to AC mains, DC supply, or load sharing, the motor may start at any time, causing risk of death, serious injury, and equipment, or property damage. The motor may start by activation of an external switch, a fieldbus command, an input reference signal from the LCP or LOP, via remote operation using MCT 10 Set-up software, or after a cleared fault condition.

To prevent unintended motor start:

- Press [Off] on the LCP before programming parameters.
- Disconnect the drive from mains whenever personal safety considerations make it necessary to avoid unintended motor start.
- Check that the drive, motor, and any driven equipment is in operational readiness.

1. Confirm that the input voltage between phases is balanced within 3%. If not, correct input voltage imbalance before proceeding. Repeat this procedure after the voltage correction.
2. Ensure that optional equipment wiring, if present, matches the installation application.
3. Ensure that all operator devices are in the OFF position.
4. Close all panel doors and securely fasten all covers.
5. Apply power to the unit. DO NOT start the drive now. For units with a disconnect switch, turn to the ON position to apply power to the drive.

#### **NOTICE**

If the status line at the bottom of the LCP reads AUTO REMOTE COASTING or *alarm 60, External Interlock* is shown, this status indicates that the unit is ready to operate but is missing an input signal on terminal 27. See *chapter 5.8.5 Enabling Motor Operation (Terminal 27)* for details.

### 6.3 LCP Menu

#### 6.3.1.1 Quick Menu Mode

The Quick Menus mode provides a list of menus used to configure and operate the drive. Select the Quick Menus mode by pressing the [Quick Menus] key. The resulting readout appears on the LCP display.

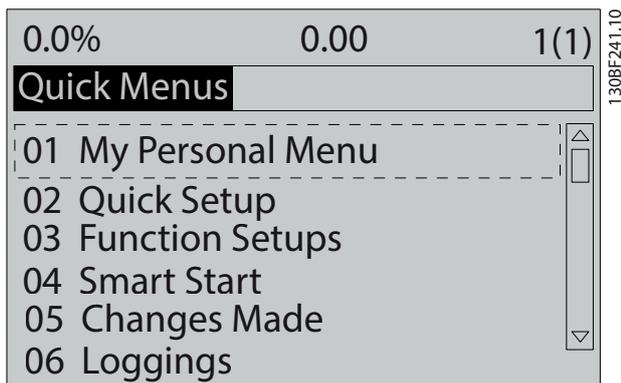


Illustration 6.1 Quick Menu View

#### 6.3.1.2 Q1 My Personal Menu

The Personal Menu is used to determine what is shown in the display area. Refer to *chapter 3.6 Local Control Panel (LCP)*. This menu can also show up to 50 pre-programmed parameters. These 50 parameters are manually entered using *parameter 0-25 My Personal Menu*.

#### 6.3.1.3 Q2 Quick Setup

The parameters found in the *Q2 Quick Setup* contain basic system and motor data that are always necessary for configuring the drive. See *chapter 6.4.2 Entering System Information* for the set-up procedures.

#### 6.3.1.4 Q3 Function Setups

The parameters found in the *Q3 Function Setups* contain data for fan, compressor, and pump functions. This menu also includes parameters for LCP display, digital preset speeds, scaling of analog references, closed-loop single zone, and multizone applications.

#### 6.3.1.5 Q4 Smart Start

Q4 Smart Setup guides the user through typical parameter settings used to configure the motor and selected pump/fan application. The [Info] key can be used to

display help information for various selections, settings, and messages.

#### 6.3.1.6 Q5 Changes Made

Select *Q5 Changes Made* for information about:

- The 10 most recent changes.
- Changes made from default setting.

#### 6.3.1.7 Q6 Loggings

Use *Q6 Loggings* for fault finding. To get information about the display line readout, select *Loggings*. The information is shown as graphs. Only parameters selected in *parameter 0-20 Display Line 1.1 Small* through *parameter 0-24 Display Line 3 Large* can be viewed. It is possible to store up to 120 samples in the memory for later reference.

Q6 Loggings	
<i>Parameter 0-20 Display Line 1.1 Small</i>	Reference [%]
<i>Parameter 0-21 Display Line 1.2 Small</i>	Motor current [A]
<i>Parameter 0-22 Display Line 1.3 Small</i>	Power [kW]
<i>Parameter 0-23 Display Line 2 Large</i>	Frequency [Hz]
<i>Parameter 0-24 Display Line 3 Large</i>	kWh Counter

Table 6.1 Logging Parameter Examples

#### 6.3.1.8 Main Menu Mode

The *Main Menu* mode lists all the parameter groups available to the drive. Select the Main Menu mode by pressing the [Main Menu] key. The resulting readout appears on the LCP display.

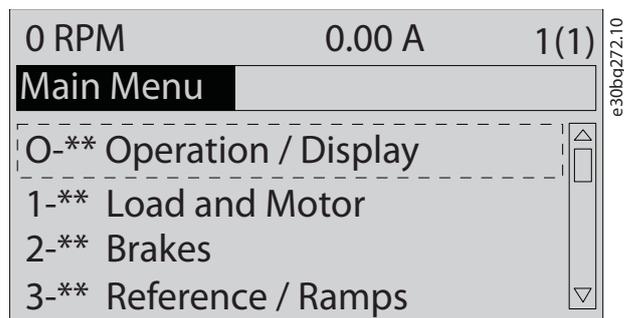


Illustration 6.2 Main Menu View

All parameters can be changed in the main menu. Option cards added to the unit enable extra parameters associated with the option device.

## 6.4 Programming the Drive

For detailed information on the key functions on the local control panel (LCP), see *chapter 3.6 Local Control Panel (LCP)*. For information on parameter settings, see the *programming guide*.

### Parameter overview

Parameter settings control the operation of the drive, and are accessed via the LCP. These settings are assigned a default value at the factory, but can be configured for their unique application. Each parameter has a name and number that remain the same regardless of the programming mode.

In the *Main Menu* mode, the parameters are divided into groups. The first digit of the parameter number (from the left) indicates the parameter group number. The parameter group is then broken down into subgroups, if necessary. For example:

0-** Operation/Display	Parameter group
0-0* Basic Settings	Parameter subgroup
Parameter 0-01 Language	Parameter
Parameter 0-02 Motor Speed Unit	Parameter
Parameter 0-03 Regional Settings	Parameter

Table 6.2 Example of Parameter Group Hierarchy

### Moving around parameters

Navigate through the parameters using the following LCP keys:


- Press [▲] [▼] to scroll up or down.
- Press [◀] [▶] to shift a space to the left or right of a decimal point while editing a decimal parameter value.
- Press [OK] to accept the change.
- Press [Cancel] to disregard the change and exit edit mode.
- Press [Back] twice to show the status view.
- Press [Main Menu] once to go back to the main menu.

### 6.4.1 Programming Example for an Open-loop Application

This procedure, which is used to configure a typical open-loop application, programs the drive to receive a 0–10 V DC analog control signal on input terminal 53. The drive responds by providing 20–50 Hz output to the motor proportional to the input signal (0–10 V DC=20–50 Hz).

Press [Quick Menu] and complete the following steps:


1. Select *Q3 Function Setups* and press [OK].
2. Select *Parameter Data Set* and press [OK].

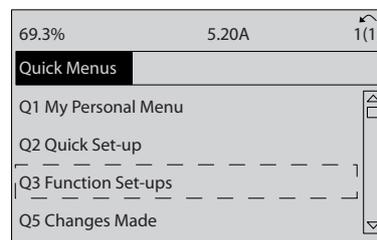

130BT112.10

Illustration 6.3 Q3 Function Setups


3. Select *Q3-2 Open Loop Settings* and press [OK].

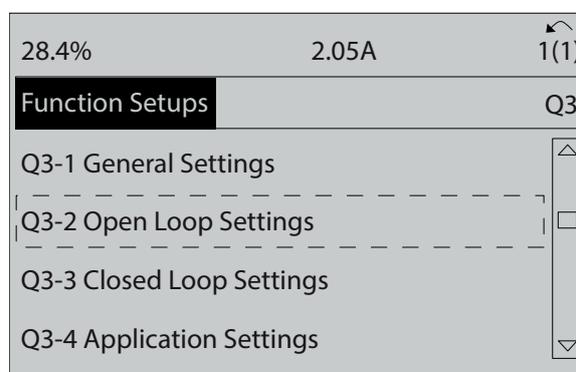

130BF725.10

Illustration 6.4 Q3-2 Open Loop Settings

4. Select *Q3-21 Analog Reference* and press [OK].

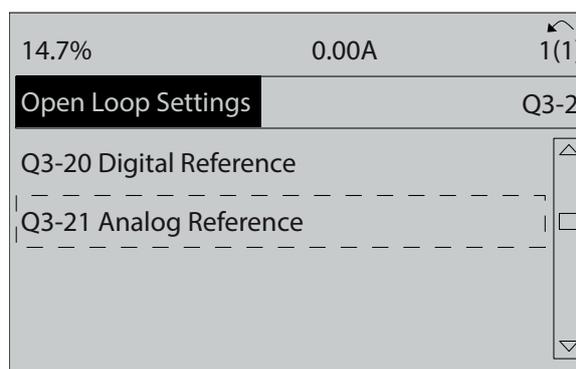

130BF726.10

Illustration 6.5 Q3-21 Analog Reference

6

- Select *parameter 3-02 Minimum Reference*. Set the minimum internal drive reference to 0 Hz and press [OK].

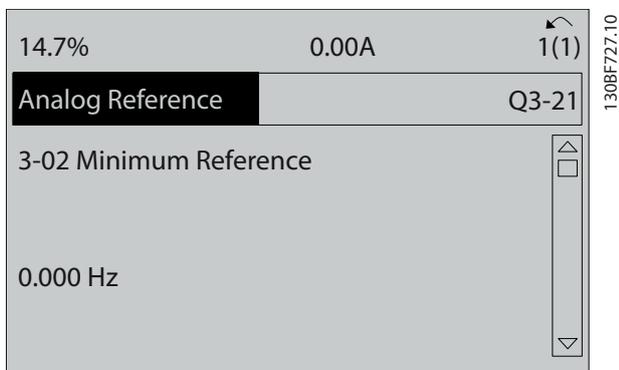


Illustration 6.6 Parameter 3-02 Minimum Reference

- Select *parameter 6-11 Terminal 53 High Voltage*. Set maximum external voltage reference on terminal 53 at 10 V and press [OK].

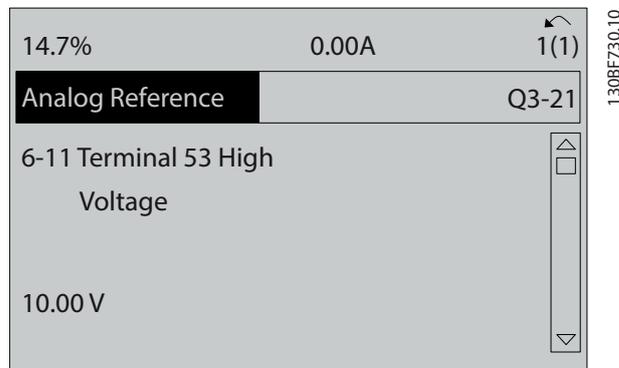


Illustration 6.9 Parameter 6-11 Terminal 53 High Voltage

- Select *parameter 3-03 Maximum Reference*. Set the maximum internal drive reference to 60 Hz and press [OK].

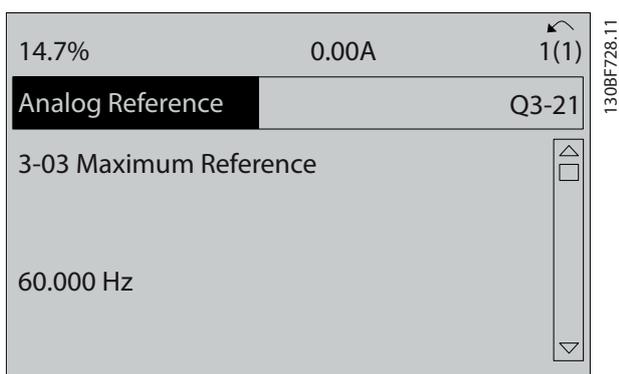


Illustration 6.7 Parameter 3-03 Maximum Reference

- Select *parameter 6-14 Terminal 53 Low Ref./Feedb. Value*. Set minimum speed reference on terminal 53 at 20 Hz and press [OK].

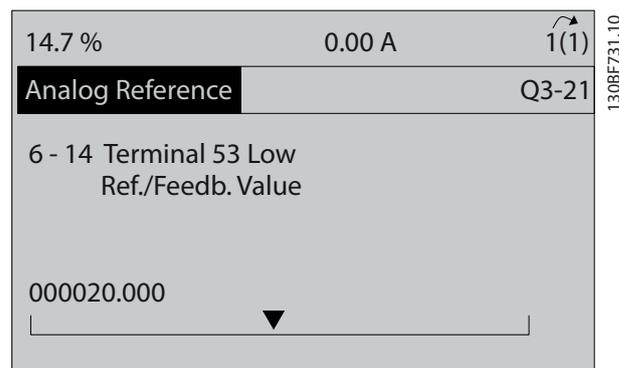


Illustration 6.10 Parameter 6-14 Terminal 53 Low Ref./Feedb. Value

- Select *parameter 6-10 Terminal 53 Low Voltage*. Set the minimum external voltage reference on terminal 53 at 0 V and press [OK].

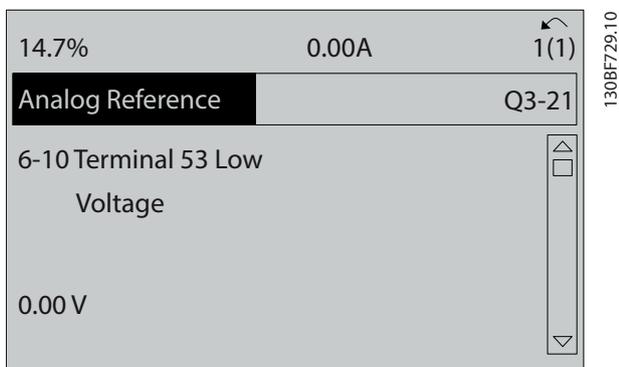


Illustration 6.8 Parameter 6-10 Terminal 53 Low Voltage

10. Select *parameter 6-15 Terminal 53 High Ref./Feedb. Value*. Set maximum speed reference on terminal 53 at 50 Hz and press [OK].

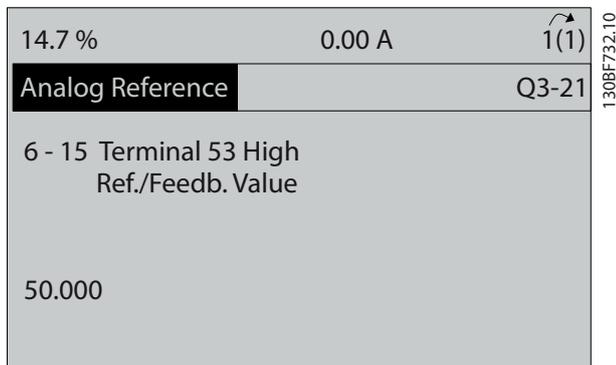


Illustration 6.11 *Parameter 6-15 Terminal 53 High Ref./Feedb. Value*

With an external device providing a 0–10 V control signal connected to drive terminal 53, the system is now ready for operation.

**NOTICE**

In *Illustration 6.11*, the scroll bar on the right of the display is at the bottom. This position indicates the procedure is complete.

*Illustration 6.12* shows the wiring connections used to enable the external device set up.

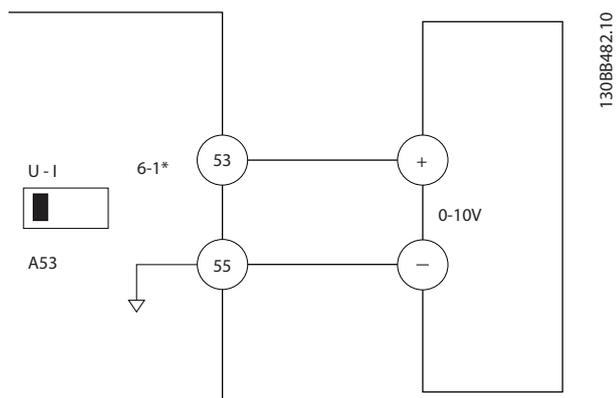


Illustration 6.12 *Wiring Example for External Device Providing 0–10 V Control Signal*

## 6.4.2 Entering System Information

**NOTICE**

**SOFTWARE DOWNLOAD**

For commissioning via PC, install *MCT 10 Set-up Software*. The software is available for download (basic version) or for ordering (advanced version, code number 130B1000). For more information and downloads, see [www.danfoss.com/en/service-and-support/downloads/dds/vlt-motion-control-tool-mct-10/](http://www.danfoss.com/en/service-and-support/downloads/dds/vlt-motion-control-tool-mct-10/).

The following steps are used to enter basic system information into the drive. Recommended parameter settings are intended for start-up and checkout purposes. Application settings vary.

**NOTICE**

Although these steps assume that an asynchronous motor is used, a permanent magnet motor can be used. For more information on specific motor types, see the *product-specific programming guide*.

1. Press [Main Menu] on the LCP.
2. Select *0-\*\* Operation/Display* and press [OK].
3. Select *0-0\* Basic Settings* and press [OK].
4. Select *parameter 0-03 Regional Settings* and press [OK].
5. Select *[0] International* or *[1] North America* as appropriate and press [OK]. (This action changes the default settings for some basic parameters).
6. Press [Quick Menu] on the LCP and then select *02 Quick Setup*.
7. Change the following parameters settings listed in *Table 6.3* if necessary. The motor data is found on the motor nameplate.

Parameter	Default setting
Parameter 0-01 Language	English
Parameter 1-20 Motor Power [kW]	4.00 kW
Parameter 1-22 Motor Voltage	400 V
Parameter 1-23 Motor Frequency	50 Hz
Parameter 1-24 Motor Current	9.00 A
Parameter 1-25 Motor Nominal Speed	1420 RPM
Parameter 5-12 Terminal 27 Digital Input	Coast inverse
Parameter 3-02 Minimum Reference	0.000 RPM
Parameter 3-03 Maximum Reference	1500.000 RPM
Parameter 3-41 Ramp 1 Ramp up Time	3.00 s
Parameter 3-42 Ramp 1 Ramp Down Time	3.00 s
Parameter 3-13 Reference Site	Linked to Hand/ Auto
Parameter 1-29 Automatic Motor Adaptation (AMA)	Off

Table 6.3 Quick Setup Settings

### NOTICE

#### MISSING INPUT SIGNAL

When the LCP shows **AUTO REMOTE COASTING** or *alarm 60, External Interlock*, the unit is ready to operate but is missing an input signal. See *chapter 5.8.5 Enabling Motor Operation (Terminal 27)* for details.

### 6.4.3 Configuring Automatic Energy Optimization

Automatic energy optimization (AEO) is a procedure that minimizes voltage to the motor, reducing energy consumption, heat, and noise.

1. Press [Main Menu].
2. Select 1-\*\* *Load and Motor* and press [OK].
3. Select 1-0\* *General Settings* and press [OK].
4. Select *parameter 1-03 Torque Characteristics* and press [OK].
5. Select either [2] *Auto Energy Optim CT* or [3] *Auto Energy Optim VT* and press [OK].

### 6.4.4 Configuring Automatic Motor Adaptation

Automatic motor adaptation is a procedure that optimizes compatibility between the drive and the motor.

The drive builds a mathematical model of the motor for regulating output motor current. The procedure also tests the input phase balance of electrical power. It compares the motor characteristics with the data entered in *parameters 1-20 to 1-25*.

### NOTICE

If warnings or alarms occur, see *chapter 8.5 List of Warnings and Alarms*. Some motors are unable to run the complete version of the test. In that case, or if an output filter is connected to the motor, select [2] *Enable reduced AMA*.

Run this procedure on a cold motor for best results.

1. Press [Main Menu].
2. Select 1-\*\* *Load and Motor* and press [OK].
3. Select 1-2\* *Motor Data* and press [OK].
4. Select *parameter 1-29 Automatic Motor Adaptation (AMA)* and press [OK].
5. Select [1] *Enable complete AMA* and press [OK].
6. Press [Hand On] and then [OK].  
The test runs automatically and indicates when it is complete.

### 6.5 Testing Before System Start-up

### ⚠ WARNING

#### MOTOR START

Failure to ensure that the motor, system, and any attached equipment are ready for start can result in personal injury or equipment damage. Before start,

- Ensure that equipment is safe to operate under any condition.
- Ensure that the motor, system, and any attached equipment are ready for start.

### 6.5.1 Motor Rotation

#### **NOTICE**

If the motor runs in the wrong direction, it can damage equipment. Before running the unit, check the motor rotation by briefly running the motor. The motor runs briefly at either 5 Hz or the minimum frequency set in *parameter 4-12 Motor Speed Low Limit [Hz]*.

1. Press [Hand On].
2. Move the left cursor to the left of the decimal point by using the left arrow key, and enter an RPM that slowly rotates the motor.
3. Press [OK].
4. If the motor rotation is wrong, set *parameter 1-06 Clockwise Direction* to [1] *Inverse*.

### 6.5.2 Encoder Rotation

If encoder feedback is used, perform the following steps:

1. Select [0] *Open Loop* in *parameter 1-00 Configuration Mode*.
2. Select [1] *24 V encoder* in *parameter 7-00 Speed PID Feedback Source*.
3. Press [Hand On].
4. Press [►] for positive speed reference (*parameter 1-06 Clockwise Direction* at [0] *Normal*).
5. In *parameter 16-57 Feedback [RPM]*, check that the feedback is positive.

For more information on the encoder option, refer to the option manual.

#### **NOTICE**

#### **NEGATIVE FEEDBACK**

If the feedback is negative, the encoder connection is wrong. Use either *parameter 5-71 Term 32/33 Encoder Direction* or *parameter 17-60 Feedback Direction* to inverse the direction, or reverse the encoder cables. *Parameter 17-60 Feedback Direction* is only available with the VLT® Encoder Input MCB 102 option.

### 6.6 System Start-up

#### **WARNING**

#### **MOTOR START**

Failure to ensure that the motor, system, and any attached equipment are ready for start can result in personal injury or equipment damage. Before start,

- Ensure that equipment is safe to operate under any condition.
- Ensure that the motor, system, and any attached equipment are ready for start.

The procedure in this section requires user-wiring and application programming to be completed. The following procedure is recommended after application set-up is completed.

1. Press [Auto On].
2. Apply an external run command. Examples of external run commands are a switch, button, or programmable logic controller (PLC).
3. Adjust the speed reference throughout the speed range.
4. Ensure that the system is working as intended by checking sound and vibration level of the motor.
5. Remove the external run command.

If warnings or alarms occur, see *chapter 8.5 List of Warnings and Alarms*.

### 6.7 Parameter Settings

#### **NOTICE**

#### **REGIONAL SETTINGS**

Some parameters have different default settings for international or North America. For a list of the different default values, see *chapter 10.2 International/North American Default Parameter Settings*.

Establishing the correct programming for applications requires setting several parameter functions. Details for parameters are provided in the *programming guide*.

Parameter settings are stored internally in the drive, allowing the following advantages:

- Parameter settings can be uploaded into the LCP memory and stored as a back-up.
- Multiple units can be programmed quickly by connecting the LCP to the unit and downloading the stored parameter settings.

- Settings that are stored in the LCP are not changed when restoring factory default settings.
- Changes made to default settings as well as any programming entered into parameters are stored and available for viewing in the quick menu. See *chapter 3.6 Local Control Panel (LCP)*.

### 6.7.1 Uploading and Downloading Parameter Settings

The drive operates using parameters stored on the control card, which is located within the drive. The upload and download functions move the parameters between the control card and the LCP.

1. Press [Off].
2. Go to *parameter 0-50 LCP Copy* and press [OK].
3. Select 1 of the following:
  - 3a To upload data from the control card to the LCP, select [1] *All to LCP*.
  - 3b To download data from the LCP to the control card, select [2] *All from LCP*.
4. Press [OK]. A progress bar shows the uploading or downloading process.
5. Press [Hand On] or [Auto On].

### 6.7.2 Restoring Factory Default Settings

#### **NOTICE**

##### **LOSS OF DATA**

Loss of programming, motor data, localization, and monitoring records occurs when restoring default settings. To create a back-up, upload data to the LCP before initialization. Refer to *chapter 6.7.1 Uploading and Downloading Parameter Settings*.

Restore the default parameter settings by initializing the unit. Initialization is carried out through *parameter 14-22 Operation Mode* or manually.

*Parameter 14-22 Operation Mode* does not reset settings such as the following:

- Running hours.
- Serial communication options.
- Personal menu settings.
- Fault log, alarm log, and other monitoring functions.

#### **Recommended initialization**

1. Press [Main Menu] twice to access parameters.
2. Go to *parameter 14-22 Operation Mode* and press [OK].
3. Scroll to *Initialization* and press [OK].
4. Remove power to the unit and wait for the display to turn off.
5. Apply power to the unit. Default parameter settings are restored during start-up. Start-up takes slightly longer than normal.
6. After *alarm 80, Drive initialized to default value* appears, press [Reset].

#### **Manual initialization**

Manual initialization resets all factory settings except for the following:

- *Parameter 15-00 Operating Hours*.
- *Parameter 15-03 Power Up's*.
- *Parameter 15-04 Over Temp's*.
- *Parameter 15-05 Over Volt's*.

To perform manual initialization:

1. Remove power to the unit and wait for the display to turn off.
2. Press and hold [Status], [Main Menu], and [OK] simultaneously while applying power to the unit (approximately 5 s or until an audible click sounds and the fan starts). Start-up takes slightly longer than normal.

## 7 Wiring Configuration Examples

The examples in this section are intended as a quick reference for common applications.

- Parameter settings are the regional default values unless otherwise indicated (selected in *parameter 0-03 Regional Settings*).
- Parameters associated with the terminals and their settings are shown next to the drawings.
- Required switch settings for analog terminals A53 or A54 are also shown.

### NOTICE

When not using the optional STO feature, a jumper wire is required between terminal 12 (or 13) and terminal 37 for the drive to operate with factory default programming values.

### 7.1 Wiring for Open-loop Speed Control

		Parameters	
		Function	Setting
		Parameter 6-10 Terminal 53 Low Voltage	0.07 V*
		Parameter 6-11 Terminal 53 High Voltage	10 V*
		Parameter 6-14 Terminal 53 Low Ref./Feedb. Value	0 RPM
		Parameter 6-15 Terminal 53 High Ref./Feedb. Value	1500 RPM
	* = Default value		
<b>Notes/comments:</b>		Assumptions are 0 V DC input = 0 Hz speed and 10 V DC input = 50 Hz speed.	

Table 7.1 Analog Speed Reference (Voltage)

		Parameters	
		Function	Setting
		Parameter 6-12 Terminal 53 Low Current	4 mA*
		Parameter 6-13 Terminal 53 High Current	20 mA*
		Parameter 6-14 Terminal 53 Low Ref./Feedb. Value	0 RPM
		Parameter 6-15 Terminal 53 High Ref./Feedb. Value	1500 RPM
	* = Default value		
<b>Notes/comments:</b>		Assumptions are 4 mA input = 0 Hz speed and 20 mA input = 50 Hz speed.	

Table 7.2 Analog Speed Reference (Current)

		Parameters	
		Function	Setting
		Parameter 6-12 Terminal 53 Low Current	4 mA*
		Parameter 6-13 Terminal 53 High Current	20 mA*
		Parameter 6-14 Terminal 53 Low Ref./Feedb. Value	0 RPM
		Parameter 6-15 Terminal 53 High Ref./Feedb. Value	1500 RPM
	* = Default value		
<b>Notes/comments:</b>		Assumptions are 0 V DC input = 0 RPM speed and 10 V DC input = 1500 RPM speed.	

Table 7.3 Speed Reference (Using a Manual Potentiometer)

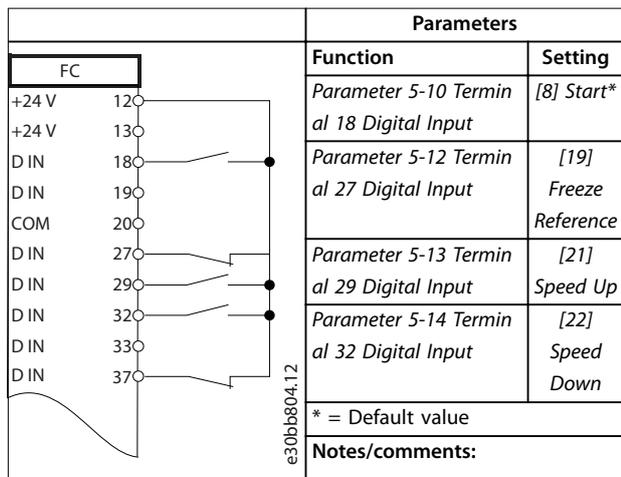


Table 7.4 Speed Up/Speed Down

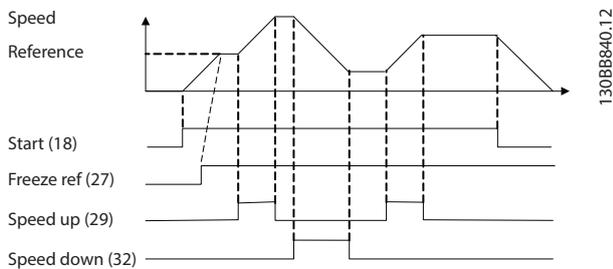


Illustration 7.1 Speed Up/Speed Down

## 7.2 Wiring for Start/Stop

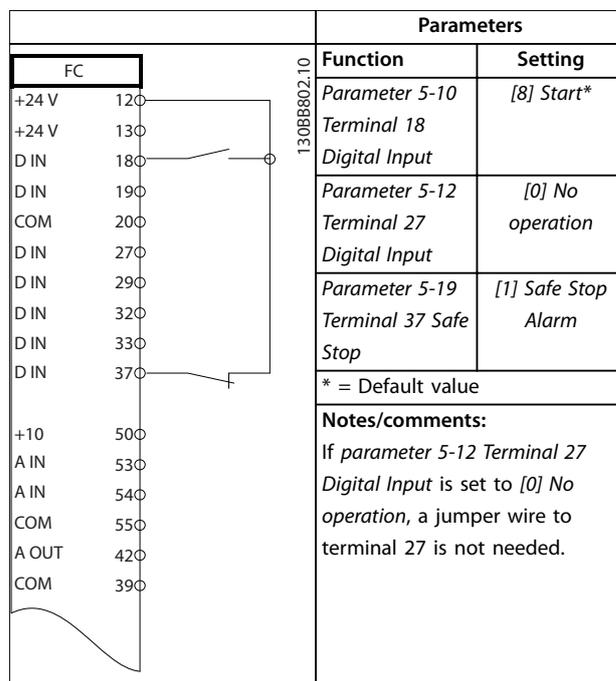


Table 7.5 Start/Stop Command with Safe Torque Off Option

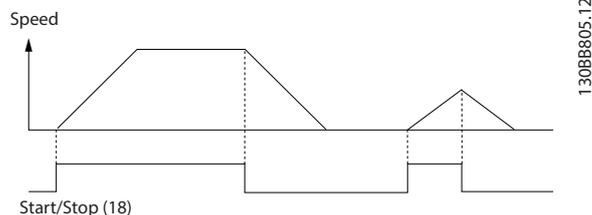


Illustration 7.2 Start/Stop Command with Safe Torque Off

		Parameters	
FC		Function	Setting
+24 V	12	Parameter 5-1 0 Terminal 18 Digital Input	[9] Latched Start
+24 V	13		
D IN	18	Parameter 5-1 2 Terminal 27 Digital Input	[6] Stop Inverse
D IN	19		
COM	20	* = Default value	
D IN	27	Notes/comments:	
D IN	29		
D IN	32		
D IN	33		
D IN	37		
+10 V	50		
A IN	53		
A IN	54		
COM	55		
A OUT	42		
COM	39		

Table 7.6 Pulse Start/Stop

		Parameters	
FC		Function	Setting
+24 V	12	Parameter 5-10 Terminal 18 Digital Input	[8] Start
+24 V	13		
D IN	18	Parameter 5-11 Terminal 19 Digital Input	[10] Reversing*
D IN	19		
COM	20	* = Default value	
D IN	27	Parameter 5-12 Terminal 27 Digital Input	[0] No operation
D IN	29		
D IN	32	Parameter 5-14 Terminal 32 Digital Input	[16] Preset ref bit 0
D IN	33		
+10 V	50		
A IN	53		
A IN	54		
COM	55		
A OUT	42		
COM	39		
		Parameter 3-10 Preset Reference	
		Preset ref. 0	25%
		Preset ref. 1	50%
		Preset ref. 2	75%
		Preset ref. 3	100%
		* = Default value	
		Notes/comments:	

Table 7.7 Start/Stop with Reversing and 4 Preset Speeds

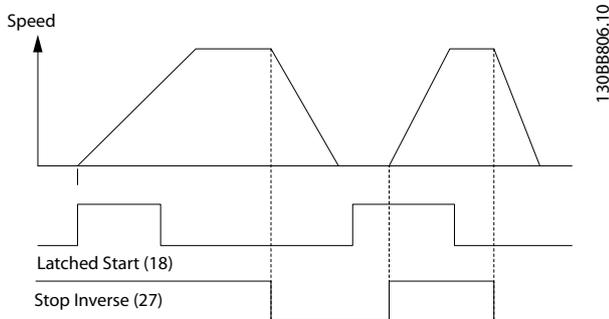


Illustration 7.3 Latched Start/Stop Inverse

### 7.3 Wiring for External Alarm Reset

FC		Parameters	
Terminal	Function	Function	Setting
+24 V 120		Parameter 5-11 Terminal 19	[1] Reset
+24 V 130		Digital Input	
D IN 180		* = Default value	
D IN 190		Notes/comments:	
D IN 270			
D IN 290			
D IN 320			
D IN 330			
D IN 370			
+10 V 500			
A IN 530			
A IN 540			
COM 550			
A OUT 420			
COM 390			

Table 7.8 External Alarm Reset

### 7.4 Wiring for a Motor Thermistor

#### **WARNING**

#### THERMISTOR INSULATION

Risk of personal injury or equipment damage.

- To meet PELV insulation requirements, use only thermistors with reinforced or double insulation.

VLT		Parameters	
Terminal	Function	Function	Setting
+24 V 120		Parameter 1-90 Motor Thermal Protection	[2] Thermistor trip
+24 V 130		Parameter 1-93 Thermistor Resource	[1] Analog input 53
D IN 180		* = Default value	
D IN 190		Notes/comments:	
COM 200		If only a warning is desired, set parameter 1-90 Motor Thermal Protection to [1] Thermistor warning.	
D IN 270			
D IN 290			
D IN 320			
D IN 330			
D IN 370			
+10 V 500			
A IN 530			
A IN 540			
COM 550			
A OUT 420			
COM 390			

Table 7.9 Motor Thermistor

### 7.5 Wiring for Regeneration

		Parameters																																					
		Function	Setting																																				
<table border="1"> <tr> <td colspan="2">FC</td> </tr> <tr> <td>+24 V</td> <td>12</td> </tr> <tr> <td>+24 V</td> <td>13</td> </tr> <tr> <td>D IN</td> <td>18</td> </tr> <tr> <td>D IN</td> <td>19</td> </tr> <tr> <td>COM</td> <td>20</td> </tr> <tr> <td>D IN</td> <td>27</td> </tr> <tr> <td>D IN</td> <td>29</td> </tr> <tr> <td>D IN</td> <td>32</td> </tr> <tr> <td>D IN</td> <td>33</td> </tr> <tr> <td>D IN</td> <td>37</td> </tr> <tr> <td colspan="2"> </td> </tr> <tr> <td>+10 V</td> <td>50</td> </tr> <tr> <td>A IN</td> <td>53</td> </tr> <tr> <td>A IN</td> <td>54</td> </tr> <tr> <td>COM</td> <td>55</td> </tr> <tr> <td>A OUT</td> <td>42</td> </tr> <tr> <td>COM</td> <td>39</td> </tr> </table>		FC		+24 V	12	+24 V	13	D IN	18	D IN	19	COM	20	D IN	27	D IN	29	D IN	32	D IN	33	D IN	37			+10 V	50	A IN	53	A IN	54	COM	55	A OUT	42	COM	39	130BD667.11	Parameter 1-90 <i>Motor Thermal Protection</i> 100%*
		FC																																					
+24 V	12																																						
+24 V	13																																						
D IN	18																																						
D IN	19																																						
COM	20																																						
D IN	27																																						
D IN	29																																						
D IN	32																																						
D IN	33																																						
D IN	37																																						
+10 V	50																																						
A IN	53																																						
A IN	54																																						
COM	55																																						
A OUT	42																																						
COM	39																																						
		* = Default value																																					
		<b>Notes/comments:</b> To disable regeneration, decrease <i>parameter 1-90 Motor Thermal Protection</i> to 0%. If the application uses motor brake power and regeneration is not enabled, the unit trips.																																					

Table 7.10 Regeneration

## 8 Maintenance, Diagnostics, and Troubleshooting

### 8.1 Maintenance and Service

This chapter includes:

- Maintenance and service guidelines.
- Status messages.
- Warnings and alarms.
- Basic troubleshooting.

Under normal operating conditions and load profiles, the drive is maintenance-free throughout its designed lifetime. To prevent breakdown, danger, and damage, examine the drive at regular intervals depending on the operating conditions. Replace worn or damaged parts with original spare parts or standard parts. For service and support, refer to [www.danfoss.com/en/service-and-support/](http://www.danfoss.com/en/service-and-support/).

#### **⚠ WARNING**

##### UNINTENDED START

When the drive is connected to AC mains, DC supply, or load sharing, the motor can start at any time. Unintended start during programming, service, or repair work can result in death, serious injury, or property damage. The motor can start with an external switch, a fieldbus command, an input reference signal from the LCP or LOP, via remote operation using MCT 10 Set-up Software, or after a cleared fault condition.

To prevent unintended motor start:

- Press [Off/Reset] on the LCP before programming parameters.
- Disconnect the drive from the mains.
- Completely wire and assemble the drive, motor, and any driven equipment before connecting the drive to AC mains, DC supply, or load sharing.

### 8.2 Heat Sink Access Panel

The drive can be ordered with an optional access panel in the back of the unit. This access panel provides access to the heat sink and allows the heat sink to be cleaned of any dust buildup.

#### 8.2.1 Removing the Heat Sink Access Panel

##### **NOTICE**

##### DAMAGE TO HEAT SINK

Using fasteners that are longer than those originally supplied with the heat sink panel can damage the heat sink cooling fins.

1. Remove power from the drive and wait 40 minutes for the capacitors to discharge completely. Refer to *chapter 2 Safety*.
2. Position the drive so that the back of the drive is fully accessible.
3. Remove the 8 M5 fasteners securing the access panel to the back of the enclosure using a 3 mm hex bit.
4. Inspect the leading edge of the heat sink for damage or debris.
5. Remove material or debris with a vacuum.
6. Reinstall the panel and secure it to the back of the enclosure with the 8 fasteners. Tighten the fasteners according to *chapter 9.10.1 Fastener Torque Ratings*.


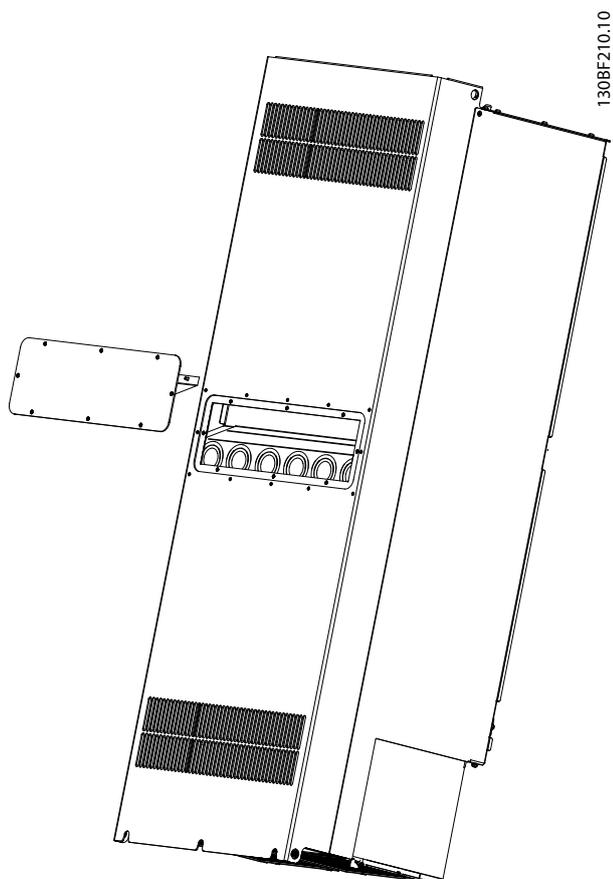


Illustration 8.1 Heat Sink Access Panel Removed from the Rear of the Drive

### 8.3 Status Messages

When the drive is in status mode, status messages automatically appear in the bottom line of the LCP display. Refer to *Illustration 8.2*. Status messages are defined in *Table 8.1 – Table 8.3*.

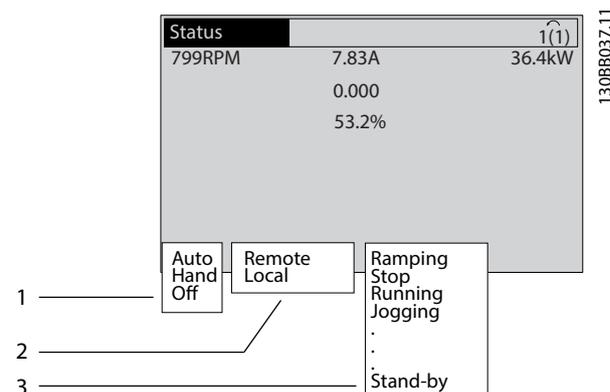

1	Where the stop/start command originates. Refer to <i>Table 8.1</i> .
2	Where the speed control originates. Refer to <i>Table 8.2</i> .
3	Provides the drive status. Refer to <i>Table 8.3</i> .

Illustration 8.2 Status Display

#### **NOTICE**

In auto/remote mode, the drive requires external commands to execute functions.

*Table 8.1 to Table 8.3* define the meaning of the shown status messages.

Off	The drive does not react to any control signal until [Auto On] or [Hand On] is pressed.
Auto	The start/stop commands are sent via the control terminals and/or the serial communication.
Hand	The navigation keys on the LCP can be used to control the drive. Stop commands, reset, reversing, DC brake, and other signals applied to the control terminals override local control.

Table 8.1 Operating Mode

Remote	The speed reference is given from <ul style="list-style-type: none"> <li>External signals.</li> <li>Serial communication.</li> <li>Internal preset references.</li> </ul>
Local	The drive uses reference values from the LCP.

**Table 8.2 Reference Site**

AC brake	AC brake was selected in <i>parameter 2-10 Brake Function</i> . The AC brake overmagnetizes the motor to achieve a controlled slowdown.
AMA finish OK	Automatic motor adaptation (AMA) was carried out successfully.
AMA ready	AMA is ready to start. To start, press [Hand On].
AMA running	AMA process is in progress.
Braking	The brake chopper is in operation. The brake resistor absorbs the generative energy.
Braking max.	The brake chopper is in operation. The power limit for the brake resistor defined in <i>parameter 2-12 Brake Power Limit (kW)</i> has been reached.
Coast	<ul style="list-style-type: none"> <li>[2] <i>Coast inverse</i> was selected as a function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal is not connected.</li> <li>Coast activated by serial communication.</li> </ul>
Ctrl. ramp-down	<p>[1] <i>Ctrl. ramp-down</i> was selected in <i>parameter 14-10 Mains Failure</i>.</p> <ul style="list-style-type: none"> <li>The mains voltage is below the value set in <i>parameter 14-11 Mains Voltage at Mains Fault</i> at mains fault.</li> <li>The drive ramps down the motor using a controlled ramp down.</li> </ul>
Current high	The drive output current is above the limit set in <i>parameter 4-51 Warning Current High</i> .
Current low	The drive output current is below the limit set in <i>parameter 4-52 Warning Speed Low</i> .
DC hold	DC hold is selected in <i>parameter 1-80 Function at Stop</i> and a stop command is active. The motor is held by a DC current set in <i>parameter 2-00 DC Hold Current</i> .

DC stop	<p>The motor is held with a DC current (<i>parameter 2-01 DC Brake Current</i>) for a specified time (<i>parameter 2-02 DC Braking Time</i>).</p> <ul style="list-style-type: none"> <li>DC brake is activated in <i>parameter 2-03 DC Brake Cut In Speed [RPM]</i> and a stop command is active.</li> <li>DC brake (inverse) is selected as a function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal is not active.</li> <li>The DC brake is activated via serial communication.</li> </ul>
Feedback high	The sum of all active feedbacks is above the feedback limit set in <i>parameter 4-57 Warning Feedback High</i> .
Feedback low	The sum of all active feedbacks is below the feedback limit set in <i>parameter 4-56 Warning Feedback Low</i> .
Freeze output	<p>The remote reference is active, which holds the present speed.</p> <ul style="list-style-type: none"> <li>[20] <i>Freeze Output</i> was selected as a function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal is active. Speed control is only possible via the terminal functions speed up and speed down.</li> <li>Hold ramp is activated via serial communication.</li> </ul>
Freeze output request	A freeze output command has been given, but the motor remains stopped until a run permissive signal is received.
Freeze ref.	[19] <i>Freeze Reference</i> was selected as a function for a digital input ( <i>parameter group 5-1* Digital Inputs</i> ). The corresponding terminal is active. The drive saves the actual reference. Changing the reference is now only possible via terminal functions speed up and speed down.
Jog request	A jog command has been given, but the motor is stopped until a run permissive signal is received via a digital input.

Jogging	<p>The motor is running as programmed in <i>parameter 3-19 Jog Speed [RPM]</i>.</p> <ul style="list-style-type: none"> <li>[14] Jog was selected as function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal (for example, terminal 29) is active.</li> <li>The jog function is activated via the serial communication.</li> <li>The jog function was selected as a reaction for a monitoring function (for example, No signal). The monitoring function is active.</li> </ul>
Motor check	<p>In <i>parameter 1-80 Function at Stop, [2] Motor Check</i> was selected. A stop command is active. To ensure that a motor is connected to the drive, a permanent test current is applied to the motor.</p>
OVC control	<p>Overvoltage control was activated in <i>parameter 2-17 Over-voltage Control, [2] Enabled</i>. The connected motor is supplying the drive with generative energy. The overvoltage control adjusts the V/Hz ratio to run the motor in controlled mode and to prevent the drive from tripping.</p>
Power unit off	<p>(For drives with a 24 V DC external supply installed only.) Mains supply to the drive is removed, but the control card is supplied by the 24 V DC external supply.</p>
Protection md	<p>Protection mode is active. The unit has detected a critical status (an overcurrent or overvoltage).</p> <ul style="list-style-type: none"> <li>To avoid tripping, the switching frequency is reduced to 1500 kHz if <i>parameter 14-55 Output Filter</i> is set to [2] <i>Sine-Wave Filter Fixed</i>. Otherwise, the switching frequency is reduced to 1000 Hz.</li> <li>If possible, protection mode ends after approximately 10 s.</li> <li>Protection mode can be restricted in <i>parameter 14-26 Trip Delay at Inverter Fault</i>.</li> </ul>
QStop	<p>The motor is decelerating using <i>parameter 3-81 Quick Stop Ramp Time</i>.</p> <ul style="list-style-type: none"> <li>[4] Quick stop inverse was selected as a function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal is not active.</li> <li>The quick stop function was activated via serial communication.</li> </ul>
Ramping	<p>The motor is accelerating/decelerating using the active ramp up/down. The reference, a limit value, or a standstill is not yet reached.</p>

Ref. high	<p>The sum of all active references is above the reference limit set in <i>parameter 4-55 Warning Reference High</i>.</p>
Ref. low	<p>The sum of all active references is below the reference limit set in <i>parameter 4-54 Warning Reference Low</i>.</p>
Run on ref.	<p>The drive is running in the reference range. The feedback value matches the setpoint value.</p>
Run request	<p>A start command has been given, but the motor is stopped until a run permissive signal is received via digital input.</p>
Running	<p>The drive is driving the motor.</p>
Sleep mode	<p>The energy saving function is enabled. This function being enabled means that now the motor has stopped, but that it restarts automatically when required.</p>
Speed high	<p>The motor speed is above the value set in <i>parameter 4-53 Warning Speed High</i>.</p>
Speed low	<p>The motor speed is below the value set in <i>parameter 4-52 Warning Speed Low</i>.</p>
Standby	<p>In auto-on mode, the drive starts the motor with a start signal from a digital input or serial communication.</p>
Start delay	<p>In <i>parameter 1-71 Start Delay</i>, a delay starting time was set. A start command is activated and the motor starts after the start delay time expires.</p>
Start fwd/rev	<p>[12] <i>Enable Start Forward</i> and [13] <i>Enable Start Reverse</i> were selected as functions for 2 different digital inputs (<i>parameter group 5-1* Digital Inputs</i>). The motor starts in forward or reverse depending on which corresponding terminal is activated.</p>
Stop	<p>The drive has received a stop command from 1 of the following:</p> <ul style="list-style-type: none"> <li>LCP.</li> <li>Digital input.</li> <li>Serial communication.</li> </ul>
Trip	<p>An alarm occurred and the motor is stopped. Once the cause of the alarm is cleared, reset the drive using 1 of the following:</p> <ul style="list-style-type: none"> <li>Pressing [Reset].</li> <li>Remotely by control terminals.</li> <li>Via serial communication.</li> </ul> <p>Pressing [Reset] or remotely by control terminals or via serial communication.</p>

Trip lock	An alarm occurred and the motor is stopped. Once the cause of the alarm is cleared, cycle power to the drive. Reset the drive manually by 1 of the following: <ul style="list-style-type: none"> <li>Pressing [Reset].</li> <li>Remotely by control terminals.</li> <li>Via serial communication.</li> </ul>
-----------	--

Table 8.3 Operation Status

### 8.4 Warning and Alarm Types

The drive software issues warnings and alarms to assist in diagnosing issues. The warning or alarm number appears in the LCP.

#### Warning

A warning indicates the drive has encountered an abnormal operating condition that leads to an alarm. A warning stops when the abnormal condition is removed or resolved.

#### Alarm

An alarm indicates a fault that requires immediate attention. The fault always triggers a trip or trip lock. Reset the drive after an alarm.

Reset the drive in any of 4 ways:

- Press [Reset]/[Off/Reset].
- Digital reset input command.
- Serial communication reset input command.
- Auto reset.

#### Trip

When tripping, the drive suspends operation to prevent damage to the drive and other equipment. When a trip occurs, the motor coasts to a stop. The drive logic continues to operate and monitor the drive status. After the fault condition is remedied, the drive is ready for a reset.

#### Trip lock

When trip locking, the drive suspends operation to prevent damage to the drive and other equipment. When a trip lock occurs, the motor coasts to a stop. The drive logic continues to operate and monitor the drive status. The drive starts a trip lock only when serious faults occur that can damage the drive or other equipment. After the faults are fixed, cycle the input power before resetting the drive.

#### Warning and alarm displays

- A warning is shown in the LCP along with the warning number.
- An alarm flashes along with the alarm number.


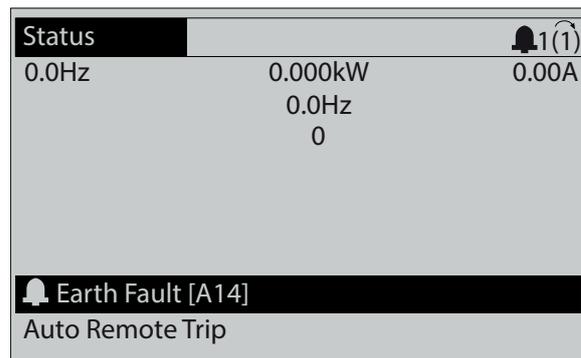


Illustration 8.3 Alarm Example

In addition to the text and alarm code in the LCP, there are 3 status indicator lights.

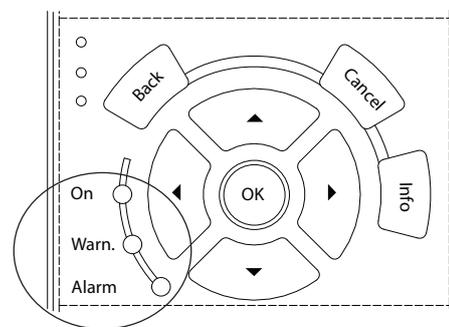

	Warning indicator light	Alarm indicator light
Warning	On	Off
Alarm	Off	On (flashing)
Trip lock	On	On (flashing)

Illustration 8.4 Status Indicator Lights

### 8.5 List of Warnings and Alarms

The following warning and alarm information defines each warning or alarm condition, provides the probable cause for the condition, and details a remedy or troubleshooting procedure.

#### WARNING 1, 10 Volts low

The control card voltage is less than 10 V from terminal 50. Remove some of the load from terminal 50, as the 10 V supply is overloaded. Maximum 15 mA or minimum 590 Ω.

A short circuit in a connected potentiometer or incorrect wiring of the potentiometer can cause this condition.

#### Troubleshooting

- Remove the wiring from terminal 50. If the warning clears, the problem is with the wiring. If the warning does not clear, replace the control card.

**WARNING/ALARM 2, Live zero error**

This warning or alarm only appears if programmed in *parameter 6-01 Live Zero Timeout Function*. The signal on 1 of the analog inputs is less than 50% of the minimum value programmed for that input. Broken wiring or a faulty device sending the signal can cause this condition.

**Troubleshooting**

- Check connections on all analog mains terminals.
  - Control card terminals 53 and 54 for signals, terminal 55 common.
  - VLT® General Purpose I/O MCB 101 terminals 11 and 12 for signals, terminal 10 common.
  - VLT® Analog I/O Option MCB 109 terminals 1, 3, and 5 for signals, terminals 2, 4, and 6 common.
- Check that the drive programming and switch settings match the analog signal type.
- Perform an input terminal signal test.

**WARNING/ALARM 3, No motor**

No motor has been connected to the output of the drive.

**WARNING/ALARM 4, Mains phase loss**

A phase is missing on the supply side, or the mains voltage imbalance is too high. This message also appears for a fault in the input rectifier. Options are programmed in *parameter 14-12 Function at Mains Imbalance*.

**Troubleshooting**

- Check the supply voltage and supply currents to the drive.

**WARNING 5, DC link voltage high**

The DC-link voltage (DC) is higher than the high-voltage warning limit. The limit depends on the drive voltage rating. The unit is still active.

**WARNING 6, DC link voltage low**

The DC-link voltage (DC) is lower than the low-voltage warning limit. The limit depends on the drive voltage rating. The unit is still active.

**WARNING/ALARM 7, DC overvoltage**

If the DC-link voltage exceeds the limit, the drive trips after a time.

**Troubleshooting**

- Extend the ramp time.
- Change the ramp type.
- Increase *parameter 14-26 Trip Delay at Inverter Fault*.
- Check that the supply voltage matches the active front-end drive voltage.
- Perform input voltage test.

**WARNING/ALARM 8, DC under voltage**

If the DC-link voltage drops below the undervoltage limit, the drive checks for 24 V DC back-up supply. If no 24 V DC back-up supply is connected, the drive trips after a fixed time delay. The time delay varies with unit size.

**Troubleshooting**

- Check that the supply voltage matches the drive voltage.
- Perform an input voltage test.
- Perform a soft-charge circuit test.

**WARNING/ALARM 9, Inverter overload**

The drive has run with more than 100% overload for too long and is about to cut out. The counter for electronic thermal inverter protection issues a warning at 98% and trips at 100% with an alarm. The drive cannot be reset until the counter is below 90%.

**Troubleshooting**

- Compare the output current shown on the LCP with the drive rated current.
- Compare the output current shown on the LCP with the measured motor current.
- Show the thermal drive load on the LCP and monitor the value. When running above the drive continuous current rating, the counter increases. When running below the drive continuous current rating, the counter decreases.

**WARNING/ALARM 10, Motor overload temperature**

According to the electronic thermal protection (ETR), the motor is too hot.

Select 1 of these options:

- The drive issues a warning or an alarm when the counter is >90% if *parameter 1-90 Motor Thermal Protection* is set to warning options.
- The drive trips when the counter reaches 100% if *parameter 1-90 Motor Thermal Protection* is set to trip options.

The fault occurs when the motor runs with more than 100% overload for too long.

**Troubleshooting**

- Check for motor overheating.
- Check if the motor is mechanically overloaded.
- Check that the motor current set in *parameter 1-24 Motor Current* is correct.
- Ensure that the motor data in *parameters 1-20 to 1-25* is set correctly.
- If an external fan is in use, check that it is selected in *parameter 1-91 Motor External Fan*.

- Running AMA in *parameter 1-29 Automatic Motor Adaptation (AMA)* tunes the drive to the motor more accurately and reduces thermal loading.

**WARNING/ALARM 11, Motor thermistor overtemp**

Check whether the thermistor is disconnected. Select whether the drive issues a warning or an alarm in *parameter 1-90 Motor Thermal Protection*.

**Troubleshooting**

- Check for motor overheating.
- Check if the motor is mechanically overloaded.
- When using terminal 53 or 54, check that the thermistor is connected correctly between either terminal 53 or 54 (analog voltage input) and terminal 50 (+10 V supply). Also check that the terminal switch for 53 or 54 is set for voltage. Check that *parameter 1-93 Thermistor Resource* selects terminal 53 or 54.
- When using terminal 18, 19, 31, 32, or 33 (digital inputs), check that the thermistor is connected correctly between the digital input terminal used (digital input PNP only) and terminal 50. Select the terminal to use in *parameter 1-93 Thermistor Resource*.

**WARNING/ALARM 12, Torque limit**

The torque has exceeded the value in *parameter 4-16 Torque Limit Motor Mode* or the value in *parameter 4-17 Torque Limit Generator Mode*. *Parameter 14-25 Trip Delay at Torque Limit* can change this warning from a warning-only condition to a warning followed by an alarm.

**Troubleshooting**

- If the motor torque limit is exceeded during ramp-up, extend the ramp-up time.
- If the generator torque limit is exceeded during ramp-down, extend the ramp-down time.
- If torque limit occurs while running, increase the torque limit. Make sure that the system can operate safely at a higher torque.
- Check the application for excessive current draw on the motor.

**WARNING/ALARM 13, Over current**

The inverter peak current limit (approximately 200% of the rated current) is exceeded. The warning lasts approximately 1.5 s, then the drive trips and issues an alarm. Shock loading or quick acceleration with high-inertia loads can cause this fault. If the acceleration during ramp-up is quick, the fault can also appear after kinetic back-up. If extended mechanical brake control is selected, a trip can be reset externally.

**Troubleshooting**

- Remove the power and check if the motor shaft can be turned.
- Check that the motor size matches the drive.
- Check that the motor data is correct in *parameters 1-20 to 1-25*.

**ALARM 14, Earth (ground) fault**

There is current from the output phase to ground, either in the cable between the drive and the motor, or in the motor itself. The current transducers detect the ground fault by measuring current going out from the drive and current going into the drive from the motor. Ground fault is issued if the deviation of the 2 currents is too large. The current going out of the drive must be the same as the current going into the drive.

**Troubleshooting**

- Remove power to the drive and repair the ground fault.
- Check for ground faults in the motor by measuring the resistance to ground of the motor cables and the motor with a megohmmeter.
- Reset any potential individual offset in the 3 current transducers in the drive. Perform the manual initialization or perform a complete AMA. This method is most relevant after changing the power card.

**ALARM 15, Hardware mismatch**

A fitted option is not operational with the present control card hardware or software.

Record the value of the following parameters and contact Danfoss.

- *Parameter 15-40 FC Type.*
- *Parameter 15-41 Power Section.*
- *Parameter 15-42 Voltage.*
- *Parameter 15-43 Software Version.*
- *Parameter 15-45 Actual Typecode String.*
- *Parameter 15-49 SW ID Control Card.*
- *Parameter 15-50 SW ID Power Card.*
- *Parameter 15-60 Option Mounted.*
- *Parameter 15-61 Option SW Version* (for each option slot).

**ALARM 16, Short circuit**

There is short-circuiting in the motor or motor wiring.

**Troubleshooting**

- Remove the power to the drive and repair the short circuit.

**⚠ WARNING****HIGH VOLTAGE**

Drives contain high voltage when connected to AC mains input, DC supply, or load sharing. Failure to use qualified personnel to install, start up, and maintain the drive can result in death or serious injury.

- Disconnect power before proceeding.

**WARNING/ALARM 17, Control word timeout**

There is no communication to the drive.

The warning is only active when *parameter 8-04 Control Word Timeout Function* is NOT set to [0] Off.

If *parameter 8-04 Control Word Timeout Function* is set to [5] Stop and trip, a warning appears, and the drive ramps down to a stop and shows an alarm.

**Troubleshooting**

- Check the connections on the serial communication cable.
- Increase *parameter 8-03 Control Word Timeout Time*.
- Check the operation of the communication equipment.
- Verify that proper EMC installation was performed.

**WARNING/ALARM 20, Temp. input error**

The temperature sensor is not connected.

**WARNING/ALARM 21, Parameter error**

The parameter is out of range. The parameter number is shown in the display.

**Troubleshooting**

- Set the affected parameter to a valid value.

**WARNING 22, Hoist mechanical brake**

0 = The torque reference was not reached before timeout.

1 = There was no brake feedback before the timeout.

**WARNING 23, Internal fan fault**

The fan warning function is a protective function that checks if the fan is running/mounted. The fan warning can be disabled in *parameter 14-53 Fan Monitor ([0] Disabled)*.

There is a feedback sensor mounted in the fan. If the fan is commanded to run and there is no feedback from the sensor, this alarm appears. This alarm also shows if there is a communication error between the fan power card and the control card.

Check the alarm log (see *chapter 3.6 Local Control Panel (LCP)*) for the report value associated with this warning.

If the report value is 2, there is a hardware problem with 1 of the fans. If the report value is 12, there is a communication problem between the fan power card and the control card.

**Fan troubleshooting**

- Cycle power to the drive and check that the fan operates briefly at start-up.
- Check for proper fan operation. Use *parameter group 43-\*\* Unit Readouts* to show the speed of each fan.

**Fan power card troubleshooting**

- Check the wiring between the fan power card and the control card.
- Fan power card may need to be replaced.
- Control card may need to be replaced.

**WARNING 24, External fan fault**

The fan warning function is a protective function that checks if the fan is running/mounted. The fan warning can be disabled in *parameter 14-53 Fan Monitor ([0] Disabled)*.

There is a feedback sensor mounted in the fan. If the fan is commanded to run and there is no feedback from the sensor, this alarm appears. This alarm also shows if there is a communication error between the power card and the control card.

Check the alarm log (see *chapter 3.6 Local Control Panel (LCP)*) for the report value associated with this warning.

If the report value is 1, there is a hardware problem with 1 of the fans. If the report value is 11, there is a communication problem between the power card and the control card.

**Fan troubleshooting**

- Cycle power to the drive and check that the fan operates briefly at start-up.
- Check for proper fan operation. Use *parameter group 43-\*\* Unit Readouts* to show the speed of each fan.

**Power card troubleshooting**

- Check the wiring between the power card and the control card.
- Power card may need to be replaced.
- Control card may need to be replaced.

**WARNING 25, Brake resistor short circuit**

The brake resistor is monitored during operation. If a short circuit occurs, the brake function is disabled and the warning appears. The drive is still operational, but without the brake function.

**Troubleshooting**

- Remove the power to the drive and replace the brake resistor (refer to *parameter 2-15 Brake Check*).

**WARNING/ALARM 26, Brake resistor power limit**

The power transmitted to the brake resistor is calculated as a mean value over the last 120 s of run-time. The calculation is based on the DC-link voltage and the brake resistor value set in *parameter 2-16 AC Brake Max. Current*. The warning is active when the dissipated braking power is higher than 90% of the brake resistor power. If option [2] Trip is selected in *parameter 2-13 Brake Power Monitoring*, the drive trips when the dissipated braking power reaches 100%.

The brake transistor is monitored during operation, and if a short circuit occurs, the brake function is disabled, and a warning is issued. The drive is still operational, but since the brake transistor has short-circuited, substantial power is transmitted to the brake resistor, even if it is inactive.

**WARNING****OVERHEATING RISK**

A surge in power can cause the brake resistor to overheat and possibly catch fire. Failure to remove power to the drive and remove the brake resistor can cause equipment damage.

**Troubleshooting**

- Remove power to the drive and remove the brake resistor.

**WARNING/ALARM 28, Brake check failed**

The brake resistor is not connected or not working.

**Troubleshooting**

- Check *parameter 2-15 Brake Check*.

**ALARM 29, Heat sink temp**

The maximum temperature of the heat sink has been exceeded. This alarm is based on the temperature measured by the heat sink sensor mounted inside the IGBT modules. The temperature fault does not reset until the temperature drops below a defined heat sink temperature. The trip and reset points are different based on the drive power size.

**Troubleshooting**

- Check for the following conditions:
  - Ambient temperature too high.
  - Motor cable too long.
  - Incorrect airflow clearance above and below the drive.
  - Blocked airflow around the drive.

- Damaged heat sink fan.
- Dirty heat sink.

- Check fan resistance.
- Check soft charge fuses.
- Check IGBT thermal.

**ALARM 30, Motor phase U missing**

Motor phase U between the drive and the motor is missing.

**WARNING****HIGH VOLTAGE**

Drives contain high voltage when connected to AC mains input, DC supply, or load sharing. Failure to perform installation, start-up, and maintenance by qualified personnel can result in death or serious injury.

- Only qualified personnel must perform installation, start-up, and maintenance.
- Before performing any service or repair work, use an appropriate voltage measuring device to make sure that there is no remaining voltage on the drive.

**Troubleshooting**

- Remove the power from the drive and check motor phase U.

**ALARM 31, Motor phase V missing**

Motor phase V between the drive and the motor is missing.

**WARNING****HIGH VOLTAGE**

Drives contain high voltage when connected to AC mains input, DC supply, or load sharing. Failure to perform installation, start-up, and maintenance by qualified personnel can result in death or serious injury.

- Only qualified personnel must perform installation, start-up, and maintenance.
- Before performing any service or repair work, use an appropriate voltage measuring device to make sure that there is no remaining voltage on the drive.

**Troubleshooting**

- Remove the power from the drive and check motor phase V.

**ALARM 32, Motor phase W missing**

Motor phase W between the drive and the motor is missing.

## ⚠ WARNING

### HIGH VOLTAGE

Drives contain high voltage when connected to AC mains input, DC supply, or load sharing. Failure to perform installation, start-up, and maintenance by qualified personnel can result in death or serious injury.

- Only qualified personnel must perform installation, start-up, and maintenance.
- Before performing any service or repair work, use an appropriate voltage measuring device to make sure that there is no remaining voltage on the drive.

#### Troubleshooting

- Remove the power from the drive and check motor phase W.

### ALARM 33, Inrush fault

Too many power-ups have occurred within a short time period.

#### Troubleshooting

- Let the unit cool to operating temperature.
- Check potential DC-link fault to ground.

### WARNING/ALARM 34, Fieldbus communication fault

The fieldbus on the communication option card is not working.

### WARNING/ALARM 35, Option fault

An option alarm is received. The alarm is option-specific. The most likely cause is a power-up or a communication fault.

### WARNING/ALARM 36, Mains failure

This warning/alarm is only active if the supply voltage to the drive system is lost and *parameter 14-10 Line Failure* is not set to option [0] *No Function*.

- Check the fuses to the drive system and the mains supply to the unit.
- Check that mains voltage conforms to product specifications.
- Check that the following conditions are not present:  
*Alarm 307, Excessive THD(V), alarm 321, Voltage imbalance, warning 417, Mains undervoltage, or warning 418, Mains overvoltage* is reported if any of the listed conditions are true:

- The 3-phase voltage magnitude drops below 25% of the nominal mains voltage.
- Any single-phase voltage exceeds 10% of the nominal mains voltage.
- Percent of phase or magnitude imbalance exceeds 8%.
- Voltage THD exceeds 10%.

### ALARM 37, Phase imbalance

There is a current imbalance between the power units.

### ALARM 38, Internal fault

When an internal fault occurs, a code number defined in *Table 8.4* is shown.

#### Troubleshooting

- Cycle power.
- Check that the option is properly installed.
- Check for loose or missing wiring.

It may be necessary to contact the Danfoss supplier or service department. Note the code number for further troubleshooting directions.

Number	Text
0	The serial port cannot be initialized. Contact the Danfoss supplier or Danfoss Service Department.
256–259, 266, 268	The power EEPROM data is defective or too old. Replace the power card.
512–519	Internal fault. Contact the Danfoss supplier or Danfoss Service Department.
783	Parameter value outside of minimum/maximum limits.
1024–1284	Internal fault. Contact the Danfoss supplier or Danfoss Service Department.
1299	The option SW in slot A is too old.
1300	The option SW in slot B is too old.
1301	The option SW in slot C0 is too old.
1302	The option SW in slot C1 is too old.
1315	The option SW in slot A is not supported (not allowed).
1316	The option SW in slot B is not supported (not allowed).
1317	The option SW in slot C0 is not supported (not allowed).
1318	The option SW in slot C1 is not supported (not allowed).
1360–2819	Internal fault. Contact the Danfoss supplier or Danfoss Service Department.
2561	Replace control card.
2820	LCP stack overflow.
2821	Serial port overflow.
2822	USB port overflow.

Number	Text
3072–5122	Parameter value is outside its limits.
5123	Option in slot A: Hardware incompatible with control board hardware.
5124	Option in slot B: Hardware incompatible with control board hardware.
5125	Option in slot C0: Hardware incompatible with control board hardware.
5126	Option in slot C1: Hardware incompatible with control board hardware.
5127	Illegal option combination (2 options of the same kind mounted, or encoder in E0 and resolver in E1 or similar).
5168	Safe stop/safe torque off was detected on a control card that does not have safe stop/safe torque off.
5376–65535	Internal fault. Contact the Danfoss supplier or Danfoss Service Department.

**Table 8.4 Internal Fault Codes**
**ALARM 39, Heat sink sensor**

No feedback from the heat sink temperature sensor.

The signal from the IGBT thermal sensor is not available on the power card. The problem could be on the power card, on the gatedrive card, or the ribbon cable between the power card and gatedrive card.

**WARNING 40, Overload of digital output terminal 27**

Check the load connected to terminal 27 or remove the short-circuit connection. Check *parameter 5-00 Digital I/O Mode* and *parameter 5-01 Terminal 27 Mode*.

**WARNING 41, Overload of digital output terminal 29**

Check the load connected to terminal 29 or remove the short-circuit connection. Also check *parameter 5-00 Digital I/O Mode* and *parameter 5-02 Terminal 29 Mode*.

**WARNING 42, Overload of digital output on X30/6 or overload of digital output on X30/7**

For terminal X30/6, check the load connected to terminal X30/6 or remove the short-circuit connection. Also check *parameter 5-32 Term X30/6 Digi Out (MCB 101)* (VLT® General Purpose I/O MCB 101).

For terminal X30/7, check the load connected to terminal X30/7 or remove the short-circuit connection. Check *parameter 5-33 Term X30/7 Digi Out (MCB 101)* (VLT® General Purpose I/O MCB 101).

**ALARM 43, Ext. supply**

VLT® Extended Relay Option MCB 113 is mounted without external 24 V DC. Either connect a 24 V DC external supply or specify that no external supply is used via *parameter 14-80 Option Supplied by External 24VDC, [0] No.* A change in *parameter 14-80 Option Supplied by External 24VDC* requires a power cycle.

**ALARM 45, Earth fault 2**

Ground fault.

**Troubleshooting**

- Check for proper grounding and loose connections.
- Check for proper wire size.
- Check the motor cables for short circuits or leakage currents.

**ALARM 46, Power card supply**

The supply on the power card is out of range. Another reason can be a defective heat sink fan.

There are 3 supplies generated by the switch mode supply (SMPS) on the power card:

- 24 V.
- 5 V.
- $\pm 18$  V.

When powered with VLT® 24 V DC Supply MCB 107, only the 24 V and 5 V supplies are monitored. When powered with 3-phase mains voltage, all 3 supplies are monitored.

**Troubleshooting**

- Check for a defective power card.
- Check for a defective control card.
- Check for a defective option card.
- If a 24 V DC supply is used, verify proper supply power.
- Check for a defective heat sink fan.

**WARNING 47, 24 V supply low**

The supply on the power card is out of range.

There are 3 supplies generated by the switch mode supply (SMPS) on the power card:

- 24 V.
- 5 V.
- $\pm 18$  V.

**Troubleshooting**

- Check for a defective power card.

**WARNING 48, 1.8 V supply low**

The 1.8 V DC supply used on the control card is outside of the allowable limits. The supply is measured on the control card.

**Troubleshooting**

- Check for a defective control card.
- If an option card is present, check for overvoltage.

**WARNING 49, Speed limit**

The warning is shown when the speed is outside of the specified range in *parameter 4-11 Motor Speed Low Limit [RPM]* and *parameter 4-13 Motor Speed High Limit [RPM]*. When the speed is below the specified limit in *parameter 1-86 Compressor Min. Speed for Trip [RPM]* (except when starting or stopping), the drive trips.

**ALARM 50, AMA calibration failed**

Contact the Danfoss supplier or Danfoss Service Department.

**ALARM 51, AMA check  $U_{nom}$  and  $I_{nom}$** 

The settings for motor voltage, motor current, and motor power are wrong.

**Troubleshooting**

- Check the settings in *parameters 1-20 to 1-25*.

**ALARM 52, AMA low  $I_{nom}$** 

The motor current is too low.

**Troubleshooting**

- Check the settings in *parameter 1-24 Motor Current*.

**ALARM 53, AMA motor too big**

The motor is too large for the AMA to operate.

**ALARM 54, AMA motor too small**

The motor is too small for the AMA to operate.

**ALARM 55, AMA parameter out of range**

The AMA cannot run because the parameter values of the motor are outside of the acceptable range.

**ALARM 56, AMA interrupted by user**

The AMA is manually interrupted.

**ALARM 57, AMA internal fault**

Try to restart the AMA. Repeated restarts can overheat the motor.

**ALARM 58, AMA Internal fault**

Contact the Danfoss supplier.

**WARNING 59, Current limit**

The current is higher than the value in *parameter 4-18 Current Limit*. Ensure that the motor data in *parameters 1-20 to 1-25* is set correctly. Increase the current limit if necessary. Ensure that the system can operate safely at a higher limit.

**WARNING 60, External interlock**

A digital input signal indicates a fault condition external to the drive. An external interlock has commanded the drive to trip. Clear the external fault condition. To resume normal operation, apply 24 V DC to the terminal programmed for external interlock, and reset the drive.

**WARNING 61, Tracking Error**

An error has been detected between the calculated motor speed and the speed measurement from the feedback device. The function for Warning/Alarm/Disable is set in

*parameter 4-30 Motor Feedback Loss Function*. Error setting is found in *parameter 4-31 Motor Feedback Speed Error*. Allowed error time is found in *parameter 4-32 Motor Feedback Loss Timeout*. During the commissioning process, this function can be useful.

**WARNING 62, Output frequency at maximum limit**

If the output frequency reaches the value set in *parameter 4-19 Max Output Frequency*, the drive issues a warning. The warning ceases when the output drops below the maximum limit. If the drive is unable to limit the frequency, it trips and issues an alarm. The latter may happen in the flux mode if the drive loses control of the motor.

**Troubleshooting**

- Check the application for possible causes.
- Increase the output frequency limit. Ensure that the system can operate safely at a higher output frequency.

**ALARM 63, Mechanical brake low**

The actual motor current has not exceeded the release brake current within the start delay time window.

**WARNING 64, Voltage Limit**

The load and speed combination demands a motor voltage higher than the actual DC-link voltage.

**WARNING/ALARM 65, Control card over temperature**

The cutout temperature of the control card is 85 °C (185 °F).

**Troubleshooting**

- Check that the ambient operating temperature is within the limits.
- Check for clogged filters.
- Check the fan operation.
- Check the control card.

**WARNING 66, Heat sink temperature low**

The drive is too cold to operate. This warning is based on the temperature sensor in the IGBT module. Increase the ambient temperature of the unit. Also, a trickle amount of current can be supplied to the drive whenever the motor is stopped by setting *parameter 2-00 DC Hold/Preheat Current* to 5% and *parameter 1-80 Function at Stop*.

**ALARM 67, Option module configuration has changed**

One or more options have either been added or removed since the last power-down. Check that the configuration change is intentional and reset the unit.

**ALARM 68, Safe Stop activated**

Safe Torque Off (STO) has been activated. To resume normal operation, apply 24 V DC to terminal 37, then send a reset signal (via bus, digital I/O, or by pressing [Reset]).

**ALARM 69, Power card temperature**

The temperature sensor on the power card is either too hot or too cold.

**Troubleshooting**

- Check that the ambient operating temperature is within limits.
- Check for clogged filters.
- Check fan operation.
- Check the power card.

**ALARM 70, Illegal FC configuration**

The control card and power card are incompatible. To check compatibility, contact the Danfoss supplier with the type code from the unit nameplate and the part numbers of the cards.

**WARNING/ALARM 71, PTC 1 Safe Stop**

Safe Torque Off (STO) has been activated from the VLT® PTC Thermistor Card MCB 112 because the motor is too warm. Once the motor cools and the digital input from the MCB 112 is deactivated, normal operation can resume when the MCB 112 applies 24 V DC to terminal 37 again. When the motor is ready for normal operation, a reset signal is sent (via serial communication, digital I/O, or by pressing [Reset] on the LCP). If automatic restart is enabled, the motor can start when the fault is cleared.

**ALARM 72, Dangerous failure**

Safe Torque Off (STO) with trip lock. Unexpected signal levels on safe torque off and digital input from the VLT® PTC Thermistor Card MCB 112.

**WARNING 73, Safe Stop auto restart**

Safe Torque Off (STO) activated. With automatic restart enabled, the motor can start when the fault is cleared.

**ALARM 74, PTC Thermistor**

Alarm related to VLT® PTC Thermistor Card MCB 112. The PTC is not working.

**ALARM 75, Illegal profile sel.**

Do not write the parameter value while the motor is running. Stop the motor before writing the MCO profile to *parameter 8-10 Control Word Profile*.

**WARNING 76, Power unit setup**

The required number of power units does not match the detected number of active power units. When replacing an enclosure size F module, this warning occurs if the power-specific data in the module power card does not match the rest of the drive. If the power card connection is lost, the unit also triggers this warning.

**Troubleshooting**

- Confirm that the spare part and its power card are the correct part number.
- Ensure that the 44-pin cables between the MDCIC and power cards are mounted properly.

**WARNING 77, Reduced power mode**

This warning indicates that the drive is operating in reduced power mode (that is, less than the allowed number of inverter sections). This warning is generated on power cycle when the drive is set to run with fewer inverters and remains on.

**ALARM 78, Tracking error**

The difference between setpoint value and actual value exceeds the value in *parameter 4-35 Tracking Error*.

**Troubleshooting**

- Disable the function or select an alarm/warning in *parameter 4-34 Tracking Error Function*.
- Investigate the mechanics around the load and motor. Check feedback connections from motor encoder to drive.
- Select motor feedback function in *parameter 4-30 Motor Feedback Loss Function*.
- Adjust the tracking error band in *parameter 4-35 Tracking Error* and *parameter 4-37 Tracking Error Ramping*.

**ALARM 79, Illegal power section configuration**

The scaling card is the incorrect part number or not installed. Also, the MK102 connector on the power card could not be installed.

**ALARM 80, Drive initialised to default value**

Parameter settings are initialized to default settings after a manual reset. To clear the alarm, reset the unit.

**ALARM 81, CSIV corrupt**

CSIV file has syntax errors.

**ALARM 82, CSIV parameter error**

CSIV failed to initialize a parameter.

**ALARM 83, Illegal option combination**

The mounted options are incompatible.

**ALARM 84, No safety option**

The safety option was removed without applying a general reset. Reconnect the safety option.

**ALARM 85, Dang fail PB**

PROFIBUS/PROFIsafe error.

**ALARM 88, Option detection**

A change in the option layout is detected. *Parameter 14-89 Option Detection* is set to [0] *Frozen configuration* and the option layout has been changed.

- To apply the change, enable option layout changes in *parameter 14-89 Option Detection*.
- Alternatively, restore the correct option configuration.

**WARNING 89, Mechanical brake sliding**

The hoist brake monitor detects a motor speed exceeding 10 RPM.

**ALARM 90, Feedback monitor**

Check the connection to encoder/resolver option and, if necessary, replace VLT® Encoder Input MCB 102 or VLT® Resolver Input MCB 103.

**ALARM 91, Analog input 54 wrong settings**

Set switch S202 in position OFF (voltage input) when a KTY sensor is connected to analog input terminal 54.

**WARNING 98, Clock fault**

Time is not set or the RTC clock has failed.

**Troubleshooting**

- Reset the clock in *parameter 0-70 Set Date and Time*.

**ALARM 99, Locked rotor**

The rotor is blocked.

**WARNING/ALARM 104, Mixing fan fault**

The fan is not operating. The fan monitor checks that the fan is spinning at power-up or whenever the mixing fan is turned on. The mixing-fan fault can be configured as a warning or an alarm trip in *parameter 14-53 Fan Monitor*.

**Troubleshooting**

- Cycle power to the drive to determine if the warning/alarm returns.

**WARNING/ALARM 122, Mot. rotat. unexp.**

The drive performs a function that requires the motor to be at standstill, for example DC hold for PM motors.

**WARNING 163, ATEX ETR cur.lim.warning**

The drive has run above the characteristic curve for more than 50 s. The warning is activated at 83% and deactivated at 65% of the allowed thermal overload.

**ALARM 164, ATEX ETR cur.lim.alarm**

Operating above the characteristic curve for more than 60 s within a period of 600 s activates the alarm, and the drive trips.

**WARNING 165, ATEX ETR freq.lim.warning**

The drive is running for more than 50 s below the allowed minimum frequency (*parameter 1-98 ATEX ETR interpol. points freq.*).

**ALARM 166, ATEX ETR freq.lim.alarm**

The drive has operated for more than 60 s (in a period of 600 s) below the allowed minimum frequency (*parameter 1-98 ATEX ETR interpol. points freq.*).

**ALARM 244, Heat sink temperature**

The maximum temperature of the heat sink has been exceeded. The temperature fault cannot reset until the temperature drops below a defined heat sink temperature. The trip and reset points are different based on the power size. This alarm is equivalent to *alarm 29, Heat Sink Temp*.

**Troubleshooting**

Check for the following conditions:

- Ambient temperature too high.
- Motor cables too long.
- Incorrect airflow clearance above or below the AC drive.
- Blocked airflow around the unit.
- Damaged heat sink fan.
- Dirty heat sink.

**WARNING 251, New typecode**

The power card or other components are replaced, and the type code has changed.

**ALARM 421, Temperature fault**

A fault caused by the on-board temperature sensor is detected on the fan power card.

**Troubleshooting**

- Check wiring.
- Check sensor.
- Replace fan power card.

**ALARM 423, FPC updating**

The alarm is generated when the fan power card reports it has an invalid PUD. The control card attempts to update the PUD. A subsequent alarm can result depending on the update. See A424 and A425.

**ALARM 424, FPC update successful**

This alarm is generated when the control card has successfully updated the fan power card PUD. The drive must be reset to stop the alarm.

**ALARM 425, FPC update failure**

This alarm is generated after the control card failed to update the fan power card PUD.

**Troubleshooting**

- Check the fan power card wiring.
- Replace fan power card.
- Contact supplier.

**ALARM 426, FPC config**

The number of found fan power cards does not match the number of configured fan power cards. See *parameter group 15-6\* Option Ident* for the number of configured fan power cards.

**Troubleshooting**

- Check fan power card wiring.
- Replace fan power card.

**ALARM 427, FPC supply**

Supply voltage fault (5 V, 24 V, or 48 V) on fan power card is detected.

**Troubleshooting**

- Check fan power card wiring.
- Replace fan power card.

**8.6 Troubleshooting**

Symptom	Possible cause	Test	Solution
Display dark/No function	Missing input power.	See <i>Table 5.5</i> .	Check the input power source.
	Missing or open fuses.	See <i>Open power fuses</i> in this table for possible causes.	Follow the recommendations provided.
	No power to the LCP.	Check the LCP cable for proper connection or damage.	Replace the faulty LCP or connection cable.
	Shortcut on control voltage (terminal 12 or 50) or at control terminals.	Check the 24 V control voltage supply for terminal 12/13 to 20–39, or 10 V supply for terminals 50–55.	Wire the terminals properly.
	Incompatible LCP (LCP from VLT® 2800 or 5000/6000/8000/FCD or FCM).	–	Use only LCP 101 (P/N 130B1124) or LCP 102 (P/N 130B1107).
	Wrong contrast setting.	–	Press [Status] + [▲]/[▼] to adjust the contrast.
	Display (LCP) is defective.	Test using a different LCP.	Replace the faulty LCP or connection cable.
Intermittent display	Internal voltage supply fault or SMPS is defective.	–	Contact supplier.
	Overloaded supply (SMPS) due to improper control wiring or a fault within the AC drive.	To rule out a problem in the control wiring, disconnect all control wiring by removing the terminal blocks.	If the display stays lit, the problem is in the control wiring. Check the wiring for shorts or incorrect connections. If the display continues to cut out, follow the procedure for <i>Display dark/No function</i> .
Motor not running	Service switch open or missing motor connection.	Check if the motor is connected and the connection is not interrupted by a service switch or other device.	Connect the motor and check the service switch.
	No mains power with 24 V DC option card.	If the display is functioning, but there is no output, check that mains power is applied to the AC drive.	Apply mains power.
	LCP Stop.	Check if [Off] has been pressed.	Press [Auto On] or [Hand On] (depending on operating mode).
	Missing start signal (Standby).	Check <i>parameter 5-10 Terminal 18 Digital Input</i> for correct setting for terminal 18. Use default setting.	Apply a valid start signal.
	Motor coast signal active (Coasting).	Check <i>parameter 5-12 Terminal 27 Digital Input</i> for correct setting for terminal 27 (use default setting).	Apply 24 V on terminal 27 or program this terminal to [0] <i>No operation</i> .
	Wrong reference signal source.	Check reference signal: <ul style="list-style-type: none"> <li>• Local.</li> <li>• Remote or bus reference?</li> <li>• Preset reference active?</li> <li>• Terminal connection correct?</li> <li>• Scaling of terminals correct?</li> <li>• Reference signal available?</li> </ul>	Program correct settings. Check <i>parameter 3-13 Reference Site</i> . Set preset reference active in <i>parameter group 3-1* References</i> . Check for correct wiring. Check scaling of terminals. Check reference signal.

Symptom	Possible cause	Test	Solution
Motor running in wrong direction	Motor rotation limit.	Check that <i>parameter 4-10 Motor Speed Direction</i> is programmed correctly.	Program correct settings.
	Active reversing signal.	Check if a reversing command is programmed for the terminal in <i>parameter group 5-1* Digital inputs</i> .	Deactivate reversing signal.
	Wrong motor phase connection.	–	See <i>chapter 6.5.1 Warning - Motor Start</i> .
Motor is not reaching maximum speed	Frequency limits set wrong.	Check output limits in <i>parameter 4-13 Motor Speed High Limit [RPM]</i> , <i>parameter 4-14 Motor Speed High Limit [Hz]</i> , and <i>parameter 4-19 Max Output Frequency</i>	Program correct limits.
	Reference input signal not scaled correctly.	Check reference input signal scaling in <i>parameter group 6-0* Analog I/O mode</i> and <i>parameter group 3-1* References</i> .	Program correct settings.
Motor speed unstable	Possible incorrect parameter settings.	Check the settings of all motor parameters, including all motor compensation settings. For closed-loop operation, check PID settings.	Check settings in <i>parameter group 1-6* Load Depen. Setting</i> . For closed-loop operation, check settings in <i>parameter group 20-0* Feedback</i> .
Motor runs rough	Possible overmagnetization.	Check for incorrect motor settings in all motor parameters.	Check motor settings in <i>parameter groups 1-2* Motor data</i> , <i>1-3* Adv Motor Data</i> , and <i>1-5* Load Indep. Setting</i> .
Motor does not brake	Possible incorrect settings in the brake parameters. Ramp-down times may be too short.	Check brake parameters. Check ramp time settings.	Check <i>parameter groups 2-0* DC Brake</i> and <i>3-0* Reference Limits</i> .
Open power fuses	Phase-to-phase short.	Motor or panel has a short phase-to-phase. Check motor and panel phases for shorts.	Eliminate any shorts detected.
	Motor overload.	Motor is overloaded for the application.	Perform start-up test and verify that motor current is within specifications. If motor current is exceeding the nameplate full load current, the motor can run only with reduced load. Review the specifications for the application.
	Loose connections.	Perform pre-start-up check for loose connections.	Tighten loose connections.
Mains current imbalance greater than 3%	Problem with mains power (see <i>alarm 4, Mains phase loss</i> description).	Rotate input power leads into the 1 position: A to B, B to C, C to A.	If imbalanced leg follows the wire, it is a power problem. Check the mains supply.
	Problem with the AC drive.	Rotate input power leads into the AC drive 1 position: A to B, B to C, C to A.	If the imbalanced leg stays on same input terminal, it is a problem with the AC drive. Contact supplier.
Motor current imbalance greater than 3%	Problem with motor or motor wiring.	Rotate output motor cables 1 position: U to V, V to W, W to U.	If the imbalanced leg follows the wire, the problem is in the motor or motor wiring. Check motor and motor wiring.
	Problem with AC drive.	Rotate output motor cables 1 position: U to V, V to W, W to U.	If the imbalanced leg stays on same output terminal, it is a problem with the unit. Contact supplier.
AC drive acceleration problems	Motor data are entered incorrectly.	If warnings or alarms occur, see <i>chapter 8.5 List of Warnings and Alarms</i> . Check that motor data are entered correctly.	Increase the ramp-up time in <i>parameter 3-41 Ramp 1 Ramp-up Time</i> . Increase current limit in <i>parameter 4-18 Current Limit</i> . Increase torque limit in <i>parameter 4-16 Torque Limit Motor Mode</i> .

Symptom	Possible cause	Test	Solution
AC drive deceleration problems	Motor data are entered incorrectly.	If warnings or alarms occur, see <i>chapter 8.5 List of Warnings and Alarms</i> . Check that motor data are entered correctly.	Increase the ramp-down time in <i>parameter 3-42 Ramp 1 Ramp-down Time</i> . Enable overvoltage control in <i>parameter 2-17 Over-voltage Control</i> .

Table 8.5 Troubleshooting

## 9 Specifications

### 9.1 Electrical Data

#### 9.1.1 Mains Supply 3x380–480 V AC

	N355	N400	N450
<b>Normal overload</b> (Normal overload=110% current during 60 s)	<b>NO</b>	<b>NO</b>	<b>NO</b>
Typical shaft output at 400 V [kW]	355	400	450
Typical shaft output at 460 V [hp]	500	600	600
Typical shaft output at 480 V [kW]	400	500	530
<b>Enclosure size</b>	E1h/E3h	E1h/E3h	E1h/E3h
<b>Output current (3-phase)</b>			
Continuous (at 400 V) [A]	658	745	800
Intermittent (60 s overload) (at 400 V) [A]	724	820	880
Continuous (at 460/480 V) [A]	590	678	730
Intermittent (60 s overload) (at 460/480 V) [A]	649	746	803
Continuous kVA (at 400 V) [kVA]	456	516	554
Continuous kVA (at 460 V) [kVA]	470	540	582
Continuous kVA (at 480 V) [kVA]	511	587	632
<b>Maximum input current</b>			
Continuous (at 400 V) [A]	634	718	771
Continuous (at 460/480 V) [A]	569	653	704
<b>Maximum number and size of cables per phase (E1h)</b>			
- Mains and motor without brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	5x240 (5x500 mcm)	5x240 (5x500 mcm)	5x240 (5x500 mcm)
- Mains and motor with brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	4x240 (4x500 mcm)	4x240 (4x500 mcm)	4x240 (4x500 mcm)
- Brake or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)
<b>Maximum number and size of cables per phase (E3h)</b>			
- Mains and motor [mm <sup>2</sup> (AWG)] <sup>1)</sup>	6x240 (6x500 mcm)	6x240 (6x500 mcm)	6x240 (6x500 mcm)
- Brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)
- Load share or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	4x185 (4x350 mcm)	4x185 (4x350 mcm)	4x185 (4x350 mcm)
Maximum external mains fuses [A] <sup>2)</sup>	800	800	800
Estimated power loss at 400 V [W] <sup>3), 4)</sup>	6928	8036	8783
Estimated power loss at 460 V [W] <sup>3), 4)</sup>	5910	6933	7969
Efficiency <sup>4)</sup>	0.98	0.98	0.98
Output frequency	0–590 Hz	0–590 Hz	0–590 Hz
Heat sink overtemperature trip [°C (°F)]	110 (230)	110 (230)	110 (230)
Control card overtemperature trip [°C (°F)]	80 (176)	80 (176)	80 (176)
Power card overtemperature trip [°C (°F)]	85 (185)	85 (185)	85 (185)
Fan power card overtemperature trip [°C (°F)]	85 (185)	85 (185)	85 (185)
Active in-rush card overtemperature trip [°C (°F)]	85 (185)	85 (185)	85 (185)

Table 9.1 Technical Specifications, Mains Supply 3x380–480 V AC

	<b>N500</b>	<b>N560</b>
<b>Normal overload</b> (Normal overload=110% current during 60 s)	<b>NO</b>	<b>NO</b>
Typical shaft output at 400 V [kW]	500	560
Typical shaft output at 460 V [hp]	650	750
Typical shaft output at 480 V [kW]	560	630
<b>Enclosure size</b>	E2h/E4h	E2h/E4h
<b>Output current (3-phase)</b>		
Continuous (at 400 V) [A]	880	990
Intermittent (60 s overload) (at 400 V) [A]	968	1089
Continuous (at 460/480 V) [A]	780	890
Intermittent (60 s overload) (at 460/480 V) [A]	858	979
Continuous kVA (at 400 V) [kVA]	610	686
Continuous kVA (at 460 V) [kVA]	621	709
Continuous kVA (at 480 V) [kVA]	675	771
<b>Maximum input current</b>		
Continuous (at 400 V) [A]	848	954
Continuous (at 460/480 V) [A]	752	848
<b>Maximum number and size of cables per phase (E2h)</b>		
- Mains and motor without brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	6x240 (6x500 mcm)	6x240 (6x500 mcm)
- Mains and motor with brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	5x240 (5x500 mcm)	5x240 (5x500 mcm)
- Brake or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)	2x185 (2x350 mcm)
<b>Maximum number and size of cables per phase (E4h)</b>		
- Mains and motor [mm <sup>2</sup> (AWG)] <sup>1)</sup>	6x240 (6x500 mcm)	6x240 (6x500 mcm)
- Brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)	2x185 (2x350 mcm)
- Load share or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	4x185 (4x350 mcm)	4x185 (4x350 mcm)
Maximum external mains fuses [A] <sup>2)</sup>	1200	1200
Estimated power loss at 400 V [W] <sup>3), 4)</sup>	9473	11102
Estimated power loss at 460 V [W] <sup>3), 4)</sup>	7809	9236
Efficiency <sup>4)</sup>	0.98	0.98
Output frequency	0–590 Hz	0–590 Hz
Heat sink overtemperature trip [°C (°F)]	110 (230)	100 (212)
Control card overtemperature trip [°C (°F)]	80 (176)	80 (176)
Power card overtemperature trip [°C (°F)]	85 (185)	85 (185)
Fan power card overtemperature trip [°C (°F)]	85 (185)	85 (185)
Active in-rush card overtemperature trip [°C (°F)]	85 (185)	85 (185)

**Table 9.2 Technical Specifications, Mains Supply 3x380–480 V AC**

1) American Wire Gauge.

2) For fuse ratings, see chapter 9.7 Fuses.

3) Typical power loss is at normal conditions and expected to be within ±15% (tolerance relates to variety in voltage and cable conditions.) These values are based on a typical motor efficiency (IE/IE3 border line). Lower efficiency motors add to the power loss in the drive. Applies for dimensioning of drive cooling. If the switching frequency is higher than the default setting, the power losses can increase. LCP and typical control card power consumptions are included. For power loss data according to EN 50598-2, refer to [drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/](http://drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/). Options and customer load can add up to 30 W to the losses, though usually a fully loaded control card and options for slots A and B each add only 4 W.

4) Measured using 5 m (16.4 ft) shielded motor cables at rated load and rated frequency. Efficiency measured at nominal current. For energy efficiency class, see chapter 9.4 Ambient Conditions. For part load losses, see [drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/](http://drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/).

**9.1.2 Mains Supply 3x525–690 V AC**

	N450	N500	N560	N630
<b>Normal overload</b> (Normal overload=110% current during 60 s)	<b>NO</b>	<b>NO</b>	<b>NO</b>	<b>NO</b>
Typical shaft output at 550 V [kW]	355	400	450	500
Typical shaft output at 575 V [hp]	450	500	600	650
Typical shaft output at 690 V [kW]	450	500	560	630
<b>Enclosure size</b>	E1h/E3h	E1h/E3h	E1h/E3h	E1h/E3h
<b>Output current (3-phase)</b>				
Continuous (at 550 V) [A]	470	523	596	630
Intermittent (60 s overload) (at 550 V) [A]	517	575	656	693
Continuous (at 575/690 V) [A]	450	500	570	630
Intermittent (60 s overload) (at 575/690 V) [A]	495	550	627	693
Continuous kVA (at 550 V) [kVA]	448	498	568	600
Continuous kVA (at 575 V) [kVA]	448	498	568	627
Continuous kVA (at 690 V) [kVA]	538	598	681	753
<b>Maximum input current</b>				
Continuous (at 550 V) [A]	453	504	574	607
Continuous (at 575 V) [A]	434	482	549	607
Continuous (at 690 V) [A]	434	482	549	607
<b>Maximum number and size of cables per phase (E1h)</b>				
- Mains and motor without brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	5x240 (5x500 mcm)	5x240 (5x500 mcm)	5x240 (5x500 mcm)	6x240 (6x500 mcm)
- Mains and motor with brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	4x240 (4x500 mcm)	4x240 (4x500 mcm)	4x240 (4x500 mcm)	5x240 (5x500 mcm)
- Brake or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)
<b>Maximum number and size of cables per phase (E3h)</b>				
- Mains and motor [mm <sup>2</sup> (AWG)] <sup>1)</sup>	6x240 (6x500 mcm)	6x240 (6x500 mcm)	6x240 (6x500 mcm)	6x240 (6x500 mcm)
- Brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)	2x185 (2x350 mcm)
- Load share or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	4x185 (4x350 mcm)	4x185 (4x350 mcm)	4x185 (4x350 mcm)	4x185 (4x350 mcm)
Maximum external mains fuses [A] <sup>2)</sup>	800	800	800	800
Estimated power loss at 600 V [W] <sup>3), 4)</sup>	6062	6879	8076	9208
Estimated power loss at 690 V [W] <sup>3), 4)</sup>	5939	6715	7852	8921
Efficiency <sup>4)</sup>	0.98	0.98	0.98	0.98
Output frequency [Hz]	0–590	0–590	0–590	0–590
Heat sink overtemperature trip [°C (°F)]	110 (230)	110 (230)	110 (230)	110 (230)
Control card overtemperature trip [°C (°F)]	80 (176)	80 (176)	80 (176)	80 (176)
Power card overtemperature trip [°C (°F)]	85 (185)	85 (185)	85 (185)	85 (185)
Fan power card overtemperature trip [°C (°F)]	85 (185)	85 (185)	85 (185)	85 (185)
Active in-rush card overtemperature trip [°C (°F)]	85 (185)	85 (185)	85 (185)	85 (185)

**Table 9.3 Technical Specifications, Mains Supply 3x525–690 V AC**

	N710	N800
<b>Normal overload</b> (Normal overload=110% current during 60 s)	<b>NO</b>	<b>NO</b>
Typical shaft output at 550 V [kW]	560	670
Typical shaft output at 575 V [hp]	750	950
Typical shaft output at 690 V [kW]	710	800
<b>Enclosure size</b>	E2h/E4h	E2h/E4h
<b>Output current (3-phase)</b>		
Continuous (at 550 V) [A]	763	889
Intermittent (60 s overload) (at 550 V) [A]	839	978
Continuous (at 575/690 V) [A]	730	850
Intermittent (60 s overload) (at 575/690 V) [A]	803	935
Continuous kVA (at 550 V) [kVA]	727	847
Continuous kVA (at 575 V) [kVA]	727	847
Continuous kVA (at 690 V) [kVA]	872	1016
<b>Maximum input current</b>		
Continuous (at 550 V) [A]	735	857
Continuous (at 575 V) [A]	704	819
Continuous (at 690 V) [A]	704	819
<b>Maximum number and size of cables per phase (E2h)</b>		
- Mains and motor without brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	6x240 (6x500 mcm)	6x240 (6x500 mcm)
- Mains and motor with brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	5x240 (5x500 mcm)	5x240 (5x500 mcm)
- Brake or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)	2x185 (2x350 mcm)
<b>Maximum number and size of cables per phase (E4h)</b>		
- Mains and motor [mm <sup>2</sup> (AWG)] <sup>1)</sup>	6x240 (6x500 mcm)	6x240 (6x500 mcm)
- Brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)	2x185 (2x350 mcm)
- Load share or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	4x185 (4x350 mcm)	4x185 (4x350 mcm)
Maximum external mains fuses [A] <sup>2)</sup>	1200	1200
Estimated power loss at 600 V [W] <sup>3), 4)</sup>	10346	12723
Estimated power loss at 690 V [W] <sup>3), 4)</sup>	10066	12321
Efficiency <sup>4)</sup>	0.98	0.98
Output frequency [Hz]	0–590	0–590
Heat sink overtemperature trip [°C (°F)]	110 (230)	110 (230)
Control card overtemperature trip [°C (°F)]	80 (176)	80 (176)
Power card overtemperature trip [°C (°F)]	85 (185)	85 (185)
Fan power card overtemperature trip [°C (°F)]	85 (185)	85 (185)
Active in-rush card overtemperature trip [°C (°F)]	85 (185)	85 (185)

**Table 9.4 Technical Specifications, Mains Supply 3x525–690 V AC**

1) American Wire Gauge.

2) For fuse ratings, see chapter 9.7 Fuses.

3) Typical power loss is at normal conditions and expected to be within ±15% (tolerance relates to variety in voltage and cable conditions.) These values are based on a typical motor efficiency (IE/IE3 border line). Lower efficiency motors add to the power loss in the drive. Applies for dimensioning of drive cooling. If the switching frequency is higher than the default setting, the power losses can increase. LCP and typical control card power consumptions are included. For power loss data according to EN 50598-2, refer to [drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/](http://drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/). Options and customer load can add up to 30 W to the losses, though usually a fully loaded control card and options for slots A and B each add only 4 W.

4) Measured using 5 m shielded motor cables at rated load and rated frequency. Efficiency measured at nominal current. For energy efficiency class, see chapter 9.4 Ambient Conditions. For part load losses, see [drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/](http://drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/).

## 9.2 Mains Supply

Mains supply (L1, L2, L3)

Supply voltage	380–500 V ±10%, 525–690 V ±10%
----------------	--------------------------------

*Mains voltage low/mains voltage drop-out:*

*During low mains voltage or a mains drop-out, the drive continues until the DC-link voltage drops below the minimum stop level, which corresponds typically to 15% below the lowest rated supply voltage of the drive. Power-up and full torque cannot be expected at mains voltage lower than 10% below the lowest rated supply voltage of the drive.*

Supply frequency	50/60 Hz ±5%
------------------	--------------

Maximum imbalance temporary between mains phases	3.0% of rated supply voltage <sup>1)</sup>
--	--

True power factor ( $\lambda$ )	≥0.9 nominal at rated load
---------------------------------	----------------------------

Displacement power factor ( $\cos \Phi$ ) near unity	(>0.98)
--	---------

Switching on input supply L1, L2, L3 (power-ups)	Maximum 1 time/2 minute
--	-------------------------

Environment according to EN60664-1	Overvoltage category III/pollution degree 2
------------------------------------	---

*The drive is suitable for use on a circuit capable of delivering up to 100 kA short circuit current rating (SCCR) at 480/600 V.*

*1) Calculations based on UL/IEC61800-3.*

## 9.3 Motor Output and Motor Data

Motor output (U, V, W)

Output voltage	0–100% of supply voltage
----------------	--------------------------

Output frequency	0–590 Hz <sup>1)</sup>
------------------	------------------------

Output frequency in flux mode	0–300 Hz
-------------------------------	----------

Switching on output	Unlimited
---------------------	-----------

Ramp times	0.01–3600 s
------------	-------------

*1) Dependent on voltage and power.*

Torque characteristics

Starting torque (constant torque)	Maximum 150% for 60 s <sup>1), 2)</sup>
-----------------------------------	---

Overload torque (constant torque)	Maximum 150% for 60 s <sup>1), 2)</sup>
-----------------------------------	---

*1) Percentage relates to the nominal current of the drive.*

*2) Once every 10 minutes.*

## 9.4 Ambient Conditions

Environment

E1h/E2h enclosure	IP21/Type 1, IP54/Type 12
-------------------	---------------------------

E3h/E4h enclosure	IP20/Chassis
-------------------	--------------

Vibration test (standard/ruggedized)	0.7 g/1.0 g
--------------------------------------	-------------

Relative humidity	5%-95% (IEC 721-3-3; Class 3K3 (non-condensing) during operation)
-------------------	---

Aggressive environment (IEC 60068-2-43) H <sub>2</sub> S test	Class Kd
---	----------

Aggressive gases (IEC 60721-3-3)	Class 3C3
----------------------------------	-----------

Test method according to IEC 60068-2-43	H2S (10 days)
---	---------------

Ambient temperature (at SFAVM switching mode)

- with derating	Maximum 55 °C (maximum 131 °F) <sup>1)</sup>
-----------------	--

- with full output power of typical EFF2 motors (up to 90% output current)	Maximum 50 °C (maximum 122 °F) <sup>1)</sup>
--	--

- at full continuous FC output current	Maximum 45 °C (maximum 113 °F) <sup>1)</sup>
--	--

Minimum ambient temperature during full-scale operation	0 °C (32 °F)
---	--------------

Minimum ambient temperature at reduced performance	-10 °C (14 °F)
--	----------------

Temperature during storage/transport	-25 to +65/70 °C (13 to 149/158 °F)
--------------------------------------	-------------------------------------

Maximum altitude above sea level without derating	1000 m (3281 ft)
---	------------------

Maximum altitude above sea level with derating 3000 m (9842 ft)

1) For more information on derating, refer to the product-specific design guide.

EMC standards, Emission EN 61800-3

EMC standards, Immunity EN 61800-3

Energy efficiency class<sup>2)</sup> IE2

2) Determined according to EN 50598-2 at:

- Rated load.
- 90% rated frequency.
- Switching frequency factory setting.
- Switching pattern factory setting.

## 9.5 Cable Specifications

Cable lengths and cross-sections for control cables<sup>1)</sup>

Maximum motor cable length, shielded/armored 150 m (492 ft)

Maximum motor cable length, unshielded/unarmored 300 m (984 ft)

Maximum cross-section to motor, mains, load sharing, and brake See chapter 9.1 Electrical Data

Maximum cross-section to control terminals, rigid wire 1.5 mm<sup>2</sup>/16 AWG (2x0.75 mm<sup>2</sup>)

Maximum cross-section to control terminals, flexible cable 1 mm<sup>2</sup>/18 AWG

Maximum cross-section to control terminals, cable with enclosed core 0.5 mm<sup>2</sup>/20 AWG

Minimum cross-section to control terminals. 0.25 mm<sup>2</sup>/23 AWG

1) For power cables, see electrical tables in chapter 9.1 Electrical Data.

## 9.6 Control Input/Output and Control Data

Digital inputs

Programmable digital inputs 4 (6)

Terminal number 18, 19, 27<sup>1)</sup>, 29<sup>1)</sup>, 32, 33

Logic PNP or NPN

Voltage level 0–24 V DC

Voltage level, logic 0 PNP <5 V DC

Voltage level, logic 1 PNP >10 V DC

Voltage level, logic 0 NPN >19 V DC

Voltage level, logic 1 NPN <14 V DC

Maximum voltage on input 28 V DC

Input resistance, R<sub>i</sub> Approximately 4 kΩ

All digital inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

1) Terminals 27 and 29 can also be programmed as outputs.

Analog inputs

Number of analog inputs 2

Terminal number 53, 54

Modes Voltage or current

Mode select Switches A53 and A54

Voltage mode Switch A53/A54=(U)

Voltage level -10 V to +10 V (scaleable)

Input resistance, R<sub>i</sub> Approximately 10 kΩ

Maximum voltage ±20 V


Current mode Switch A53/A54=(I)

Current level 0/4 to 20 mA (scaleable)

Input resistance, R<sub>i</sub> Approximately 200 Ω

Maximum current	30 mA
Resolution for analog inputs	10 bit (+ sign)
Accuracy of analog inputs	Maximum error 0.5% of full scale
Bandwidth	100 Hz

The analog inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

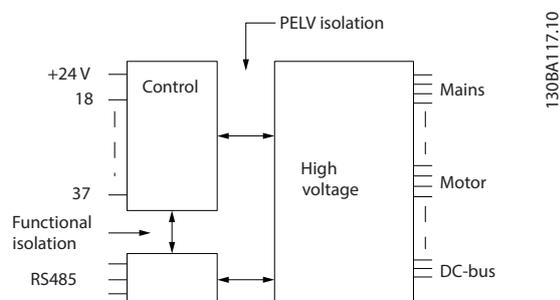

**Illustration 9.1** PELV Isolation

#### Pulse inputs

Programmable pulse inputs	2
Terminal number pulse	29, 33
Maximum frequency at terminal 29, 33	110 kHz (push-pull driven)
Maximum frequency at terminal 29, 33	5 kHz (open collector)
Minimum frequency at terminal 29, 33	4 Hz
Voltage level	See <i>Digital Inputs</i> in chapter 9.6 Control Input/Output and Control Data
Maximum voltage on input	28 V DC
Input resistance, $R_i$	Approximately 4 k $\Omega$
Pulse input accuracy (0.1–1 kHz)	Maximum error: 0.1% of full scale

#### Analog output

Number of programmable analog outputs	1
Terminal number	42
Current range at analog output	0/4-20 mA
Maximum resistor load to common at analog output	500 $\Omega$
Accuracy on analog output	Maximum error: 0.8% of full scale
Resolution on analog output	8 bit

The analog output is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

#### Control card, RS485 serial communication

Terminal number	68 (P, TX+, RX+), 69 (N, TX-, RX-)
Terminal number 61	Common for terminals 68 and 69

The RS485 serial communication circuit is functionally separated from other central circuits and galvanically isolated from the supply voltage (PELV).

#### Digital output

Programmable digital/pulse outputs	2
Terminal number	27, 29 <sup>1)</sup>
Voltage level at digital/frequency output	0–24 V
Maximum output current (sink or source)	40 mA
Maximum load at frequency output	1 k $\Omega$
Maximum capacitive load at frequency output	10 nF
Minimum output frequency at frequency output	0 Hz
Maximum output frequency at frequency output	32 kHz
Accuracy of frequency output	Maximum error: 0.1% of full scale

Resolution of frequency outputs 12 bit

1) Terminals 27 and 29 can also be programmed as inputs.

The digital output is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

Control card, 24 V DC output

Terminal number	12, 13
Maximum load	200 mA

The 24 V DC supply is galvanically isolated from the supply voltage (PELV), but has the same potential as the analog and digital inputs and outputs.

Relay outputs

Programmable relay outputs	2
Maximum cross-section to relay terminals	2.5 mm <sup>2</sup> (12 AWG)
Minimum cross-section to relay terminals	0.2 mm <sup>2</sup> (30 AWG)
Length of stripped wire	8 mm (0.3 in)
<b>Relay 01 terminal number</b>	1–3 (break), 1–2 (make)
Maximum terminal load (AC-1) <sup>1)</sup> on 1–2 (NO) (Resistive load) <sup>2), 3)</sup>	400 V AC, 2 A
Maximum terminal load (AC-15) <sup>1)</sup> on 1–2 (NO) (Inductive load @ cosφ 0.4)	240 V AC, 0.2 A
Maximum terminal load (DC-1) <sup>1)</sup> on 1–2 (NO) (Resistive load)	80 V DC, 2 A
Maximum terminal load (DC-13) <sup>1)</sup> on 1–2 (NO) (Inductive load)	24 V DC, 0.1 A
Maximum terminal load (AC-1) <sup>1)</sup> on 1–3 (NC) (Resistive load)	240 V AC, 2 A
Maximum terminal load (AC-15) <sup>1)</sup> on 1–3 (NC) (Inductive load @ cosφ 0.4)	240 V AC, 0.2 A
Maximum terminal load (DC-1) <sup>1)</sup> on 1–3 (NC) (Resistive load)	50 V DC, 2 A
Maximum terminal load (DC-13) <sup>1)</sup> on 1–3 (NC) (Inductive load)	24 V DC, 0.1 A
Minimum terminal load on 1–3 (NC), 1–2 (NO)	24 V DC 10 mA, 24 V AC 2 mA
Environment according to EN 60664-1	Overvoltage category III/pollution degree 2
<b>Relay 02 terminal number</b>	4–6 (break), 4–5 (make)
Maximum terminal load (AC-1) <sup>1)</sup> on 4–5 (NO) (Resistive load) <sup>2), 3)</sup>	400 V AC, 2 A
Maximum terminal load (AC-15) <sup>1)</sup> on 4–5 (NO) (Inductive load @ cosφ 0.4)	240 V AC, 0.2 A
Maximum terminal load (DC-1) <sup>1)</sup> on 4–5 (NO) (Resistive load)	80 V DC, 2 A
Maximum terminal load (DC-13) <sup>1)</sup> on 4–5 (NO) (Inductive load)	24 V DC, 0.1 A
Maximum terminal load (AC-1) <sup>1)</sup> on 4–6 (NC) (Resistive load)	240 V AC, 2 A
Maximum terminal load (AC-15) <sup>1)</sup> on 4–6 (NC) (Inductive load @ cosφ 0.4)	240 V AC, 0.2 A
Maximum terminal load (DC-1) <sup>1)</sup> on 4–6 (NC) (Resistive load)	50 V DC, 2 A
Maximum terminal load (DC-13) <sup>1)</sup> on 4–6 (NC) (Inductive load)	24 V DC, 0.1 A
Minimum terminal load on 4–6 (NC), 4–5 (NO)	24 V DC 10 mA, 24 V AC 2 mA
Environment according to EN 60664-1	Overvoltage category III/pollution degree 2

1) IEC 60947 part 4 and 5.

The relay contacts are galvanically isolated from the rest of the circuit by reinforced isolation (PELV).

2) Overvoltage Category II.

3) UL applications 300 V AC 2 A.

Control card, +10 V DC output

Terminal number	50
Output voltage	10.5 V ±0.5 V
Maximum load	25 mA

The 10 V DC supply is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

Control characteristics

Resolution of output frequency at 0–1000 Hz	±0.003 Hz
System response time (terminals 18, 19, 27, 29, 32, 33)	≤2 m/s
Speed control range (open loop)	1:100 of synchronous speed

Speed accuracy (open loop) 30–4000 RPM: Maximum error of  $\pm 8$  RPM

All control characteristics are based on a 4-pole asynchronous motor.

Control card performance

Scan interval 5 M/S

Control card, USB serial communication

USB standard 1.1 (full speed)

USB plug USB type B device plug

**NOTICE**

Connection to PC is carried out via a standard host/device USB cable. The USB connection is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals. The USB connection is not galvanically isolated from ground. Use only isolated laptop/PC as connection to the USB connector on the drive or an isolated USB cable/converter.

9.7 Fuses

Fuses ensure that possible damage to the drive is limited to damages inside the unit. To ensure compliance with EN 50178, use identical Bussmann fuses as replacements. Refer to *Table 9.5*.

**NOTICE**

Use of fuses on the supply side is mandatory for IEC 60364 (CE) and NEC 2009 (UL) compliant installations.

Input voltage (V)	Bussmann part number
380–500	170M7309
525–690	170M7342

Table 9.5 Fuse Options

The fuses listed in *Table 9.5* are suitable for use on a circuit capable of delivering 100000 A<sub>rms</sub> (symmetrical), depending on the drive voltage rating. With the proper fusing, the drive short-circuit current rating (SCCR) is 100000 A<sub>rms</sub>. E1h and E2h drives are supplied with internal drive fusing to meet the 100 kA SCCR. E3h and E4h drives must be fitted with Type aR fuses to meet the 100 kA SCCR.

**NOTICE**

**DISCONNECT SWITCH**

All units ordered and supplied with a factory-installed disconnect switch require Class L branch circuit fusing to meet the 100 kA SCCR for the drive. If a circuit breaker is used, the SCCR rating is 42 kA. The specific Class L fuse is determined by the input voltage and power rating of the drive. The input voltage and power rating is found on the product nameplate. See *chapter 4.1 Items Supplied*.

Input voltage (V)	Power rating (kW)	Short circuit rating (A)	Required protection
380–480	355–450	42000	Circuit breaker
		100000	Class L fuse, 800 A
380–480	500–560	42000	Circuit breaker
		100000	Class L fuse, 1200 A
525–690	450–630	42000	Circuit breaker
		10000	Class L fuse, 800 A
525–690	710–800	42000	Circuit breaker
		100000	Class L fuse, 1200 A

9.8 Enclosure Dimensions

9.8.1 E1h Exterior Dimensions


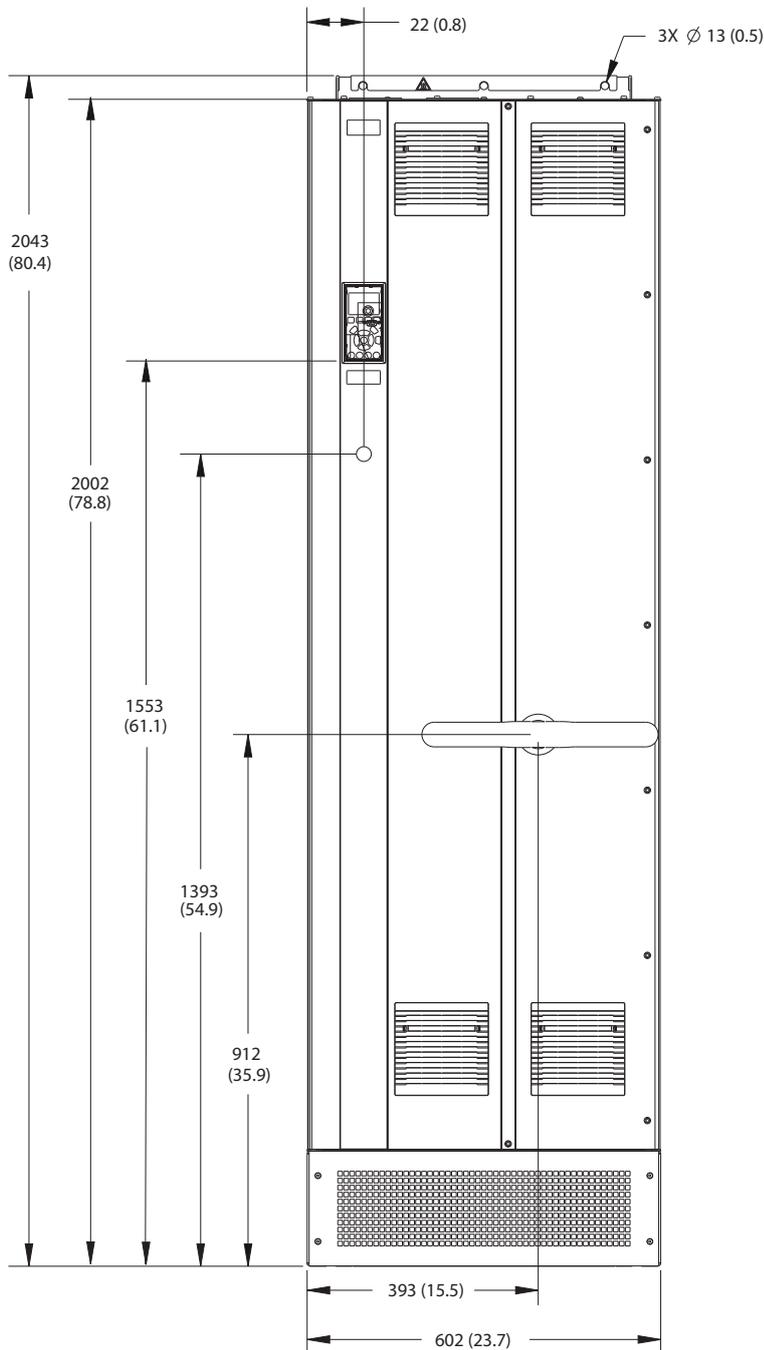



Illustration 9.2 Front View of E1h

1308F648.10

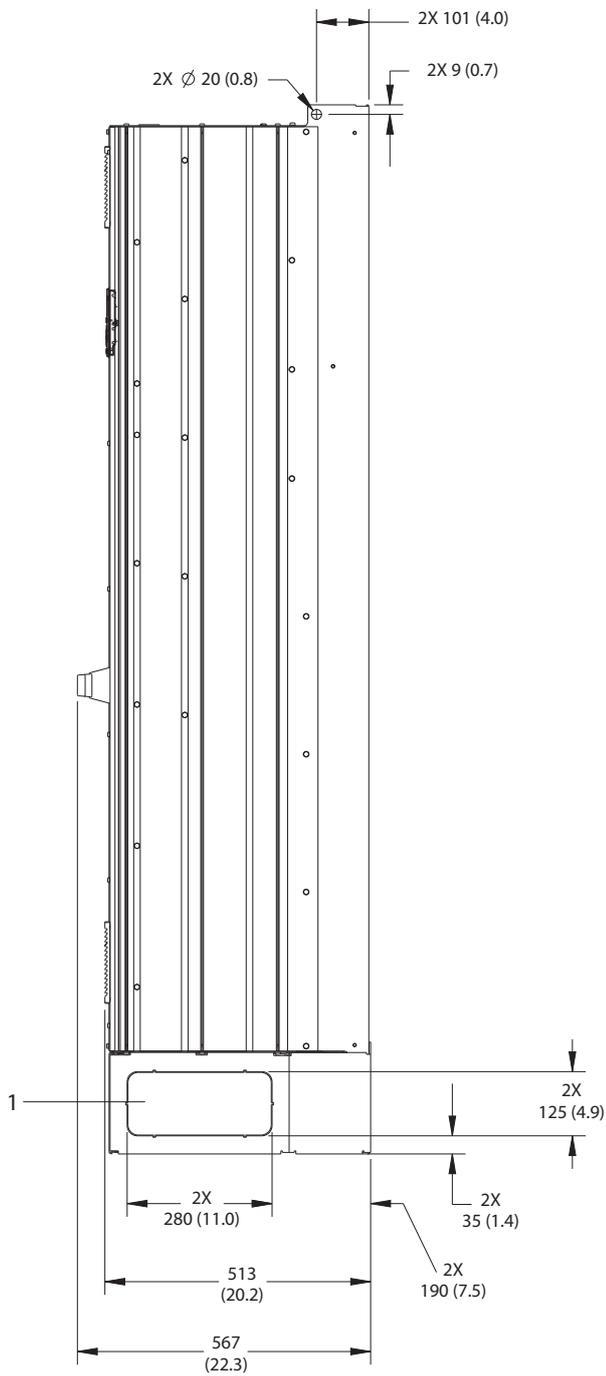

1	Knockout panel
---	----------------

Illustration 9.3 Side View of E1h


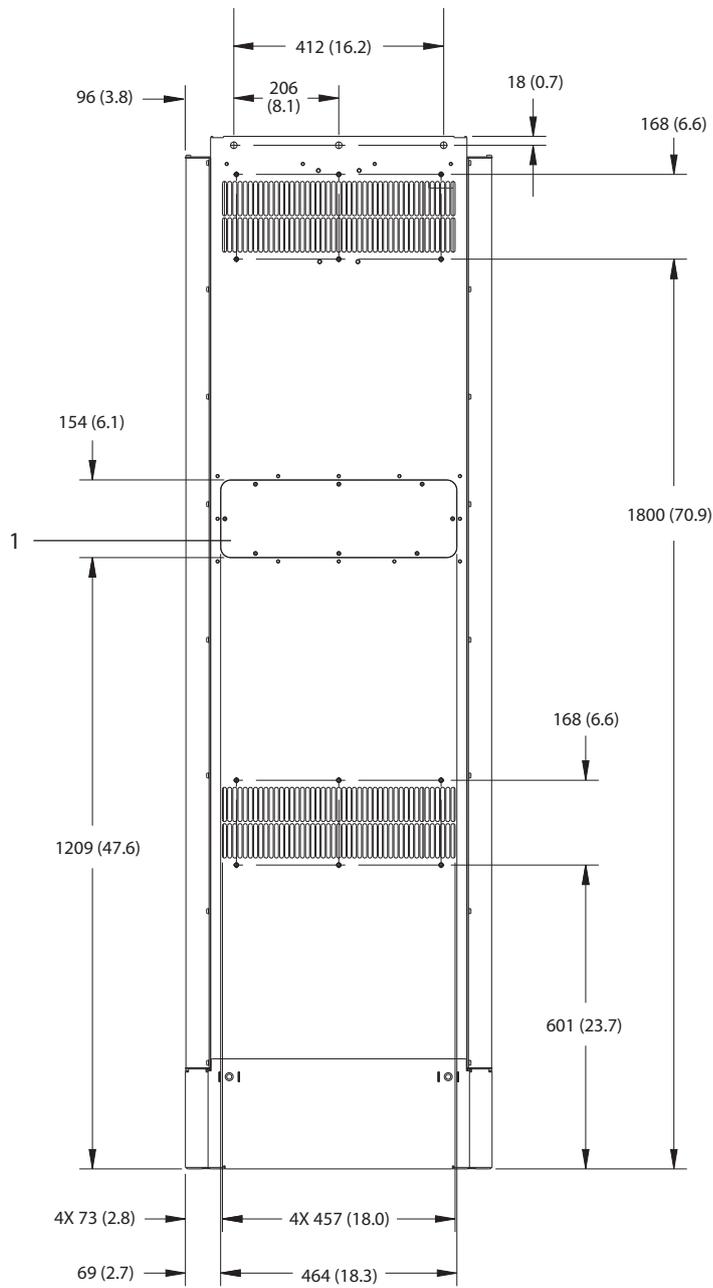


1	Heat sink access panel (optional)
---	-----------------------------------

Illustration 9.4 Back View of E1h

9


130BF651.10

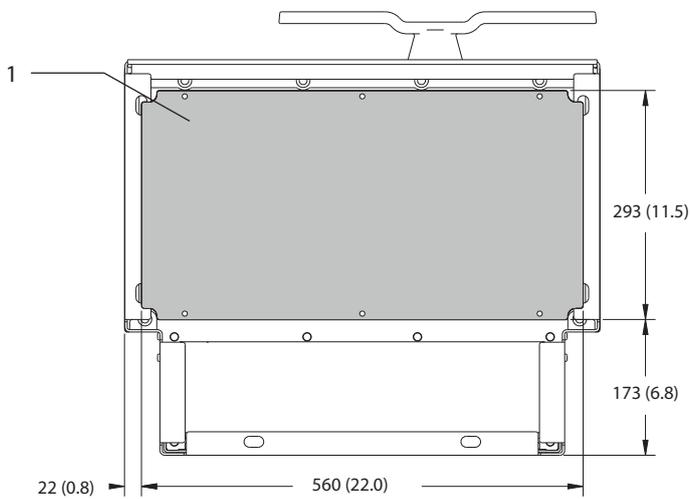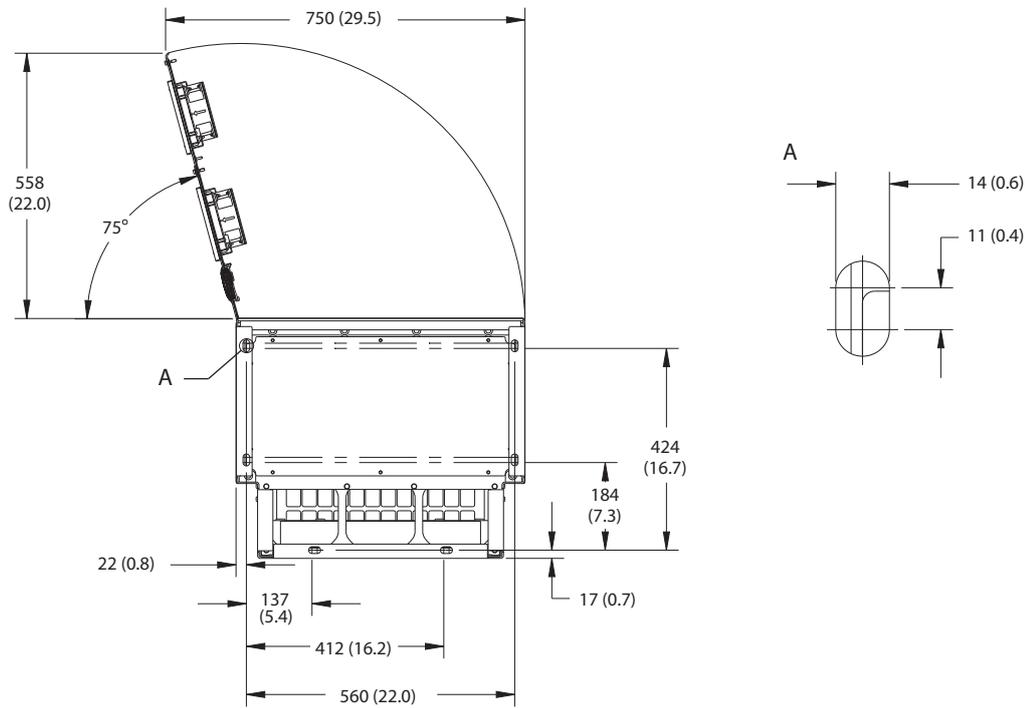

1	Gland plate
---	-------------

Illustration 9.5 Door Clearance and Gland Plate Dimensions for E1h

9.8.2 E2h Exterior Dimensions

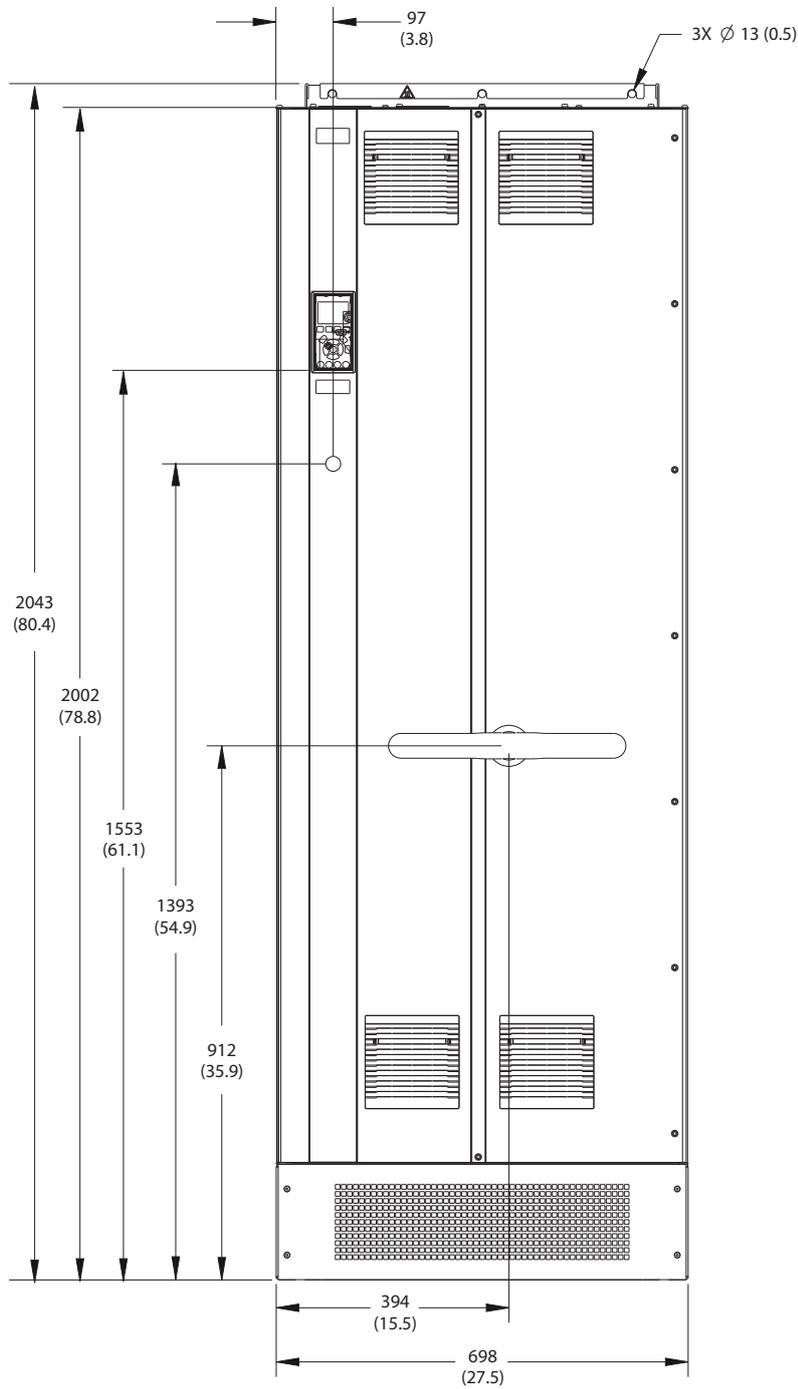


130BF654.10

9


Illustration 9.6 Front View of E2h

130BF653.10

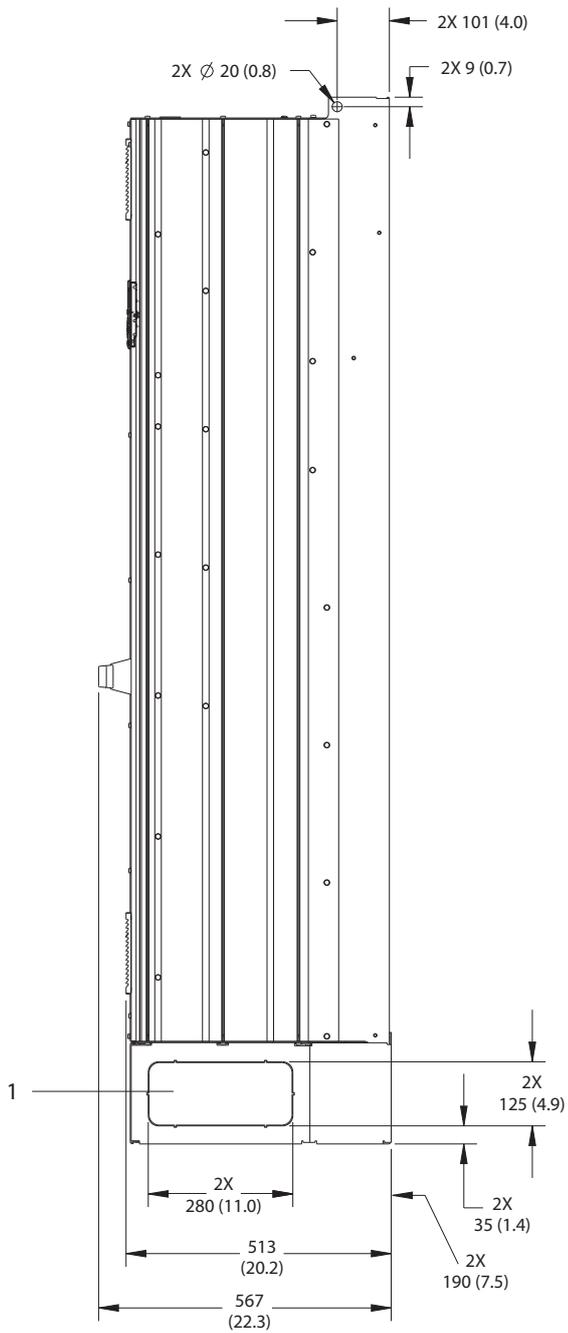

1	Knockout panel
---	----------------

Illustration 9.7 Side View of E2h


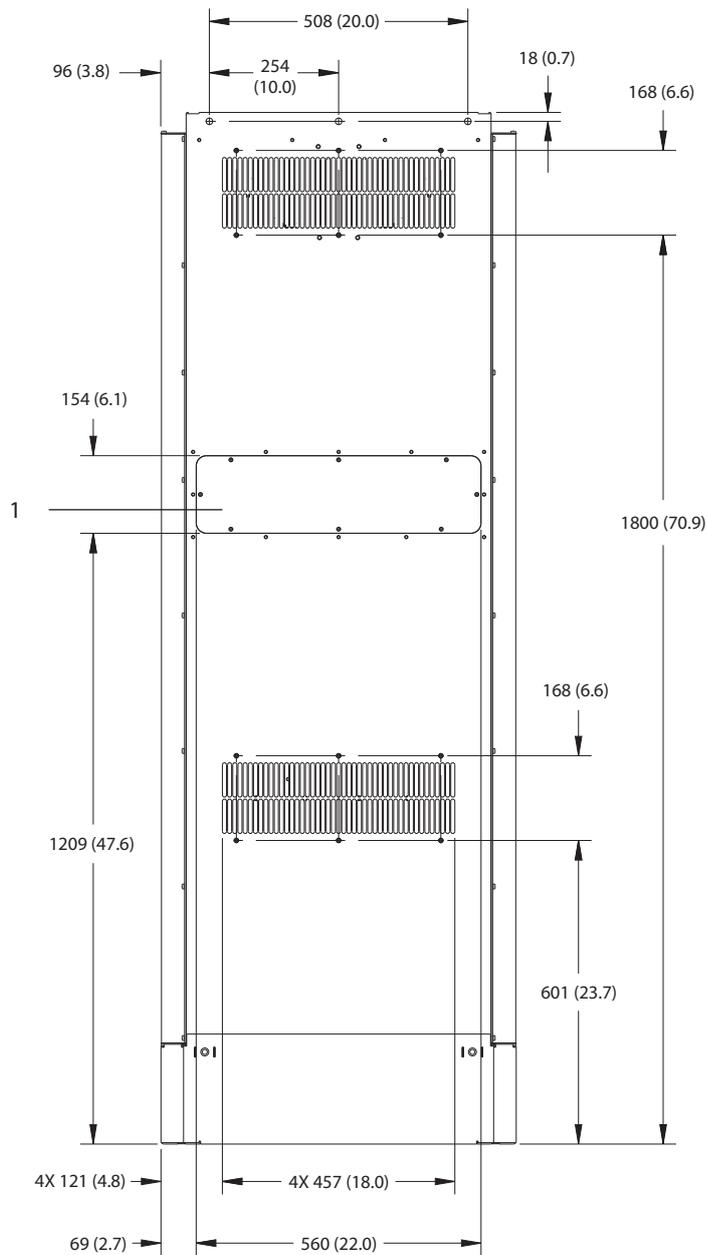


1	Heat sink access panel (optional)
---	-----------------------------------

Illustration 9.8 Back View of E2h

9


130BF652.10

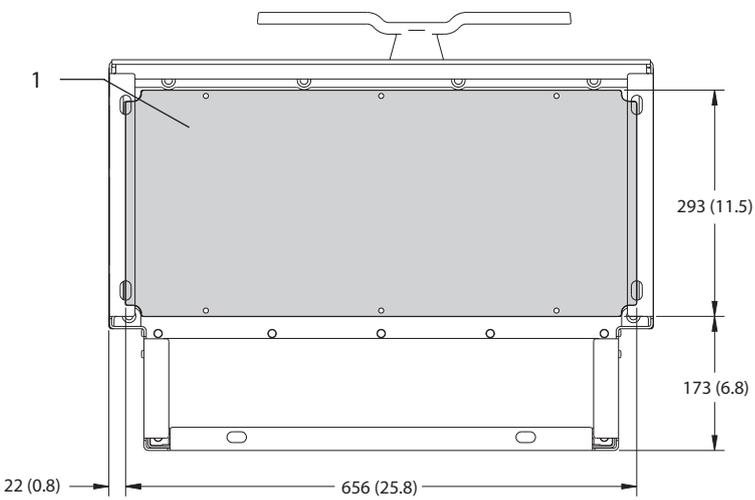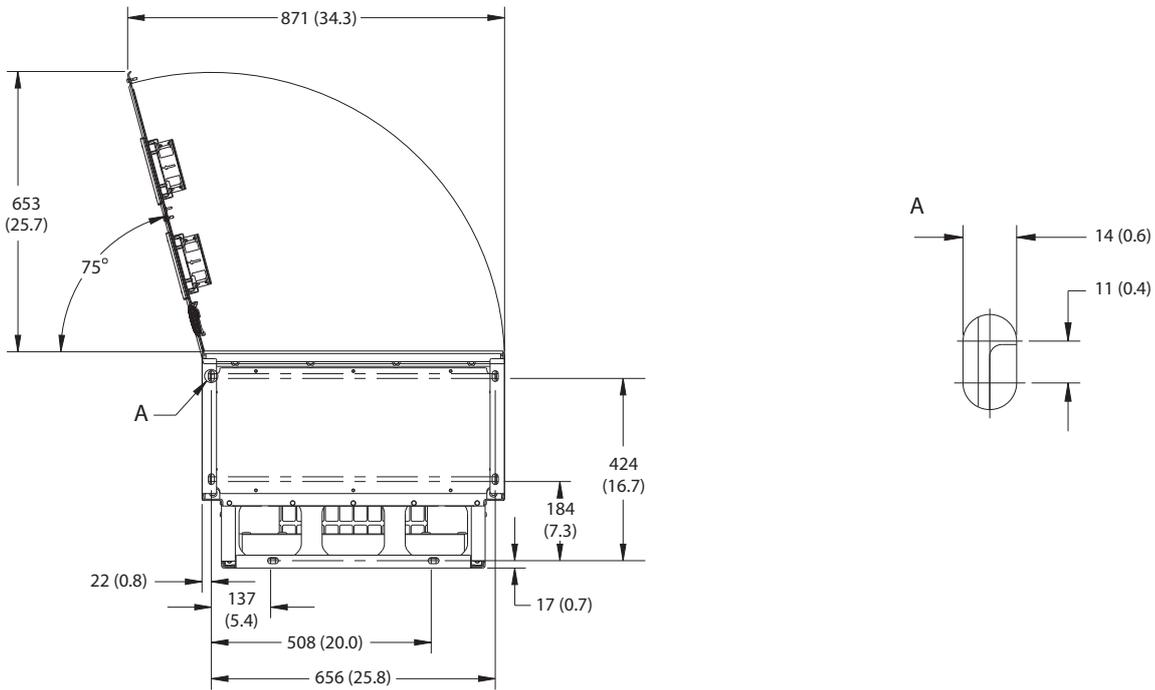

1	Gland plate
---	-------------

Illustration 9.9 Door Clearance and Gland Plate Dimensions for E2h

9.8.3 E3h Exterior Dimensions

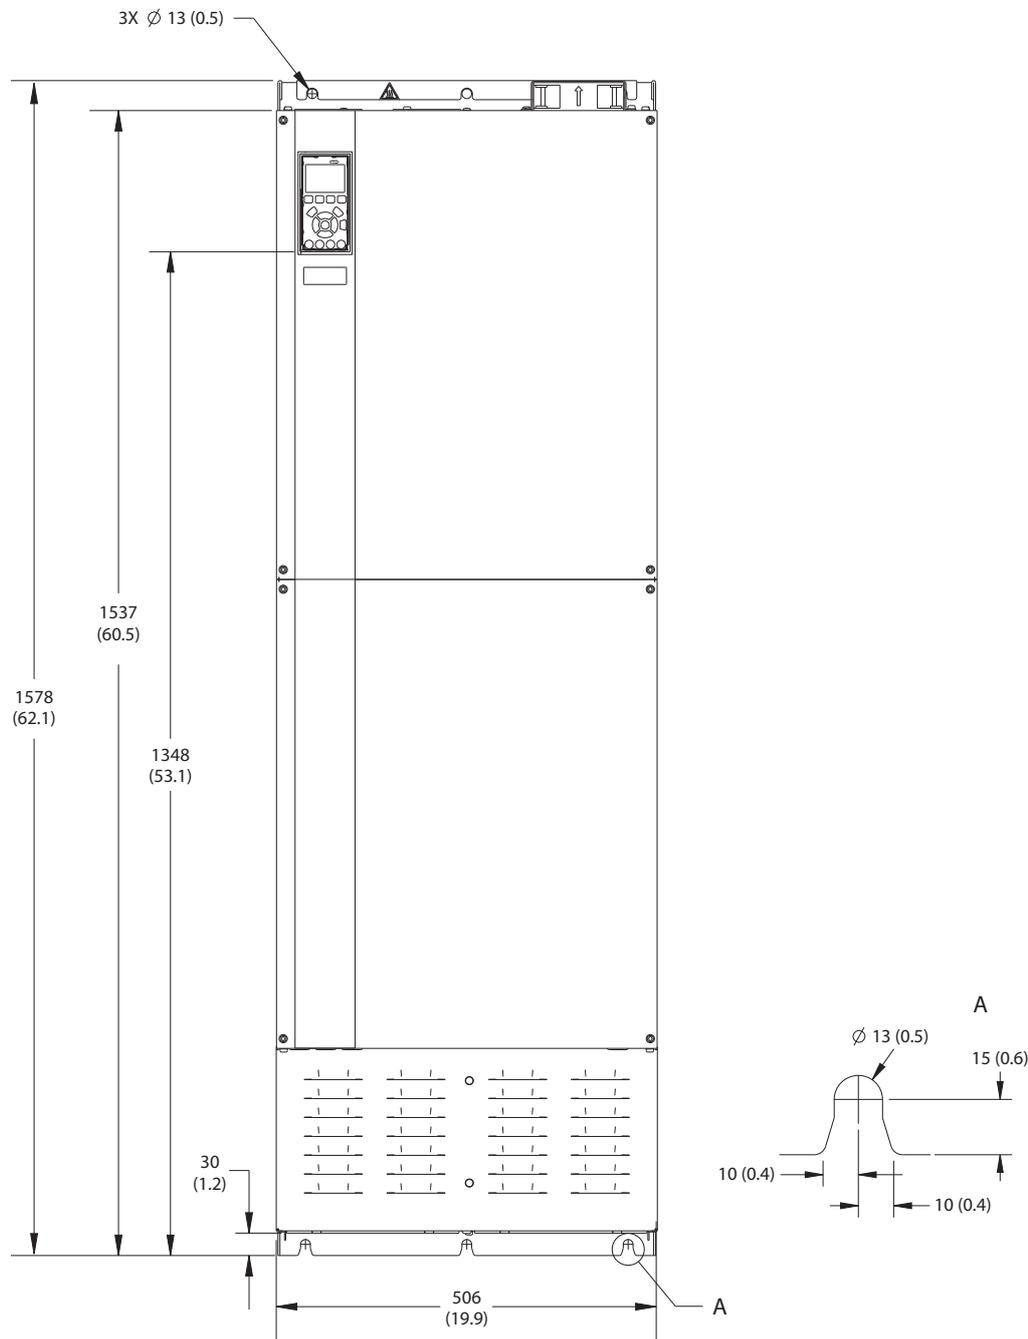

130BF656.10

Illustration 9.10 Front View of E3h


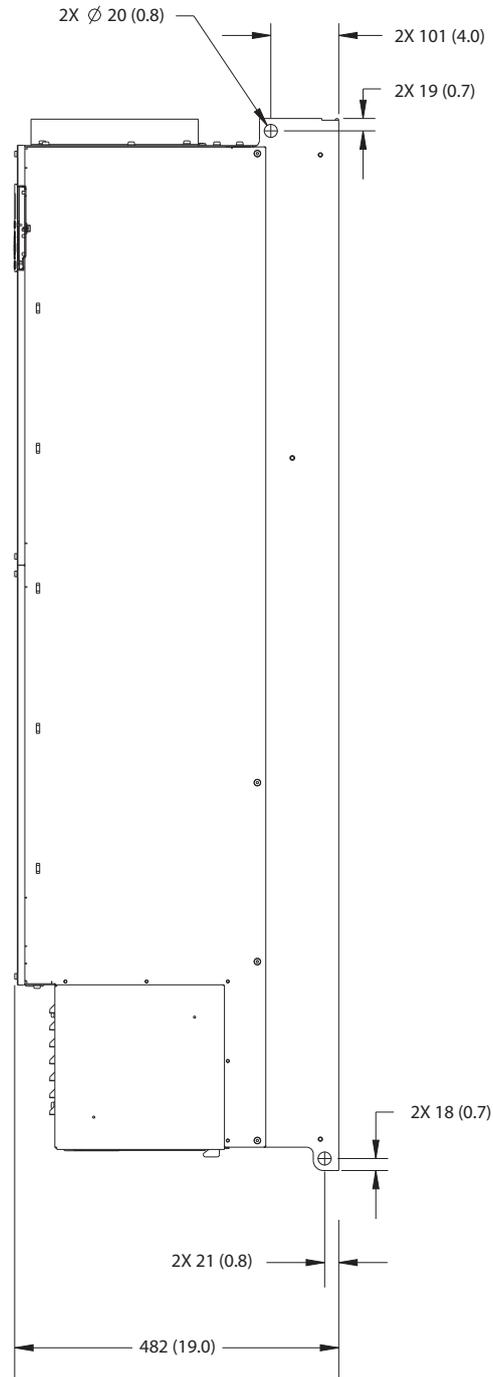




Illustration 9.11 Side View of E3h

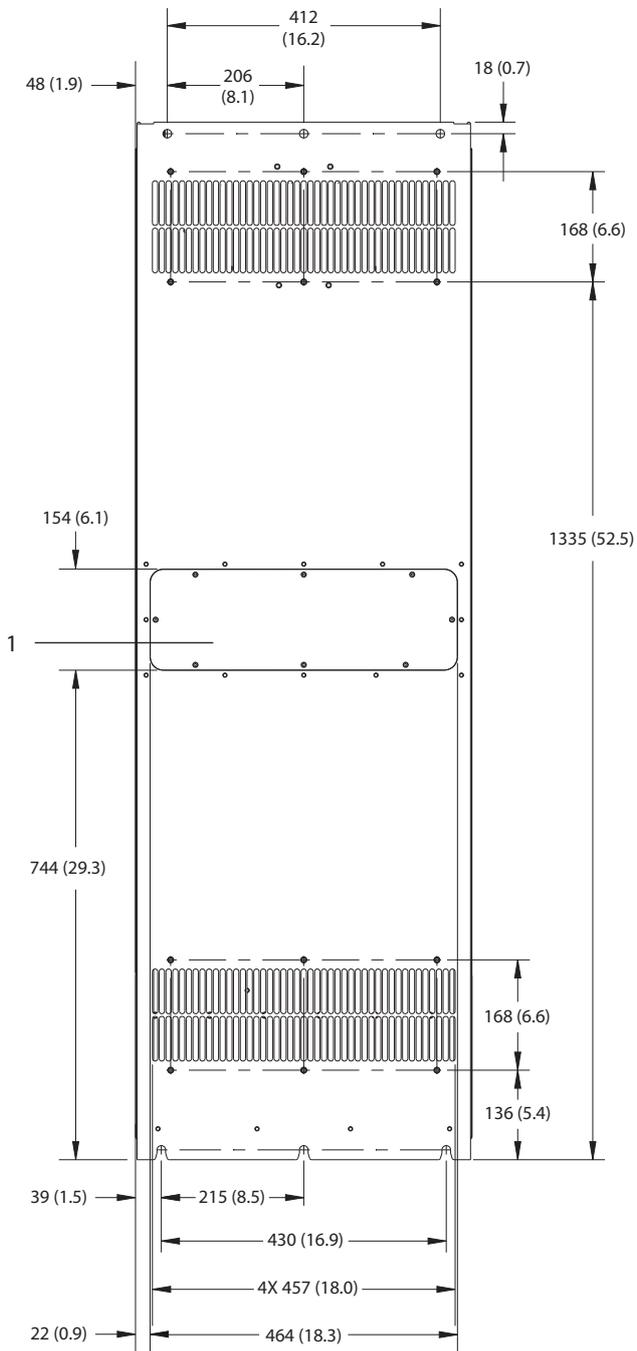

1	Heat sink access panel (optional)
---	-----------------------------------

Illustration 9.12 Back View of E3h


130BF659.10

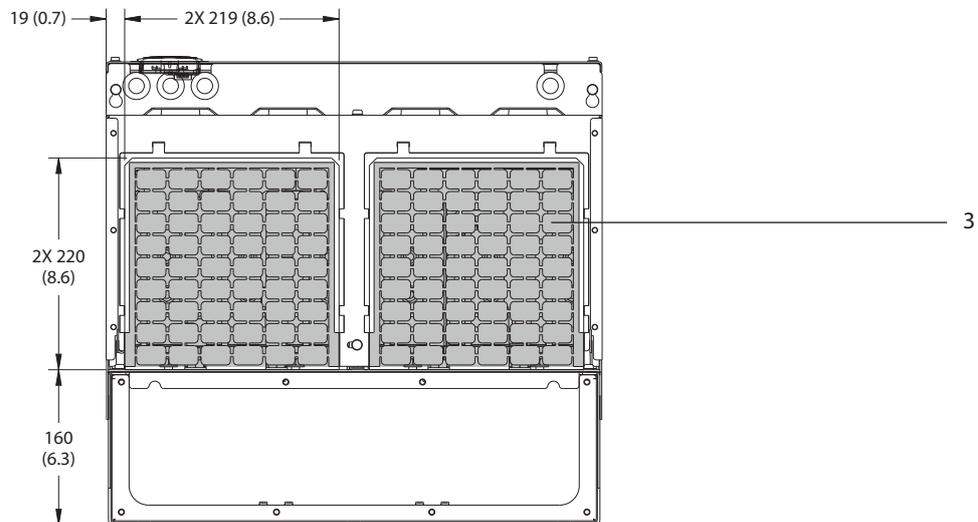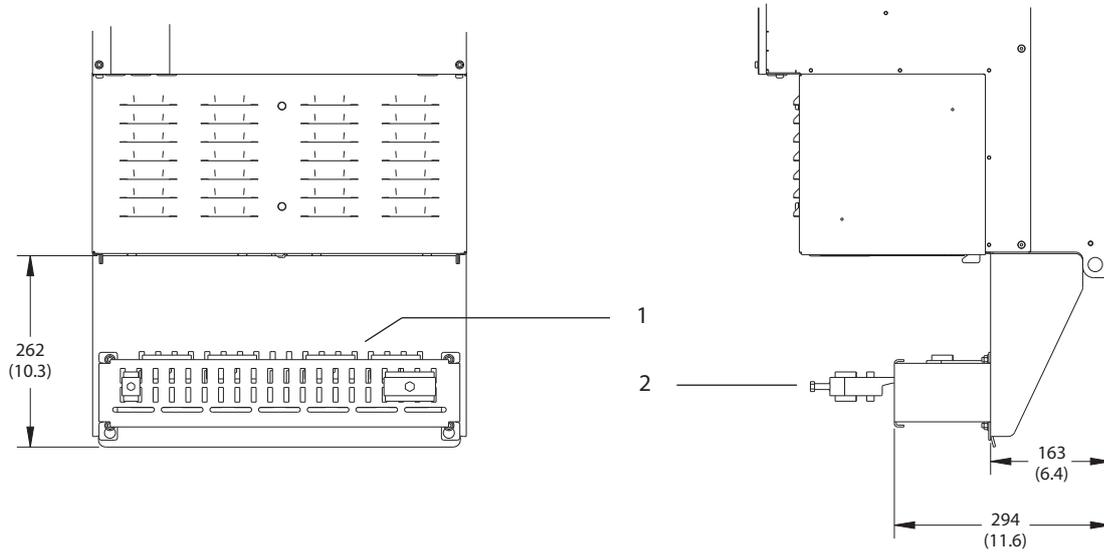

1	RFI shield termination (standard with RFI option)
2	Cable/EMC clamp
3	Gland plate

Illustration 9.13 RFI Shield Termination and Gland Plate Dimensions for E3h

9.8.4 E4h Exterior Dimensions

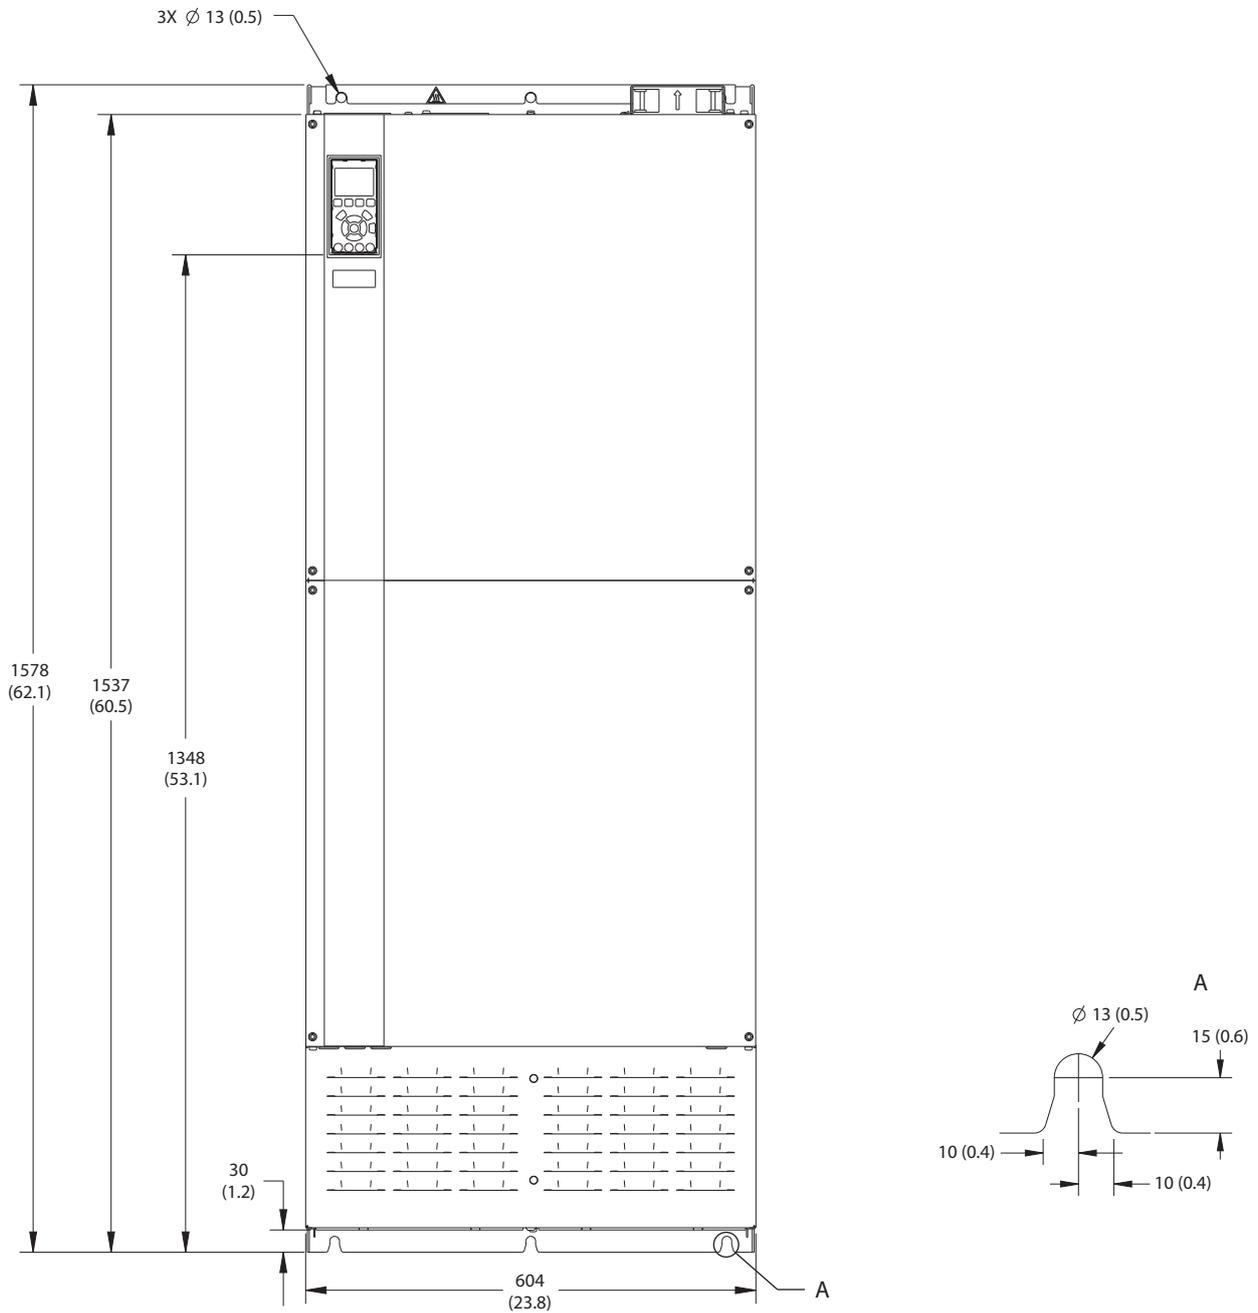

130BF664.10

Illustration 9.14 Front View of E4h

9

1308F666.10


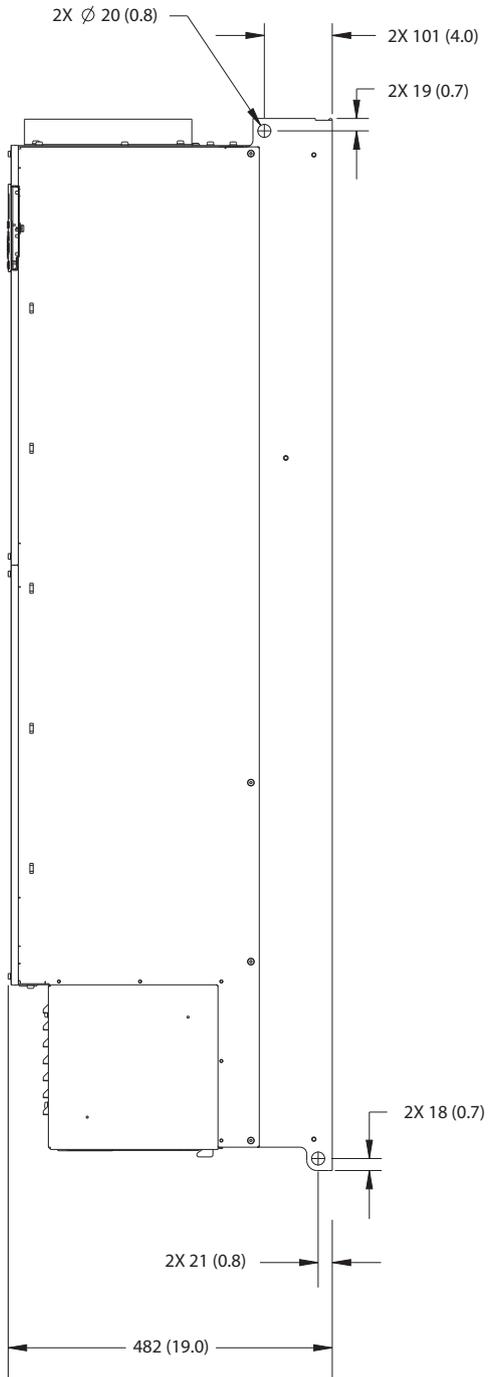




Illustration 9.15 Side View of E4h

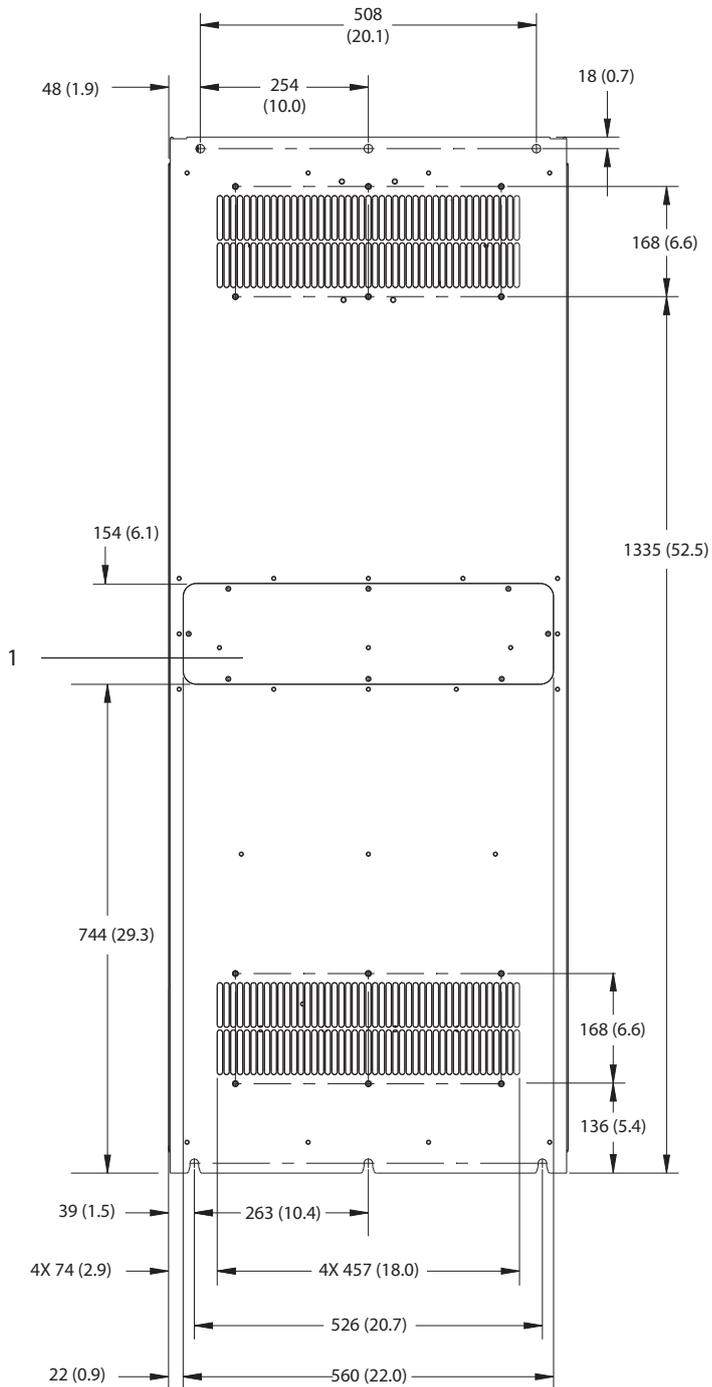

1	Heat sink access panel (optional)
---	-----------------------------------

Illustration 9.16 Back View of E4h

130BF667.10

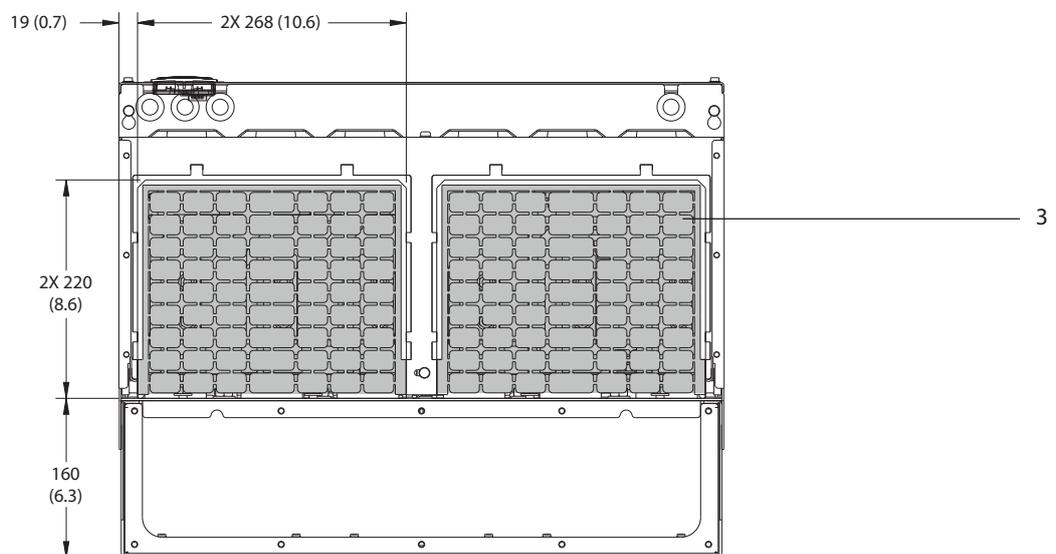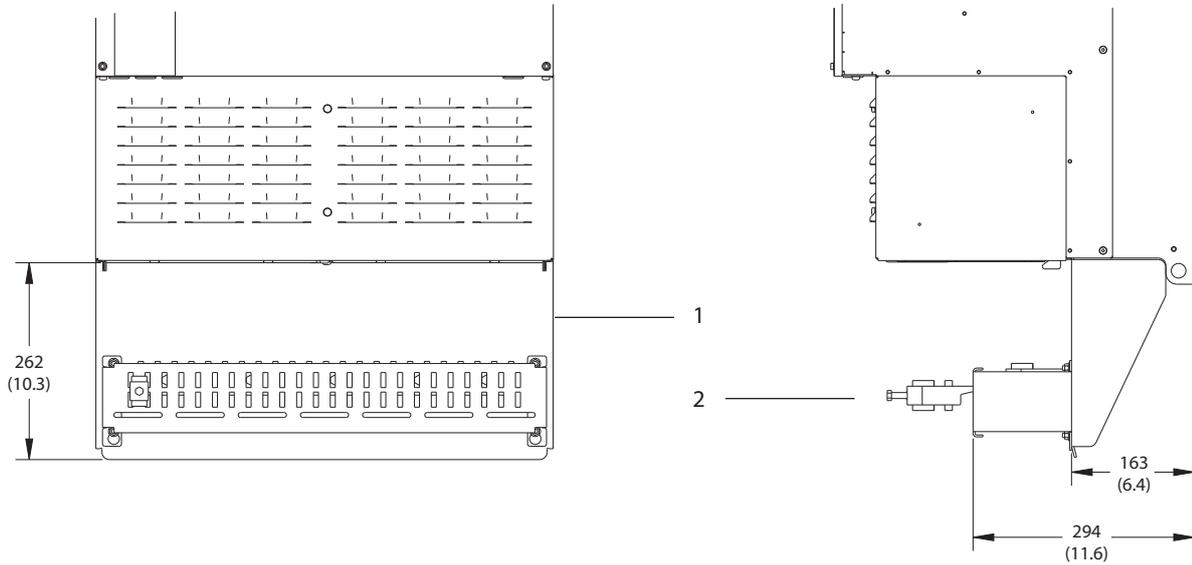


1	RFI shield termination (standard with RFI option)
2	Cable/EMC clamp
3	Gland plate

Illustration 9.17 RFI Shield Termination and Gland Plate Dimensions for E4h


9.9 Enclosure Airflow

9.9.1 Airflow for E1h–E4h Enclosures

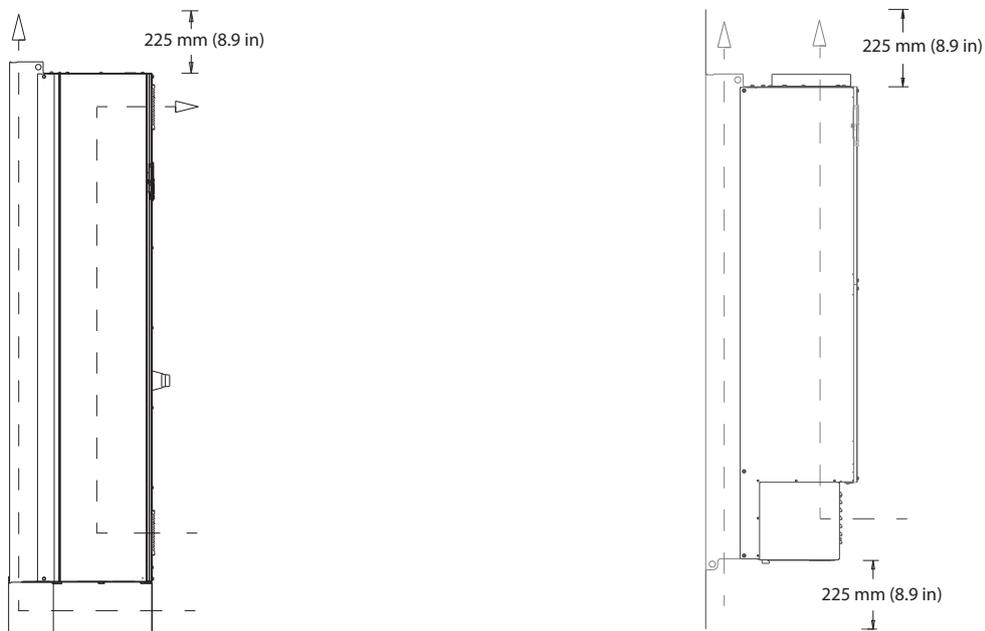

130BF699.10

Illustration 9.18 Standard Airflow Configuration for E1h/E2h (Left) and E3h/E4h (Right)

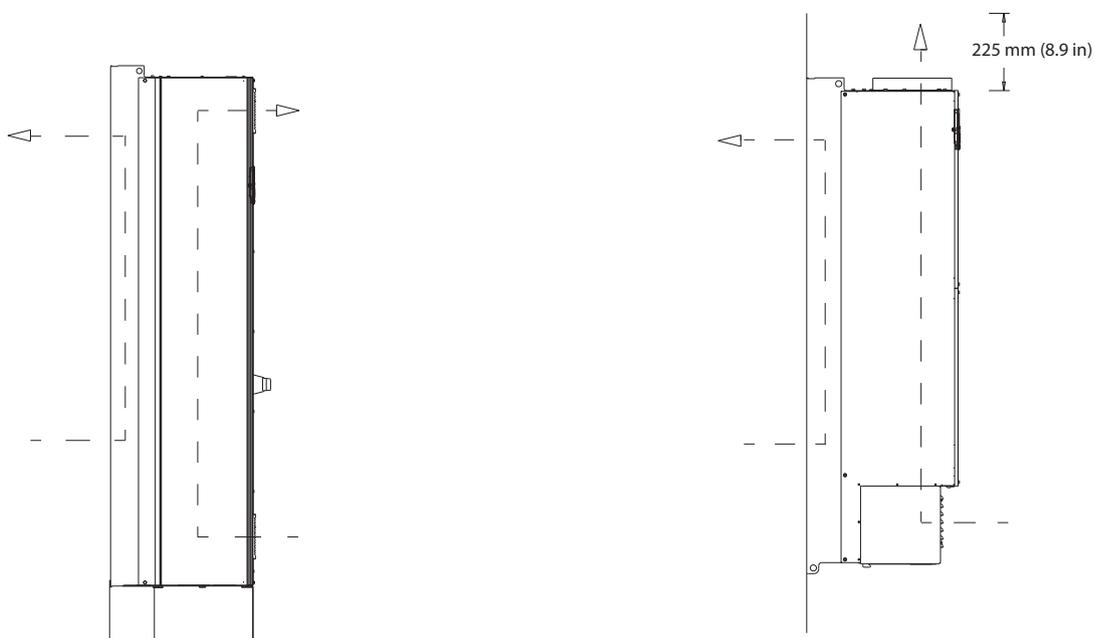

130BF700.10

Illustration 9.19 Optional Airflow Configuration Through the Back Wall for E1h/E2h (Left) and E3h/E4h (Right)

## 9.10 Fastener Torque Ratings

Apply the correct torque when tightening fasteners in the locations that are listed in *Table 9.6*. Too low or too high torque when fastening an electrical connection results in a bad electrical connection. To ensure correct torque, use a torque wrench.

Location	Bolt size	Torque [Nm (in-lb)]
Mains terminals	M10/M12	19 (168)/37 (335)
Motor terminals	M10/M12	19 (168)/37 (335)
Ground terminals	M8/M10	9.6 (84)/19.1 (169)
Brake terminals	M8	9.6 (84)
Load sharing terminals	M10/M12	19 (168)/37 (335)
Regeneration terminals (Enclosures E1h/E2h)	M8	9.6 (84)
Regeneration terminals (Enclosures E3h/E4h)	M10/M12	19 (168)/37 (335)
Relay terminals	–	0.5 (4)
Door/panel cover	M5	2.3 (20)
Gland plate	M5	2.3 (20)
Heat sink access panel	M5	3.9 (35)
Serial communication cover	M5	2.3 (20)

**Table 9.6 Fastener Torque Ratings**

# 10 Appendix

## 10.1 Abbreviations and Conventions

°C	Degrees Celsius
°F	Degrees Fahrenheit
Ω	Ohm
AC	Alternating current
AEO	Automatic energy optimization
ACP	Application control processor
AMA	Automatic motor adaptation
AWG	American wire gauge
CPU	Central processing unit
CSIV	Customer-specific initialization values
CT	Current transformer
DC	Direct current
DVM	Digital voltmeter
EEPROM	Electrically erasable programmable read-only memory
EMC	Electromagnetic compatibility
EMI	Electromagnetic interference
ESD	Electrostatic discharge
ETR	Electronic thermal relay
$f_{M,N}$	Nominal motor frequency
HF	High frequency
HVAC	Heating, ventilation, and air conditioning
Hz	Hertz
$I_{LIM}$	Current limit
$I_{INV}$	Rated inverter output current
$I_{M,N}$	Nominal motor current
$I_{VLT,MAX}$	Maximum output current
$I_{VLT,N}$	Rated output current supplied by the drive
IEC	International electrotechnical commission
IGBT	Insulated-gate bipolar transistor
I/O	Input/output
IP	Ingress protection
kHz	Kilohertz
kW	Kilowatt
$L_d$	Motor d-axis inductance
$L_q$	Motor q-axis inductance
LC	Inductor-capacitor
LCP	Local control panel
LED	Light-emitting diode
LOP	Local operation pad
mA	Milliamp
MCB	Miniature circuit breakers
MCO	Motion control option
MCP	Motor control processor
MCT	Motion control tool

MDCIC	Multi-drive control interface card
mV	Millivolts
NEMA	National Electrical Manufacturers Association
NTC	Negative temperature coefficient
$P_{M,N}$	Nominal motor power
PCB	Printed circuit board
PE	Protective earth
PELV	Protective extra low voltage
PID	Proportional integral derivative
PLC	Programmable logic controller
P/N	Part number
PROM	Programmable read-only memory
PS	Power section
PTC	Positive temperature coefficient
PWM	Pulse width modulation
$R_s$	Stator resistance
RAM	Random-access memory
RCD	Residual current device
Regen	Regenerative terminals
RFI	Radio frequency interference
RMS	Root means square (cyclically alternating electric current)
RPM	Revolutions per minute
SCR	Silicon controlled rectifier
SMPS	Switch mode power supply
S/N	Serial number
STO	Safe Torque Off
$T_{LIM}$	Torque limit
$U_{M,N}$	Nominal motor voltage
V	Volt
VVC	Voltage vector control
$X_h$	Motor main reactance

Table 10.1 Abbreviations, Acronyms, and Symbols

### Conventions

- Numbered lists indicate procedures.
- Bullet lists indicate other information and description of illustrations.
- Italicized text indicates:
  - Cross reference
  - Link
  - Footnote
  - Parameter name
  - Parameter group name
  - Parameter option

- All dimensions are in mm (inch).

## 10.2 International/North American Default Parameter Settings

Setting *parameter 0-03 Regional Settings* to [0] *International* or [1] *North America* changes the default settings for some parameters. *Table 10.2* lists those parameters that are effected.

Changes made to default settings are stored and available for viewing in the quick menu along with any programming entered into parameters.

Parameter	International default parameter value	North American default parameter value
<i>Parameter 0-03 Regional Settings</i>	International	North America
<i>Parameter 0-71 Date Format</i>	DD-MM-YYYY	MM/DD/YYYY
<i>Parameter 0-72 Time Format</i>	24 h	12 h
<i>Parameter 1-20 Motor Power [kW]</i>	1)	1)
<i>Parameter 1-21 Motor Power [HP]</i>	2)	2)
<i>Parameter 1-22 Motor Voltage</i>	230 V/400 V/575 V	208 V/460 V/575 V
<i>Parameter 1-23 Motor Frequency</i>	50 Hz	60 Hz
<i>Parameter 3-03 Maximum Reference</i>	50 Hz	60 Hz
<i>Parameter 3-04 Reference Function</i>	Sum	External/Preset
<i>Parameter 4-13 Motor Speed High Limit [RPM]<sup>3)</sup></i>	1500 RPM	1800 RPM
<i>Parameter 4-14 Motor Speed High Limit [Hz]<sup>4)</sup></i>	50 Hz	60 Hz
<i>Parameter 4-19 Max Output Frequency</i>	100 Hz	120 Hz
<i>Parameter 4-53 Warning Speed High</i>	1500 RPM	1800 RPM
<i>Parameter 5-12 Terminal 27 Digital Input</i>	Coast inverse	External interlock
<i>Parameter 5-40 Function Relay</i>	Alarm	No alarm
<i>Parameter 6-15 Terminal 53 High Ref./Feedb. Value</i>	50	60
<i>Parameter 6-50 Terminal 42 Output</i>	Speed 0-HighLim	Speed 4-20 mA
<i>Parameter 14-20 Reset Mode</i>	Manual reset	Infinite auto reset
<i>Parameter 22-85 Speed at Design Point [RPM]<sup>3)</sup></i>	1500 RPM	1800 RPM
<i>Parameter 22-86 Speed at Design Point [Hz]</i>	50 Hz	60 Hz
<i>Parameter 24-04 Fire Mode Max Reference</i>	50 Hz	60 Hz

**Table 10.2 International/North American Default Parameter Settings**

- 1) *Parameter 1-20 Motor Power [kW]* is only visible when *parameter 0-03 Regional Settings* is set to [0] *International*.
- 2) *Parameter 1-21 Motor Power [HP]*, is only visible when *parameter 0-03 Regional Settings* is set to [1] *North America*.
- 3) This parameter is only visible when *parameter 0-02 Motor Speed Unit* is set to [0] *RPM*.
- 4) This parameter is only visible when *parameter 0-02 Motor Speed Unit* is set to [1] *Hz*.

## 10.3 Parameter Menu Structure

0-0*	Operation/Display	1-1*	Motor Selection	1-8*	Stop Adjustments	4-11	Motor Speed Low Limit [RPM]	5-51	Term. 29 High Frequency
0-0*	Basic Settings	1-10	Motor Construction	1-80	Function at Stop	4-12	Motor Speed Low Limit [Hz]	5-52	Term. 29 Low Ref./Feedb. Value
0-01	Language	1-1*	VVC+ PM/SVN RM	1-81	Min Speed for Function at Stop [RPM]	4-13	Motor Speed High Limit [RPM]	5-53	Term. 29 High Ref./Feedb. Value
0-02	Motor Speed Unit	1-14	Damping Gain	1-82	Min Speed for Function at Stop [Hz]	4-14	Motor Speed High Limit [Hz]	5-54	Pulse Filter Time Constant #29
0-03	Regional Settings	1-15	Low Speed Filter Time Const.	1-86	Compressor Min. Speed for Trip [RPM]	4-17	Torque Limit Motor Mode	5-55	Term. 33 Low Frequency
0-04	Operating State at Power-up	1-16	High Speed Filter Time Const.	1-87	Compressor Min. Speed for Trip [Hz]	4-18	Current Limit	5-56	Term. 33 High Frequency
0-05	Local Mode Unit	1-17	Voltage Filter Time Const.	1-90	Compressor Min. Speed for Trip [Hz]	4-19	Max Output Frequency	5-57	Term. 33 Low Ref./Feedb. Value
0-1*	Set-up Operations	1-2*	Motor Data	1-97	Motor Temperature	4-5*	Adj. Warnings	5-58	Term. 33 High Ref./Feedb. Value
0-10	Active Set-up	1-20	Motor Power [kW]	1-90	Motor Thermal Protection	4-50	Warning Current Low	5-59	Pulse Filter Time Constant #33
0-11	Programming Set-up	1-21	Motor Power [HP]	1-91	Motor External Fan	4-51	Warning Current High	5-6*	Pulse Output
0-12	This Set-up Linked to	1-22	Motor Voltage	1-93	Thermistor Source	4-52	Warning Speed Low	5-60	Terminal 27 Pulse Output Variable
0-13	Readout: Linked Set-ups	1-23	Motor Frequency	2-2*	Brakes	4-53	Warning Speed High	5-62	Pulse Output Max Freq #27
0-14	Readout: Prog. Set-ups / Channel	1-24	Motor Current	2-0*	DC Brake	4-54	Warning Reference Low	5-63	Terminal 29 Pulse Output Variable
0-2*	LCP Display	1-25	Motor Nominal Speed	2-00	DC Hold/Preheat Current	4-55	Warning Reference High	5-66	Terminal X30/6 Pulse Output Variable
0-20	Display Line 1.1 Small	1-26	Motor Cont. Rated Torque	2-01	DC Brake Current	4-56	Warning Feedback Low	5-68	Pulse Output Max Freq #29
0-21	Display Line 1.2 Small	1-28	Motor Rotation Check	2-02	DC Braking Time	4-57	Warning Feedback High	5-8*	I/O Options
0-22	Display Line 1.3 Small	1-29	Automatic Motor Adaptation (AMA)	2-03	DC Brake Cut-in Speed [RPM]	4-58	Missing Motor Phase Function	5-80	AHF Cap Reconnect Delay
0-23	Display Line 2 Large	1-3*	Addl. Motor Data	2-04	DC Brake Cut-in Speed [Hz]	4-59	Motor Check At Start	5-9*	Bus Controlled
0-24	Display Line 3 Large	1-30	Stator Resistance (Rs)	2-06	Parking Current	4-60	Speed Bypass	5-90	Digital & Relay Bus Control
0-25	My Personal Menu	1-31	Rotor Resistance (Rr)	2-07	Parking Time	4-61	Bypass Speed From [RPM]	5-93	Pulse Out #27 Bus Control
0-3*	LCP Cust. Readout	1-35	Main Reactance (Xh)	2-1*	Brake Energy Funct.	4-61	Bypass Speed From [Hz]	5-94	Pulse Out #29 Bus Control
0-30	Custom Readout Unit	1-36	Iron Loss Resistance (Rfe)	2-10	Brake Function	4-62	Bypass Speed To [RPM]	5-95	Pulse Out #29 Timeout Preset
0-31	Custom Readout Min Value	1-37	d-axis Inductance (Ld)	2-16	AC Brake Max. Current	4-63	Bypass Speed To [Hz]	5-96	Pulse Out #29 Timeout Preset
0-32	Custom Readout Max Value	1-38	q-axis Inductance (Lq)	2-17	Over-voltage Control	4-64	Semi-Auto Bypass Set-up	5-97	Pulse Out #X30/6 Bus Control
0-37	Display Text 1	1-39	Motor Poles	3-3*	Reference / Ramps	5-5*	Digital In/Out	5-98	Pulse Out #X30/6 Timeout Preset
0-38	Display Text 2	1-40	Back EMF at 1000 RPM	3-0*	Reference Limits	5-0*	Digital I/O mode	6-0*	Analog In/Out
0-39	Display Text 3	1-41	Motor Angle Offset	3-02	Minimum Reference	5-00	Digital I/O Mode	6-00	Live Zero Timeout Time
0-4*	LCP Keypad	1-44	d-axis Inductance Sat. (LdSat)	3-03	Maximum Reference	5-01	Terminal 27 Mode	6-01	Live Zero Timeout Function
0-40	[Hand on] Key on LCP	1-45	q-axis Inductance Sat. (LqSat)	3-04	Reference Function	5-02	Terminal 29 Mode	6-1*	Analog Input 53
0-41	[Off] Key on LCP	1-46	Position Detection Gain	3-1*	References	5-1*	Digital Inputs	6-10	Terminal 53 Low Voltage
0-42	[Auto on] Key on LCP	1-47	Torque Calibration	3-10	Preset Reference	5-10	Terminal 18 Digital Input	6-11	Terminal 53 High Voltage
0-43	[Reset] Key on LCP	1-48	Inductance Sat. Point	3-11	Jog Speed [Hz]	5-11	Terminal 19 Digital Input	6-12	Terminal 53 Low Current
0-5*	Copy/Save	1-5*	Load-Indep. Setting	3-13	Reference Site	5-12	Terminal 27 Digital Input	6-13	Terminal 53 High Current
0-50	LCP Copy	1-50	Motor Magnetizing at Zero Speed [RPM]	3-14	Preset Relative Reference	5-13	Terminal 29 Digital Input	6-14	Terminal 53 Low Ref./Feedb. Value
0-51	Set-up Copy	1-51	Min Speed Normal Magnetizing [RPM]	3-15	Reference 1 Source	5-14	Terminal 32 Digital Input	6-15	Terminal 53 High Ref./Feedb. Value
0-6*	Password	1-52	Min Speed Normal Magnetizing [Hz]	3-16	Reference 2 Source	5-15	Terminal 33 Digital Input	6-16	Terminal 53 Filter Time Constant
0-60	Main Menu Password	1-58	Flying Start Test Pulses Current	3-17	Reference 3 Source	5-16	Terminal X30/2 Digital Input	6-17	Terminal 53 Live Zero
0-61	Access to Main Menu w/o Password	1-59	Flying Start Test Pulses Frequency	3-19	Jog Speed [RPM]	5-17	Terminal X30/3 Digital Input	6-2*	Analog Input 54
0-65	Personal Menu Password	1-6*	Load-Depend. Settng.	3-4*	Ramp 1	5-18	Terminal X30/4 Digital Input	6-20	Terminal 54 Low Voltage
0-66	Access to Personal Menu w/o Password	1-60	Low Speed Load Compensation	3-41	Ramp 1 Ramp-up Time	5-19	Terminal 37 Safe Stop	6-21	Terminal 54 High Voltage
0-67	Bus Password Access	1-61	High Speed Load Compensation	3-42	Ramp 1 Ramp-down Time	5-20	Terminal X46/1 Digital Input	6-22	Terminal 54 Low Voltage
0-7*	Clock Settings	1-62	Slip Compensation	3-5*	Ramp 2	5-21	Terminal X46/3 Digital Input	6-23	Terminal 54 High Current
0-70	Set Date and Time	1-63	Slip Compensation Time Constant	3-51	Ramp 2 Ramp-up Time	5-22	Terminal X46/5 Digital Input	6-24	Terminal 54 High Ref./Feedb. Value
0-71	Date Format	1-64	Resonance Dampening	3-52	Ramp 2 Ramp-down Time	5-23	Terminal X46/7 Digital Input	6-25	Terminal 54 High Ref./Feedb. Value
0-72	Time Format	1-65	Resonance Dampening Time	3-8*	Other Ramps	5-24	Terminal X46/9 Digital Input	6-26	Terminal 54 Filter Time Constant
0-74	DST/Summertime	1-66	Constant	3-80	Jog Ramp Time	5-25	Terminal X46/11 Digital Input	6-27	Terminal 54 Live Zero
0-76	DST/Summertime Start	1-66	Min. Current at Low Speed	3-81	Quick Stop Ramp Time	5-26	Terminal X46/13 Digital Input	6-3*	Analog Input X30/11
0-77	DST/Summertime End	1-7*	Start Adjustments	3-82	Starting Ramp-up Time	5-3*	Digital Outputs	6-30	Terminal X30/11 Low Voltage
0-79	Clock Fault	1-70	PM Start Mode	3-9*	Digital Pot. meter	5-30	Terminal 27 Digital Output	6-31	Terminal X30/11 High Voltage
0-81	Working Days	1-71	Start Delay	3-90	Step Size	5-31	Terminal 29 Digital Output	6-32	Terminal X30/11 Low Ref./Feedb. Value
0-82	Additional Working Days	1-72	Start Function	3-91	Ramp Time	5-32	Terminal X30/6 Digit Out (MCB 101)	6-35	Term. X30/11 High Ref./Feedb. Value
0-83	Additional Non-Working Days	1-73	Flying Start	3-92	Power Restore	5-33	Terminal X30/7 Digit Out (MCB 101)	6-36	Term. X30/11 Filter Time Constant
0-89	Date and Time Readout	1-74	Start Speed [RPM]	3-93	Maximum Limit	5-4*	Relays	6-4*	Analog Input X30/12
1-1**	Load and Motor	1-75	Start Speed [Hz]	3-94	Minimum Limit	5-40	Function Relay	6-40	Terminal X30/12 Low Voltage
1-0*	General Settings	1-76	Start Current	3-95	Ramp Delay	5-41	On Delay, Relay	6-41	Terminal X30/12 High Voltage
1-00	Configuration Mode	1-77	Compressor Start Max Speed [RPM]	4-3*	Limits / Warnings	5-5*	Pulse Input	6-44	Term. X30/12 Low Ref./Feedb. Value
1-03	Torque Characteristics	1-78	Compressor Start Max Speed [Hz]	4-1*	Limits / Warnings	5-5*	Motor Speed Direction		
1-06	Clockwise Direction	1-79	Compressor Start Max Time to Trip	4-10	Motor Speed Direction	5-50			

6-45	Term. X30/12 High Ref./Feedb. Value	8-50	Coasting Select	11-98	Alarm Text	13-92	Alert Text	15-08	Number of Starts
6-46	Term. X30/12 Filter Time Constant	8-52	DC Brake Select	11-99	Alarm Status	13-9*	User Defined Readouts	15-1*	Data Log Settings
6-47	Term. X30/12 Live Zero	8-53	Start Select	12-2*	Ethernet	13-97	Alert Alarm Word	15-10	Logging Source
6-5*	Analog Output 42	8-54	Reverse Select	12-00	IP Settings	13-98	Alert Warning Word	15-11	Logging Interval
6-50	Terminal 42 Output	8-55	Set-up Select	12-01	IP Address	13-99	Alert Status Word	15-12	Trigger Event
6-51	Terminal 42 Output Min Scale	8-56	Preset Reference Select	12-02	Subnet Mask	14-0*	Special Functions	15-13	Logging Mode
6-52	Terminal 42 Output Max Scale	8-8*	FC Port Diagnostics	12-03	Default Gateway	14-0*	Inverter Switching	15-14	Samples Before Trigger
6-53	Terminal 42 Output Bus Control	8-80	Bus Message Count	12-04	DHCP Server	14-00	Switching Pattern	15-2*	Historic Log
6-54	Terminal 42 Output Timeout Preset	8-81	Bus Error Count	12-05	Lease Expires	14-01	Switching Frequency	15-20	Historic Log: Event
6-6*	Analog Output X30/8	8-82	Slave Message Count	12-06	Name Servers	14-03	Overmodulation	15-21	Historic Log: Value
6-60	Terminal X30/8 Output	8-83	Slave Error Count	12-06	Domain Name	14-04	PWM Random	15-22	Historic Log: Time
6-61	Terminal X30/8 Min. Scale	8-9*	Bus Jog	12-07	Host Name	14-1*	Mains On/Off	15-23	Historic Log: Date and Time
6-62	Terminal X30/8 Max. Scale	8-90	Bus Jog 1 Speed	12-08	Physical Address	14-10	Line Failure	15-3*	Alarm Log
6-63	Terminal X30/8 Output Bus Control	8-91	Bus Jog 2 Speed	12-09	Eth link par	14-11	Line Voltage at Line Fault	15-30	Alarm Log: Error Code
6-64	Terminal X30/8 Output Timeout Preset	8-94	Bus Feedback 1	12-10	Link Status	14-12	Function at Mains Imbalance	15-31	Alarm Log: Value
6-7*	Analog Output X45/1	8-96	Bus Feedback 2	12-10	Link Duration	14-16	Kin. Backup Gain	15-32	Alarm Log: Time
6-70	Terminal X45/1 Output	9-0*	Bus Feedback 3	12-11	Auto Negotiation	14-2*	Reset Functions	15-33	Alarm Log: Date and Time
6-71	Terminal X45/1 Min. Scale	9-00	PROdrive	12-12	Link Speed	14-20	Reset Mode	15-34	Alarm Log: Status
6-72	Terminal X45/1 Max. Scale	9-07	Actual Value	12-13	Link Duplex	14-21	Automatic Restart Time	15-35	Alarm Log: Alarm Text
6-73	Terminal X45/1 Bus Control	9-15	PCD Write Configuration	12-14	Link Duplex	14-22	Operation Mode	15-4*	Drive Identification
6-74	Terminal X45/1 Output Timeout Preset	9-16	PCD Read Configuration	12-8*	Oth. Ethernet services	14-23	Typecode Setting	15-40	FC Type
6-8*	Analog Output X45/3	9-18	Node Address	12-80	FTP Server	14-25	Trip Delay at Torque Limit	15-41	Power Section
6-80	Terminal X45/3 Output	9-22	Telegram Selection	12-82	SMTP Service	14-26	Trip Delay at Inverter Fault	15-42	Voltage
6-81	Terminal X45/3 Min. Scale	9-23	Parameters for Signals	12-89	Transparent Socket Channel Port	14-28	Production Settings	15-43	Software Version
6-82	Terminal X45/3 Max. Scale	9-27	Parameter Edit	12-9*	Adv. Eth. services	14-29	Service Code	15-44	Ordered Typecode String
6-83	Terminal X45/3 Bus Control	9-28	Process Control	12-90	Cable Diagnostics	14-30	Current Limit Ctrl.	15-45	Actual Typecode String
6-84	Terminal X45/3 Output Timeout Preset	9-45	Fault Message Counter	12-91	Auto Cross Over	14-31	Current Lim Ctrl. Integration Time	15-46	Adj Freq Dr Ordering No.
8-2*	Comm. and Options	9-47	Fault Code	12-92	IGMP Snooping	14-4*	Energy Optimizing	15-47	Power Card Ordering No.
8-0*	General Settings	9-52	Fault Number	12-93	Cable Error Length	14-40	VT Level	15-48	LCP ID Num.
8-01	Control Site	9-52	Fault Situation Counter	12-94	Broadcast Storm Protection	14-40	SW ID Control Card	15-49	SW ID Control Card
8-02	Control Source	9-53	Profibus Warning Word	12-95	Broadcast Storm Filter	14-41	Minimum AEO Frequency	15-50	SW ID Power Card
8-03	Control Timeout Time	9-63	Actual Baud Rate	12-96	Port Config	14-42	Minimum AEO Frequency	15-51	Adj Freq Dr Serial No.
8-04	Control Timeout Function	9-64	Device Identification	12-96	Interface Counters	14-43	Motor Cos-Phi	15-53	Power Card Serial Number
8-05	End-of-Timeout Function	9-65	Profile Number	12-99	Media Counters	14-50	RFI 1	15-60	Option Mounted
8-06	Reset Control Timeout	9-67	Control Word 1	13-0*	Smart Logic	14-50	DC Link Compensation	15-61	Option SW Version
8-07	Diagnosis Trigger	9-68	Status Word 1	13-0*	SLC Settings	14-51	Fan Control	15-62	Option Ordering No
8-1*	Control Settings	9-70	Programming Set-up	13-00	SL Controller Mode	14-52	Fan Monitor	15-63	Option Serial No
8-10	Control Profile	9-71	Profibus Save Data Values	13-01	Start Event	14-55	Output Filter	15-70	Option in Slot A
8-13	Configurable Status Word STW	9-72	ProfibusDriveReset	13-02	Stop Event	14-59	Actual Number of Inverter Units	15-71	Slot A Option SW Version
8-16	Store Data Values	9-75	DO Identification	13-03	Reset SLC	14-6*	Auto Derate	15-72	Option in Slot B
8-3*	FC Port Settings	9-80	Defined Parameters (1)	13-1*	Comparators	14-60	Function at Overtemperature	15-73	Slot B Option SW Version
8-30	Protocol	9-81	Defined Parameters (2)	13-10	Comparator Operand	14-61	Function at Inverter Overload	15-74	Option in Slot C0
8-31	Address	9-82	Defined Parameters (3)	13-11	Comparator Operator	14-62	Inv. Overload Derate Current	15-75	Slot C Option SW Version
8-32	Baud Rate	9-83	Defined Parameters (4)	13-12	Comparator Value	14-8*	Options	15-76	Option in Slot C1
8-33	Parity / Stop Bits	9-84	Defined Parameters (5)	13-2*	Timers	14-80	Option Supplied by External 24VDC	15-77	Slot C1/E1 Option SW Version
8-35	Minimum Response Delay	9-85	Defined Parameters (6)	13-20	SL Controller Timer	14-89	Option Detection	15-8*	Operating Data II
8-36	Maximum Response Delay	9-90	Changed Parameters (1)	13-4*	Logic Rules	14-9*	Fault Settings	15-80	Fan Running Hours
8-37	Maximum Inter-Char Delay	9-91	Changed Parameters (2)	13-40	Logic Rule Boolean 1	14-90	Fault Level	15-81	Preset Fan Running Hours
8-4*	FC MC protocol set	9-92	Changed Parameters (3)	13-41	Logic Rule Operator 1	15-5*	Drive Information	15-9*	Parameter Info
8-40	Telegram selection	9-93	Changed Parameters (4)	13-42	Logic Rule Boolean 2	15-0*	Operating Data	15-92	Defined Parameters
8-42	PCD Write Configuration	9-94	Changed Parameters (5)	13-43	Logic Rule Operator 2	15-00	Operating hours	15-93	Modified Parameters
8-43	PCD Read Configuration	9-99	Profibus Revision Counter	13-44	Logic Rule Boolean 3	15-01	Running Hours	15-99	Parameter Metadata
8-45	BTM Transaction Command	11-2*	LON Param. Access	13-5*	States	15-02	kWh Counter	16-0*	Data Readouts
8-46	BTM Transaction Status	11-21	Store Data Values	13-51	SL Controller Event	15-03	Power-ups	16-0*	General Status
8-47	BTM Timeout	11-90	AK LonWorks	13-52	SL Controller Action	15-04	Over Temps	16-00	Control Word
8-5*	Digital/Bus	11-91	VLT Network Address	13-9*	User Defined Alerts	15-05	Over Volts	16-01	Reference [Unit]
			AK Service Pin	13-90	Alert Trigger	15-06	Reset kWh Counter	16-02	Reference [%]
				13-91	Alert Action	15-07	Reset Running Hours Counter	16-03	Status Word

16-05	Main Actual Value [%]	16-85	FC Port CTW 1	20-42	Cut-in Value	21-43	Ext. 2 Differentiation Time	22-5*	End of Curve
16-09	Custom Readout	16-86	FC Port REF 1	20-70	PID Auto Tuning	21-44	Ext. 2 Dif. Gain Limit	22-50	End of Curve Function
16-1*	Motor Status	16-87	Diagnosis Readouts	20-70	Closed-loop Type	21-5*	Ext. CL 3 Ref/Fb.	22-51	End of Curve Delay
16-10	Power [kW]	16-90	Alarm Word	20-71	Tuning Mode	21-50	Ext. 3 Ref/Feedback Unit	22-6*	Broken Belt Detection
16-11	Power [hp]	16-91	Alarm Word 2	20-72	PID Output Change	21-51	Ext. 3 Minimum Reference	22-60	Broken Belt Function
16-12	Motor voltage	16-92	Warning Word	20-73	Minimum Feedback Level	21-52	Ext. 3 Maximum Reference	22-61	Broken Belt Torque
16-13	Frequency	16-93	Warning Word 2	20-74	Maximum Feedback Level	21-53	Ext. 3 Reference Source	22-62	Broken Belt Delay
16-14	Motor current	16-94	Ext. Status Word	20-79	PID Auto Tuning	21-54	Ext. 3 Feedback Source	22-7*	Short Cycle Protection
16-15	Frequency [%]	16-95	Ext. Status Word 2	20-8*	PID Basic Settings	21-55	Ext. 3 Setpoint	22-75	Short Cycle Protec.
16-16	Torque [Nm]	16-96	Maintenance Word	20-81	Process PID Normal/Inverse Control	21-56	Ext. 3 PID Conversion	22-76	Interval Between Starts
16-17	Speed [RPM]	16-99	Ext. Status Word 3	20-82	Process PID Controller Start Value	21-57	Ext. 3 Reference [Unit]	22-77	Minimum Run Time
16-18	Motor Thermal	16-99	Ext. Status Word 3	20-83	PID Start Speed [Hz]	21-58	Ext. 3 Feedback [Unit]	22-78	Minimum Run Time Override
16-22	Torque [%]	18-0*	Info & Readouts	20-84	On Reference Bandwidth	21-59	Ext. 3 Output [%]	22-79	Minimum Run Time Override Value
16-24	Calibrated Stator Resistance	18-0*	Maintenance Log	20-9*	PID Controller	21-6*	Ext. CL 3 PID	22-8*	Flow Compensation
16-3*	Drive Status	18-00	Maintenance Log: Item	20-91	PID Anti Windup	21-60	Ext. 3 Normal/Inverse Control	22-80	Flow Compensation
16-30	DC Link Voltage	18-01	Maintenance Log: Action	20-93	PID Proportional Gain	21-61	Ext. 3 Proportional Gain	22-81	Square-linear Curve Approximation
16-31	System Temp.	18-03	Maintenance Log: Time	20-94	PID Integral Time	21-62	Ext. 3 Integral Time	22-82	Work Point Calculation
16-32	Brake Energy /s	18-3*	Inputs & Outputs	20-95	PID Differentiation Time	21-63	Ext. 3 Differentiation Time	22-83	Speed at No-Flow [RPM]
16-33	Brake Energy /2 min	18-30	Analog Input X42/1	20-96	Process PID Differentiation Gain Limit	21-64	Ext. 3 Dif. Gain Limit	22-84	Speed at No-Flow [Hz]
16-34	Heatsink Temp.	18-31	Analog Input X42/3	21-0*	Ext. Closed-loop	21-7*	Ext. Feedb. Adv. Conversion	22-85	Speed at Design Point [RPM]
16-35	Inverter Thermal	18-32	Analog Input X42/5	21-0*	Ext. PID Auto-tuning	21-70	Refrigerant	22-86	Speed at Design Point [Hz]
16-36	Inv. Nom. Current	18-33	Analog Out X42/7 [V]	21-00	Closed-loop Type	21-71	User-defined Refrigerant A1	22-87	Pressure at No-Flow Speed
16-37	Inv. Max. Current	18-34	Analog Out X42/9 [V]	21-01	Tuning Mode	21-72	User-defined Refrigerant A2	22-88	Pressure at Rated Speed
16-38	SL Controller State	18-35	Analog Out X42/11 [V]	21-02	PID Output Change	21-73	User-defined Refrigerant A3	22-89	Flow at Design Point
16-39	Control Card Temp.	18-5*	Ref. & Feedb.	21-03	Minimum Feedback Level	22-0*	Application Functions	22-90	Flow at Rated Speed
16-40	Logging Buffer Full	18-57	Air Pressure to Flow Air Flow	21-04	Maximum Feedback Level	22-00	Miscellaneous	23-0*	Time-based Functions
16-41	LCP Bottom Statusline	18-6*	Inputs & Outputs 2	21-09	PID Autotuning	22-00	External Interlock Delay	23-0*	Timed Actions
16-49	Current Fault Source	18-60	Digital Input 2	21-1*	Ext. CL 1 Ref/Fb.	22-1*	Air Pres. to Flow	23-00	ON Time
16-5*	Ref. & Feedb.	18-7*	Rectifier Status	21-10	Ext. 1 Ref/Feedback Unit	22-10	Air Pressure to Flow Signal source	23-01	ON Action
16-50	External Reference	18-70	Mains Voltage	21-11	Ext. 1 Minimum Reference	22-11	Air Pressure to Flow Fan k-factor	23-02	OFF Time
16-52	Feedback [Unit]	18-71	Mains Frequency	21-12	Ext. 1 Maximum Reference	22-12	Air Pressure to Flow Fan k-density	23-03	OFF Action
16-53	Digi Pot Reference	18-72	Mains Imbalance	21-13	Ext. 1 Reference Source	22-13	Air Pressure to Flow Fan flow unit	23-04	Occurrence
16-54	Feedback 1 [Unit]	18-75	Rectifier DC Volt.	21-14	Ext. 1 Feedback Source	22-2*	No-Flow Detection	23-1*	Maintenance
16-55	Feedback 2 [Unit]	20-0*	Drive Closed-Loop	21-15	Ext. 1 Setpoint	22-20	Low Power Auto Set-up	23-10	Maintenance Item
16-56	Feedback 3 [Unit]	20-0*	Feedback	21-16	Ext. 1 PID Conversion	22-21	Low Power Detection	23-11	Maintenance Action
16-6*	Inputs & Outputs	20-01	Feedback 1 Source	21-17	Ext. 1 Reference [Unit]	22-22	Low Speed Detection	23-12	Maintenance Time Base
16-60	Digital Input	20-02	Feedback 2 Source Unit	21-18	Ext. 1 Feedback [Unit]	22-23	No-Flow Function	23-13	Maintenance Time Interval
16-61	Terminal 53 Switch Setting	20-02	Feedback 3 Source Unit	21-19	Ext. 1 Output [%]	22-24	No-Flow Delay	23-14	Maintenance Date and Time
16-62	Analog Input 53	20-03	Feedback 2 Source	21-2*	Ext. CL 1 PID	22-26	Dry Pump Function	23-1*	Maintenance Reset
16-63	Terminal 54 Switch Setting	20-04	Feedback 3 Source	21-20	Ext. 1 Normal/Inverse Control	22-27	Dry Pump Delay	23-15	Reset Maintenance Word
16-64	Analog Input 54	20-05	Feedback 2 Source Unit	21-21	Ext. 1 Proportional Gain	22-3*	No-Flow Power Tuning	23-16	Maintenance Text
16-65	Analog Output 42 [mA]	20-06	Feedback 3 Source	21-22	Ext. 1 Integral Time	22-30	No-Flow Power	23-5*	Energy Log
16-66	Digital Output [bin]	20-07	Feedback 3 Conversion	21-23	Ext. 1 Differentiation Time	22-31	Power Correction Factor	23-50	Energy Log Resolution
16-67	Pulse Input #29 [Hz]	20-08	Feedback 3 Source Unit	21-24	Ext. 1 Dif. Gain Limit	22-32	Low Speed [RPM]	23-51	Period Start
16-68	Pulse Input #33 [Hz]	20-12	Reference/Feedback Unit	21-3*	Ext. CL 2 Ref/Fb.	22-33	Low Speed [Hz]	23-53	Energy Log
16-69	Pulse Output #27 [Hz]	20-2*	Feedback & Setpoint	21-30	Ext. 2 Ref/Feedback Unit	22-34	Low Speed Power [kW]	23-54	Reset Energy Log
16-70	Pulse Output #29 [Hz]	20-20	Feedback Function	21-31	Ext. 2 Minimum Reference	22-35	Low Speed Power [HP]	23-6*	Trending
16-71	Relay Output [bin]	20-21	Setpoint 1	21-32	Ext. 2 Maximum Reference	22-36	High Speed [RPM]	23-60	Trend Variable
16-72	Counter A	20-22	Setpoint 2	21-33	Ext. 2 Reference Source	22-37	High Speed [Hz]	23-61	Continuous Bin Data
16-73	Counter B	20-23	Setpoint 3	21-34	Ext. 2 Feedback Source	22-38	High Speed Power [kW]	23-62	Timed Bin Data
16-75	Analog In X30/11	20-25	Setpoint Type	21-35	Ext. 2 Setpoint	22-39	High Speed Power [HP]	23-63	Timed Period Start
16-76	Analog In X30/12	20-3*	Feedback Adv. Conv	21-36	Ext. 2 PID Conversion	22-4*	Sleep Mode	23-64	Timed Period Stop
16-77	Analog Out X30/8 [mA]	20-30	Refrigerant	21-37	Ext. 2 Reference [Unit]	22-40	Minimum Run Time	23-65	Minimum Bin Value
16-78	Analog Out X45/1 [mA]	20-31	User-defined Refrigerant A1	21-38	Ext. 2 Feedback [Unit]	22-41	Minimum Sleep Time	23-66	Reset Continuous Bin Data
16-79	Analog Out X45/3 [mA]	20-32	User-defined Refrigerant A2	21-39	Ext. 2 Output [%]	22-42	Wake-up Speed [RPM]	23-67	Reset Timed Bin Data
16-8*	Fieldbus & FC Port	20-33	User-defined Refrigerant A3	21-4*	Ext. CL 2 PID	22-43	Wake-up Speed [Hz]	23-8*	Payback Counter
16-80	Fieldbus CTW 1	20-4*	Thermostat/Pressostat	21-40	Ext. 2 Normal/Inverse Control	22-44	Wake-up Ref./FB Difference	23-80	Power Reference Factor
16-82	Fieldbus REF 1	20-40	Thermostat/Pressostat Function	21-41	Ext. 2 Proportional Gain	22-45	Setpoint Boost	23-81	Energy Cost
16-84	Comm. Option Status	20-41	Cut-out Value	21-42	Ext. 2 Integral Time	22-46	Maximum Boost Time	23-82	Investment

23-83	Energy Savings	25-84	Compressor ON Time	28-12	Fixed Boost Interval	30-46	Low Pres. Stop
23-84	Cost Savings	25-85	Relay ON Time	28-13	Boost Duration	30-47	Low Pres. Start
<b>24-** App. Functions 2</b>		25-86	Reset Relay Counters	28-14	Adequate oil return speed [RPM]	30-48	Pressure 2
24-9*	Multi-Motor Funct.	25-87	Inverse Interlock	28-15	Adequate oil return speed [Hz]	<b>30-4*</b>	<b>High/Low Pres. Ramp</b>
24-90	Missing Motor Function	25-88	Pack capacity [%]	28-16	Oil boost speed [RPM]	30-49	Pressure Stop Ramp Time
24-91	Missing Motor Coefficient 1	<b>25-9*</b>	<b>Service</b>	28-17	Oil boost speed [Hz]	<b>30-5*</b>	<b>Unit Configuration</b>
24-92	Missing Motor Coefficient 2	25-90	Compressor interlock	28-18	Cancel oil boost at low feedback	30-50	Heat Sink Fan Mode
24-93	Missing Motor Coefficient 3	25-91	Manual Alternation	28-19	Cancel oil boost at high feedback	<b>43-**</b>	<b>Unit Readouts</b>
24-94	Missing Motor Coefficient 4	<b>26-**</b>	<b>Analog I/O Option</b>	28-20	Discharge Temperature Monitor	<b>43-0*</b>	<b>Component Status</b>
24-95	Locked Rotor Function	26-0*	Analog I/O Mode	28-20	Temperature Source	43-00	Component Temp.
24-96	Locked Rotor Coefficient 1	26-00	Terminal X42/1 Mode	28-21	Temperature Unit	43-01	Auxiliary Temp.
24-97	Locked Rotor Coefficient 2	26-01	Terminal X42/3 Mode	28-24	Warning Level	<b>43-1*</b>	<b>Power Card Status</b>
24-98	Locked Rotor Coefficient 3	26-02	Terminal X42/5 Mode	28-25	Warning Action	43-10	HS Temp. ph.U
24-99	Locked Rotor Coefficient 4	<b>26-1*</b>	<b>Analog Input X42/1</b>	28-26	Emergency Level	43-11	HS Temp. ph.V
<b>25-** Pack Controller</b>		26-10	Terminal X42/1 Low Voltage	28-27	Discharge Temperature	43-12	HS Temp. ph.W
<b>25-0*</b>	<b>System Settings</b>	26-11	Terminal X42/1 High Voltage	<b>28-7*</b>	<b>Day/Night Settings</b>	43-13	PC Fan A Speed
25-00	Pack Controller	26-14	Term. X42/1 Low Ref./Feedb. Value	28-71	Day/Night Bus Indicator	43-14	PC Fan B Speed
25-02	Motor Start	26-15	Term. X42/1 High Ref./Feedb. Value	28-72	Enable Day/Night Via Bus	43-15	PC Fan C Speed
25-04	Pump Cycling	26-16	Term. X42/1 Filter Time Constant	28-73	Night Setback	<b>43-2*</b>	<b>Fan PowCard Status</b>
25-05	Fixed Lead Compressor	26-17	Term. X42/1 Live Zero	28-74	Night Speed Drop [RPM]	43-20	FPC Fan A Speed
25-06	Number Of Pumps	<b>26-2*</b>	<b>Analog Input X42/3</b>	28-75	Night Speed Drop Override	43-21	FPC Fan B Speed
<b>25-2*</b>	<b>Zone Settings</b>	26-20	Terminal X42/3 Low Voltage	28-76	Night Speed Drop [Hz]	43-22	FPC Fan C Speed
25-20	Neutral Zone [unit]	26-21	Terminal X42/3 High Voltage	<b>28-8*</b>	<b>P0 Optimization</b>	43-23	FPC Fan D Speed
25-21	+ Zone [unit]	26-24	Term. X42/3 Low Ref./Feedb. Value	28-81	dPO Offset	43-24	FPC Fan E Speed
25-22	- Zone [unit]	26-25	Term. X42/3 High Ref./Feedb. Value	28-82	P0	43-25	FPC Fan F Speed
25-23	Fixed Speed neutral Zone [unit]	26-26	Term. X42/3 Filter Time Constant	28-83	P0 Setpoint		
25-24	+ Zone Delay	26-27	Term. X42/3 Live Zero	28-84	P0 Reference		
25-25	SBW De-staging Delay	<b>26-3*</b>	<b>Analog Input X42/5</b>	28-85	P0 Minimum Reference		
25-26	++ Zone Delay	26-30	Terminal X42/5 Low Voltage	28-86	P0 Maximum Reference		
25-27	-- Zone Delay	26-31	Terminal X42/5 High Voltage	28-87	Most Loaded Controller		
25-28	Override Bandwidth Ramp Time	26-34	Term. X42/5 Low Ref./Feedb. Value	<b>28-9*</b>	<b>Injection Control</b>		
<b>25-3*</b>	<b>Staging Functions</b>	26-35	Term. X42/5 High Ref./Feedb. Value	28-90	Injection On		
25-30	Destage At No-Flow	26-36	Term. X42/5 Filter Time Constant	28-91	Delayed Compressor Start		
25-31	Stage Function	26-37	Term. X42/5 Live Zero	<b>29-**</b>	<b>Compressor Functions 2</b>		
25-32	Stage Function Time	<b>26-4*</b>	<b>Analog Output X42/7</b>	<b>29-4*</b>	<b>Pre/Post Lube</b>		
25-33	Destage Function	26-40	Terminal X42/7 Output	29-40	Pre/Post Lube Function		
25-34	Destage Function Time	26-41	Terminal X42/7 Min. Scale	29-41	Pre Lube Time		
<b>25-4*</b>	<b>Staging Settings</b>	26-42	Terminal X42/7 Max. Scale	29-42	Post Lube Time		
25-42	Staging Threshold	26-43	Terminal X42/7 Output Bus Control	<b>30-**</b>	<b>Special Features</b>		
25-43	De-staging Threshold [RPM]	26-44	Terminal X42/7 Output Timeout	<b>30-2*</b>	<b>Adv. Start Adjust</b>		
25-44	Staging Speed [RPM]	Preset	Preset	30-22	Locked Rotor Protection		
25-45	Staging Speed [Hz]	<b>26-5*</b>	<b>Analog Output X42/9</b>	30-23	Locked Rotor Detection Time [s]		
25-47	De-staging Speed [Hz]	26-50	Terminal X42/9 Output	<b>30-3*</b>	<b>High/Low Pres. Stop 1</b>		
25-50	Lead Pump Alternation	26-51	Terminal X42/9 Min. Scale	30-30	Pressure Transmitter		
25-51	Alternation Event	26-52	Terminal X42/9 Max. Scale	30-31	Pressure Conversion		
25-52	Alternat. Time Interv	26-53	Terminal X42/9 Output Bus Control	30-32	Pressure Source Unit		
25-53	Alternation Timer Value	26-54	Terminal X42/9 Output Timeout	30-33	Temperature Unit		
25-54	Alternation Predefined Time	Preset	Preset	30-34	High Pres. Stop		
25-55	Alternate If Load < 50%	<b>26-6*</b>	<b>Analog Output X42/11</b>	30-35	High Pres. Start		
25-56	Staging Mode at Alternation	26-60	Terminal X42/11 Output	30-36	Low Pres. Stop		
25-58	Run Next Pump Delay	26-61	Terminal X42/11 Min. Scale	30-37	Low Pres. Start		
25-59	Run-on Line Delay	26-62	Terminal X42/11 Max. Scale	30-38	Pressure 1		
<b>25-8*</b>	<b>Status</b>	26-63	Terminal X42/11 Output Bus Control	<b>30-4*</b>	<b>High/Low Pres. Stop 2</b>		
25-80	Pack Status	26-64	Terminal X42/11 Output Timeout	30-40	Pressure Transmitter		
25-81	Compressor Status	<b>28-**</b>	<b>Compressor Functions</b>	30-41	Pressure Conversion		
25-82	Lead Compressor	28-1*	Oil Return Management	30-42	Pressure Source Unit		
25-83	Relay Status	28-10	Oil Return Management	30-43	Temperature Unit		
		28-11	Low Speed Running Time	30-44	High Pres. Stop		
				30-45	High Pres. Start		

## Index

<b>A</b>	
A53/A54 switches.....	10
Abbreviations.....	106
AC mains.....	28
see also <i>Mains</i>	
ADN compliance.....	4
Airflow	
Configurations.....	104
Heat sink.....	15
Alarms	
List of.....	12, 66
Log.....	12
Types of.....	66
Ambient conditions	
Overview.....	13
Specifications.....	83
Analog	
Input specifications.....	84
Analog input/output	
Descriptions and default settings.....	43
Terminal locations.....	10
Approvals and certifications.....	4
ATEX monitoring.....	14
Auto on.....	12, 63
Automatic energy optimization.....	54
Automatic motor adaptation (AMA)	
Configuring.....	54
Warning.....	73
Auxillary contacts.....	46
<b>B</b>	
Back-wall cooling.....	15
Brake	
Location of terminals.....	8
Status message.....	64
Terminal torque rating.....	105
Brake resistor	
Terminal locations.....	10
Warning.....	70
Wiring.....	46
Wiring schematic.....	25
Burst transient.....	30
Bus termination switch.....	10, 45
<b>C</b>	
Cables	
Cable length and cross-section.....	84
Creating openings for.....	17, 19
Installation warning.....	22
Mains.....	28
Maximum number and size per phase.....	79, 80
Motor.....	26
Routing.....	42, 47
Shielded.....	23
Specifications.....	84
Capacitor storage.....	13
Circuit breakers.....	47, 87
Compressor functions.....	50
Condensation.....	14
Control	
Characteristics.....	86
Control card	
Ambient trip.....	79
Location.....	10
RS485 specifications.....	85
Specifications.....	87
Warning.....	73
Control input/output	
Descriptions and default settings.....	42
Control shelf.....	8, 9, 10
Control wiring.....	42, 44, 47
Cooling	
Check list.....	47
Dust warning.....	14
Requirements.....	15
Current	
Input.....	46
Leakage.....	30
Limit.....	77
<b>D</b>	
Definitions	
Status messages.....	63
Depth measurements.....	7
Design guide.....	4, 15, 84
Digital	
Input specifications.....	84
Output specifications.....	85
Digital input/output	
Descriptions and default settings.....	43
Terminal locations.....	10
Discharge time.....	5
Disconnect.....	8, 46, 49, 87
Disposal instruction.....	4

Door clearance		Fuses	
E1h.....	91	Location.....	8, 9
E2h.....	95	Overcurrent protection.....	22
E3h.....	99	Pre-start check list.....	47
E4h.....	103	Specifications.....	87
Door/panel cover		Troubleshooting.....	77
Torque rating.....	105	<b>G</b>	
Drive		Gases.....	14
Clearance requirements.....	15	Gland plate	
Definition.....	7	Description.....	16
Dimensions.....	7	Dimensions for E1h.....	91
Initialization.....	56	Dimensions for E2h.....	95
Status.....	63	Dimensions for E3h.....	99
Duct cooling.....	15	Dimensions for E4h.....	103
<b>E</b>		Torque rating.....	105
Electrical specifications 380–480 V.....	79, 80	Ground	
Electrical specifications 525–690 V.....	81, 82	Check list.....	47
Electronic thermal relay (ETR).....	22	Connecting.....	30
EMC.....	22, 23, 24	Floating delta.....	28
Encoder.....	55	Grounded delta.....	28
Energy efficiency class.....	83	Isolated main.....	28
Environment.....	13, 83	Terminal torque rating.....	105
Explosive atmosphere.....	14	Terminals.....	8, 9
Exterior dimensions		Warning.....	72
E1h.....	88	<b>H</b>	
E2h.....	92	Hand on.....	12, 63
E3h.....	96	Heat sink	
E4h.....	100	Access panel torque rating.....	105
External alarm reset.....	60	Cleaning.....	14, 62
<b>F</b>		E1h access panel dimensions.....	90
Factory default settings.....	56	E2h access panel dimensions.....	94
Fan power card		E3h access panel dimensions.....	98
Location.....	8, 9	E4h access panel dimensions.....	102
Warning.....	75	Overtemperature trip.....	79
Fans		Required airflow.....	15
Location.....	9	Warning.....	70, 72, 73, 75
Required airflow.....	15	Heater	
Servicing.....	14	Location.....	8, 9
Warning.....	69, 75	Usage.....	14
Fault log.....	12	Wiring of.....	45
Fieldbus.....	42	Wiring schematic.....	25
Filter.....	14	Height measurements.....	7
FPC.....	8	High voltage.....	49, 70, 71
see also <i>Fan power card</i>		High voltage warning.....	5
		Humidity.....	14
		HVAC fan functions.....	50
		<b>I</b>	
		Indicator lights.....	66
		Initial set-up.....	49
		Input specifications.....	84

Input voltage.....	49	Maintenance.....	14, 62
Installation		Manual	
Check list.....	47	Version number.....	4
Electrical.....	22	MCT 10.....	53
EMC-compliant.....	24, 30	MCT 10 Set-up Software.....	53
Initialization.....	56	Measurements.....	7
Load share/regeneration terminals.....	21	Menu	
Mechanical.....	16	Descriptions of.....	50
Qualified personnel.....	5	Keys.....	12
Quick setup.....	54	Motor	
Requirements.....	15	Cables.....	26
Start up.....	55	Class protection.....	14
Tools needed.....	13	Connecting.....	26
Interference		Data.....	77
EMC.....	23	Output specifications.....	83
Radio.....	7	Overheating.....	68
Interior views.....	8	Rotation.....	55
Interlock device.....	45	Terminal torque rating.....	105
Internal fault.....	72	Terminals.....	8
		Thermistor.....	60
<b>K</b>		Troubleshooting.....	76, 77
Knockout panel.....	89	Warning.....	67, 68, 70
		Wiring schematic.....	25
<b>L</b>		Mounting configurations.....	15
Label.....	13	<b>N</b>	
LCP		Nameplate.....	13
Display.....	11	Navigation keys.....	12, 51
Indicator lights.....	12	<b>O</b>	
Location.....	8, 9	Open loop	
Menu.....	50	Programming example.....	51
Troubleshooting.....	76	Optional equipment.....	45, 49
Leakage current.....	6, 30	Overcurrent protection.....	22
Lifting.....	13, 15	Overvoltage.....	78
Load share		<b>P</b>	
Location of terminals.....	9	Parameters.....	50, 55
Terminal torque rating.....	105	Pedestal.....	16
Terminals.....	9	Periodic forming.....	13
Warning.....	5	Phase loss.....	67
Wiring schematic.....	25	Pigtails.....	22
Load sharing.....	70, 71	Potential equalization.....	30
Local control panel (LCP).....	11	Potentiometer.....	43
<b>M</b>		Power card	
Main menu.....	50	Location.....	10
Mains		Warning.....	74
Cables.....	28	Power connection.....	22
Connecting.....	28	Power rating.....	7
Shield.....	6		
Supply specifications.....	83		
Terminal torque rating.....	105		
Terminals.....	8, 9		
Warning.....	71		

Index	Operating Guide
Programming.....	12, 51, 107
Programming guide.....	4
Pumps	
Functions.....	50
<b>Q</b>	
Qualified personnel.....	5
Quick menu.....	12, 50, 107
<b>R</b>	
Ramp-down time.....	78
Ramp-up time.....	77
Recycling.....	4
Regeneration	
Location of terminals.....	8
Terminal torque rating.....	105
Terminals.....	9
Wiring configuration.....	61
Regional settings.....	55
Relays	
Location.....	10, 44
Output specifications.....	86
Reset.....	12, 66, 73
RFI.....	8, 9, 28, 99, 103
Rotor	
Warning.....	75
RS485	
Configuring.....	45
Terminal description.....	43
Wiring schematic.....	25
<b>S</b>	
Safe Torque Off	
Operating guide.....	4
Terminal location.....	43
Warning.....	73, 74
Wiring of.....	45
Wiring schematic.....	25
Safety instructions.....	5, 22, 49
Serial communication	
Cover torque rating.....	105
Descriptions and default settings.....	43
Location.....	10
Service.....	62
Set-up.....	12
Shielding	
Cables.....	42
Clamps.....	22
Mains.....	6
RFI.....	8, 9
RFI termination.....	99, 103
Twisted ends.....	22
Short circuit.....	69
Short circuit current rating (SCCR).....	87
Sleep mode.....	65
Software version number.....	4
Space heater.....	8
see also <i>Heater</i>	
Start/stop.....	58
Status message definitions.....	63
STO.....	4
see also <i>Safe Torque Off</i>	
Storage.....	13
Supply voltage.....	49, 85
Switches	
A53 and A54.....	84
A53/A54.....	46
Brake resistor temperature.....	46
Bus termination.....	45
Disconnect.....	49, 87
<b>T</b>	
Temperature.....	14
Terminals	
Analog input/output.....	43
Control locations.....	10, 42
Digital input/output.....	43
E1h dimensions (front and side views).....	32
E2h dimensions (front and side views).....	34
E3h dimensions (front and side views).....	36
E4h dimensions (front and side views).....	39
Relays.....	44
Serial communication.....	43
Terminal 37.....	43, 45
Thermal protection.....	4
Thermistor	
Cable routing.....	42
Terminal location.....	43
Warning.....	74
Wiring configurations.....	60
Tools.....	13
Torque	
Characteristic.....	83
Fastener rating.....	105
Limit.....	68, 77
Transducer.....	43

Troubleshooting	
Fuses.....	77
LCP.....	76
Mains.....	77
Motor.....	76, 77
Warnings and alarms.....	66
<b>U</b>	
UL certification.....	4
Unintended start.....	5
<b>USB</b>	
Port location.....	10
Specifications.....	87
<b>V</b>	
<b>Voltage</b>	
Imbalance.....	67
Input.....	46
<b>W</b>	
<b>Warnings</b>	
List of.....	12, 66
Safety.....	5
Types of.....	66
Weight.....	7
Width measurements.....	7
<b>Wiring configurations</b>	
External alarm reset.....	60
Regeneration.....	61
Start/stop.....	58
Thermistor.....	60
Wiring control terminals.....	44
<b>Wiring schematic</b>	
Drive.....	25





.....  
Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.  
.....

Danfoss A/S  
Ulsnaes 1  
DK-6300 Graasten  
vlt-drives.danfoss.com

