


VLT® HVAC Basic Drive Decoupling Kit Mounting Instruction for H6


Step 1

Remove brackets as shown.

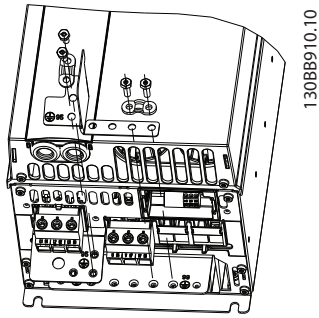


Step 3

Mount brackets again.

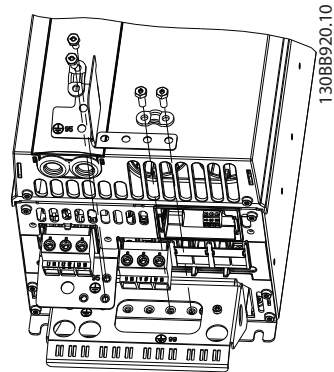


Step 2

Mount metal plate on frequency converter and fasten with two screws. Tightening torque: 2Nm.

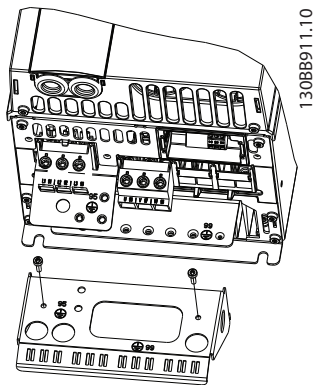

Step 4

VLT HVAC Drive Basic Drive mounted with decoupling plate.

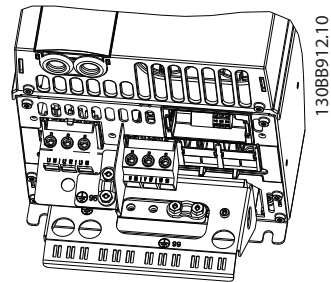

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

