


■ Relay Option MCB 105

The MCB 105 option includes 3 pieces of change over contacts and can be fitted into option slot B.

Electrical Data:

Max. terminal load (AC).....	240 V AC 2A
Max. terminal load (DC).....	24 V DC 1A
Min. terminal load (DC).....	5 V 10 mA
Max. switching rate at rated load/min load.....	6 min ⁻¹ /20 sec ⁻¹

How to add the MCB 105 option:

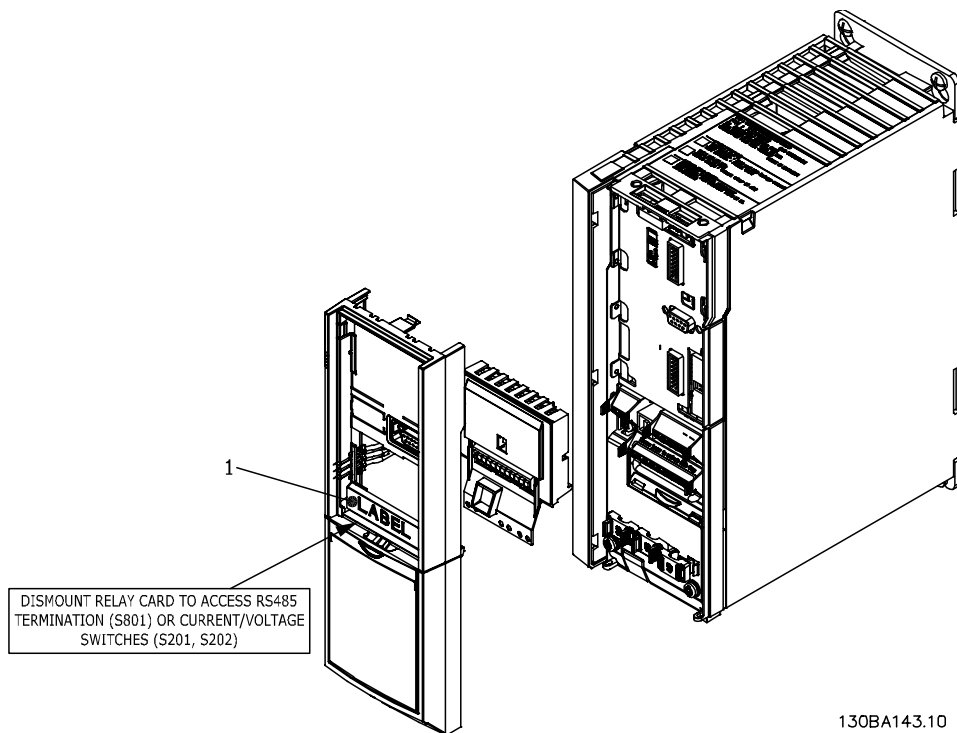


Warning Dual supply

IMPORTANT


1. The label **MUST** be placed on the LCP frame as shown (UL approved).


- The power to the adjustable frequency drive must be disconnected.
- The power to the livepart connections on relay terminals must be disconnected.
- Remove the LCP, the terminal cover and the cradle from the 3G3DV.
- Fit the MCB 105 option in slot B.
- Connect the control cables and fasten the cables by the cable strips enclosed.
- Do not mix different systems.
- Fit the extended cradle and terminal cover.
- Replace the LCP.
- Connect power to the adjustable frequency drive.
- Select the relay functions in par. 5-40 [6-8], 5-41 [6-8] and 5-42 [6-8].


NOTE! (Array [6] is relay 7, array [7] is relay 8, and array [8] is relay 9).

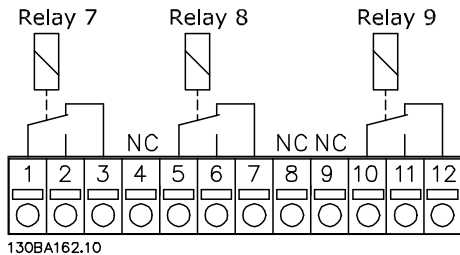

130BA176.1U

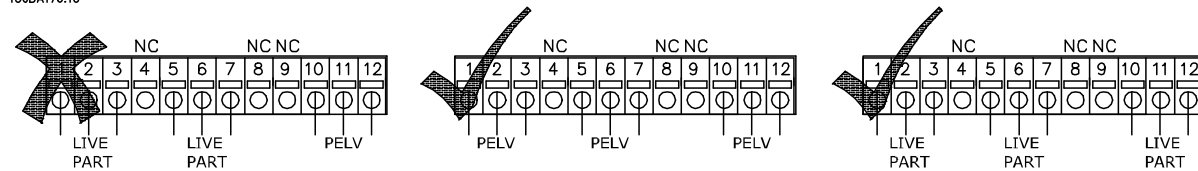

 Do not combine liveparts and PELV systems.

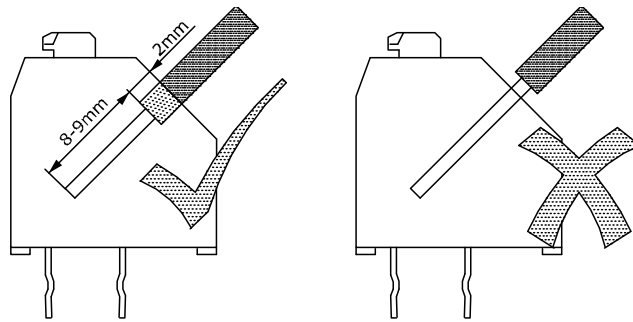

130BA177.10

Correct wire insertion.

