


-T1
/2.6:B

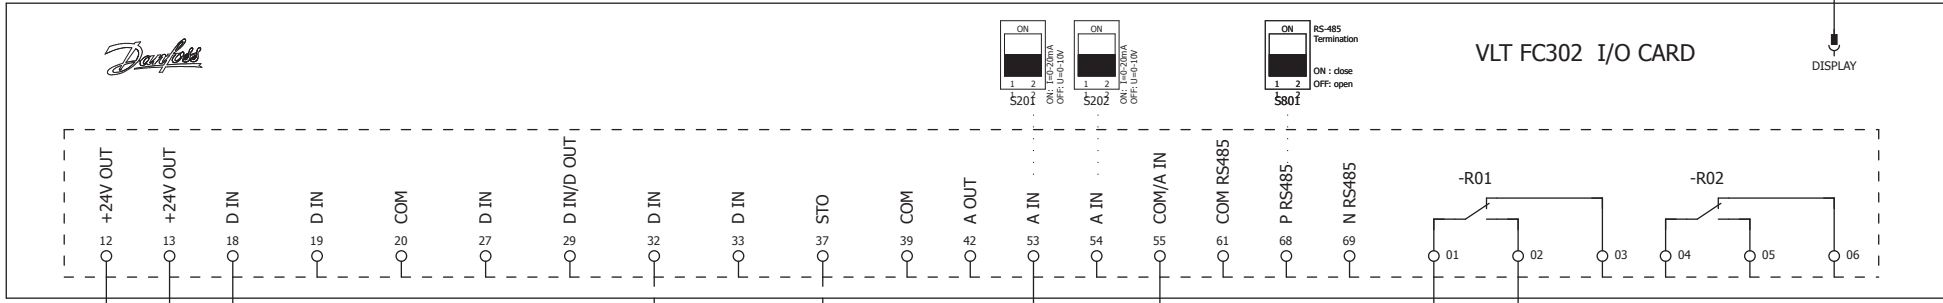

-K2
/5.7:E
Static Start/stop command
Statisch Start/Stoppbefehl

8.5:E
U1-32

8.5:E
U1-37

* Set point
Solwert

Drive signal start active
FU Signal Start aktiv

Parameter list

Parameter	Description Beschreibung	Value Wert
5-40	Ready	2
5-12	Without function	0

* Current input, 0-20mA and 4-20mA
Stromeingang, 0-20 mA und 4-20 mA
Voltage input, -10 - +10 V DC
Spannungseingang -10 - +10 V DC

Modification	Date	Name	Contr.

Date	9/30/2013
Ed.	----
Appr	----
Contr.	----

Commission
132KW VFD Panel
Project description
Disconnect switch+fuse
Trennschalter+Sicherung

Danfoss GmbH
VLT Drives EMA, Carl-Legien Strasse 8
63073 Offenbach, Germany



FILE-NAME:
LOG08300.jpg
Size 300px x 116px

Page description
Frequency converter
Frequenzumrichter

Project Number

SAP NO

= FC302
+ N132KW 230V
Manufacturer no