



-K2 /5.7:E Static Start/stop command
Statisch Start/Stoppbefehl

Parameter list

Parameter	Description Beschreibung	Value Wert
5-40	Ready	2
5-12	Without function	0

* Set point
Sollwert

Drive signal start active
FU Signal Start aktiv

* Current input, 0-20mA and 4-20mA
Stromeingang, 0-20 mA und 4-20 mA
Voltage input, -10 - +10 V DC
Spannungseingang -10 - +10 V DC