




DISPLAY

VLT FC302 I/O CARD

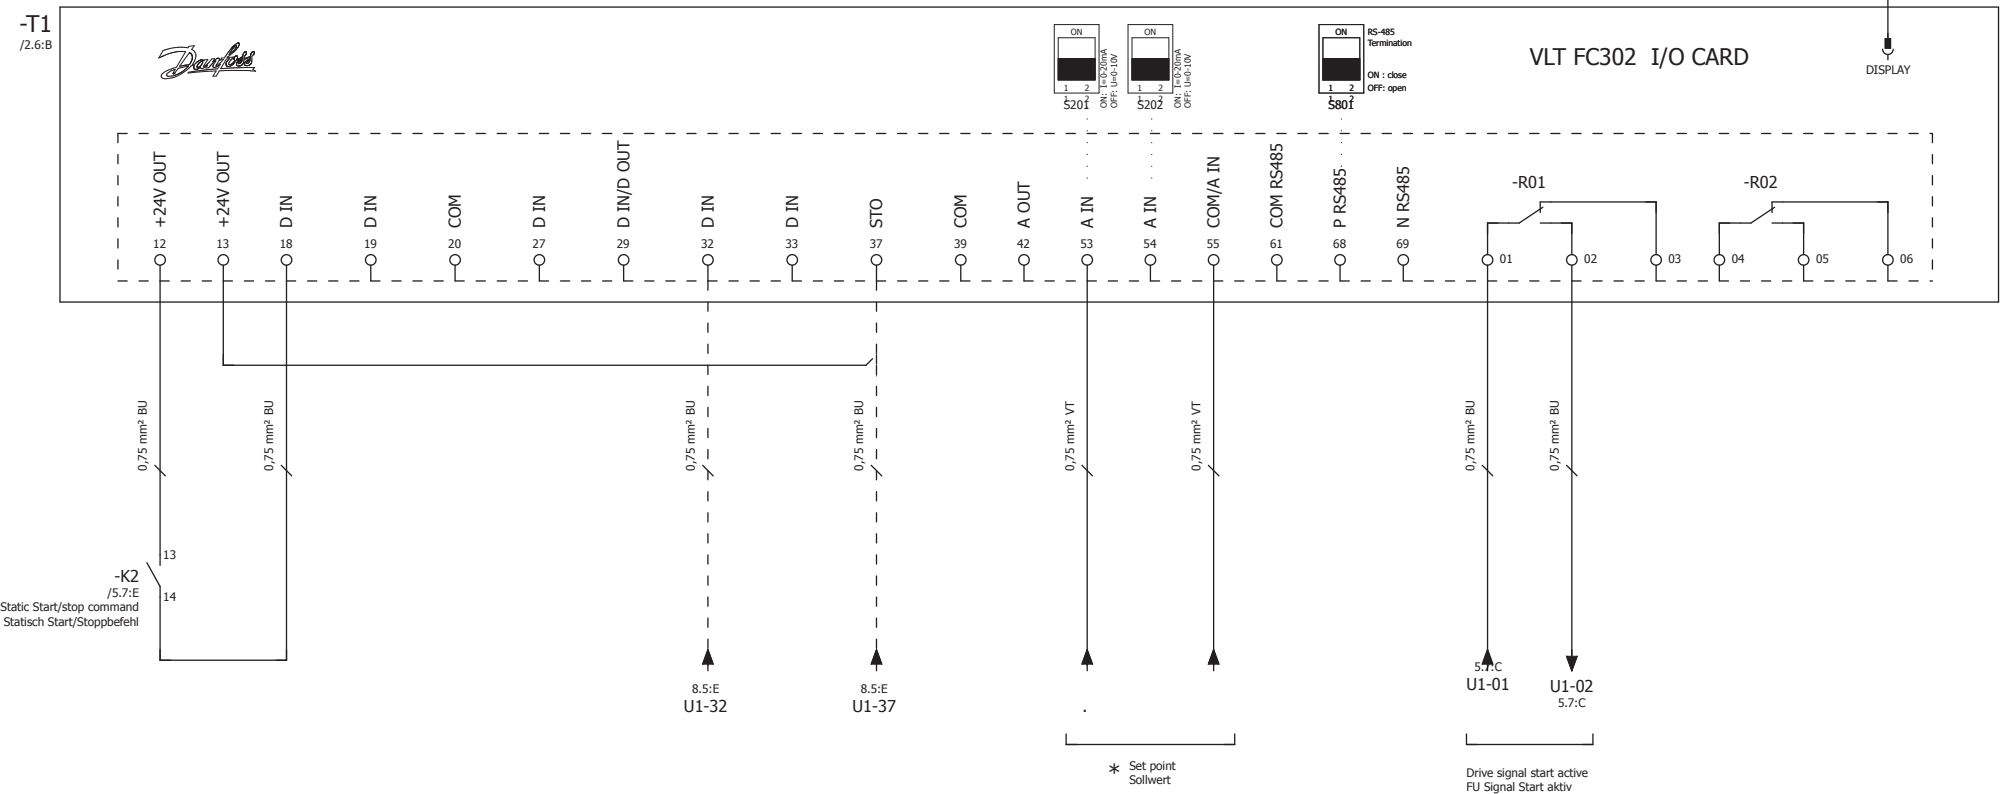

-T1 /2.6:B



-K2 /5.7:E  
Static Start/stop command  
Statisch Start/Stoppbefehl

\* Set point Sollwert

Drive signal start active  
FU Signal Start aktiv

\* Current input, 0-20mA and 4-20mA  
Stromeingang, 0-20 mA und 4-20 mA  
Voltage input, -10 - +10 V DC  
Spannungseingang -10 - +10 V DC

Parameter list

Parameter	Description Beschreibung	Value Wert
5-40	Ready	2
5-12	Without function	0