



-T1
/2.6:B



-K2
/5.7:E
Static Start/stop command
Statisch Start/Stoppbefehl

* Set point
Sollwert

Drive signal start active
FU Signal Start aktiv

Parameter list

| Parameter | Description Beschreibung | Value Wert |
|-----------|-----------------------------|---------------|
| 5-40 | Ready | 2 |
| 5-12 | Without function | 0 |

* Current input, 0-20mA and 4-20mA
Stromeingang, 0-20 mA und 4-20 mA
Voltage input, -10 - +10 V DC
Spannungseingang -10 - +10 V DC

| Modification | Date | Name | Contr. |
|--------------|------|------|--------|
| | | | |

| | |
|---------------------|-----------------|
| Commission | 9/30/2013 |
| Project description | 250KW VFD Panel |
| Appr | ----- |
| Contr. | ----- |
| Contactor Schütz | |

Danfoss GmbH
VLT Drives EMA, Carl-Legien Strasse 8
63073 Offenbach, Germany



FILE-NAME:
LOG08300.jpg
Size 300px x 116px

Page description
Frequency converter
Frequenzumrichter

| | |
|----------------|-------|
| Project Number | ---- |
| SAP NO | ----- |

| |
|-----------------|
| = FC302 |
| + N250KW 230V |
| Manufacturer no |