

Operating Guide

# VLT® HVAC Basic Drive FC 111





## Contents

<b>1</b>	<b>Introduction</b>	<b>6</b>
1.1	Purpose of this Operating Guide	6
1.2	Trademarks	6
1.3	Additional Resources	6
1.3.1	Other Resources	6
1.3.2	MCT 10 Set-up Software Support	6
1.4	Document and Software Version	6
1.5	Disposal	7
<b>2</b>	<b>Safety</b>	<b>8</b>
2.1	Safety Symbols	8
2.2	Qualified Personnel	8
2.3	Safety Precautions	8
2.4	Motor Thermal Protection	10
<b>3</b>	<b>Installation</b>	<b>11</b>
3.1	Mechanical Installation	11
3.1.1	Side-by-side Installation	11
3.1.2	Drive Dimensions	11
3.2	Electrical Installation	13
3.2.1	Electrical Installation in General	13
3.2.2	IT Mains	13
3.2.3	Mains and Motor Connection	14
3.2.3.1	Introduction	14
3.2.3.2	Connecting to Mains and Motor	14
3.2.3.3	Relays and Terminals on Enclosure Sizes H1–H5	15
3.2.3.4	Relays and Terminals on Enclosure Size H6	16
3.2.3.5	Relays and Terminals on Enclosure Size H7	16
3.2.3.6	Relays and Terminals on Enclosure Size H8	17
3.2.4	Fuses and Circuit Breakers	17
3.2.4.1	Branch Circuit Protection	17
3.2.4.2	Short-circuit Protection	17
3.2.4.3	Overcurrent Protection	17
3.2.4.4	UL/Non-UL Compliance	18
3.2.4.5	Recommendation of Fuses and Circuit Breakers	18
3.2.5	EMC-correct Electrical Installation	19
3.2.6	Control Terminals	21
3.2.7	Electrical Wiring	21
3.2.8	Acoustic Noise or Vibration	22

<b>4</b>	<b>Programming</b>	<b>24</b>
4.1	Local Control Panel (LCP)	24
4.2	Set-up Wizard	25
4.2.1	Setup Wizard Introduction	25
4.2.2	Setup Wizard for Open-loop Applications	27
4.2.3	Setup Wizard for Closed-loop Applications	33
4.2.4	Motor Setup	40
4.2.5	Changes Made Function	45
4.2.6	Changing Parameter Settings	45
4.2.7	Accessing All Parameters via the Main Menu	45
4.3	Parameter List	46
<b>5</b>	<b>Cascade Controller</b>	<b>48</b>
5.1	Introduction	48
5.1.1	Cascade Controller	48
5.1.2	Fixed Lead Pump	48
5.1.3	Lead Pump Alternation	48
5.1.4	Bandwidth Management	49
5.2	System Status and Operation	49
5.3	Start/Stop Conditions	50
5.4	Cascade Controller Wizard	51
5.5	Cascade Controller Connection	51
5.5.1	1 Pump, 1 Relay Mode	51
5.5.2	1 Pump, 2 Relay Mode	52
<b>6</b>	<b>Warnings and Alarms</b>	<b>54</b>
6.1	List of Warnings and Alarms	54
6.2	List of LCP Errors	56
<b>7</b>	<b>Specifications</b>	<b>58</b>
7.1	Mains Supply	58
7.1.1	3x380–480 V AC	58
7.2	EMC Emission Test Results	59
7.3	Special Conditions	60
7.3.1	Dusty or Humid Environment	60
7.3.2	Derating for Ambient Temperature and Switching Frequency	61
7.3.3	Derating for Low Air Pressure and High Altitudes	61
7.4	General Technical Data	61
7.4.1	Protection and Features	61
7.4.2	Mains Supply (L1, L2, L3)	61
7.4.3	Motor Output (U, V, W)	61
7.4.4	Cable Length and Cross-section	62

---

7.4.5	Digital Inputs	62
7.4.6	Analog Inputs	62
7.4.7	Analog Outputs	62
7.4.8	Digital Output	63
7.4.9	Control Card, RS485 Serial Communication	63
7.4.10	Control Card, 24 V DC Output	63
7.4.11	Relay Output	63
7.4.12	Control Card, 10 V DC Output	64
7.4.13	Ambient Conditions	64

# 1 Introduction

## 1.1 Purpose of this Operating Guide

This operating guide provides information for safe installation and commissioning of the AC drive. It is intended for use by qualified personnel. Read and follow the instructions to use the drive safely and professionally. Pay particular attention to the safety instructions and general warnings. Always keep this operating guide available with the drive.

## 1.2 Trademarks

VLT® is a registered trademark for Danfoss A/S.

## 1.3 Additional Resources

### 1.3.1 Other Resources

Other resources are available to understand advanced drive functions and programming.

- The VLT® HVAC Basic Drive FC 101 Programming Guide provides information on how to program and includes complete parameter descriptions.
- The VLT® HVAC Basic Drive FC 101 Design Guide provides all technical information about the drive. It also lists options and accessories.

The technical documentation is available in electronic form online at [www.danfoss.com](http://www.danfoss.com).

### 1.3.2 MCT 10 Set-up Software Support

Download the software from the service and support section on [www.danfoss.com](http://www.danfoss.com).

During the installation process of the software, enter access code 81462700 to activate the VLT® HVAC Basic Drive FC 111 functionality. A license key is not required for using the VLT® HVAC Basic Drive FC 111 functionality.

The latest software does not always contain the latest updates for drives. Contact the local sales office for the latest drive updates (in the form of \*.OSS files).

## 1.4 Document and Software Version

The operating guide is regularly reviewed and updated. All suggestions for improvement are welcome.

The original language of this manual is English.

**Table 1: Document and Software Version**

Edition	Remarks	Software version
AQ304735638503xx-xx0101	Update to new software version.	4.4x

From software version 4.0x and later (production week 33 2017 and after), the variable speed heat sink cooling fan function is implemented in the drive for power sizes 22 kW (30 hp) 400 V IP20 and below. This function requires software and hardware updates and introduces restrictions with regards to backwards compatibility for H1–H5 enclosure sizes. Refer to the following table for the limitations.

**Table 2: Software and Hardware Compatibility**

<b>Software compatibility</b>	<b>Old control card (production week 33 2017 or before)</b>	<b>New control card (production week 34 2017 or after)</b>
Old software (OSS-file version 3.xx and below)	Yes	No
New software (OSS-file version 4.xx or higher)	No	Yes
<b>Hardware compatibility</b>	<b>Old control card (production week 33 2017 or before)</b>	<b>New control card (production week 34 2017 or after)</b>
Old power card (production week 33 2017 or before)	Yes (only software version 3.xx or below)	Yes (MUST update software to version 4.xx or higher)
New power card (production week 34 2017 or after)	Yes (MUST update software to version 3.xx or below, the fan continuously runs at full speed)	Yes (only software version 4.xx or higher)

## 1.5 Disposal

	<p>Do not dispose of equipment containing electrical components together with domestic waste.</p> <p>Collect it separately in accordance with local and currently valid legislation.</p>
--	--

## 2 Safety

### 2.1 Safety Symbols

The following symbols are used in this manual:

#### ⚠ DANGER ⚠

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

#### ⚠ WARNING ⚠

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

#### ⚠ CAUTION ⚠

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

#### NOTICE

Indicates information considered important, but not hazard-related (for example, messages relating to property damage).

### 2.2 Qualified Personnel

To allow trouble-free and safe operation of the unit, only qualified personnel with proven skills are allowed to transport, store, assemble, install, program, commission, maintain, and decommission this equipment.

Persons with proven skills:

- Are qualified electrical engineers, or persons who have received training from qualified electrical engineers and are suitably experienced to operate devices, systems, plant, and machinery in accordance with pertinent laws and regulations.
- Are familiar with the basic regulations concerning health and safety/accident prevention.
- Have read and understood the safety guidelines given in all manuals provided with the unit, especially the instructions given in the Operating Guide.
- Have good knowledge of the generic and specialist standards applicable to the specific application.

### 2.3 Safety Precautions

#### ⚠ WARNING ⚠

##### **HIGH VOLTAGE**

AC drives contain high voltage when connected to AC mains input, DC supply, or load sharing. Failure to perform installation, start-up, and maintenance by qualified personnel can result in death or serious injury.

- Only qualified personnel must perform installation, start-up, and maintenance.



**⚠ WARNING ⚠**

**UNINTENDED START**

When the drive is connected to AC mains, DC supply, or load sharing, the motor may start at any time. Unintended start during programming, service, or repair work can result in death, serious injury, or property damage. Start the motor with an external switch, a fieldbus command, an input reference signal from the local control panel (LCP), via remote operation using MCT 10 software, or after a cleared fault condition.

- Disconnect the drive from the mains.
- Press [Off/Reset] on the LCP before programming parameters.
- Ensure that the drive is fully wired and assembled when it is connected to AC mains, DC supply, or load sharing.

**⚠ WARNING ⚠**

**DISCHARGE TIME**

The drive contains DC-link capacitors, which can remain charged even when the drive is not powered. High voltage can be present even when the warning indicator lights are off.

Failure to wait the specified time after power has been removed before performing service or repair work could result in death or serious injury.

- Stop the motor.
- Disconnect AC mains, permanent magnet type motors, and remote DC-link supplies, including battery back-ups, UPS, and DC-link connections to other drives.
- Wait for the capacitors to discharge fully. The minimum waiting time is specified in the table *Discharge time* and is also visible on the nameplate on top of the drive.
- Before performing any service or repair work, use an appropriate voltage measuring device to make sure that the capacitors are fully discharged.

**Table 3: Discharge Time**

Voltage [V]	Power range [kW (hp)]	Minimum waiting time (minutes)
3x400	0.37–7.5 (0.5–10)	4
3x400	11–90 (15–125)	15

**⚠ WARNING ⚠**

**LEAKAGE CURRENT HAZARD**

Leakage currents exceed 3.5 mA. Failure to ground the drive properly can result in death or serious injury.

- Ensure the correct grounding of the equipment by a certified electrical installer.

**⚠ WARNING ⚠****EQUIPMENT HAZARD**

Contact with rotating shafts and electrical equipment can result in death or serious injury.

- Ensure that only trained and qualified personnel perform installation, start-up, and maintenance.
- Ensure that electrical work conforms to national and local electrical codes.
- Follow the procedures in this manual.

**⚠ CAUTION ⚠****INTERNAL FAILURE HAZARD**

An internal failure in the drive can result in serious injury when the drive is not properly closed.

- Ensure that all safety covers are in place and securely fastened before applying power.

## 2.4 Motor Thermal Protection

**Procedure**

1. Set *parameter 1-90 Motor Thermal Protection* to [4] *ETR trip 1* to enable the motor thermal protection function.

### 3 Installation

#### 3.1 Mechanical Installation

##### 3.1.1 Side-by-side Installation

The drive can be mounted side-by-side but requires the clearance above and below for cooling.




**Table 4: Clearance Required for Cooling**

Size	IP class	Power [kW (hp)]	Clearance above/below [mm (in)]
<b>3x380–480 V</b>			
H1	IP20	0.37–1.5 (0.5–2)	100 (4)
H2	IP20	2.2–4 (3–5)	100 (4)
H3	IP20	5.5–7.5 (7.5–10)	100 (4)
H4	IP20	11–15 (15–20)	100 (4)
H5	IP20	18.5–22 (25–30)	100 (4)
H6	IP20	30–45 (40–60)	200 (7.9)
H7	IP20	55–75 (70–100)	200 (7.9)
H8	IP20	90 (125)	225 (8.9)

### NOTICE

With IP21/NEMA Type1 option kit mounted, a distance of 50 mm (2 in) between the units is required.

#### 3.1.2 Drive Dimensions

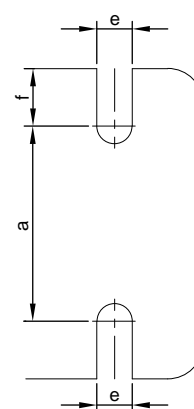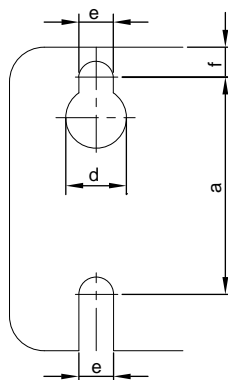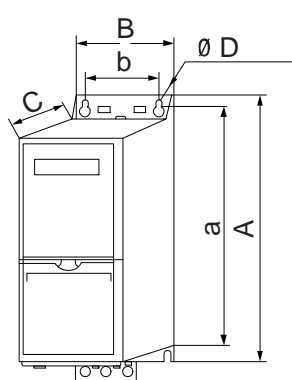

e30b984.10

**Illustration 1: Dimensions**

**Table 5: Dimensions, Enclosure Sizes H1–H4**

Enclosure Size		H1	H2	H3	H4
IP class		IP20	IP20	IP20	IP20
Power [kW (hp)]	<b>3x380–480 V</b>	0.37–1.5 (0.5–2.0)	2.2–4.0 (3.0–5.0)	5.5–7.5 (7.5–10)	11–15 (15–20)
Height [mm (in)]	<b>A</b>	195 (7.7)	227 (8.9)	255 (10.0)	296 (11.7)
	<b>A<sup>(1)</sup></b>	273 (10.7)	303 (11.9)	329 (13.0)	359 (14.1)
	<b>a</b>	183 (7.2)	212 (8.3)	240 (9.4)	275 (10.8)
Width [mm (in)]	<b>B</b>	75 (3.0)	90 (3.5)	100 (3.9)	135 (5.3)
	<b>b</b>	56 (2.2)	65 (2.6)	74 (2.9)	105 (4.1)
Depth [mm (in)]	<b>C</b>	168 (6.6)	190 (7.5)	206 (8.1)	241 (9.5)
Mounting hole [mm (in)]	<b>d</b>	9 (0.35)	11 (0.43)	11 (0.43)	12.6 (0.50)
	<b>e</b>	4.5 (0.18)	5.5 (0.22)	5.5 (0.22)	7 (0.28)
	<b>f</b>	5.3 (0.21)	7.4 (0.29)	8.1 (0.32)	8.4 (0.33)
Maximum weight kg (lb)		2.1 (4.6)	3.4 (7.5)	4.5 (9.9)	7.9 (17.4)

<sup>1</sup> Including decoupling plate.

**Table 6: Dimensions, Enclosure Sizes H6–H10**

Enclosure Size		H5	H6	H7	H8
IP class		IP20	IP20	IP20	IP20
Power [kW (hp)]	<b>3x380–480 V</b>	18.5–22 (25–30)	30–45 (40–60)	55–75 (70–100)	90 (125)
Height [mm (in)]	<b>A</b>	334 (13.1)	518 (20.4)	550 (21.7)	660 (26)
	<b>A<sup>(1)</sup></b>	402 (15.8)	595 (23.4)/635 (25), 45 kW	630 (24.8)/690 (27.2), 75 kW	800 (31.5)
	<b>a</b>	314 (12.4)	495 (19.5)	521 (20.5)	631 (24.8)
Width [mm (in)]	<b>B</b>	150 (5.9)	239 (9.4)	313 (12.3)	375 (14.8)
	<b>b</b>	120 (4.7)	200 (7.9)	270 (10.6)	330 (13)
Depth [mm (in)]	<b>C</b>	255 (10)	242 (9.5)	335 (13.2)	335 (13.2)
Mounting hole [mm (in)]	<b>d</b>	12.6 (0.50)	–	–	–
	<b>e</b>	7 (0.28)	8.5 (0.33)	8.5 (0.33)	8.5 (0.33)
	<b>f</b>	8.5 (0.33)	15 (0.6)	17 (0.67)	17 (0.67)
Maximum weight kg (lb)		9.5 (20.9)	24.5 (54)	36 (79)	51 (112)

<sup>1</sup> Including decoupling plate.

The dimensions are only for the physical units. When installing in an application, allow space above and below the units for cooling. The amount of space for free air passage is listed in [3.1.1 Side-by-side Installation](#).

## 3.2 Electrical Installation

### 3.2.1 Electrical Installation in General

All cabling must comply with national and local regulations on cable cross-sections and ambient temperature. Copper conductors are required. 75 °C (167 °F) is recommended.

**Table 7: Tightening Torques for Enclosure Sizes H1–H8, 3x380–480 V**

Power [kW (hp)]				Torque [Nm (in-lb)]				
Enclosure size	IP class	3x380–480 V	Mains	Motor	DC connection	Control terminals	Ground	Relay
H1	IP20	0.37–1.5 (0.5–2)	0.8 (7)	0.8 (7)	0.8 (7)	0.5 (4)	0.8 (7)	0.5 (4)
H2	IP20	2.2–4.0 (3–5)	0.8 (7)	0.8 (7)	0.8 (7)	0.5 (4)	0.8 (7)	0.5 (4)
H3	IP20	5.5–7.5 (7.5–10)	0.8 (7)	0.8 (7)	0.8 (7)	0.5 (4)	0.8 (7)	0.5 (4)
H4	IP20	11–15 (15–20)	1.2 (11)	1.2 (11)	1.2 (11)	0.5 (4)	0.8 (7)	0.5 (4)
H5	IP20	18.5–22 (25–30)	1.2 (11)	1.2 (11)	1.2 (11)	0.5 (4)	0.8 (7)	0.5 (4)
H6	IP20	30–45 (40–60)	4.5 (40)	4.5 (40)	–	0.5 (4)	3 (27)	0.5 (4)
H7	IP20	55 (70)	10 (89)	10 (89)	–	0.5 (4)	3 (27)	0.5 (4)
H7	IP20	75 (100)	14 (124)	14 (124)	–	0.5 (4)	3 (27)	0.5 (4)
H8	IP20	90 (125)	24 (212) <sup>(1)</sup>	24 (212) <sup>(1)</sup>	–	0.5 (4)	3 (27)	0.5 (4)

<sup>1</sup> Cable dimensions >95 mm<sup>2</sup>.

### 3.2.2 IT Mains


#### ⚠ CAUTION ⚠

##### IT Mains

Installation on isolated mains source, that is, IT mains.

- Ensure that the supply voltage does not exceed 440 V (3x380–480 V units) when connected to mains.

For 380–480 V, IP20, 0.37–22 kW (0.5–30 hp) units, open the RFI switch by removing the screw on the side of the drive when at IT grid.

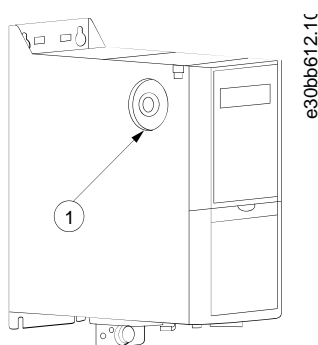

1 EMC screw

**Illustration 2:** IP20, 0.37–22 kW (0.5–30 hp), 380–480 V

For 380–480 V, 30–90 kW (40–125 hp) units, set *parameter 14-50 RFI Filter* to [0] Off when operating in IT mains.

## NOTICE

If reinserted, use only M3x12 screw.

### 3.2.3 Mains and Motor Connection

#### 3.2.3.1 Introduction


The drive is designed to operate all standard 3-phase asynchronous motors.

- Use a shielded/armored motor cable to comply with EMC emission specifications and connect this cable to both the decoupling plate and the motor.
- Keep the motor cable as short as possible to reduce the noise level and leakage currents.
- For further details on mounting the decoupling plate, see *VLT® HVAC Basic Drive Decoupling Plate Mounting Instruction*.
- Also see EMC-Correct Installation in the [3.2.5 EMC-correct Electrical Installation](#).

#### 3.2.3.2 Connecting to Mains and Motor

1. Mount the ground cables to the ground terminal.
2. Connect the motor to terminals U, V, and W, and then tighten the screws according to the torques described in [3.2.1 Electrical Installation in General](#).
3. Connect the mains supply to terminals L1, L2, and L3, and then tighten the screws according to the torques described in [3.2.1 Electrical Installation in General](#).


### 3.2.3.3 Relays and Terminals on Enclosure Sizes H1–H5

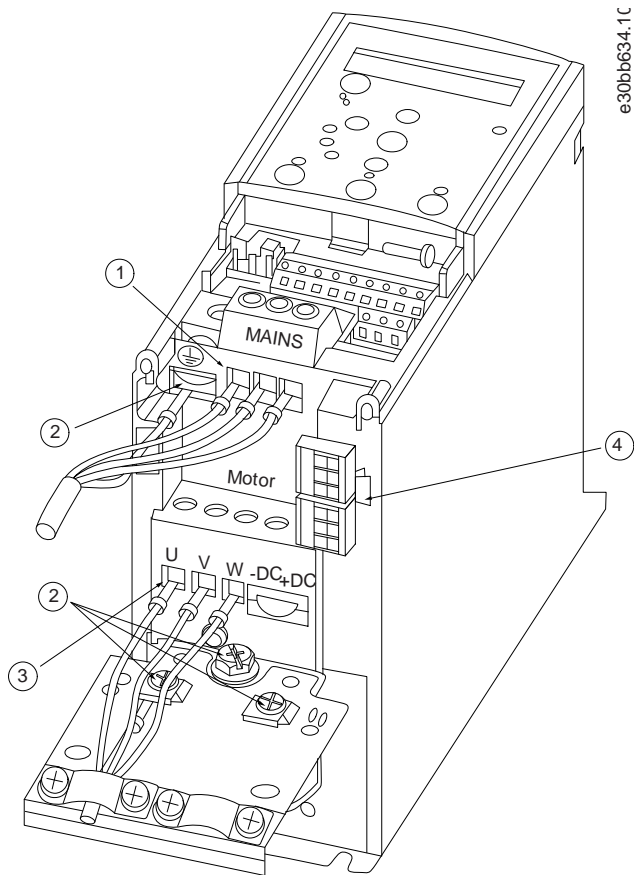

1 Mains	2 Ground
3 Motor	4 Relays

**Illustration 3:** Enclosure Sizes H1–H5 IP20, 380–480 V, 0.37–22 kW (0.5–30 hp)


### 3.2.3.4 Relays and Terminals on Enclosure Size H6

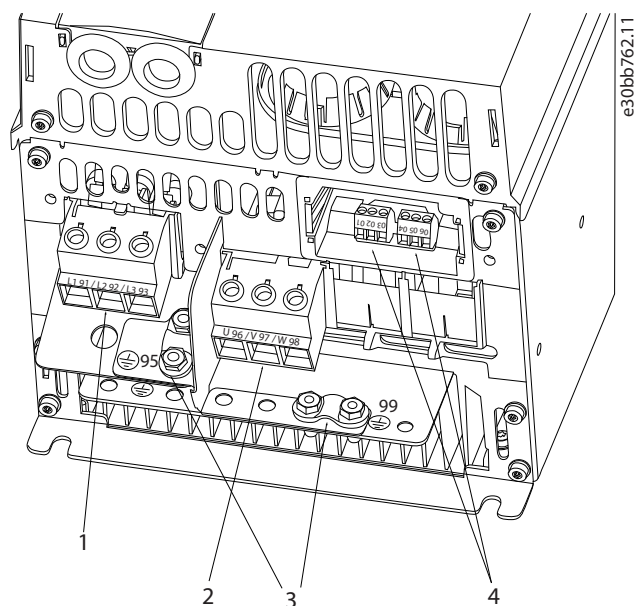

1 Mains	2 Motor
3 Ground	4 Relays

Illustration 4: Enclosure Size H6 IP20, 380–480 V, 30–45 kW (40–60 hp)

### 3.2.3.5 Relays and Terminals on Enclosure Size H7

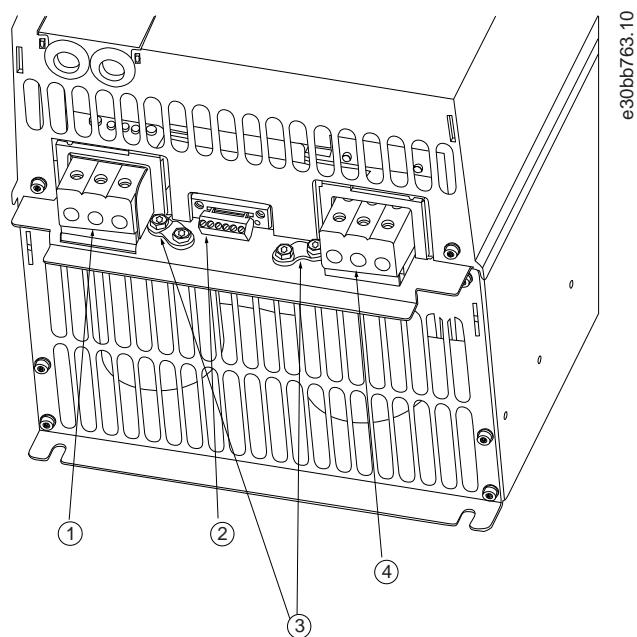


1 Mains	2 Relays
---------	----------



3 Ground	4 Motor
----------	---------

Illustration 5: Enclosure Size H7 IP20, 380–480 V, 55–75 kW (70–100 hp)

### 3.2.3.6 Relays and Terminals on Enclosure Size H8

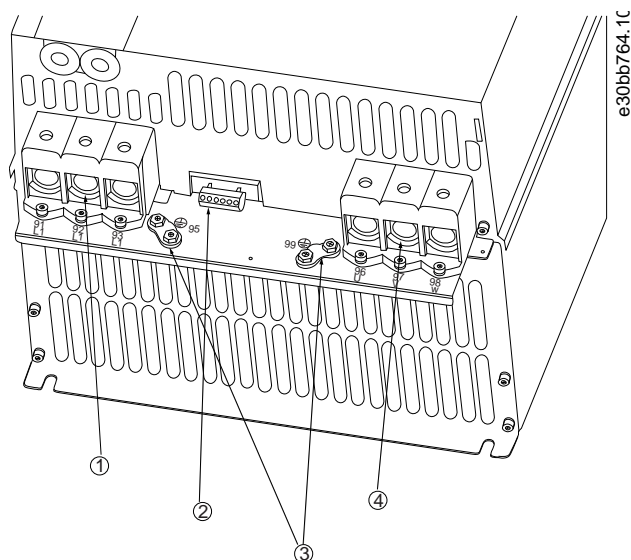

1 Mains	2 Relays
3 Ground	4 Motor

Illustration 6: Enclosure Size H8 IP20, 380–480 V, 90 kW (125 hp)

## 3.2.4 Fuses and Circuit Breakers

### 3.2.4.1 Branch Circuit Protection

To prevent fire hazards, protect the branch circuits in an installation - switch gear, machines, and so on - against short circuits and overcurrent. Follow national and local regulations.

### 3.2.4.2 Short-circuit Protection

Danfoss recommends using the fuses and circuit breakers listed in this chapter to protect service personnel or other equipment in case of an internal failure in the unit or a short circuit on the DC link. The drive provides full short-circuit protection in case of a short circuit on the motor.

### 3.2.4.3 Overcurrent Protection

Provide overload protection to avoid overheating of the cables in the installation. Overcurrent protection must always be carried out according to local and national regulations. Design circuit breakers and fuses for protection in a circuit capable of supplying a maximum of 100000 A<sub>rms</sub> (symmetrical), 480 V maximum.

### 3.2.4.4 UL/Non-UL Compliance

To ensure compliance with UL or IEC 61800-5-1, use the circuit breakers or fuses listed in this chapter. Circuit breakers must be designed for protection in a circuit capable of supplying a maximum of 10000 A<sub>rms</sub> (symmetrical), 480 V maximum.

### 3.2.4.5 Recommendation of Fuses and Circuit Breakers

#### NOTICE

In the event of malfunction, failure to follow the protection recommendation may result in damage to the drive.

**Table 8: Fuses and Circuit Breakers**


	Circuit breaker		Fuse				
	UL	Non-UL	UL				Non-UL
			Bussmann	Bussmann	Bussmann	Bussmann	Maximum fuse
Power [kW (hp)]			Type RK5	Type RK1	Type J	Type T	Type G
<b>3x380–480 V IP20</b>							
0.37 (0.5)	–	–	FRS-R-10	KTS-R10	JKS-10	JJS-10	10
0.75 (1)			FRS-R-10	KTS-R10	JKS-10	JJS-10	10
1.5 (2)			FRS-R-10	KTS-R10	JKS-10	JJS-10	10
2.2 (3)			FRS-R-15	KTS-R15	JKS-15	JJS-15	16
3 (4)			FRS-R-15	KTS-R15	JKS-15	JJS-15	16
4 (5)			FRS-R-15	KTS-R15	JKS-15	JJS-15	16
5.5 (7.5)			FRS-R-25	KTS-R25	JKS-25	JJS-25	25
7.5 (10)			FRS-R-25	KTS-R25	JKS-25	JJS-25	25
11 (15)			FRS-R-50	KTS-R50	JKS-50	JJS-50	50
15 (20)			FRS-R-50	KTS-R50	JKS-50	JJS-50	50
18.5 (25)			FRS-R-80	KTS-R80	JKS-80	JJS-80	65
22 (30)			FRS-R-80	KTS-R80	JKS-80	JJS-80	65
30 (40)	Cutler-Hammer EGE3125FFG	Moeller NZMB1- A125	FRS-R-125	KTS-R125	JKS-R125	JJS-R125	80
37 (50)			FRS-R-125	KTS-R125	JKS-R125	JJS-R125	100
45 (60)			FRS-R-125	KTS-R125	JKS-R125	JJS-R125	125
55 (70)	Cutler-Hammer JGE3200FFG	Moeller NZMB1- A200	FRS-R-200	KTS-R200	JKS-R200	JJS-R200	150
75 (100)			FRS-R-200	KTS-R200	JKS-R200	JJS-R200	200
90 (125)	Cutler-Hammer JGE3250FFG	Moeller NZMB2- A250	FRS-R-250	KTS-R250	JKS-R250	JJS-R250	250

### 3.2.5 EMC-correct Electrical Installation

To ensure EMC-correct electrical installation, observe the following:

- Use only shielded/armored motor cables and shielded/armored control cables.
- Ground the shield at both ends.
- Avoid installation with twisted shield ends (pigtailed), because it reduces the shielding effect at high frequencies. Use the cable clamps provided.
- Ensure the same potential between the drive and the ground potential of PLC.
- Use star washers and galvanically conductive installation plates.

e30bb761.12

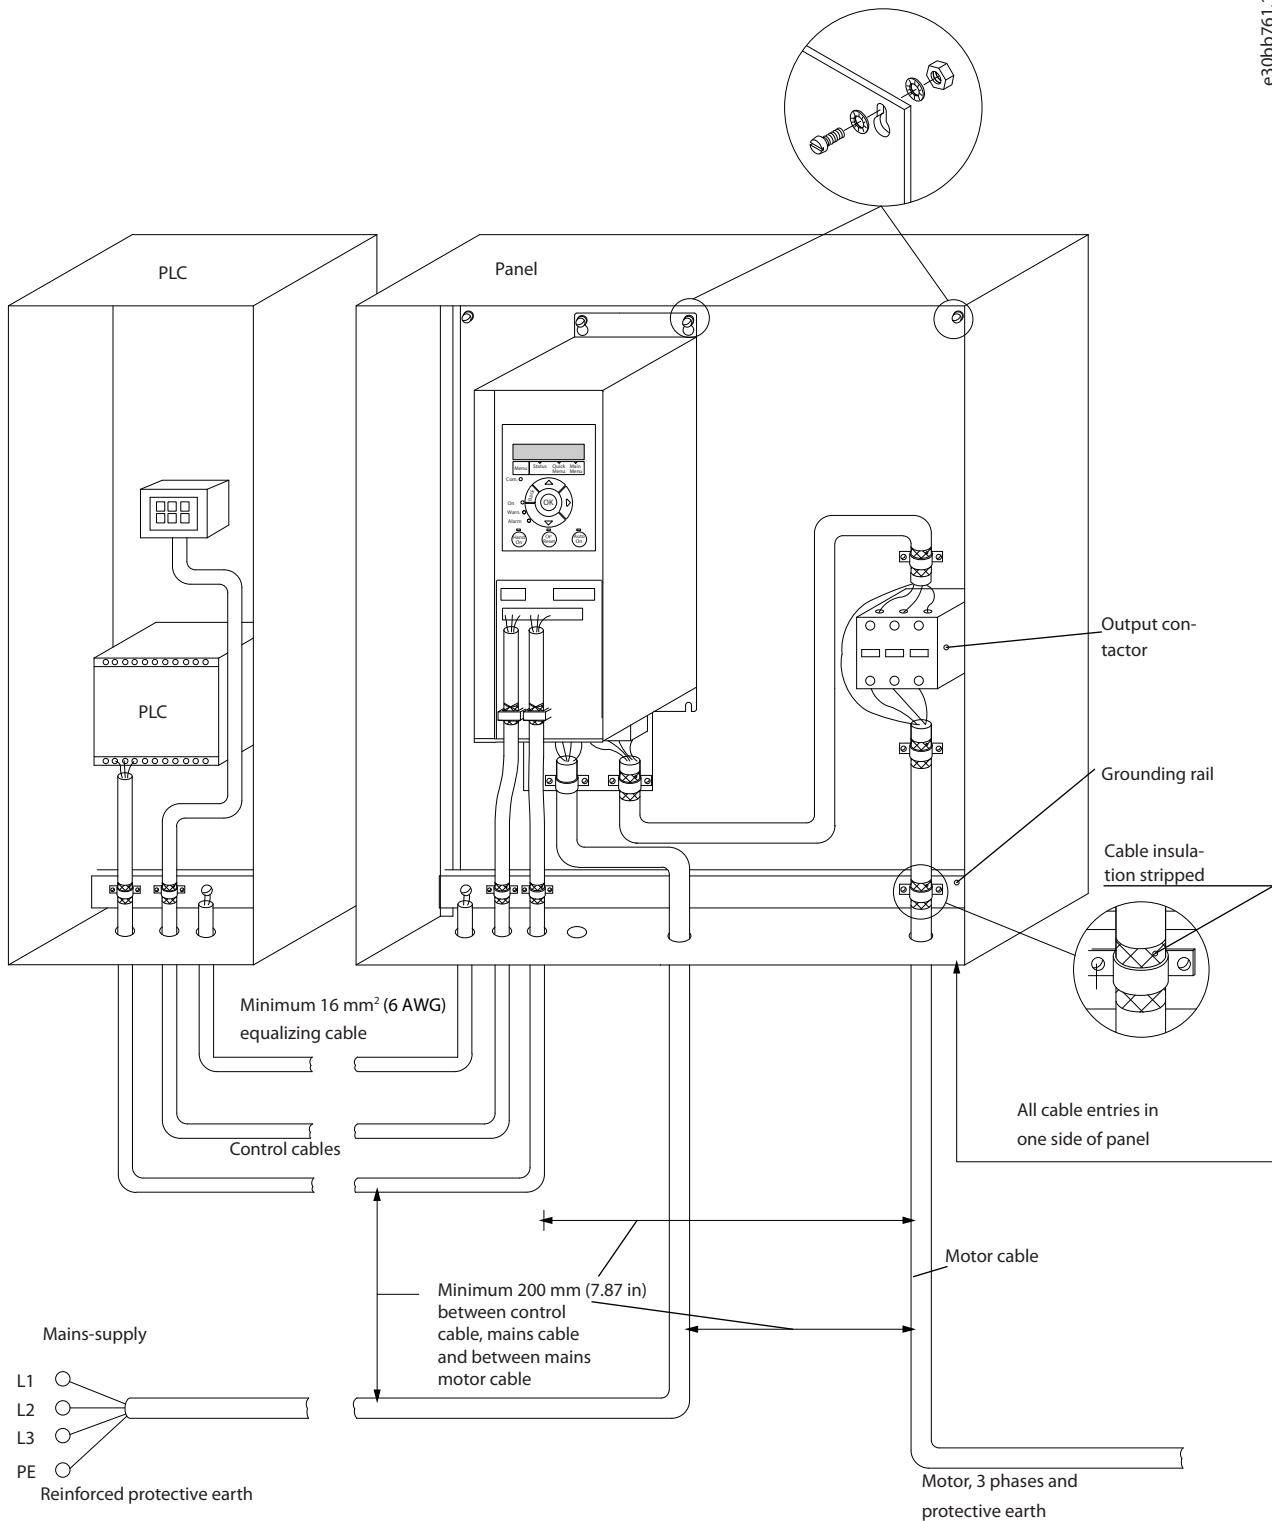


**Illustration 7: EMC-correct Electrical Installation**

### 3.2.6 Control Terminals

Remove the terminal cover to access the control terminals.


Use a flat-edged screwdriver to push down the lock lever of the terminal cover under the LCP, then remove the terminal cover as shown in the following illustration.

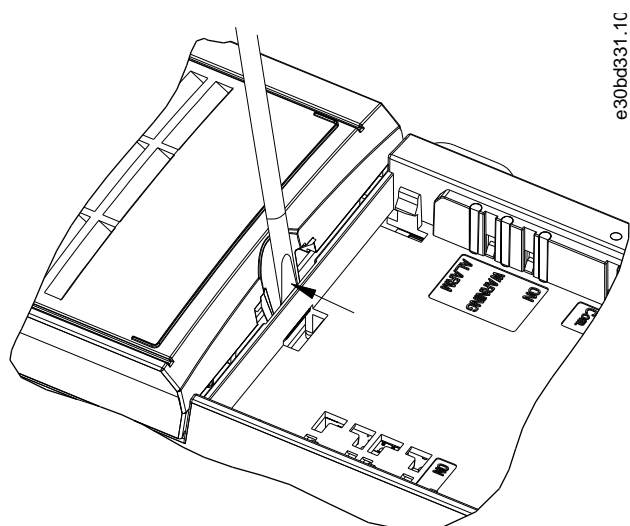

**Illustration 8: Removing the Terminal Cover**

The following illustration shows all the drive control terminals. Applying start (terminal 18), connection between terminals 12-27, and an analog reference (terminal 53 or 54, and 55) make the drive run.

The digital input mode of terminal 18, 19, and 27 is set in *parameter 5-00 Digital Input Mode* (PNP is default value). Digital input 29 mode is set in *parameter 5-03 Digital Input 29 Mode* (PNP is default value).

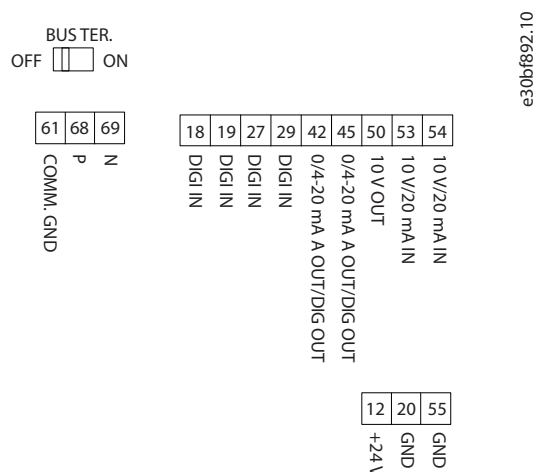

**Illustration 9: Control Terminals**

### 3.2.7 Electrical Wiring

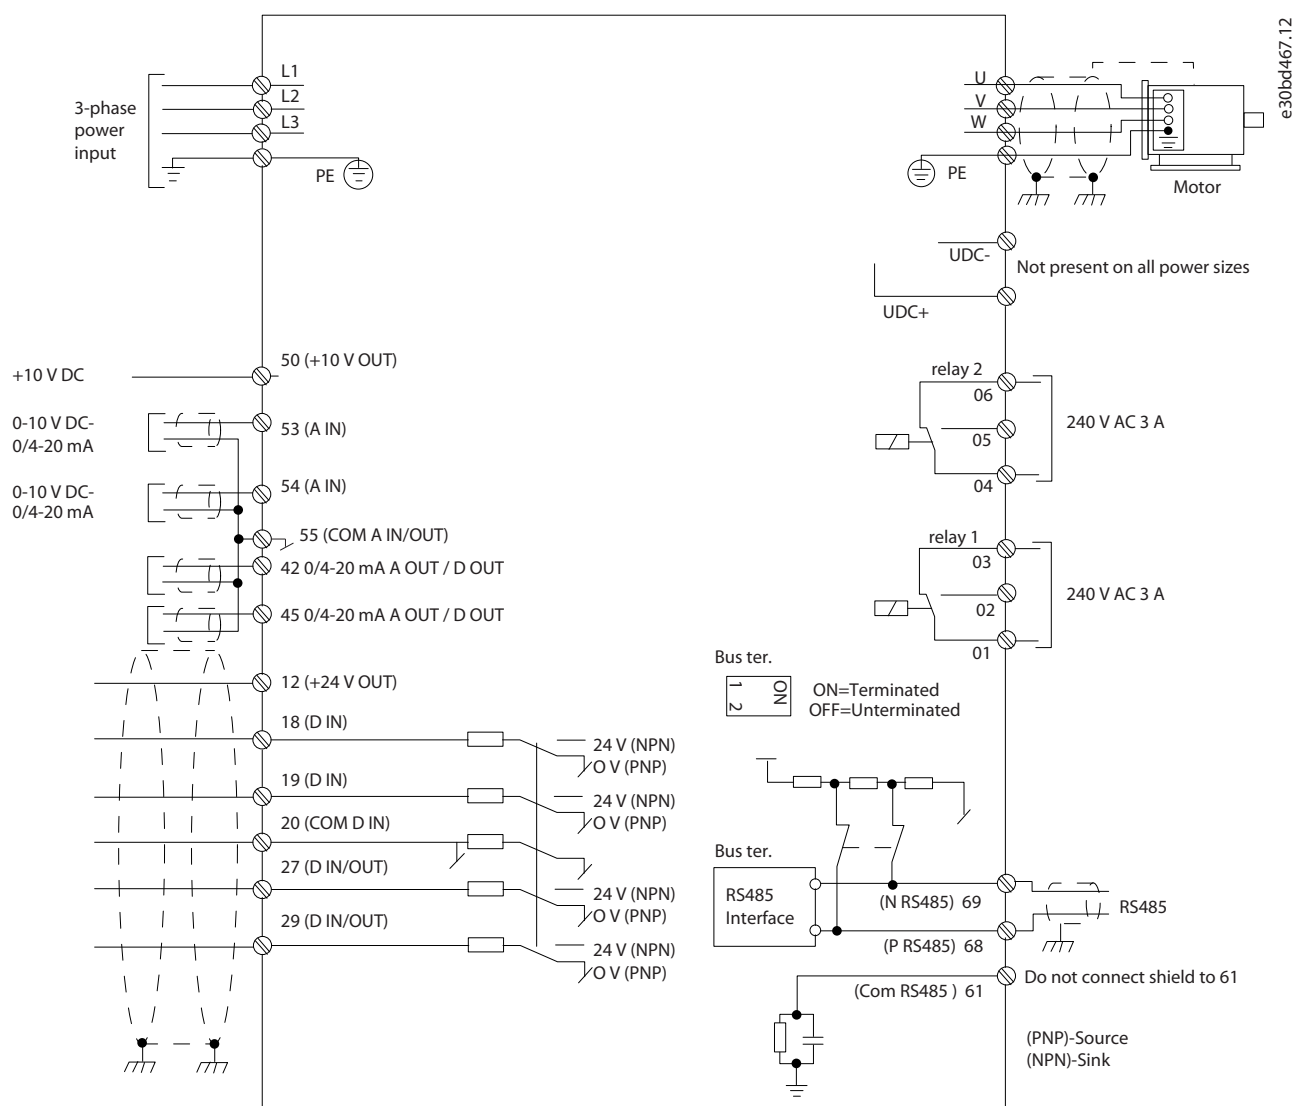


Illustration 10: Basic Wiring Schematic Drawing

## NOTICE

There is no access to UDC- and UDC+ on the following units:

- IP20, 380–480 V, 30–90 kW (40–125 hp)

### 3.2.8 Acoustic Noise or Vibration

If the motor or the equipment driven by the motor, for example, a fan, is making noise or vibrations at certain frequencies, configure the following parameters or parameter groups to reduce or eliminate the noise or vibrations:

- *Parameter group 4-6\* Speed Bypass.*
- *Set parameter 14-03 Overmodulation to [0] Off.*
- *Switching pattern and switching frequency parameter group 14-0\* Inverter Switching.*
- *Parameter 1-64 Resonance Dampening.*


## 4 Programming

### 4.1 Local Control Panel (LCP)

The drive can be programmed from the LCP or from a PC via the RS485 COM port by installing the MCT 10 Setup Software.

The LCP is divided into 4 functional sections.

- A. Display
- B. Menu key
- C. Navigation keys and indicator lights
- D. Operation keys and indicator lights

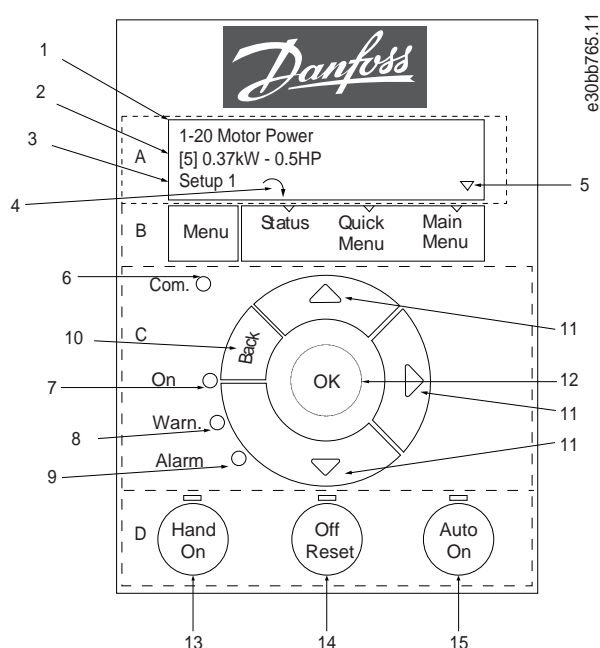

**Illustration 11: Local Control Panel (LCP)**

#### A. Display

The LCD-display is illuminated with 2 alphanumeric lines. All data is shown on the LCP. The [table 9](#) describes the information that can be read from the display.

**Table 9: Legend to Section A**

1	Parameter number and name.
2	Parameter value.
3	Setup number shows the active setup and the edit setup. If the same setup acts as both active and edit setup, only that setup number is shown (factory setting). When active and edit setup differ, both numbers are shown in the display (setup 12). The number flashing indicates the edit setup.
4	Motor direction is shown to the bottom left of the display – indicated by a small arrow pointing either clockwise or counter-clockwise.



5	The triangle indicates if the LCP is in Status, Quick Menu, or Main Menu.
---	---

### B. Menu key

Press [Menu] to select among Status, Quick Menu, or Main Menu.

### C. Navigation keys and indicator lights

Table 10: Legend to Section C

6	Com. LED: Flashes during bus communication.
7	Green LED/On: Control section is working correctly.
8	Yellow LED/Warn.: Indicates a warning.
9	Flashing Red LED/Alarm: Indicates an alarm.
10	[Back]: For moving to the previous step or layer in the navigation structure.
11	[Δ] [▽] [▶]: For navigating among parameter groups and parameters, and within parameters. They can also be used for setting local reference.
12	[OK]: For selecting a parameter and for accepting changes to parameter settings.

### D. Operation keys and indicator lights


Table 11: Legend to Section D

13	[Hand On]: Starts the motor and enables control of the drive via the LCP.
<div style="background-color: #cccccc; padding: 5px; border: 1px solid black;"> <p><b>NOTICE</b></p> <p><b>[2] Coast inverse is the default option for parameter 5-12 Terminal 27 Digital Input. If there is no 24 V supply to terminal 27, [Hand On] does not start the motor. Connect terminal 12 to terminal 27.</b></p> </div>	
14	[Off/Reset]: Stops the motor (Off). If in alarm mode, the alarm is reset.
15	[Auto On]: The drive is controlled either via control terminals or serial communication.

## 4.2 Set-up Wizard

### 4.2.1 Setup Wizard Introduction


The built-in wizard menu guides the installer through the setup of the drive in a clear and structured manner for open-loop and closed-loop applications, and for quick motor settings.

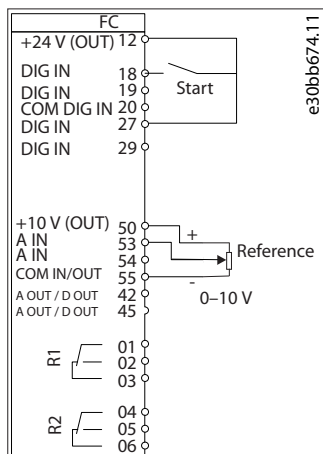

e30bb674.11

**Illustration 12: Drive Wiring**

 
The wizard is shown after power-up until any parameter has been changed. The wizard can always be accessed again through the quick menu. Press [OK] to start the wizard. Press [Back] to return to the status view.



e30bb629.10

**Illustration 13: Start-up/Quit Wizard**

### 4.2.2 Setup Wizard for Open-loop Applications

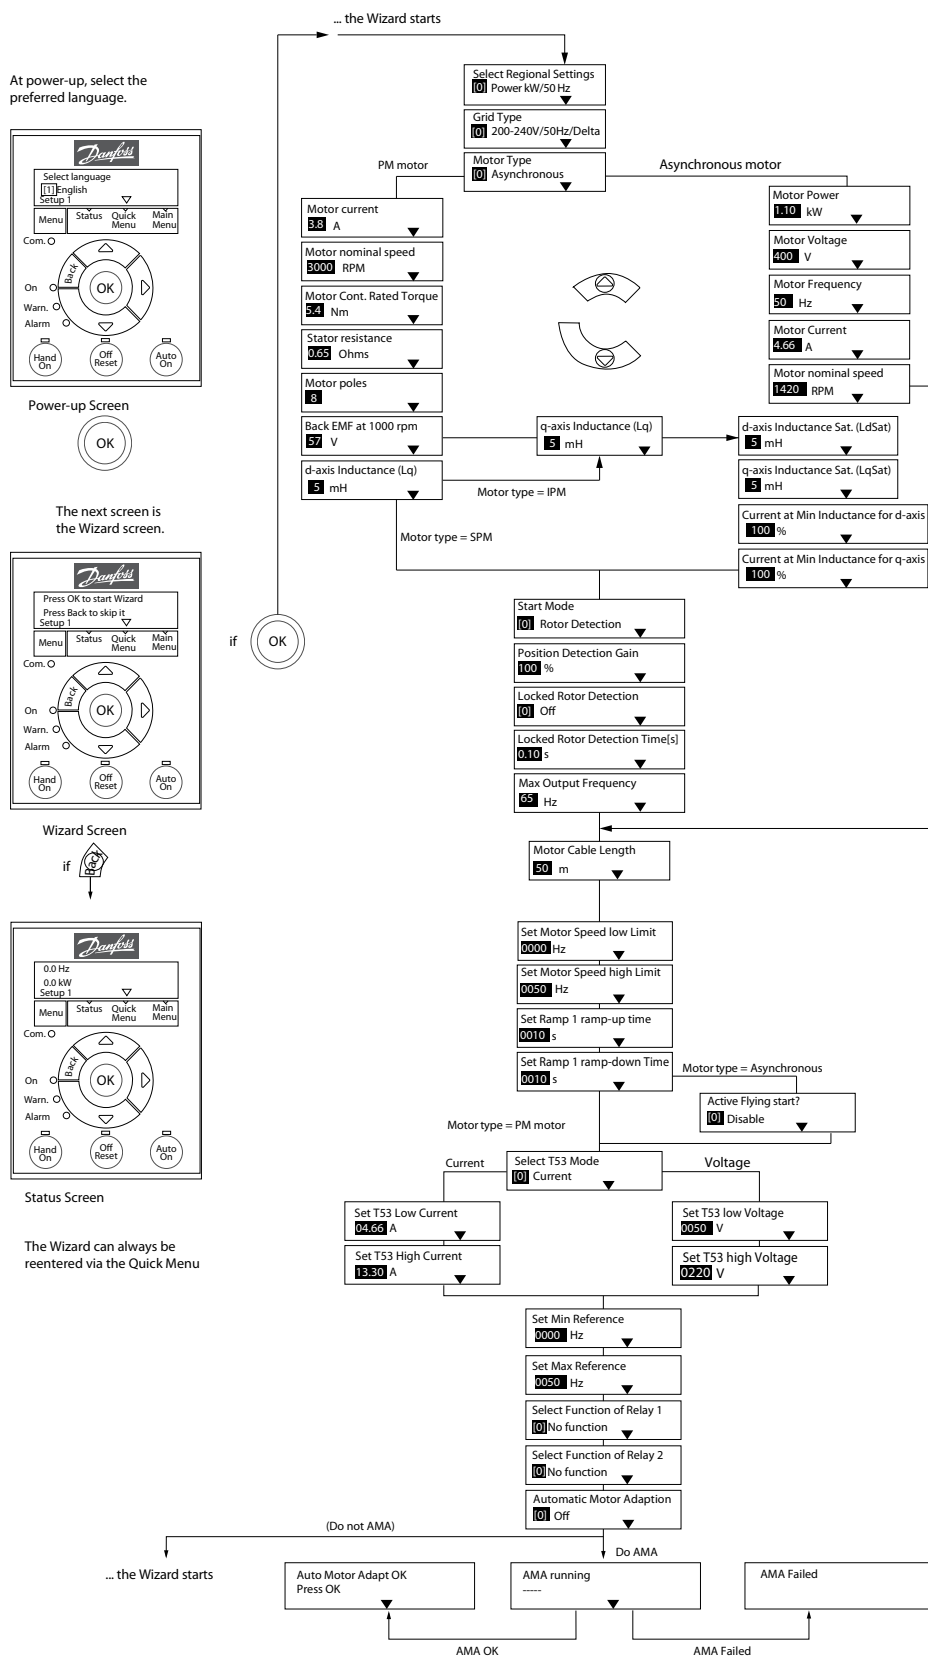

e30bc244.16

Illustration 14: Setup Wizard for Open-loop Applications

**Table 12: Setup Wizard for Open-loop Applications**

Parameter	Option	Default	Usage
Parameter 0-03 Regional Settings	[0] International [1] US	[0] International	–
Parameter 0-06 GridType	[0] 200–240 V/50 Hz/IT-grid [1] 200–240 V/50 Hz/Delta [2] 200–240 V/50 Hz [10] 380–440 V/50 Hz/IT-grid [11] 380–440 V/50 Hz/Delta [12] 380–440 V/50 Hz [20] 440–480 V/50 Hz/IT-grid [21] 440–480 V/50 Hz/Delta [22] 440–480 V/50 Hz [30] 525–600 V/50 Hz/IT-grid [31] 525–600 V/50 Hz/Delta [32] 525–600 V/50 Hz [100] 200–240 V/60 Hz/IT-grid [101] 200–240 V/60 Hz/Delta [102] 200–240 V/60 Hz [110] 380–440 V/60 Hz/IT-grid [111] 380–440 V/60 Hz/Delta [112] 380–440 V/60 Hz [120] 440–480 V/60 Hz/IT-grid [121] 440–480 V/60 Hz/Delta [122] 440–480 V/60 Hz [130] 525–600 V/60 Hz/IT-grid [131] 525–600 V/60 Hz/Delta [132] 525–600 V/60 Hz	Size related	Select the operating mode for restart after reconnection of the drive to mains voltage after power down.

Parameter	Option	Default	Usage
Parameter 1-10 Motor Construction	*[0] Asynchron  [1] PM, non-salient SPM  [3] PM, salient IPM	[0] Asynchron	Setting the parameter value might change these parameters: <ul style="list-style-type: none"> <li>• Parameter 1-01 Motor Control Principle.</li> <li>• Parameter 1-03 Torque Characteristics.</li> <li>• Parameter 1-08 Motor Control Bandwidth.</li> <li>• Parameter 1-14 Damping Gain.</li> <li>• Parameter 1-15 Low Speed Filter Time Const.</li> <li>• Parameter 1-16 High Speed Filter Time Const.</li> <li>• Parameter 1-17 Voltage Filter Time Const.</li> <li>• Parameter 1-20 Motor Power.</li> <li>• Parameter 1-22 Motor Voltage.</li> <li>• Parameter 1-23 Motor Frequency.</li> <li>• Parameter 1-24 Motor Current.</li> <li>• Parameter 1-25 Motor Nominal Speed.</li> <li>• Parameter 1-26 Motor Cont. Rated Torque.</li> <li>• Parameter 1-30 Stator Resistance (Rs).</li> <li>• Parameter 1-33 Stator Leakage Reactance (X1).</li> <li>• Parameter 1-35 Main Reactance (Xh).</li> <li>• Parameter 1-37 d-axis Inductance (Ld).</li> <li>• Parameter 1-38 q-axis Inductance (Lq).</li> <li>• Parameter 1-39 Motor Poles.</li> <li>• Parameter 1-40 Back EMF at 1000 RPM.</li> <li>• Parameter 1-44 d-axis Inductance Sat. (LdSat).</li> <li>• Parameter 1-45 q-axis Inductance Sat. (LqSat).</li> <li>• Parameter 1-46 Position Detection Gain.</li> <li>• Parameter 1-48 Current at Min Inductance for d-axis.</li> <li>• Parameter 1-49 Current at Min Inductance for q-axis.</li> <li>• Parameter 1-66 Min. Current at Low Speed.</li> <li>• Parameter 1-70 PM Start Mode.</li> <li>• Parameter 1-72 Start Function.</li> <li>• Parameter 1-73 Flying Start.</li> <li>• Parameter 1-80 Function at Stop.</li> <li>• Parameter 1-82 Min Speed for Function at Stop [Hz].</li> <li>• Parameter 1-90 Motor Thermal Protection.</li> <li>• Parameter 2-00 DC Hold/Motor Preheat Current.</li> <li>• Parameter 2-01 DC Brake Current.</li> <li>• Parameter 2-02 DC Braking Time.</li> <li>• Parameter 2-04 DC Brake Cut In Speed.</li> <li>• Parameter 2-10 Brake Function.</li> <li>• Parameter 4-14 Motor Speed High Limit [Hz].</li> <li>• Parameter 4-19 Max Output Frequency.</li> <li>• Parameter 4-58 Missing Motor Phase Function.</li> <li>• Parameter 14-65 Speed Derate Dead Time Compensation.</li> </ul>

Parameter	Option	Default	Usage
Parameter 1-20 Motor Power	0.18–110 kW/0.25–150 hp	Size related	Enter the motor power from the nameplate data.
Parameter 1-22 Motor Voltage	50–1000 V	Size related	Enter the motor voltage from the nameplate data.
Parameter 1-23 Motor Frequency	20–400 Hz	Size related	Enter the motor frequency from the nameplate data.
Parameter 1-24 Motor Current	0.01–10000.00 A	Size related	Enter the motor current from the nameplate data.
Parameter 1-25 Motor Nominal Speed	50–9999 RPM	Size related	Enter the motor nominal speed from the nameplate data.
Parameter 1-26 Motor Cont. Rated Torque	0.1–1000.0 Nm	Size related	This parameter is available when <i>parameter 1-10 Motor Construction</i> is set to options that enable permanent motor mode.  <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p><b>NOTICE</b></p> <p>Changing this parameter affects the settings of other parameters.</p> </div>
Parameter 1-29 Automatic Motor Adaption (AMA)	See <i>parameter 1-29 Automatic Motor Adaption (AMA)</i> .	Off	Performing an AMA optimizes motor performance.
Parameter 1-30 Stator Resistance (Rs)	0.000–99.990 Ω	Size related	Set the stator resistance value.
Parameter 1-37 d-axis Inductance (Ld)	0.000–1000.000 mH	Size related	Enter the value of the d-axis inductance. Obtain the value from the permanent magnet motor datasheet.
Parameter 1-38 q-axis Inductance (Lq)	0.000–1000.000 mH	Size related	Enter the value of the q-axis inductance.
Parameter 1-39 Motor Poles	2–100	4	Enter the number of motor poles.
Parameter 1-40 Back EMF at 1000 RPM	10–9000 V	Size related	Line-line RMS back EMF voltage at 1000 RPM.
Parameter 1-42 Motor Cable Length	0–100 m	50 m	Enter the motor cable length.
Parameter 1-44 d-axis Inductance Sat. (LdSat)	0.000–1000.000 mH	Size related	This parameter corresponds to the inductance saturation of Ld. Ideally, this parameter has the same value as <i>parameter 1-37 d-axis Inductance (Ld)</i> . However, if the motor supplier provides an induction curve, enter the induction value, which is 200% of the nominal current.

Parameter	Option	Default	Usage
Parameter 1-45 <i>q-axis Inductance Sat. (LqSat)</i>	0.000–1000.000 mH	Size related	This parameter corresponds to the inductance saturation of Lq. Ideally, this parameter has the same value as <i>parameter 1-38 q-axis Inductance (Lq)</i> . However, if the motor supplier provides an induction curve, enter the induction value, which is 200% of the nominal current.
Parameter 1-46 <i>Position Detection Gain</i>	20–200%	100%	Adjusts the height of the test pulse during position detection at start.
Parameter 1-48 <i>Current at Min Inductance for d-axis</i>	20–200%	100%	Enter the inductance saturation point.
Parameter 1-49 <i>Current at Min Inductance for q-axis</i>	20–200%	100%	This parameter specifies the saturation curve of the d- and q-inductance values. From 20–100% of this parameter, the inductances are linearly approximated due to <i>parameter 1-37 d-axis Inductance (Ld)</i> , <i>parameter 1-38 q-axis Inductance (Lq)</i> , <i>parameter 1-44 d-axis Inductance Sat. (LdSat)</i> , and <i>parameter 1-45 q-axis Inductance Sat. (LqSat)</i> .
Parameter 1-70 <i>PM Start Mode</i>	[0] Rotor Detection [1] Parking	[0] Rotor Detection	Select the PM motor start mode.
Parameter 1-73 <i>Flying Start</i>	[0] Disabled [1] Enabled	[0] Disabled	Select [1] Enabled to enable the drive to catch a motor spinning due to mains drop-out. Select [0] Disabled if this function is not required. When this parameter is set to [1] Enabled, <i>parameter 1-71 Start Delay</i> and <i>parameter 1-72 Start Function</i> are not functional. <i>Parameter 1-73 Flying Start</i> is active in VVC <sup>+</sup> mode only.
Parameter 3-02 <i>Minimum Reference</i>	-4999.000–4999.000	0	The minimum reference is the lowest value obtainable by summing all references.
Parameter 3-03 <i>Maximum Reference</i>	-4999.000–4999.000	50	The maximum reference is the lowest obtainable by summing all references.
Parameter 3-41 <i>Ramp 1 Ramp Up Time</i>	0.05–3600.00 s	Size related	If asynchronous motor is selected, the ramp-up time is from 0 to rated <i>parameter 1-23 Motor Frequency</i> . If PM motor is selected, the ramp-up time is from 0 to <i>parameter 1-25 Motor Nominal Speed</i> .
Parameter 3-42 <i>Ramp 1 Ramp Down Time</i>	0.05–3600.00 s	Size related	For asynchronous motors, the ramp-down time is from rated <i>parameter 1-23 Motor Frequency</i> to 0. For PM motors, the ramp-down time is from <i>parameter 1-25 Motor Nominal Speed</i> to 0.
Parameter 4-12 <i>Motor Speed Low Limit [Hz]</i>	0.0–400.0 Hz	0 Hz	Enter the minimum limit for low speed.
Parameter 4-14 <i>Motor Speed High Limit [Hz]</i>	0.0–400.0 Hz	100 Hz	Enter the maximum limit for high speed.

<b>Parameter</b>	<b>Option</b>	<b>Default</b>	<b>Usage</b>
<i>Parameter 4-19 Max Output Frequency</i>	<i>0.0–400.0 Hz</i>	<i>100 Hz</i>	Enter the maximum output frequency value. If <i>parameter 4-19 Max Output Frequency</i> is set lower than <i>parameter 4-14 Motor Speed High Limit [Hz]</i> , <i>parameter 4-14 Motor Speed High Limit [Hz]</i> is set equal to <i>parameter 4-19 Max Output Frequency</i> automatically.
<i>Parameter 5-40 Function Relay</i>	<i>See parameter 5-40 Function Relay.</i>	<i>[9] Alarm</i>	Select the function to control output relay 1.
<i>Parameter 5-40 Function Relay</i>	<i>See parameter 5-40 Function Relay.</i>	<i>[5] Drive running</i>	Select the function to control output relay 2.
<i>Parameter 6-10 Terminal 53 Low Voltage</i>	<i>0.00–10.00 V</i>	<i>0.07 V</i>	Enter the voltage that corresponds to the low reference value.
<i>Parameter 6-11 Terminal 53 High Voltage</i>	<i>0.00–10.00 V</i>	<i>10 V</i>	Enter the voltage that corresponds to the high reference value.
<i>Parameter 6-12 Terminal 53 Low Current</i>	<i>0.00–20.00 mA</i>	<i>4 mA</i>	Enter the current that corresponds to the low reference value.
<i>Parameter 6-13 Terminal 53 High Current</i>	<i>0.00–20.00 mA</i>	<i>20 mA</i>	Enter the current that corresponds to the high reference value.
<i>Parameter 6-19 Terminal 53 mode</i>	<i>[0] Current [1] Voltage</i>	<i>[1] Voltage</i>	Select if terminal 53 is used for current or voltage input.
<i>Parameter 30-22 Locked Rotor Detection</i>	<i>[0] Off [1] On</i>	<i>[0] Off</i>	–
<i>Parameter 30-23 Locked Rotor Detection Time [s]</i>	<i>0.05–1 s</i>	<i>0.10 s</i>	–



### 4.2.3 Setup Wizard for Closed-loop Applications

e30bc402.14

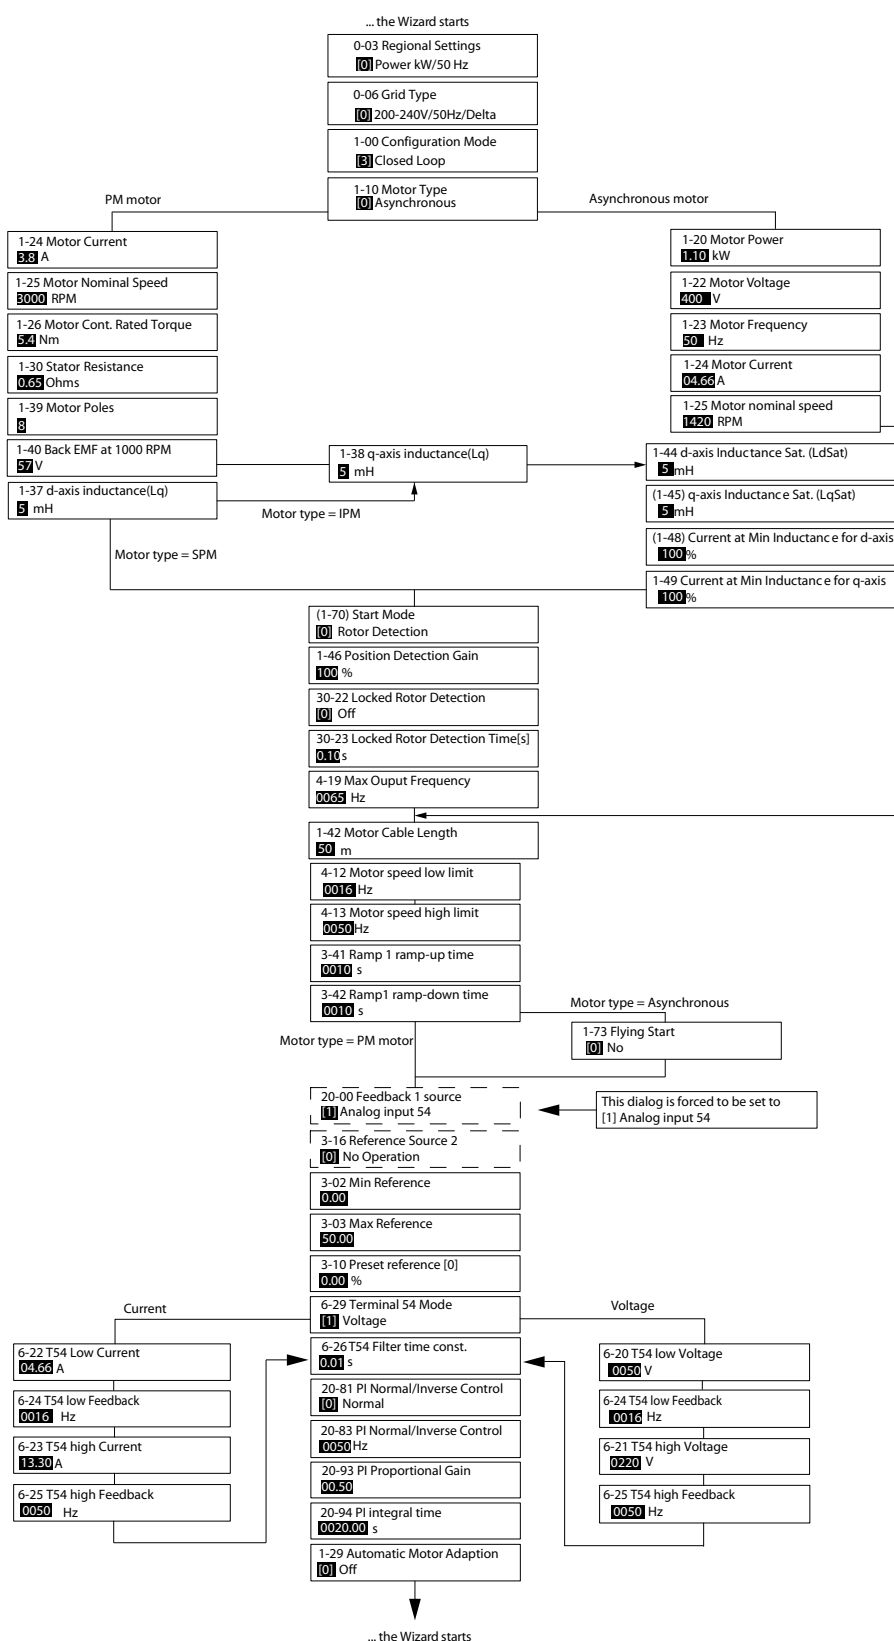


Illustration 15: Setup Wizard for Closed-loop Applications

**Table 13: Setup Wizard for Closed-loop Applications**

Parameter	Range	Default	Usage
Parameter 0-03 Regional Settings	[0] International [1] US	[0] International	–
Parameter 0-06 GridType	[0] 200–240 V/50 Hz/IT-grid [1] 200–240 V/50 Hz/Delta [2] 200–240 V/50 Hz [10] 380–440 V/50 Hz/IT-grid [11] 380–440 V/50 Hz/Delta [12] 380–440 V/50 Hz [20] 440–480 V/50 Hz/IT-grid [21] 440–480 V/50 Hz/Delta [22] 440–480 V/50 Hz [30] 525–600 V/50 Hz/IT-grid [31] 525–600 V/50 Hz/Delta [32] 525–600 V/50 Hz [100] 200–240 V/60 Hz/IT-grid [101] 200–240 V/60 Hz/Delta [102] 200–240 V/60 Hz [110] 380–440 V/60 Hz/IT-grid [111] 380–440 V/60 Hz/Delta [112] 380–440 V/60 Hz [120] 440–480 V/60 Hz/IT-grid [121] 440–480 V/60 Hz/Delta [122] 440–480 V/60 Hz [130] 525–600 V/60 Hz/IT-grid [131] 525–600 V/60 Hz/Delta [132] 525–600 V/60 Hz	Size selected	Select the operating mode for restart after reconnection of the drive to mains voltage after power down.

Parameter	Range	Default	Usage
<i>Parameter 1-00 Configuration Mode</i>	<i>[0] Open loop [3] Closed loop</i>	<i>[0] Open loop</i>	<i>Select [3] Closed loop.</i>

Parameter	Range	Default	Usage
Parameter 1-10 Motor Construction	*[0] Asynchron  [1] PM, non-salient SPM  [3] PM, salient IPM	[0] Asynchron	Setting the parameter value might change these parameters: <ul style="list-style-type: none"> <li>• Parameter 1-01 Motor Control Principle.</li> <li>• Parameter 1-03 Torque Characteristics.</li> <li>• Parameter 1-08 Motor Control Bandwidth.</li> <li>• Parameter 1-14 Damping Gain.</li> <li>• Parameter 1-15 Low Speed Filter Time Const.</li> <li>• Parameter 1-16 High Speed Filter Time Const.</li> <li>• Parameter 1-17 Voltage Filter Time Const.</li> <li>• Parameter 1-20 Motor Power.</li> <li>• Parameter 1-22 Motor Voltage.</li> <li>• Parameter 1-23 Motor Frequency.</li> <li>• Parameter 1-24 Motor Current.</li> <li>• Parameter 1-25 Motor Nominal Speed.</li> <li>• Parameter 1-26 Motor Cont. Rated Torque.</li> <li>• Parameter 1-30 Stator Resistance (Rs).</li> <li>• Parameter 1-33 Stator Leakage Reactance (X1).</li> <li>• Parameter 1-35 Main Reactance (Xh).</li> <li>• Parameter 1-37 d-axis Inductance (Ld).</li> <li>• Parameter 1-38 q-axis Inductance (Lq).</li> <li>• Parameter 1-39 Motor Poles.</li> <li>• Parameter 1-40 Back EMF at 1000 RPM.</li> <li>• Parameter 1-44 d-axis Inductance Sat. (LdSat).</li> <li>• Parameter 1-45 q-axis Inductance Sat. (LqSat).</li> <li>• Parameter 1-46 Position Detection Gain.</li> <li>• Parameter 1-48 Current at Min Inductance for d-axis.</li> <li>• Parameter 1-49 Current at Min Inductance for q-axis.</li> <li>• Parameter 1-66 Min. Current at Low Speed.</li> <li>• Parameter 1-70 PM Start Mode.</li> <li>• Parameter 1-72 Start Function.</li> <li>• Parameter 1-73 Flying Start.</li> <li>• Parameter 1-80 Function at Stop.</li> <li>• Parameter 1-82 Min Speed for Function at Stop [Hz].</li> <li>• Parameter 1-90 Motor Thermal Protection.</li> <li>• Parameter 2-00 DC Hold/Motor Preheat Current.</li> <li>• Parameter 2-01 DC Brake Current.</li> <li>• Parameter 2-02 DC Braking Time.</li> <li>• Parameter 2-04 DC Brake Cut In Speed.</li> <li>• Parameter 2-10 Brake Function.</li> <li>• Parameter 4-14 Motor Speed High Limit [Hz].</li> <li>• Parameter 4-19 Max Output Frequency.</li> <li>• Parameter 4-58 Missing Motor Phase Function.</li> <li>• Parameter 14-65 Speed Derate Dead Time Compensation.</li> </ul>

Parameter	Range	Default	Usage
Parameter 1-20 Motor Power	0.18–110 kW/0.25–150 hp	Size related	Enter the motor power from the nameplate data.
Parameter 1-22 Motor Voltage	50–1000 V	Size related	Enter the motor voltage from the nameplate data.
Parameter 1-23 Motor Frequency	20–400 Hz	Size related	Enter the motor frequency from the nameplate data.
Parameter 1-24 Motor Current	0–10000 A	Size related	Enter the motor current from the nameplate data.
Parameter 1-25 Motor Nominal Speed	50–9999 RPM	Size related	Enter the motor nominal speed from the nameplate data.
Parameter 1-26 Motor Cont. Rated Torque	0.1–1000.0 Nm	Size related	This parameter is available when <i>parameter 1-10 Motor Construction</i> is set to options that enable permanent motor mode.  <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p><b>NOTICE</b></p> <p>Changing this parameter affects the settings of other parameters.</p> </div>
Parameter 1-29 Automatic Motor Adaption (AMA)	–	Off	Performing an AMA optimizes motor performance.
Parameter 1-30 Stator Resistance (Rs)	0–99.990 Ω	Size related	Set the stator resistance value.
Parameter 1-37 d-axis Inductance (Ld)	0.000–1000.000 mH	Size related	Enter the value of the d-axis inductance. Obtain the value from the permanent magnet motor datasheet.
Parameter 1-38 q-axis Inductance (Lq)	0.000–1000.000 mH	Size related	Enter the value of the q-axis inductance.
Parameter 1-39 Motor Poles	2–100	4	Enter the number of motor poles.
Parameter 1-40 Back EMF at 1000 RPM	10–9000 V	Size related	Line-line RMS back EMF voltage at 1000 RPM.
Parameter 1-42 Motor Cable Length	0–100 m	50 m	Enter the motor cable length.
Parameter 1-44 d-axis Inductance Sat. (LdSat)	0.000–1000.000 mH	Size related	This parameter corresponds to the inductance saturation of Ld. Ideally, this parameter has the same value as <i>parameter 1-37 d-axis Inductance (Ld)</i> . However, if the motor supplier provides an induction curve, enter the induction value, which is 200% of the nominal current.

Parameter	Range	Default	Usage
Parameter 1-45 <i>q-axis Inductance Sat. (LqSat)</i>	0.000–1000.000 mH	Size related	This parameter corresponds to the inductance saturation of Lq. Ideally, this parameter has the same value as <i>parameter 1-38 q-axis Inductance (Lq)</i> . However, if the motor supplier provides an induction curve, enter the induction value, which is 200% of the nominal current.
Parameter 1-46 <i>Position Detection Gain</i>	20–200%	100%	Adjusts the height of the test pulse during position detection at start.
Parameter 1-48 <i>Current at Min Inductance for d-axis</i>	20–200%	100%	Enter the inductance saturation point.
Parameter 1-49 <i>Current at Min Inductance for q-axis</i>	20–200%	100%	This parameter specifies the saturation curve of the d- and q-inductance values. From 20–100% of this parameter, the inductances are linearly approximated due to <i>parameter 1-37 d-axis Inductance (Ld)</i> , <i>parameter 1-38 q-axis Inductance (Lq)</i> , <i>parameter 1-44 d-axis Inductance Sat. (LdSat)</i> , and <i>parameter 1-45 q-axis Inductance Sat. (LqSat)</i> .
Parameter 1-70 <i>PM Start Mode</i>	[0] Rotor Detection [1] Parking	[0] Rotor Detection	Select the PM motor start mode.
Parameter 1-73 <i>Flying Start</i>	[0] Disabled [1] Enabled	[0] Disabled	Select [1] Enabled to enable the drive to catch a spinning motor in, for example, fan applications. When PM is selected, this parameter is enabled.
Parameter 3-02 <i>Minimum Reference</i>	-4999.000–4999.000	0	The minimum reference is the lowest value obtainable by summing all references.
Parameter 3-03 <i>Maximum Reference</i>	-4999.000–4999.000	50	The maximum reference is the highest value obtainable by summing all references.
Parameter 3-10 <i>Preset Reference</i>	-100–100%	0	Enter the setpoint.
Parameter 3-41 <i>Ramp 1 Ramp Up Time</i>	0.05–3600.0 s	Size related	Ramp-up time from 0 to rated <i>parameter 1-23 Motor Frequency</i> for asynchronous motors. Ramp-up time from 0 to <i>parameter 1-25 Motor Nominal Speed</i> for PM motors.
Parameter 3-42 <i>Ramp 1 Ramp Down Time</i>	0.05–3600.0 s	Size related	Ramp-down time from rated <i>parameter 1-23 Motor Frequency</i> to 0 for asynchronous motors. Ramp-down time from <i>parameter 1-25 Motor Nominal Speed</i> to 0 for PM motors.
Parameter 4-12 <i>Motor Speed Low Limit [Hz]</i>	0.0–400.0 Hz	0.0 Hz	Enter the minimum limit for low speed.
Parameter 4-14 <i>Motor Speed High Limit [Hz]</i>	0.0–400.0 Hz	100 Hz	Enter the minimum limit for high speed.

Parameter	Range	Default	Usage
Parameter 4-19 Max Output Frequency	0.0–400.0 Hz	100 Hz	Enter the maximum output frequency value. If <i>parameter 4-19 Max Output Frequency</i> is set lower than <i>parameter 4-14 Motor Speed High Limit [Hz]</i> , <i>parameter 4-14 Motor Speed High Limit [Hz]</i> is set equal to <i>parameter 4-19 Max Output Frequency</i> automatically.
Parameter 6-20 Terminal 54 Low Voltage	0.00–10.00 V	0.07 V	Enter the voltage that corresponds to the low reference value.
Parameter 6-21 Terminal 54 High Voltage	0.00–10.00 V	10.00 V	Enter the voltage that corresponds to the high reference value.
Parameter 6-22 Terminal 54 Low Current	0.00–20.00 mA	4.00 mA	Enter the current that corresponds to the low reference value.
Parameter 6-23 Terminal 54 High Current	0.00–20.00 mA	20.00 mA	Enter the current that corresponds to the high reference value.
Parameter 6-24 Terminal 54 Low Ref./Feedb. Value	-4999–4999	0	Enter the feedback value that corresponds to the voltage or current set in <i>parameter 6-20 Terminal 54 Low Voltage/parameter 6-22 Terminal 54 Low Current</i> .
Parameter 6-25 Terminal 54 High Ref./ Feedb. Value	-4999–4999	50	Enter the feedback value that corresponds to the voltage or current set in <i>parameter 6-21 Terminal 54 High Voltage/parameter 6-23 Terminal 54 High Current</i> .
Parameter 6-26 Terminal 54 Fil- ter Time Con- stant	0.00–10.00 s	0.01	Enter the filter time constant.
Parameter 6-29 Terminal 54 mode	[0] Current [1] Voltage	[1] Voltage	Select if terminal 54 is used for current or voltage input.
Parameter 20-81 PI Nor- mal/Inverse Control	[0] Normal [1] Inverse	[0] Normal	Select [0] Normal to set the process control to increase the output speed when the process error is positive. Select [1] Inverse to reduce the output speed.
Parameter 20-83 PI Start Speed [Hz]	0–200 Hz	0 Hz	Enter the motor speed to be attained as a start signal for commencement of PI control.
Parameter 20-93 PI Propor- tional Gain	0.00–10.00	0.01	Enter the process controller proportional gain. Quick control is obtained at high amplification. However, if amplification is too high, the process may become unstable.
Parameter 20-94 PI Inte- gral Time	0.1–999.0 s	999.0 s	Enter the process controller integral time. Obtain quick control through a short integral time, though if the integral time is too short, the process becomes unstable. An excessively long integral time disables the integral action.

Parameter	Range	Default	Usage
Parameter 30-22 Locked Rotor Detection	[0] Off [1] On	[0] Off	–
Parameter 30-23 Locked Rotor Detection Time [s]	0.05–1.00 s	0.10 s	–

#### 4.2.4 Motor Setup

The motor setup wizard guides users through the needed motor parameters.

**Table 14: Motor Setup Wizard Settings**

Parameter	Range	Default	Usage
Parameter 0-03 Regional Settings	[0] International [1] US	[0] International	–



Parameter	Range	Default	Usage
<i>Parameter 0-06 GridType</i>	<i>[0] 200–240 V/50 Hz/IT-grid</i>	Size selected	Select the operating mode for restart after reconnection of the drive to mains voltage after power down.
	<i>[1] 200–240 V/50 Hz/Delta</i>		
	<i>[2] 200–240 V/50 Hz</i>		
	<i>[10] 380–440 V/50 Hz/IT-grid</i>		
	<i>[11] 380–440 V/50 Hz/Delta</i>		
	<i>[12] 380–440 V/50 Hz</i>		
	<i>[20] 440–480 V/50 Hz/IT-grid</i>		
	<i>[21] 440–480 V/50 Hz/Delta</i>		
	<i>[22] 440–480 V/50 Hz</i>		
	<i>[30] 525–600 V/50 Hz/IT-grid</i>		
	<i>[31] 525–600 V/50 Hz/Delta</i>		
	<i>[32] 525–600 V/50 Hz</i>		
	<i>[100] 200–240 V/60 Hz/IT-grid</i>		
	<i>[101] 200–240 V/60 Hz/Delta</i>		
	<i>[102] 200–240 V/60 Hz</i>		
	<i>[110] 380–440 V/60 Hz/IT-grid</i>		
	<i>[111] 380–440 V/60 Hz/Delta</i>		
	<i>[112] 380–440 V/60 Hz</i>		
	<i>[120] 440–480 V/60 Hz/IT-grid</i>		
	<i>[121] 440–480 V/60 Hz/Delta</i>		
<i>[122] 440–480 V/60 Hz</i>			
<i>[130] 525–600 V/60 Hz/IT-grid</i>			
<i>[131] 525–600 V/60 Hz/Delta</i>			
<i>[132] 525–600 V/60 Hz</i>			

Parameter	Range	Default	Usage
Parameter 1-10 Motor Construction	*[0] Asynchron  [1] PM, non-salient SPM  [3] PM, salient IPM	[0] Asynchron	Setting the parameter value might change these parameters: <ul style="list-style-type: none"> <li>• Parameter 1-01 Motor Control Principle.</li> <li>• Parameter 1-03 Torque Characteristics.</li> <li>• Parameter 1-08 Motor Control Bandwidth.</li> <li>• Parameter 1-14 Damping Gain.</li> <li>• Parameter 1-15 Low Speed Filter Time Const.</li> <li>• Parameter 1-16 High Speed Filter Time Const.</li> <li>• Parameter 1-17 Voltage Filter Time Const.</li> <li>• Parameter 1-20 Motor Power.</li> <li>• Parameter 1-22 Motor Voltage.</li> <li>• Parameter 1-23 Motor Frequency.</li> <li>• Parameter 1-24 Motor Current.</li> <li>• Parameter 1-25 Motor Nominal Speed.</li> <li>• Parameter 1-26 Motor Cont. Rated Torque.</li> <li>• Parameter 1-30 Stator Resistance (Rs).</li> <li>• Parameter 1-33 Stator Leakage Reactance (Xl).</li> <li>• Parameter 1-35 Main Reactance (Xh).</li> <li>• Parameter 1-37 d-axis Inductance (Ld).</li> <li>• Parameter 1-38 q-axis Inductance (Lq).</li> <li>• Parameter 1-39 Motor Poles.</li> <li>• Parameter 1-40 Back EMF at 1000 RPM.</li> <li>• Parameter 1-44 d-axis Inductance Sat. (LdSat).</li> <li>• Parameter 1-45 q-axis Inductance Sat. (LqSat).</li> <li>• Parameter 1-46 Position Detection Gain.</li> <li>• Parameter 1-48 Current at Min Inductance for d-axis.</li> <li>• Parameter 1-49 Current at Min Inductance for q-axis.</li> <li>• Parameter 1-66 Min. Current at Low Speed.</li> <li>• Parameter 1-70 PM Start Mode.</li> <li>• Parameter 1-72 Start Function.</li> <li>• Parameter 1-73 Flying Start.</li> <li>• Parameter 1-80 Function at Stop.</li> <li>• Parameter 1-82 Min Speed for Function at Stop [Hz].</li> <li>• Parameter 1-90 Motor Thermal Protection.</li> <li>• Parameter 2-00 DC Hold/Motor Preheat Current.</li> <li>• Parameter 2-01 DC Brake Current.</li> <li>• Parameter 2-02 DC Braking Time.</li> <li>• Parameter 2-04 DC Brake Cut In Speed.</li> <li>• Parameter 2-10 Brake Function.</li> <li>• Parameter 4-14 Motor Speed High Limit [Hz].</li> <li>• Parameter 4-19 Max Output Frequency.</li> <li>• Parameter 4-58 Missing Motor Phase Function.</li> <li>• Parameter 14-65 Speed Derate Dead Time Compensation.</li> </ul>

Parameter	Range	Default	Usage
Parameter 1-20 Motor Power	0.18–110 kW/0.25–150 hp	Size related	Enter the motor power from the nameplate data.
Parameter 1-22 Motor Voltage	50–1000 V	Size related	Enter the motor voltage from the nameplate data.
Parameter 1-23 Motor Frequency	20–400 Hz	Size related	Enter the motor frequency from the nameplate data.
Parameter 1-24 Motor Current	0.01–10000.00 A	Size related	Enter the motor current from the nameplate data.
Parameter 1-25 Motor Nominal Speed	50–9999 RPM	Size related	Enter the motor nominal speed from the nameplate data.
Parameter 1-26 Motor Cont. Rated Torque	0.1–1000.0 Nm	Size related	<p>This parameter is available when <i>parameter 1-10 Motor Construction</i> is set to options that enable permanent motor mode.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p style="text-align: center; margin: 0;"><b>NOTICE</b></p> <p style="margin: 0;">Changing this parameter affects the settings of other parameters.</p> </div>
Parameter 1-30 Stator Resistance (Rs)	0–99.990 Ω	Size related	Set the stator resistance value.
Parameter 1-37 d-axis Inductance (Ld)	0.000–1000.000 mH	Size related	Enter the value of the d-axis inductance. Obtain the value from the permanent magnet motor datasheet.
Parameter 1-38 q-axis Inductance (Lq)	0.000–1000.000 mH	Size related	Enter the value of the q-axis inductance.
Parameter 1-39 Motor Poles	2–100	4	Enter the number of motor poles.
Parameter 1-40 Back EMF at 1000 RPM	10–9000 V	Size related	Line-line RMS back EMF voltage at 1000 RPM.
Parameter 1-42 Motor Cable Length	0–100 m	50 m	Enter the motor cable length.
Parameter 1-44 d-axis Inductance Sat. (LdSat)	0.000–1000.000 mH	Size related	This parameter corresponds to the inductance saturation of Ld. Ideally, this parameter has the same value as <i>parameter 1-37 d-axis Inductance (Ld)</i> . However, if the motor supplier provides an induction curve, enter the induction value, which is 200% of the nominal current.

Parameter	Range	Default	Usage
Parameter 1-45 <i>q-axis Inductance Sat. (LqSat)</i>	0.000–1000.000 mH	Size related	This parameter corresponds to the inductance saturation of Lq. Ideally, this parameter has the same value as <i>parameter 1-38 q-axis Inductance (Lq)</i> . However, if the motor supplier provides an induction curve, enter the induction value, which is 200% of the nominal current.
Parameter 1-46 <i>Position Detection Gain</i>	20–200%	100%	Adjusts the height of the test pulse during position detection at start.
Parameter 1-48 <i>Current at Min Inductance for d-axis</i>	20–200%	100%	Enter the inductance saturation point.
Parameter 1-49 <i>Current at Min Inductance for q-axis</i>	20–200%	100%	This parameter specifies the saturation curve of the d- and q-inductance values. From 20–100% of this parameter, the inductances are linearly approximated due to <i>parameter 1-37 d-axis Inductance (Ld)</i> , <i>parameter 1-38 q-axis Inductance (Lq)</i> , <i>parameter 1-44 d-axis Inductance Sat. (LdSat)</i> , and <i>parameter 1-45 q-axis Inductance Sat. (LqSat)</i> .
Parameter 1-70 <i>PM Start Mode</i>	[0] Rotor Detection [1] Parking	[0] Rotor Detection	Select the PM motor start mode.
Parameter 1-73 <i>Flying Start</i>	[0] Disabled [1] Enabled	[0] Disabled	Select [1] Enabled to enable the drive to catch a spinning motor.
Parameter 3-41 <i>Ramp 1 Ramp Up Time</i>	0.05–3600.0 s	Size related	Ramp-up time from 0 to rated <i>parameter 1-23 Motor Frequency</i> .
Parameter 3-42 <i>Ramp 1 Ramp Down Time</i>	0.05–3600.0 s	Size related	Ramp-down time from rated <i>parameter 1-23 Motor Frequency</i> to 0.
Parameter 4-12 <i>Motor Speed Low Limit [Hz]</i>	0.0–400.0 Hz	0.0 Hz	Enter the minimum limit for low speed.
Parameter 4-14 <i>Motor Speed High Limit [Hz]</i>	0.0–400.0 Hz	100.0 Hz	Enter the maximum limit for high speed.
Parameter 4-19 <i>Max Output Frequency</i>	0.0–400.0 Hz	100.0 Hz	Enter the maximum output frequency value. If <i>parameter 4-19 Max Output Frequency</i> is set lower than <i>parameter 4-14 Motor Speed High Limit [Hz]</i> , <i>parameter 4-14 Motor Speed High Limit [Hz]</i> is set equal to <i>parameter 4-19 Max Output Frequency</i> automatically.
Parameter 30-22 <i>Locked Rotor Detection</i>	[0] Off [1] On	[0] Off	–
Parameter 30-23 <i>Locked Rotor Detection Time [s]</i>	0.05–1.00 s	0.10 s	–

## 4.2.5 Changes Made Function

The changes made function lists all parameters changed from default settings.

- The list shows only parameters that have been changed in the current edit setup.
- Parameters that have been reset to default values are not listed.
- The message *Empty* indicates that no parameters have been changed.

## 4.2.6 Changing Parameter Settings

### Procedure

1. To enter the Quick Menu, press the [Menu] key until the indicator in the display is placed above Quick Menu.
2. Press [▲] [▼] to select the wizard, closed-loop setup, motor setup, or changes made.
3. Press [OK].
4. Press [▲] [▼] to browse through the parameters in the Quick Menu.
5. Press [OK] to select a parameter.
6. Press [▲] [▼] to change the value of a parameter setting.
7. Press [OK] to accept the change.
8. Press either [Back] twice to enter Status, or press [Menu] once to enter the Main Menu.

## 4.2.7 Accessing All Parameters via the Main Menu

### Procedure

1. Press the [Menu] key until the indicator in the display is placed above Main Menu.
2. Press [▲] [▼] to browse through the parameter groups.
3. Press [OK] to select a parameter group.
4. Press [▲] [▼] to browse through the parameters in the specific group.
5. Press [OK] to select the parameter.
6. Press [▲] [▼] to set/change the parameter value.
7. Press [OK] to accept the change.

### 4.3 Parameter List

Parameter	Description	Parameter	Description	Parameter	Description	Parameter	Description	Parameter	Description
0-0*	Operation / Display	1-42	Motor Cable Length	3-5*	Ramp 2	6-02	Fire Mode Live Zero Timeout Function	8-7*	BACnet
0-0*	Basic Settings	1-43	Motor Cable Length Feet	3-51	Ramp 2 Ramp Up Time	6-1*	Analog Input 53	8-70	BACnet Device Instance
0-01	Language	1-44	d-axis Inductance Sat. (LdSat)	3-52	Ramp 2 Ramp Down Time	6-10	Terminal 53 Low Voltage	8-72	MS/TP Max Masters
0-03	Regional Settings	1-45	q-axis Inductance Sat. (LqSat)	3-80	Other Ramps	6-11	Terminal 53 High Voltage	8-73	MS/TP Max Info Frames
0-04	Programming State at Power-up	1-46	Position Detection Gain	3-80	Jog Ramp Time	6-12	Terminal 53 Low Current	8-74	"i" am" Service
0-06	GridType	1-48	Current at Min Inductance for d-axis	3-81	Quick Stop Ramp Time	6-13	Terminal 53 High Current	8-75	Initialisation Password
0-07	Auto DC Braking	1-49	Current at Min Inductance for q-axis	4-**	Limits / Warnings	6-14	Terminal 53 Low Ref./Feedb. Value	8-79	Protocol Firmware version
0-1*	Set-up Operations	1-5*	Load Indep. Setting	4-1*	Motor Limits	6-15	Terminal 53 High Ref./Feedb. Value	8-8*	FC Port Diagnostics
0-10	Active Set-up	1-50	Motor Magnetisation at Zero Speed	4-10	Motor Speed Direction	6-19	Terminal 53 Filter Time Constant	8-80	Bus Message Count
0-11	Programming Set-up	1-52	Min Speed Normal Magnetising [Hz]	4-12	Motor Speed Low Limit [Hz]	6-19	Terminal 53 mode	8-81	Bus Error Count
0-12	Link Setups	1-55	U/f Characteristic - U	4-14	Motor Speed High Limit [Hz]	6-20	Analog Input 54	8-82	Slave Messages Rcvd
0-3*	LCP Custom Readout	1-56	U/f Characteristic - F	4-18	Current Limit	6-20	Terminal 54 Low Voltage	8-83	Slave Error Count
0-30	Custom Readout Unit	1-6*	Load Depen. Setting	4-19	Max Output Frequency	6-21	Terminal 54 High Voltage	8-84	Slave Messages Sent
0-31	Custom Readout Min Value	1-60	Low Speed Load Compensation	4-4*	Adj. Warnings 2	6-22	Terminal 54 Low Current	8-85	Slave Timeout Errors
0-32	Custom Readout Max Value	1-61	High Speed Load Compensation	4-40	Warning Freq. Low	6-23	Terminal 54 High Current	8-88	Reset FC port Diagnostics
0-37	Display Text 1	1-62	Slip Compensation Time Constant	4-41	Warning Freq. High	6-24	Terminal 54 Low Ref./Feedb. Value	8-9*	Bus Feedback
0-38	Display Text 2	1-63	Slip Compensation Time Constant	4-5*	Adj. Warnings	6-25	Terminal 54 High Ref./Feedb. Value	8-94	Bus Feedback 1
0-39	Display Text 3	1-64	Resonance Dampening	4-50	Warning Current Low	6-26	Terminal 54 Filter Time Constant	8-95	Bus Feedback 2
0-4*	LCP Keypad	1-65	Resonance Dampening Time Constant	4-51	Warning Current High	6-29	Terminal 54 mode	13-**	Smart Logic
0-40	[Hand on] Key on LCP	1-66	Min. Current at Low Speed	4-54	Warning Reference Low	6-70	Analog/Digital Output 45	13-00	SL Controller Mode
0-42	[Hand on] Key on LCP	1-7*	Start Adjustments	4-55	Warning Reference High	6-71	Terminal 45 Mode	13-01	Start Event
0-44	[Off/Reset] Key on LCP	1-70	Start Mode	4-56	Warning Feedback Low	6-72	Terminal 45 Analog Output	13-02	Stop Event
0-5*	Copy/Save	1-71	Start Delay	4-57	Warning Feedback High	6-73	Terminal 45 Digital Output	13-03	Reset SLC
0-50	LCP Copy	1-72	Start Function	4-58	Missing Motor Phase Function	6-73	Terminal 45 Output Min Scale	13-03	Reset SLC
0-51	Set-up Copy	1-73	Flying Start	4-6*	Speed Bypass	6-74	Terminal 45 Output Max Scale	13-1*	Comparators
0-6*	Password	1-8*	Stop Adjustments	4-61	Bypass Speed From [Hz]	6-76	Terminal 45 Output Bus Control	13-10	Comparator Operand
0-60	Main Menu Password	1-80	Function at Stop	4-63	Bypass Speed To [Hz]	6-9*	Terminal 45 Comparator Operator	13-11	Comparator Operator
0-61	Access to Main Menu w/o Password	1-82	Min Speed for Function at Stop [Hz]	4-64	Semi-Auto Bypass Set-up	6-90	Terminal 42 Mode	13-12	Comparator Value
1-**	Load and Motor	1-88	AC Brake Gain	5-**	Digital In/Out	6-91	Terminal 42 Analog Output	13-2*	Timers
1-0*	General Settings	1-9*	Motor Temperature	5-0*	Digital I/O mode	6-92	Terminal 42 Digital Output	13-20	SL Controller Timer
1-00	Configuration Mode	1-90	Motor Thermal Protection	5-00	Digital Input Mode	6-93	Terminal 42 Output Min Scale	13-4*	Logic Rules
1-01	Motor Control Principle	1-93	Thermistor Source	5-01	Terminal 27 Mode	6-94	Terminal 42 Output Max Scale	13-40	Logic Rule Boolean 1
1-03	Torque Characteristics	2-**	Brakes	5-02	Terminal 29 Mode	6-96	Terminal 42 Output Bus Control	13-41	Logic Rule Operator 1
1-06	Clockwise Direction	2-0*	DC-Brake	5-03	Digital Input 29 Mode	6-98	Drive Type	13-42	Logic Rule Boolean 2
1-08	Motor Control Bandwidth	2-00	DC Hold/Motor Preheat Current	5-1*	Digital Inputs	8-0*	General Settings	13-43	Logic Rule Operator 2
1-1*	Motor Selection	2-01	DC Brake Current	5-10	Terminal 18 Digital Input	8-01	Control Site	13-44	Logic Rule Boolean 3
1-10	Motor Construction	2-02	DC Braking Time	5-11	Terminal 19 Digital Input	8-01	Control Source	13-5*	States
1-14	Damping Gain	2-04	DC Brake Cut In Speed	5-12	Terminal 27 Digital Input	8-02	Control Source	13-51	SL Controller Event
1-15	Low Speed Filter Time Const.	2-06	Parking Current	5-13	Terminal 29 Digital Input	8-03	Control Timeout Time	13-52	SL Controller Action
1-16	High Speed Filter Time Const.	2-07	Parking Time	5-3*	Digital Outputs	8-04	Control Timeout Function	14-0*	Special Functions
1-17	Voltage filter time const.	2-1*	Brake Energy Funct.	5-30	Terminal 27 Digital Output	8-3*	FC Port Settings	14-0*	Inverter Switching
1-2*	Motor Data	2-10	Brake Function	5-31	Terminal 29 Digital Output	8-30	Protocol	14-01	Switching Frequency
1-20	Motor Power	2-16	AC Brake, Max current	5-34	On Delay Digital Output	8-31	Address	14-03	Overmodulation
1-22	Motor Voltage	2-17	Over-voltage Control	5-35	Off Delay Digital Output	8-32	Baud Rate	14-07	Dead Time Compensation Level
1-23	Motor Frequency	2-19	Over-voltage Gain	5-4*	Relays	8-33	Parity / Stop Bits	14-08	Damping Gain Factor
1-24	Motor Current	3-0*	Reference Limits	5-40	Function Relay	8-35	Minimum Response Delay	14-09	Dead Time Bias Current Level
1-25	Motor Nominal Speed	3-0*	Reference Limits	5-41	On Delay Relay	8-36	Maximum Response Delay	14-1*	Mains Failure
1-26	Motor Cont. Rated Torque	3-02	Minimum Reference	5-42	Off Delay Relay	8-36	Maximum Inter-char delay	14-10	Mains Failure
1-29	Automatic Motor Adaption (AMA)	3-03	Maximum Reference	5-5*	Pulse Input	8-4*	FC MC protocol set	14-11	Mains Fault Voltage Level
1-3*	Adv. Motor Data	3-1*	References	5-50	Term. 29 Low Frequency	8-42	PCD Write Configuration	14-12	Response to Mains Imbalance
1-30	Stator Resistance (Rs)	3-10	Preset Reference	5-51	Term. 29 High Frequency	8-43	PCD Read Configuration	14-15	Kin. Back-up Trip Recovery Level
1-31	Rotor Resistance (Rr)	3-11	Jog Speed [Hz]	5-52	Term. 29 Low Ref./Feedb. Value	8-5*	Digital/Bus	14-20	Reset Mode
1-33	Stator Leakage Reactance (X1)	3-14	Preset Relative Reference	5-52	Term. 29 High Ref./Feedb. Value	8-51	Coasting Select	14-21	Automatic Restart Time
1-35	Main Reactance (Xh)	3-15	Reference 1 Source	5-9*	Bus Controlled	8-52	Quick Stop Select	14-22	Operation Mode
1-37	d-axis Inductance (Ld)	3-16	Reference 2 Source	5-90	Digital & Relay Bus Control	8-53	DC Brake Select	14-23	Typecode Setting
1-38	q-axis Inductance (Lq)	3-17	Reference 3 Source	6-0*	Analog In/Out	8-54	Start Select	14-27	Action At Inverter Fault
1-39	Motor Poles	3-4*	Ramp 1	6-00	Live Zero Timeout Time	8-55	Set-up Select	14-28	Production Settings
1-4*	Adv. Motor Data II	3-41	Ramp 1 Ramp Up Time	6-01	Live Zero Timeout Function	8-56	Preset Reference Select	14-29	Service Code
1-40	Back EMF at 1000 RPM	3-42	Ramp 1 Ramp Down Time						


e30bu691.10

14-3* <b>Current Limit Ctrl.</b>	16-00 Control Word	18-50 Sensorless Readout [Unit]	22-80 Flow Compensation	25-84 Pump ON Time
14-30 Current Lim Ctrl. Proportional Gain	16-01 Reference [Unit]	<b>20-0* Drive Closed Loop</b>	22-81 Square-linear Curve Approximation	25-9* Service
14-31 Current Lim Ctrl. Integration Time	16-02 Reference [%]	20-0* Feedback	22-82 Work Point Calculation	25-90 Pump Interlock
14-32 Current Lim Ctrl. Filter Time	16-03 Status Word	20-01 Feedback 1 Source	22-84 Speed at No-Flow [Hz]	<b>30-3* Special Features</b>
14-4* <b>Energy Optimising</b>	16-05 Main Actual Value [%]	20-01 Feedback 1 Conversion	22-86 Speed at Design Point [Hz]	30-2* <b>Adv. Start Adjust</b>
14-40 VT Level	16-09 Custom Readout	20-03 Feedback 2 Source	22-87 Pressure at No-Flow Speed	30-23 Locked Rotor Protection
14-41 AEO Minimum Magnetisation	<b>16-1* Motor Status</b>	20-04 Feedback 2 Conversion	22-88 Pressure at Rated Speed	30-5* <b>Unit Configuration</b>
14-44 d-axis current optimization for IPM	16-10 Power [kW]	20-12 Reference/Feedback Unit	22-89 Flow at Design Point	30-38 LockPassword
<b>14-5* Environment</b>	16-11 Power [hp]	<b>20-2* Feedback/Setpoint</b>	<b>24-4** Appl. Functions 2</b>	
14-50 RFI Filter	16-12 Motor Voltage	20-20 Feedback Function	24-0* <b>Fire Mode</b>	
14-51 DC-Link Voltage Compensation	16-13 Frequency	20-21 Setpoint 1	24-00 FM Function	
14-52 Fan Control	16-14 Motor current	20-60 Sensorless Unit	24-01 Fire Mode Configuration	
14-53 Fan Monitor	16-15 Frequency [%]	20-69 Sensorless Information	24-03 Fire Mode Min Reference	
14-55 Output Filter	16-16 Torque [Nm]	<b>20-7* PI Autotuning</b>	24-04 Fire Mode Max Reference	
<b>14-6* Auto Derate</b>	16-17 Speed [RPM]	20-70 Closed Loop Type	24-05 FM Preset Reference	
14-61 Function at Inverter Overload	16-18 Motor Thermal	20-71 PI Performance	24-06 Fire Mode Reference Source	
14-63 Min Switch Frequency	16-22 Torque [%]	20-72 PI Output Change	24-07 Fire Mode Feedback Source	
14-64 Dead Time Compensation	16-26 Power Filtered [kW]	20-73 Minimum Feedback Level	24-08 Mul FM Preset Reference	
14-65 Speed Derate Dead Time Compensation	<b>16-3* Drive Status</b>	20-74 Maximum Feedback Level	24-09 FM Alarm Handling	
	16-30 DC Link Voltage	20-79 PI Autotuning	<b>24-1* Drive Bypass</b>	
<b>14-9* Fault Settings</b>	16-34 Heatsink Temp.	<b>20-8* PI Basic Settings</b>	24-10 Drive Bypass Function	
14-90 Fault Level	16-35 Inverter Thermal	20-81 PI Normal/ Inverse Control	24-11 Drive Bypass Delay Time	
<b>15-0* Drive Information</b>	16-36 Inv. Nom. Current	20-83 PI Start Speed [Hz]	<b>25-3* Cascade Controller</b>	
<b>15-0* Operating Data</b>	16-37 Inv. Max. Current	20-84 On Reference Bandwidth	<b>25-0* System Settings</b>	
15-00 Operating hours	16-38 SL Controller State	20-9* PI Controller	25-00 Cascade Controller	
15-01 Running Hours	<b>16-5* Ref. &amp; Feeds.</b>	20-91 PI Anti Windup	25-04 Pump Cycling	
15-02 kWh Counter	15-00 External Reference	20-93 PI Proportional Gain	25-05 Fixed Lead Pump	
15-03 Power Up's	16-52 Feedback[Unit]	20-94 PI Integral Time	25-06 Number of Pumps	
15-04 Over Temp's	16-54 Feedback 1 [Unit]	20-97 PI Feed Forward Factor	<b>25-2* Bandwidth Settings</b>	
15-05 Over Volts	16-55 Feedback 2 [Unit]	<b>22-2** Appl. Functions</b>	25-20 Staging Bandwidth	
15-06 Reset kWh Counter	<b>16-6* Inputs &amp; Outputs</b>	22-0* Miscellaneous	25-21 Override Bandwidth	
15-07 Reset-Running Hours Counter	16-60 Digital Input	22-01 Power Filter Time	25-22 Fixed Speed Bandwidth	
<b>15-3* Alarm Log</b>	16-61 Terminal 53 Setting	22-02 Sleepmode CL Control Mode	25-23 SBW Staging Delay	
15-30 Alarm Log: Error Code	16-62 Analog input 53	<b>22-2* No-Flow Detection</b>	25-24 SBW Destaging Delay	
15-31 InternalFaultReason	16-63 Terminal 54 Setting	22-23 No-Flow Function	25-25 OBW Time	
15-32 Alarm Log: Time	16-64 Analog input 54	22-24 No-Flow Delay	25-27 Stage Function	
<b>15-4* Drive Identification</b>	16-65 Analog output 42 [mA]	<b>22-3* No-Flow Power Tuning</b>	25-28 Stage Function Time	
15-40 FC Type	16-66 Digital Output	22-30 No-Flow Power	25-29 Destage Function	
15-41 Power Section	16-67 Pulse input 29 [Hz]	22-31 Power Correction Factor	25-30 Destage Function Time	
15-42 Voltage	16-71 Relay output	22-33 Low Speed [Hz]	<b>25-4* Staging Settings</b>	
15-43 Software Version	16-72 Counter A	22-34 Low Speed Power [kW]	25-42 Staging Threshold	
15-44 Ordered TypeCode	16-73 Counter B	22-37 High Speed [Hz]	25-43 Destaging Threshold	
15-45 Actual Typecode String	16-79 Analog output 45 [mA]	22-38 High Speed Power [kW]	25-45 Staging Speed [Hz]	
15-46 Drive Ordering No	<b>16-8* Fieldbus &amp; FC Port</b>	<b>22-4* Sleep Mode</b>	25-47 Destaging Speed [Hz]	
15-48 LCP Id No	16-86 FC Port REF 1	22-40 Minimum Run Time	<b>25-5* Alternation Settings</b>	
15-49 SW ID Control Card	<b>16-9* Diagnosis Readouts</b>	22-41 Minimum Sleep Time	25-50 Lead Pump Alternation	
15-50 SW ID Power Card	16-90 Alarm Word	22-43 Wake-Up Speed [Hz]	25-51 Alternation Event	
15-51 Drive Serial Number	16-91 Alarm Word 2	22-44 Wake-Up Ref/FB Diff	25-52 Alternation Time Interval	
15-52 OEM Information	16-92 Warning Word	22-45 Setpoint Boost	25-53 Alternation Timer Value	
15-53 Power Card Serial Number	16-93 Warning Word 2	22-46 Maximum Boost Time	25-55 Alternate if Load <= 50%	
15-57 File Version	16-94 Ext. Status Word	22-47 Sleep Speed [Hz]	25-56 Staging Mode at Alternation	
15-59 Filename	16-95 Ext. Status Word 2	22-48 Sleep Delay Time	25-57 Relays per Pump	
<b>15-9* Parameter Info</b>	16-97 Alarm Word 3	22-49 Wake-Up Delay Time	25-58 Run Next Pump Delay	
15-92 Defined Parameters	16-98 Warning Word 3	<b>22-6* Broken Belt Detection</b>	25-59 Run on Mains Delay	
15-97 Application Type	<b>18-3* Info &amp; Readouts</b>	22-60 Broken Belt Function	<b>25-8* Status</b>	
15-98 Drive Identification	<b>18-1* Fire Mode Log</b>	22-61 Broken Belt Torque	25-80 Cascade Status	
<b>16-0* Data Readouts</b>	18-10 FireMode LogEvent	22-62 Broken Belt Delay	25-81 Pump Status	
<b>16-0* General Status</b>	18-5* Ref. & Feeds.	<b>22-8* Flow Compensation</b>	25-82 Lead Pump	

## 5 Cascade Controller

### 5.1 Introduction

#### 5.1.1 Cascade Controller

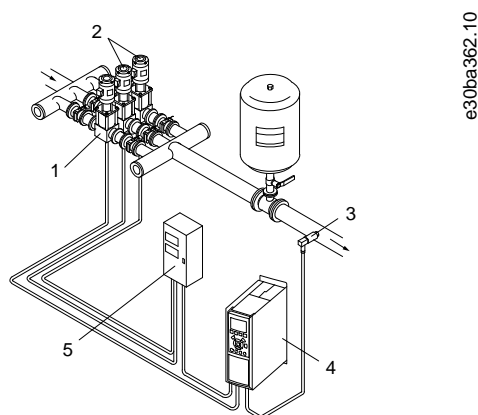

1	Variable speed pumps (1)	2	Constant speed pumps (2)
3	Pressure sensor	4	Drive with cascade controller
5	Motor starter		

**Illustration 18: Cascade Controller**

The cascade controller is used for pump applications where a certain pressure (head) or level needs to be maintained over a wide dynamic range. Running a large pump at variable speed over a wide range is not an ideal solution because of low pump efficiency, and because there is a practical limit of about 25% rated full load speed for running a pump.

In the cascade controller, the drive controls a variable speed motor as the variable speed pump (lead) and can stage up to 2 additional constant speed pumps on and off. By varying the speed of the initial pump, variable speed control of the entire system is provided, which maintains constant pressure while eliminating pressure surges, resulting in reduced system stress and quieter operation in pumping systems.

#### 5.1.2 Fixed Lead Pump

The motors must be of equal size. The cascade controller allows the drive to control up to 5 equal size pumps using the 2 built-in relays of the drive and terminals 27, 29 (digital input/digital output). When the variable pump (lead) is connected directly to the drive, the other 4 pumps are controlled by the 2 built-in relays and terminals 27, 29 (digital input/digital output). Lead pump alternation cannot be selected when lead pump is fixed.

#### 5.1.3 Lead Pump Alternation

The motors must be of equal size. This function makes it possible to cycle the drive between the pumps in the system (when *parameter 25-57 Relays per Pump=1*, the maximum number of pumps is 4. When *parameter 25-57 Relays per Pump=2*, the maximum number of pumps is 3). In this operation, the run time between pumps is equalized reducing the required pump maintenance and increasing reliability and lifetime of the system. The alternation of the lead pump can take place at a command signal or at staging (adding lag pump).




The command can be a manual alternation or an alternation event signal. If the alternation event is selected, the lead pump alternation takes place every time the event occurs. Selections include whenever an alternation timer expires, when the lead pump goes into sleep mode. Staging is determined by the actual system load.

When *parameter 25-55 Alternate if Load <= 50%* is set to [1] Enabled, alternation does not happen if the load exceeds 50%. If load <50%, alternation happens. When *parameter 25-55 Alternate if Load <= 50%* is set to [0] Disabled, alternation happens regardless of the load. The total pump capacity is determined as lead pump plus lag speed pumps capacities.

### 5.1.4 Bandwidth Management

In cascade control systems, to avoid frequent switching of fixed-speed pumps, the desired system pressure is kept within a bandwidth rather than at a constant level. The staging bandwidth provides the required bandwidth for operation. When a large and quick change in system pressure occurs, the override bandwidth overrides the staging bandwidth to prevent immediate response to a short duration pressure change. An override bandwidth timer can be programmed to prevent staging until the system pressure has stabilized and normal control established.

When the cascade controller is enabled and running normally, and the drive issues a trip alarm, the system head is maintained by staging and destaging fixed-speed pumps. To prevent frequent staging and destaging, and to minimize pressure fluctuations, use a wider fixed-speed bandwidth instead of the staging bandwidth.

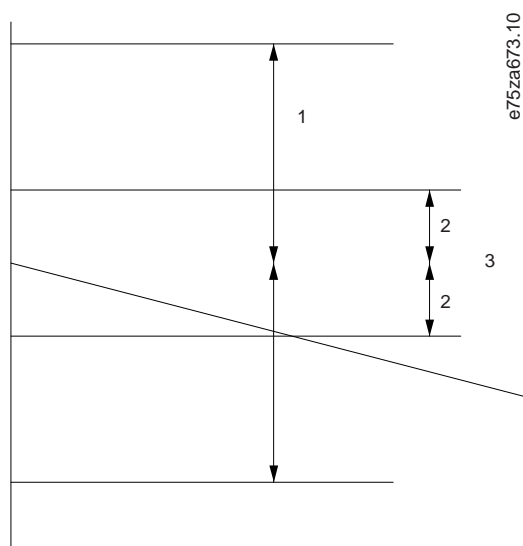

1	Override bandwidth	2	SBW
3	Setpoint		

Illustration 19: Bandwidth

## 5.2 System Status and Operation

Only when lead pump is working, the drive can go into sleep mode. When the cascade controller is enabled, the operation status for each pump and the cascade controller is shown in *parameter 25-81 Pump Status* and *parameter 25-80 Cascade Status* on the LCP.

The cascade controller information shown includes:

- Pumps status: A readout of the status for the relays assigned to each pump. The display shows pumps that are disabled, off, running on the drive, or running on the mains/motor starter.
- Cascade status: A readout of the status for the cascade controller. The display shows that if cascade controller is disabled, all pumps are running off, fixed-speed pumps are being staged/de-staged, and lead pump alternation is occurring.

### 5.3 Start/Stop Conditions

See *parameter group 5-1\* Digital Inputs*.


**Table 15: Commands Assigned to Digital Inputs**

Digital input commands	Variable speed pump (lead)	Fixed-speed pumps (lag)
Start (system start/stop)	Ramps up (if stopped and there is a demand)	Staging (if stopped and there is a demand)
Lead pump start	Ramps up if system start is active	Not affected
Coast (emergency stop)	Coast to stop	Cut out (corresponding relays, terminal 27/29 and 42/45)
External interlock	Coast to stop	Cut out (built-in relays are deenergized)

**Table 16: LCP Key Functions**

LCP keys	Variable speed pump (lead)	Fixed-speed pumps (lag)
[Hand On]	Ramps up (if stopped by a normal stop command) or stays in operation if already running.	Destaging (if running)
[Off]	Ramps down	Destaging
[Auto On]	Starts and stops according to commands via terminals or serial bus. The cascade controller only works when the drive is in auto-on mode.	Staging/destaging

## 5.4 Cascade Controller Wizard

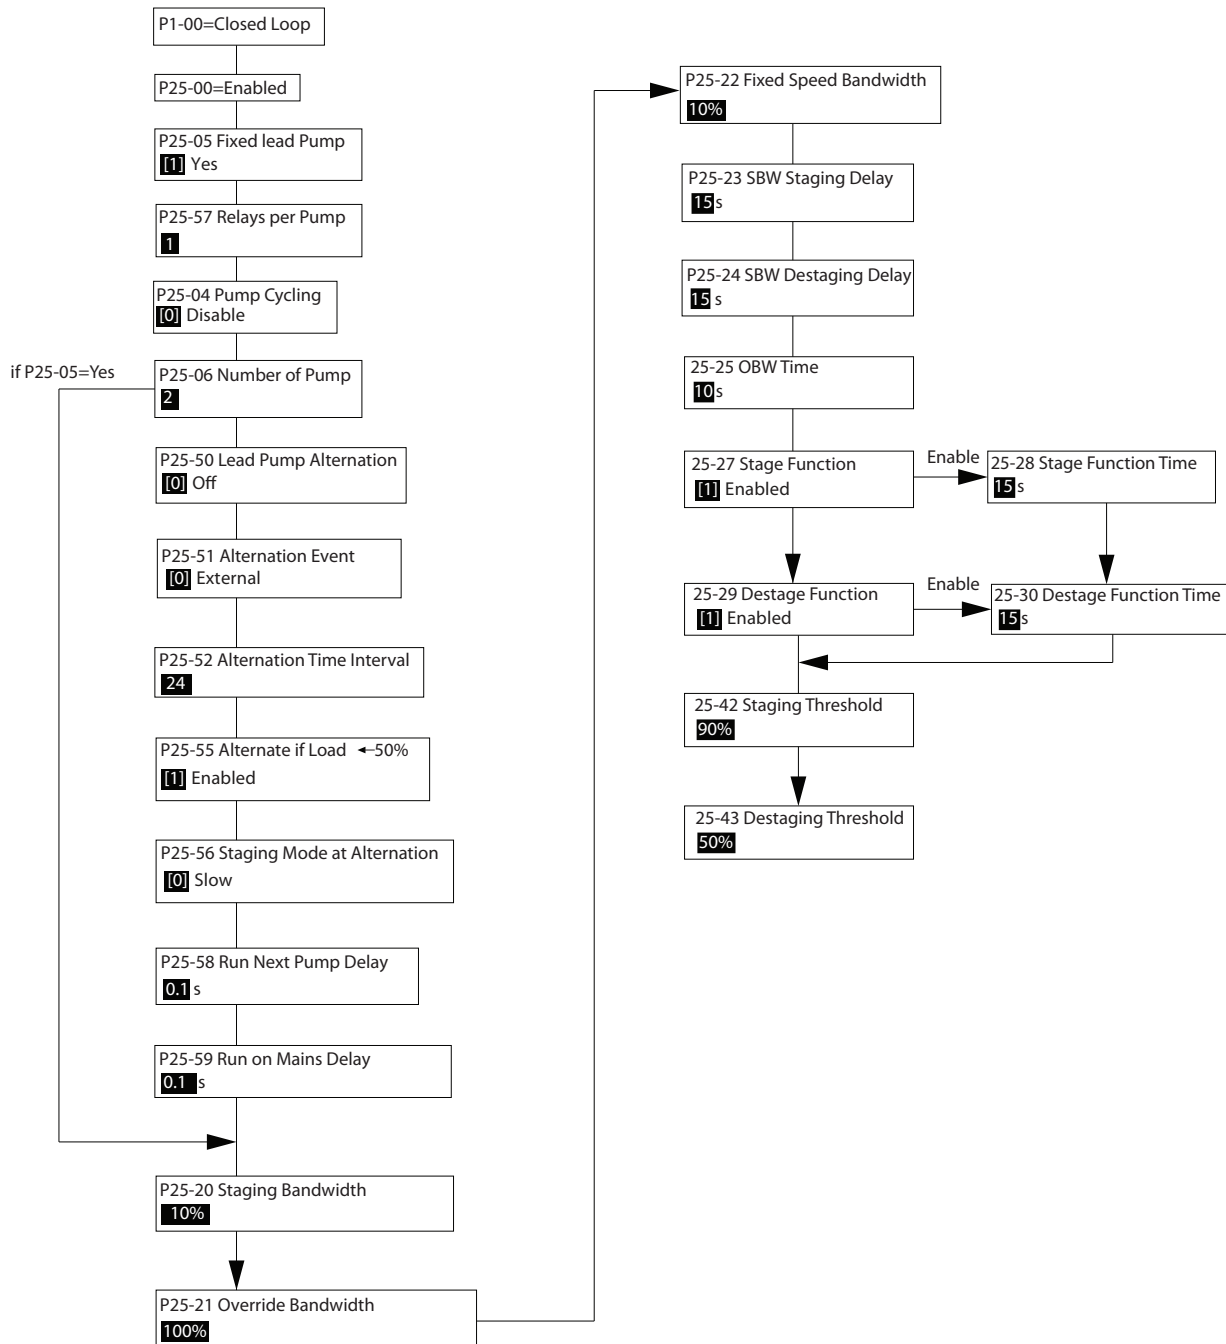


e30bd161.1.1

**Illustration 20: Cascade Controller Wizard (Recommended Logistic)**

## 5.5 Cascade Controller Connection

### 5.5.1 1 Pump, 1 Relay Mode

1 pump, 1 relay mode: When *parameter 25-57 Relays per Pump=1*

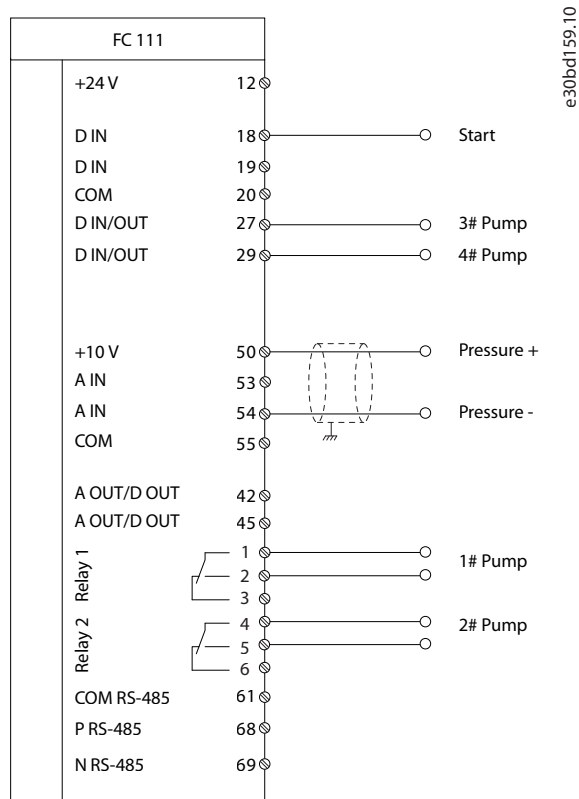


**Illustration 21: 1 Pump, 1 Relay Mode**

Every pump operation is controlled by 1 output.

- When *parameter 25-04 Pump Cycling*=[0] *Disable*: maximum 5 pumps.
- When *parameter 25-04 Pump Cycling*=[1] *Enable*: maximum 4 pumps.
- 2 relays and 2 digital outputs are available.

### 5.5.2 1 Pump, 2 Relay Mode

1 pump, 2 relay mode: When *parameter 25-57 Relays per Pump*=2

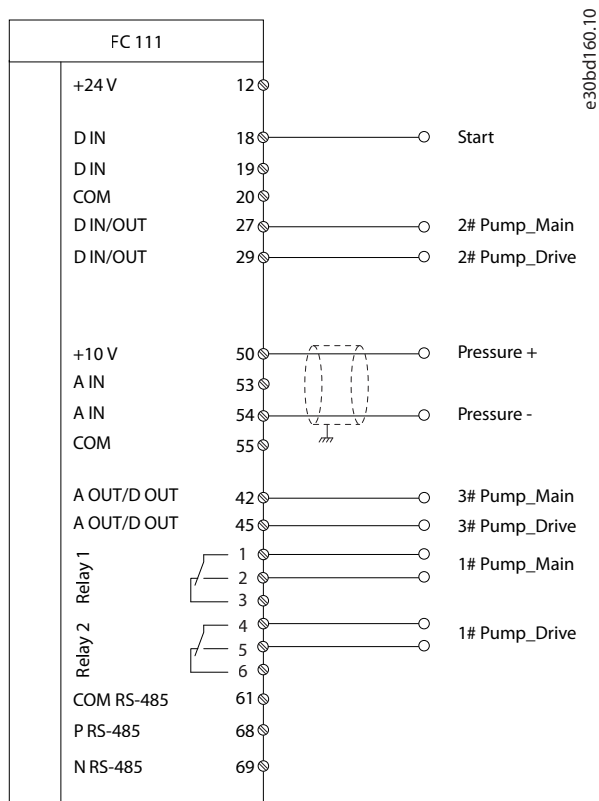

**Illustration 22: 1 Pump, 2 Relay Mode**

Every pump operation is controlled by 2 outputs.

- Dedicated PLC not necessary as control.
- When *parameter 25-04 Pump Cycling=[0] Disable*: no pump.
- When *parameter 25-04 Pump Cycling=[1] Enable*: maximum 3 pumps.
- 2 relays, 2 digital outputs, and 2 analog outputs are available.

## 6 Warnings and Alarms

### 6.1 List of Warnings and Alarms

Table 17: Warnings and Alarms


Fault number	Alarm/warning bit number	Fault text	Warning	Alarm	Trip locked	Cause of problem
2	16	Live zero error	X	X	–	Signal on terminal 53 or 54 is less than 50% of the value set in <i>parameter 6-10 Terminal 53 Low Voltage</i> , <i>parameter 6-12 Terminal 53 Low Current</i> , <i>parameter 6-20 Terminal 54 Low Voltage</i> , or <i>parameter 6-22 Terminal 54 Low Current</i> . See also <i>parameter group 6-0* Analog I/O Mode</i> .
4	14	Mains ph. loss	X	X	X	Missing phase on the supply side or too high voltage imbalance. Check the supply voltage. See <i>parameter 14-12 Function at Mains Imbalance</i> .
7	11	DC over volt	X	X	–	DC-link voltage exceeds the limit.
8	10	DC under volt	X	X	–	DC-link voltage drops below voltage warning low-limit.
9	9	Inverter over-load	X	X	–	More than 100% load for a long time.
10	8	Motor ETR over	X	X	–	Motor is too hot due to more than 100% load for a long time. See <i>parameter 1-90 Motor Thermal Protection</i> .
11	7	Motor th over	X	X	–	Thermistor or thermistor connection is disconnected. See <i>parameter 1-90 Motor Thermal Protection</i> .
13	5	Over current	X	X	X	Inverter peak current limit is exceeded.
14	2	Earth fault	–	X	X	Discharge from output phases to ground.
16	12	Short circuit	–	X	X	Short circuit in motor or on motor terminals.
17	4	Ctrl. word TO	X	X	–	No communication to drive. See <i>parameter group 8-0* General Settings</i> .
24	50	Fan fault	X	X	–	The heat sink cooling fan is not working (only on 400 V, 30– 90 kW (40–125 hp) units).
30	19	U phase loss	–	X	X	Motor phase U is missing. Check the phase. See <i>parameter 4-58 Missing Motor Phase Function</i> .
31	20	V phase loss	–	X	X	Motor phase V is missing. Check the phase. See <i>parameter 4-58 Missing Motor Phase Function</i> .
32	21	W phase loss	–	X	X	Motor phase W is missing. Check the phase. See <i>parameter 4-58 Missing Motor Phase Function</i> .
38	17	Internal fault	–	X	X	Contact the local Danfoss supplier.
44	28	Earth fault	–	X	X	Discharge from output phases to ground, using the value of <i>parameter 15-31 Alarm Log Value</i> if possible.
46	33	Control voltage fault	–	X	X	Control voltage is low. Contact the local Danfoss supplier.

Fault number	Alarm/warning bit number	Fault text	Warning	Alarm	Trip locked	Cause of problem
47	23	24 V supply low	X	X	X	24 V DC supply may be overloaded.
50	–	AMA calibration failed	–	X	–	Contact the local Danfoss supplier.
51	15	AMA $U_{nom}$ , $I_{nom}$	–	X	–	The setting of motor voltage, motor current, and motor power is wrong. Check the settings.
52	–	AMA low $I_{nom}$	–	X	–	The motor current is too low. Check the settings.
53	–	AMA big motor	–	X	–	The motor is too big to perform AMA.
54	–	AMA small motor	–	X	–	The motor is too small to perform AMA.
55	–	AMA par. range	–	X	–	The parameter values found from the motor are outside the acceptable range.
56	–	AMA user interrupt	–	X	–	The AMA has been interrupted by the user.
57	–	AMA timeout	–	X	–	<p>Try to restart the AMA several times, until the AMA is carried out.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p style="text-align: center; margin: 0;"><b>NOTICE</b></p> <p style="margin: 0;">Repeated runs may heat the motor to a level where the resistance <math>R_s</math> and <math>R_r</math> are increased. In most cases, however, this is not critical.</p> </div>
58	–	AMA internal	X	X	–	Contact the local Danfoss supplier.
59	25	Current limit	X	–	–	The current is higher than the value in <i>parameter 4-18 Current Limit</i> .
60	44	External Interlock	–	X	–	External interlock has been activated. To resume normal operation, apply 24 V DC to the terminal programmed for external interlock and reset the drive (via serial communication, digital I/O, or by pressing [Reset] button on the LCP).
66	26	Heat sink temperature Low	X	–	–	This warning is based on the temperature sensor in the IGBT module (on 400 V, 30–90 kW (40–125 hp) units).
69	1	Pwr. card temp	X	X	X	The temperature sensor on the power card exceeds the upper or lower limits.
70	36	Illegal FC configuration	–	X	X	The control card and power card are not matched.
79	–	Illegal power section configuration	X	X	–	Internal fault. Contact the local Danfoss supplier.

Fault number	Alarm/warning bit number	Fault text	Warning	Alarm	Trip locked	Cause of problem
80	29	Drive initialised	–	X	–	All parameter settings are initialized to default settings.
87	47	Auto DC braking	X	–	–	The drive is auto DC braking.
95	40	Broken belt	X	X	–	Torque is below the torque level set for no load, indicating a broken belt. See <i>parameter group 22-6* Broken Belt Detection</i> .
126	–	Motor Rotating	–	X	–	High back EMF voltage. Stop the rotor of the PM motor.
200	–	Fire mode	X	–	–	Fire mode has been activated.
202	–	Fire mode limits exceeded	X	–	–	Fire mode has suppressed 1 or more warranty voiding alarms.
250	–	New spare part	–	X	X	The power or switch mode power supply has been exchanged (on 400 V, 30–90 kW (40–125 hp) units). Contact the local Danfoss supplier.
251	–	New type code	–	X	X	The drive has a new type code (on 400 V, 30– 90 kW (40–125 hp) units). Contact the local Danfoss supplier.

## 6.2 List of LCP Errors

LCP errors are not warnings or alarms. They do not affect the operation of the drive. An LCP error on the LCP is shown in [illustration 23](#).

 

**Illustration 23: LCP Error Example**

**Table 18: LCP Error List**

LCP error code	Error message	Description
Err 84	LCP comm. Lost	Communication between the LCP and the drive is lost.
Err 85	Key disabled	The LCP key is disabled. One of the LCP keys has been disabled in <i>parameter group 0-4* LCP Keypad</i> .
Err 86	LCP copy failed	Data copy failure. This error occurs when data is copied from drive to LCP, or from LCP to drive ( <i>parameter 0-50 LCP Copy</i> ).
Err 88	Data not compatible	LCP data incompatible. This error occurs when data is being copied from LCP to drive ( <i>parameter 0-50 LCP Copy</i> ). The typical reason is that data is moved between drive and LCP that have major software differences.



LCP error code	Error message	Description
Err 89	Read only	Parameter read only. An operation is issued via LCP to write a value to a parameter that is read-only.
Err 90	Database busy	The parameter database of the drive is busy.
Err 91	Parameter invalid	The parameter value that is input via the LCP is invalid.
Err 92	Exceeds limits	The parameter value that is input via the LCP exceeds limits.
Err 93	Motor is running	The LCP copy operation cannot be performed when the drive is running.
Err 95	Not while running	The parameter cannot be changed while the drive is running.
Err 96	Password rejected	The password that is input via the LCP is incorrect.

## 7 Specifications

### 7.1 Mains Supply

#### 7.1.1 3x380–480 V AC

**Table 19: 3x380–480 V AC, 0.37–15 kW (0.5–20 hp), Enclosure Sizes H1–H4**

Drive	PK37	PK75	P1K5	P2K2	P3K0	P4K0	P5K5	P7K5	P11K	P15K
Typical shaft output [kW]	0.37	0.75	1.5	2.2	3.0	4.0	5.5	7.5	11.0	15.0
Typical shaft output [hp]	0.5	1.0	2.0	3.0	4.0	5.0	7.5	10.0	15.0	20.0
Protection rating IP20	H1	H1	H1	H2	H2	H2	H3	H3	H4	H4
Maximum cable size in terminals (mains, motor) [mm <sup>2</sup> (AWG)]	4 (10)	4 (10)	4 (10)	4 (10)	4 (10)	4 (10)	4 (10)	4 (10)	16 (6)	16 (6)
<b>Output current - 40°C (104°F) ambient temperature</b>										
Continuous (3x380–440 V) [A]	1.2	2.2	3.7	5.3	7.2	9.0	12.0	15.5	23.0	31.0
Intermittent (3x380–440 V) [A]	1.3	2.4	4.1	5.8	7.9	9.9	13.2	17.1	25.3	34.0
Continuous (3x441–480 V) [A]	1.1	2.1	3.4	4.8	6.3	8.2	11.0	14.0	21.0	27.0
Intermittent (3x441–480 V) [A]	1.2	2.3	3.7	5.3	6.9	9.0	12.1	15.4	23.1	29.7
<b>Maximum input current</b>										
Continuous (3x380–440 V) [A]	1.2	2.1	3.5	4.7	6.3	8.3	11.2	15.1	22.1	29.9
Intermittent (3x380–440 V) [A]	1.3	2.3	3.9	5.2	6.9	9.1	12.3	16.6	24.3	32.9
Continuous (3x441–480 V) [A]	1.0	1.8	2.9	3.9	5.3	6.8	9.4	12.6	18.4	24.7
Intermittent (3x441–480 V) [A]	1.1	2.0	3.2	4.3	5.8	7.5	10.3	13.9	20.2	27.2
Maximum mains fuses	See <a href="#">3.2.4.5 Recommendation of Fuses and Circuit Breakers</a> .									
Estimated power loss [W], best case/typical <sup>(1)</sup>	13/15	16/21	46/57	46/58	66/83	95/118	104/31	159/98	248/74	353/79
Weight enclosure protection rating IP20 [kg (lb)]	2.0 (4.4)	2.0 (4.4)	2.1 (4.6)	3.3 (7.3)	3.3 (7.3)	3.4 (7.5)	4.3 (9.5)	4.5 (9.9)	7.9 (17.4)	7.9 (17.4)
Efficiency [%], best case/typical <sup>(2)</sup>	97.8/7.3	98.0/7.6	97.7/7.2	98.3/7.9	98.2/7.8	98.0/7.6	98.4/8.0	98.2/7.8	98.1/7.9	98.0/7.8
<b>Output current - 50°C (122°F) ambient temperature</b>										
Continuous (3x380–440 V) [A]	1.04	1.93	3.7	4.85	6.3	8.4	10.9	14.0	20.9	28.0
Intermittent (3x380–440 V) [A]	1.1	2.1	4.07	5.4	6.9	9.2	12.0	15.4	23.0	30.8
Continuous (3x441–480 V) [A]	1.0	1.8	3.4	4.4	5.5	7.5	10.0	12.6	19.1	24.0
Intermittent (3x441–480 V) [A]	1.1	2.0	3.7	4.8	6.1	8.3	11.0	13.9	21.0	26.4

<sup>1</sup> Applies for dimensioning of drive cooling. If the switching frequency is higher than the default setting, the power losses may increase. LCP and typical control card power consumptions are included. For power loss data according to EN 50598-2, refer to Danfoss [MyDrive® ecoSmart™](#) website.

<sup>2</sup> Efficiency measured at nominal current. For energy efficiency class, see [7.4.13 Ambient Conditions](#). For part load losses, see Danfoss [MyDrive® ecoSmart™](#) website.

**Table 20: 3x380–480 V AC, 18.5–90 kW (25–125 hp), Enclosure Sizes H5–H8**

Drive	P18K	P22K	P30K	P37K	P45K	P55K	P75K	P90K
Typical shaft output [kW]	18.5	22.0	30.0	37.0	45.0	55.0	75.0	90.0
Typical shaft output [hp]	25.0	30.0	40.0	50.0	60.0	70.0	100.0	125.0
Protection rating IP20	H5	H5	H6	H6	H6	H7	H7	H8
Maximum cable size in terminals (mains, motor) [mm <sup>2</sup> (AWG)]	16 (6)	16 (6)	35 (2)	35 (2)	35 (2)	50 (1)	95 (0)	120 (250MC M)
<b>Output current-40°C (104°F) ambient temperature</b>								
Continuous (3x380–440 V)[A]	37.0	42.5	61.0	73.0	90.0	106.0	147.0	177.0
Intermittent (3x380–440 V) [A]	40.7	46.8	67.1	80.3	99.0	116.0	161.0	194.0
Continuous (3x441–480 V) [A]	34.0	40.0	52.0	65.0	80.0	105.0	130.0	160.0
Intermittent (3x441–480 V) [A]	37.4	44.0	57.2	71.5	88.0	115.0	143.0	176.0
<b>Maximum input current</b>								
Continuous (3x380–440 V) [A]	35.2	41.5	57.0	70.0	84.0	103.0	140.0	166.0
Intermittent (3x380–440 V) [A]	38.7	45.7	62.7	77.0	92.4	113.0	154.0	182.0
Continuous (3x441–480 V) [A]	29.3	34.6	49.2	60.6	72.5	88.6	120.9	142.7
Intermittent (3x441–480 V) [A]	32.2	38.1	54.1	66.7	79.8	97.5	132.9	157.0
Maximum mains fuses	See <a href="#">3.2.4.5 Recommendation of Fuses and Circuit Breakers</a> .							
Estimated power loss [W], best case/typical <sup>(1)</sup>	412/456	475/523	733	922	1067	1133	1733	2141
Weight enclosure protection rating IP20 [kg (lb)]	9.5 (20.9)	9.5 (20.9)	24.5 (54)	24.5 (54)	24.5 (54)	36.0 (79.4)	36.0 (79.4)	51.0 (112.4)
Efficiency [%], best case/typical <sup>(2)</sup>	98.1/97.9	98.1/97.9	97.8	97.7	98	98.2	97.8	97.9
<b>Output current - 50°C (122°F) ambient temperature</b>								
Continuous (3x380–440 V) [A]	34.1	38.0	48.8	58.4	72.0	74.2	102.9	123.9
Intermittent (3x380–440 V) [A]	37.5	41.8	53.7	64.2	79.2	81.6	113.2	136.3
Continuous (3x441–480 V) [A]	31.3	35.0	41.6	52.0	64.0	73.5	91.0	112.0
Intermittent (3x441–480 V) [A]	34.4	38.5	45.8	57.2	70.4	80.9	100.1	123.2

<sup>1</sup> Applies for dimensioning of drive cooling. If the switching frequency is higher than the default setting, the power losses may increase. LCP and typical control card power consumptions are included. For power loss data according to EN 50598-2, refer to Danfoss [MyDrive® ecoSmart™](#) website.

<sup>2</sup> Efficiency measured at nominal current. For energy efficiency class, see [7.4.13 Ambient Conditions](#). For part load losses, see Danfoss [MyDrive® ecoSmart™](#) website.

## 7.2 EMC Emission Test Results

The following test results have been obtained using a system with a drive, a shielded control cable, a control box with potentiometer, and a shielded motor cable.

Table 21: EMC Emission Test Results

RFI filter type	Conduct emission. Maximum shielded cable length [m (ft)]						Radiated emission			
	Industrial environment									
<b>EN 55011</b>	<b>Class A Group 2</b>		<b>Class A Group 1</b>		<b>Class B</b>		<b>Class A Group 1</b>		<b>Class B</b>	
	Industrial environment		Industrial environment		Housing, trades and light industries		Industrial environment		Housing, trades and light industries	
<b>EN/IEC 61800-3</b>	<b>Category C3</b>		<b>Category C2</b>		<b>Category C1</b>		<b>Category C2</b>		<b>Category C1</b>	
	Second environment industrial		First environment home and office		First environment home and office		First environment home and office		First environment home and office	
	<b>Without external filter</b>	<b>With external filter</b>	<b>Without external filter</b>	<b>With external filter</b>	<b>Without external filter</b>	<b>With external filter</b>	<b>Without external filter</b>	<b>With external filter</b>	<b>Without external filter</b>	<b>With external filter</b>
<b>H4 RFI filter (EN55011 A1, EN/IEC61800-3 C2)</b>										
0.37–22 kW (0.5–30 hp) 3x380–480 V IP20	–	–	25 (82)	50 (164)	–	20 (66)	Yes	Yes	–	No
<b>H2 RFI filter (EN 55011 A2, EN/IEC 61800-3 C3)</b>										
30–90 kW (40–125 hp) 3x380–480 V IP20	25 (82)	–	–	–	–	–	No	–	No	–
<b>H3 RFI filter (EN55011 A1/B, EN/IEC 61800-3 C2/C1)</b>										
30–90 kW (40–125 hp) 3x380–480 V IP20	–	–	50 (164)	–	20 (66)	–	Yes	–	No	–

## 7.3 Special Conditions

### 7.3.1 Dusty or Humid Environment

#### NOTICE

**Do not use IP20/IP21 VLT® HVAC Basic Drive FC 111 units in dusty or humid environments. See chapter General Technical Data for details.**

### 7.3.2 Derating for Ambient Temperature and Switching Frequency

Ensure that the ambient temperature measured over 24 hours is at least 5 °C (9 °F) lower than the maximum ambient temperature that is specified for the drive. If the drive is operated at a high ambient temperature, decrease the constant output current. For derating curve, see the VLT® HVAC Basic Drive FC 111 Design Guide.

### 7.3.3 Derating for Low Air Pressure and High Altitudes

The cooling capability of air is decreased at low air pressure. For altitudes above 2000 m (6562 ft), contact Danfoss regarding PELV. Below 1000 m (3281 ft) altitude, derating is not necessary. For altitudes above 1000 m (3281 ft), decrease the ambient temperature or the maximum output current. Decrease the output by 1% per 100 m (328 ft) altitude above 1000 m (3281 ft) or reduce the maximum ambient cooling air temperature by 1 °C (1.8 °F) per 200 m (656 ft).

## 7.4 General Technical Data

### 7.4.1 Protection and Features

- Electronic motor thermal protection against overload.
- Temperature monitoring of the heat sink ensures that the drive trips if there is overtemperature.
- The drive is protected against short circuits between motor terminals U, V, W.
- When a motor phase is missing, the drive trips and issues an alarm.
- When a mains phase is missing, the drive trips or issues a warning (depending on the load).
- Monitoring of the DC-link voltage ensures that the drive trips when the DC-link voltage is too low or too high.
- The drive is protected against ground faults on motor terminals U, V, W.

### 7.4.2 Mains Supply (L1, L2, L3)

Supply voltage	380–480 V ±10%
Supply frequency	50/60 Hz
Maximum imbalance temporary between mains phases	3.0% of rated supply voltage
True power factor ( $\lambda$ )	≥0.9 nominal at rated load
Displacement power factor ( $\cos\phi$ ) near unity	(>0.98)
Switching on the input supply L1, L2, L3 (power-ups) enclosure sizes H1–H5	Maximum 1 time/30 s
Switching on the input supply L1, L2, L3 (power-ups) enclosure sizes H6–H8	Maximum 1 time/minute
Environment according to EN 60664-1	Overvoltage category III/pollution degree 2

The unit is suitable for use on a circuit capable of delivering not more than 100000 A<sub>rms</sub> symmetrical Amperes, 240/480 V maximum.

### 7.4.3 Motor Output (U, V, W)

Output voltage	0–100% of supply voltage
Output frequency	0–200 Hz (VVC <sup>+</sup> ), 0–400 Hz (u/f)
Switching on output	Unlimited
Ramp times	0.05–3600 s

## 7.4.4 Cable Length and Cross-section

Maximum motor cable length, shielded/armored (EMC-correct installation)	See <a href="#">7.2 EMC Emission Test Results</a> .
Maximum motor cable length, unshielded/unarmored	50 m (164 ft)
Maximum cross-section to motor, mains	See <a href="#">7.1.1 3x380–480 V AC</a> for more information
Cross-section DC terminals for filter feedback on enclosure sizes H1–H3	4 mm <sup>2</sup> /11 AWG
Cross-section DC terminals for filter feedback on enclosure sizes H4–H5	16 mm <sup>2</sup> /6 AWG
Maximum cross-section to control terminals, rigid wire	2.5 mm <sup>2</sup> /14 AWG
Maximum cross-section to control terminals, flexible cable	2.5 mm <sup>2</sup> /14 AWG
Minimum cross-section to control terminals	0.05 mm <sup>2</sup> /30 AWG

## 7.4.5 Digital Inputs

Programmable digital inputs	4
Terminal number	18, 19, 27, 29
Logic	PNP or NPN
Voltage level	0–24 V DC
Voltage level, logic 0 PNP	<5 V DC
Voltage level, logic 1 PNP	>10 V DC
Voltage level, logic 0 NPN	>19 V DC
Voltage level, logic 1 NPN	<14 V DC
Maximum voltage on input	28 V DC
Input resistance, R <sub>i</sub>	Approximately 4 kΩ
Digital input 29 as thermistor input	Fault: >2.9 kΩ and no fault: <800 Ω
Digital input 29 as pulse input	Maximum frequency 32 kHz push-pull-driven & 5 kHz (O.C.)

## 7.4.6 Analog Inputs

Number of analog inputs	2
Terminal number	53, 54
Terminal 53 mode	<i>Parameter 16-61 Terminal 53 Setting: 1 = voltage, 0 = current</i>
Terminal 54 mode	<i>Parameter 16-63 Terminal 54 Setting: 1 = voltage, 0 = current</i>
Voltage level	0–10 V
Input resistance, R <sub>i</sub>	Approximately 10 kΩ
Maximum voltage	20 V
Current level	0/4–20 mA (scalable)
Input resistance, R <sub>i</sub>	<500 Ω
Maximum current	29 mA
Resolution on analog input	10 bit

## 7.4.7 Analog Outputs

Number of programmable analog outputs	2
---------------------------------------	---

Terminal number	42, 45 <sup>(1)</sup>
Current range at analog output	0/4–20 mA
The load resistor to common at analog out	≤ 500 Ω
Maximum voltage at analog output	17 V
Accuracy on analog output	Maximum error: 0.4% of full scale
Resolution on analog output	10 bit

<sup>1</sup> Terminals 42 and 45 can also be programmed as digital outputs.

### 7.4.8 Digital Output

Number of digital outputs	4
<b>Terminals 27 and 29</b>	
Terminal number	27, 29 <sup>(1)</sup>
Voltage level at digital output	0–24 V
Maximum output current (sink and source)	40 mA
<b>Terminals 42 and 45</b>	
Terminal number	42, 45 <sup>(2)</sup>
Voltage level at digital output	17 V
Maximum output current at digital output	20 mA
The load resistor at digital output	≥ 1 kΩ

<sup>1</sup> Terminals 27 and 29 can also be programmed as input.

<sup>2</sup> Terminals 42 and 45 can also be programmed as analog output.

The digital outputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

### 7.4.9 Control Card, RS485 Serial Communication

Terminal number	68 (P, TX+, RX+), 69 (N, TX-, RX-)
Terminal number	61 common for terminals 68 and 69

### 7.4.10 Control Card, 24 V DC Output

Terminal number	12
Maximum load	80 mA

### 7.4.11 Relay Output

Programmable relay output	2
Relay 01 and 02	01–03 (NC), 01–02 (NO), 04–06 (NC), 04–05 (NO)
Maximum terminal load (AC-1) <sup>(1)</sup> on 01–02/04–05 (NO) (Resistive load)	250 V AC, 3 A
Maximum terminal load (AC-15) <sup>(1)</sup> on 01–02/04–05 (NO) (Inductive load @ cosφ 0.4)	250 V AC, 0.2 A

Maximum terminal load (DC-1) <sup>(1)</sup> on 01–02/04–05 (NO) (Resistive load)	30 V DC, 2 A
Maximum terminal load (DC-13) <sup>(1)</sup> on 01–02/04–05 (NO) (Inductive load)	24 V DC, 0.1 A
Maximum terminal load (AC-1) <sup>(1)</sup> on 01–03/04–06 (NC) (Resistive load)	250 V AC, 3 A
Maximum terminal load (AC-15) <sup>(1)</sup> on 01–03/04–06 (NC) (Inductive load @ cosφ 0.4)	250 V AC, 0.2 A
Maximum terminal load (DC-1) <sup>(1)</sup> on 01–03/04–06 (NC) (Resistive load)	30 V DC, 2 A
Minimum terminal load on 01–03 (NC), 01–02 (NO)	24 V DC 10 mA, 24 V AC 20 mA
Environment according to EN 60664-1	Overvoltage category III/pollution degree 2

<sup>1</sup> IEC 60947 parts 4 and 5. Endurance of the relay varies with different load type, switching current, ambient temperature, driving configuration, working profile, and so forth. It is recommended to mount a snubber circuit when connecting inductive loads to the relays.

### 7.4.12 Control Card, 10 V DC Output

Terminal number	50
Output voltage	10.5 V ±0.5 V
Maximum load	25 mA

### 7.4.13 Ambient Conditions

Enclosure protection rating	IP20
Enclosure kit available	IP21, TYPE 1
Vibration test	1.0 g
Maximum relative humidity	5–95% (IEC 60721-3-3; Class 3K3 (non-condensing) during operation)
Aggressive environment (IEC 60721-3-3), coated (standard) enclosure sizes H1–H5	Class 3C3
Aggressive environment (IEC 60721-3-3), non-coated enclosure sizes H6–H8	Class 3C2
Aggressive environment (IEC 60721-3-3), coated (optional) enclosure sizes H6–H8	Class 3C3
Test method according to IEC 60068-2-43 H2S (10 days)	
Ambient temperature <sup>(1)</sup>	See maximum output current at 40/50 °C (104/122 °F) in <a href="#">7.1.1 3x380–480 V AC</a> .
Minimum ambient temperature during full-scale operation	0 °C (32 °F)
Minimum ambient temperature at reduced performance	-20 °C (-4 °F)
Minimum ambient temperature at reduced performance	-10 °C (14 °F)
Temperature during storage/transport	-30 to +65/70 °C (-22 to +149/158°F)
Maximum altitude above sea level without derating	1000 m (3281 ft)
Maximum altitude above sea level with derating	3000 m (9843 ft)
Derating for high altitude	See <a href="#">7.3.3 Derating for Low Air Pressure and High Altitudes</a> .
Safety standards	EN/IEC 61800-5-1, UL 508C
EMC standards, Emission	EN 61800-3, EN 61000-6-3/4, EN 55011, IEC 61800-3
EMC standards, Immunity	EN 61800-3, EN 61000-3-12, EN 61000-6-1/2, EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-5, EN 61000-4-6



Energy efficiency class<sup>(2)</sup>

IE2

---

<sup>1</sup> Refer to *Special Conditions in the design guide* for:

- *Derating for high ambient temperature.*
- *Derating for high altitude.*

<sup>2</sup> Determined according to EN 50598-2 at:

- *Rated load.*
- *90% rated frequency.*
- *Switching frequency factory setting.*
- *Switching pattern factory setting.*

## Index

<b>1</b>		<b>L</b>	
10 V DC output .....	64	LCP .....	24
<b>2</b>		Leakage current .....	9
24 V DC output .....	63	Local control panel .....	24
<b>A</b>		Low air pressure .....	61
Additional resource .....	6	<b>M</b>	
Ambient condition .....	64	Mains supply (L1, L2, L3) .....	61
Ambient temperature .....	61	MCT 10 setup software .....	6, 24
Analog input .....	62	Menu key .....	25
<b>B</b>		Motor output (U, V, W) .....	61
Branch circuit protection .....	17	Motor overload protection .....	61
<b>C</b>		<b>N</b>	
Cascade controller .....	48	Navigation key .....	25
Circuit breaker .....	17	<b>O</b>	
Control card .....	63, 63, 64	Operation key .....	25
<b>D</b>		Overcurrent protection .....	17
Derating .....	61, 61	<b>P</b>	
Digital input .....	62	Programming .....	24
Digital output .....	63	Protection .....	61
Display .....	24	<b>Q</b>	
Document version .....	6	Qualified personnel .....	6, 8
<b>E</b>		<b>R</b>	
Electrical installation .....	13	Relay output .....	63
EMC-correct electrical installation .....	19	RS485 serial communication .....	63
Energy efficiency class .....	65	<b>S</b>	
<b>F</b>		Short-circuit protection .....	17
Fuse .....	17	Side-by-side installation .....	11
<b>H</b>		Software version .....	6
High altitudes .....	61	Switching frequency .....	61
<b>I</b>		Symbols .....	8
Indicator light .....	25	<b>U</b>	
Installation		UL/Non-UL compliance .....	18
Qualified personnel .....	8	<b>V</b>	

Voltage

Safety warning ..... 8

**W**

Wiring schematic ..... 21





ENGINEERING  
TOMORROW

*Danfoss*

.....  
Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.  
.....

Danfoss A/S  
Ulsnaes 1  
DK-6300 Graasten  
vlt-drives.danfoss.com

