




■ AF-60 LP™ De-coupling Plate Mounting Instruction


**Step 1**

Mount metal plate on drive and fasten with two screws. Tightening torque: 2 Nm

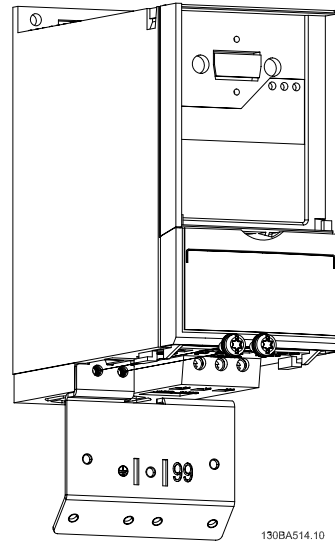

**Step 2**

Mount bracket on de-coupling plate

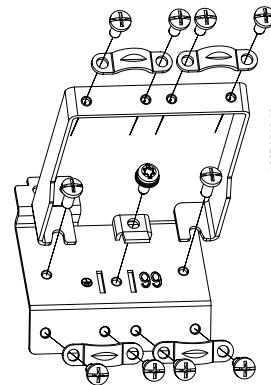

**Step 3**

AF-60 LP™ mounted with de-coupling plate

