WIRE COLOR SCHEME TERMINAL IDENTIFICATION BLACK - LINE VOLTAGE RED - AC CONTROL X - DRIVE TERMINAL WHITE - AC GROUNDED X - CUSTOMER TERMINAL CIRCUIT CONDUCTOR BLUE - DC CONTROL GREEN - CHASSIS GROUND EARTH GROUND EARTH GROUND GRN / \neg * AC MOTOR OL (L1) (T1) 3L1 4T1 (L1) M2 (T1) 2T1 *CUSTOMER 5L1 L1/R/91 VLT (L1)_X T1 INPUT SUPPLIED T1/U/96 [F16A] POWER ADJUSTABLE FREQUENCY BLK 2L2 (L2) (T2) 3L2 4T2 (L2) (T2) 2T2 (L2) T2 FEEDER L2 ~ | `~^` L2/S/92 T2/V/97 3 PH, 240V, | F16B| | L2/S/92 | F16C| 5L3 | L3/T/93 DRIVE (L3)_X T3 CIRCUIT PROTECTION (L3) (T3) 3L3 BLK 2L3 4T3 (L3) (T3) ۸_ن T3/W/98 (AFD) 60Hz (SEE NOTE 3) CB1 DRIVE INPUT FUSES CIRCUIT BREAKER (L1) (T1) (L2) (T2) GROUND GRN (L3) (T3) 163 RED X2 100 WHT F12 115VAC CR6 (12) 5 (11) TS1 HEATER (SET: 65°F) CR6 167 (1)-(SET: 80° F) (9) (5) (23) (24) TB2 TS1 TO SHEET 2 TO SHEET 2

WARNING!

THE FOLLOWING TABLE LISTS THE PARAMETERS THAT ARE SET DIFFERENT FROM THE DRIVE DEFAULT SETTINGS. ADDITIONAL PARAMETER SETTINGS MAY BE REQUIRED FOR YOUR APPLICATION.


1. * INDICATES COMPONENTS NOT SUPPLIED BY MANUFACTURER.

- 2. REFER TO THE INSTALLATION AND OPERATION MANUAL FOR DRIVE FUNCTIONS AND PARAMETER SETTINGS.
- 3. FEEDER CIRCUIT PROTECTION, INPUT POWER AND MOTOR WRING MUST BE SELECTED IN ACCORDANCE WITH THE N.E.C., ANY APPLICATION LOCAL CODES AND THE LOAD CURRENT RATING.
- 4. REPLACE JUMPER 'J1' WITH NORMALLY CLOSED SAFETY INTERLOCK CONTACT AS NECESSARY. CONTACT MUST BE RATED 1/4 HP @ 120VAC MINIMUM.
- 5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY FOR FOLLOWING CONDITIONS:
- 5.1. HIGHER SWITCHING FREQUENCY THAN DRIVE DEFAULT
- 5.2. HIGHER THAN PANEL LISTED AMBIENT TEMPERATURES
- 5.3. ELEVATION ABOVE 3300 FEET (1000 METERS)
- 5.4. LONG MOTOR LEAD LENGTHS

DRIVE PARAMETER SETTINGS

PARAMETER #	NAME	SETTING	VALUE	
0-02	MOTOR SPEED UNIT 1		HZ	
0-03	REGIONAL SETTINGS	1	NORTH AMERICA	
1-03	TORQUE CHAR. 3		AUTO ENERGY OPTIM VT	
5-02	TERMINAL 29 TYPE	1	OUTPUT	
5-31	TERMINAL 29	5	RUNNING	
14-20	RESET MODE	13	INFINITE AUTO REST	

В			- NOTICE - THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.	DRN	NAME	Ν	EMA 3R,240V,3C	- Lu
А	SP10119	11/10	IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED	DIM		•	IN CB ,DRIVE FUSE	Janjuso
DR	SP10076	09/10	IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL	APR		,3MB1	SINGLE MOTOR,1 FAN	_
REV	ECN	DATE	NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES AND SHALL BE RETURNED UPON REQUEST.	D TM	MODEL	VLT	PAGE 1 OF 2 SIZE A NO. 18	5B0432

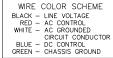


TERMINAL IDENTIFCATION

- DRIVE TERMINAL


 $\overline{\otimes}$ - CUSTOMER TERMINAL


CUSTOMER DRY CONTACT RATINGS

RELAY	CONTACT RATING
CR1, CR6	5A @ 120VAC 1/10 HP @ 120VAC
M1, M2, M3	10A @ 120/240VAC

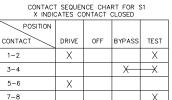

Χ

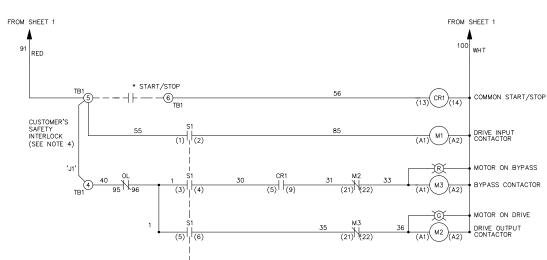

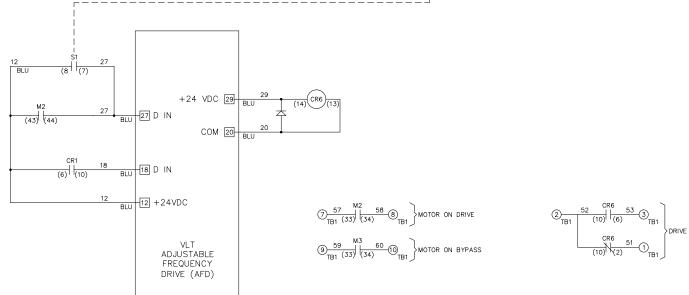

В		
Α	SP10119	11/10
DR	SP10076	09/10
REV	ECN	DATE

ı	- NOTICE -
	THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.
	IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND
	THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD
	AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED
	IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL
	NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED
	TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES
	AND SHALL BE RETURNED UPON REQUEST.

DRN	NAME	NE	EMA 3R,240V,3	3C
D TM		•	N CB ,DRIVE F	
APR	-	,3MBI,	SINGLE MOTOR	(, I FAN
DTM	MODEL	VLT	PAGE <u>2</u> OF <u>2</u>	SIZE

Danfoss

VLT