



KIT TOP COVER ASSEMBLY

100054-3, 4, 6, 7, & 8.



Installation and servicing of Danfoss Turbocor® compressors by qualified and product trained personnel only. Follow these instructions and sound refrigeration/electrical/servicing practices relating to installation, commissioning, maintenance and service.

| | | | |
|--|---|---|---|
| <p>Consult the appropriate Danfoss Turbocor Compressors Inc. (DTC) Service Manual on turbocor.danfoss.com for detailed service instructions.</p> | <p>Never power compressor without covers in place and secured.</p> <p>Removing the mains input cover will expose you to a voltage hazard of up to 575V. Ensure the mains input power is off and locked out before removing cover.</p> <p>Before removing top cover, wait at least 20 minutes after isolating AC power to allow the high voltage capacitors to discharge.</p> | <p>Always wear appropriately rated safety equipment when working around equipment and/or components energized with high voltage.</p> <p>This equipment contains hazardous voltages that can cause serious injury or death.</p> | <p>Recover all refrigerant from compressor in accordance with local codes and ensure pressure is fully vented before the removal of refrigerant containing components.</p> |
|--|---|---|---|

1 - Introduction:

TOP COVER ASSEMBLY replacement.

This kit contains the Top Cover and fasteners. Please refer to our Service Manual for details regarding the replacement of the cover.

We have made the **TTS/TGS/TTH/TGH Service Manual** available to anyone. To access the manual, you may scan the applicable QR code below or you may go to our DTC website at www.turbocoroem.com. At the top of the page there is a pull-down menu called "Quick Links." Click this menu and select the appropriate service manual.

Refer to the applicable QR code below to download the TTS/TGS/TTH/TGH Service Manual.

English



Chinese



2 - TOP COVER ASSEMBLY Removal Instructions:

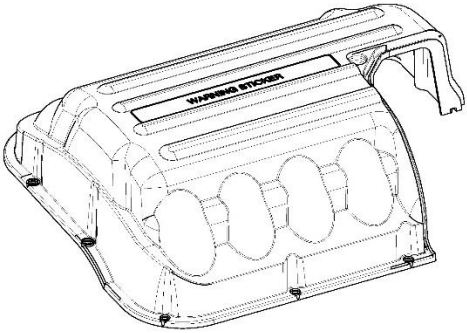

1. Isolate compressor power.
2. Remove the Mains Input Cover and set aside the fasteners.
3. Remove the Top Cover.
4. Discard the old Top Cover and fasteners.

3 - TOP COVER ASSEMBLY Installation Instructions:

1. Install the new Top Cover with the new fasteners.
2. Install the Mains Input Cover.
3. Return the compressor to normal operation.

4 - Kit Contents:

| Kit numbers | Compressor models |
|-------------|---|
| 100054-3 | KIT - COVER TOP ASSY (BLACK) EN/FR LABELS, AVAILABLE TO ALL OEMS |
| 100054-4 | KIT - COVER TOP ASSY (BLUE) DE LABELS, OEM SPECIFIC |
| 100054-6 | KIT - COVER TOP ASSY (GREEN) EN/FR LABELS |
| 100054-7 | KIT - COVER TOP ASSEMBLY (BLUE - MOLDED) EN/FR LABELS, OEM SPECIFIC |
| 100054-8 | KIT - COVER TOP ASSEMBLY (GREEN - MOLDED) DE LABELS, OEM SPECIFIC |

| QTY | Part(s) Description | Picture(s) |
|-----|--|---|
| 1 | COVER - TOP ASSEMBLY, BLUE/BLACK/GREEN |  |
| 9 | SCREW, DOUBLE SEMS M5X15 TORX PAN HEAD |  |

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.